

## ASSEMBLY & INSTALLATION INSTRUCTIONS

*Please read carefully and save these instructions, as you may need them at a later date.*

### CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

### GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.


## ASSEMBLY AND INSTALLATION

1. Determine the desired length from the intended ceiling or mounting surface that you wish the fixture's SHADE(17) to extend down to. Using the three different lengths of TUBES(14,13,12) provided, determine which combination of tube lengths is going to give you your desired length and screw the TUBES(14,13,12) together using the NIPPLE(11) provided. Thread a NIPPLE(11) on each end of the assembled TUBES(14,13,12) to be used on the fixture.
2. Feed the SOCKET LEAD WIRES(7&22) from the SHADE HOLDER UNIT(19) through the TUBES(14,13,12) and the CANOPY(23). Screw the components together until they are secured and do not come loose.
3. Attach the FIXTURE MOUNTING SCREWS(5) to the MOUNTING BRACKET(6). Place the #8-32 HEX NUTS(24) onto the #8-32 FIXTURE MOUNTING SCREWS(5), and or universal mounting plate, (whichever is provided). Do not tighten the HEX NUTS(24) at this time.
4. Pull the power supply wire out from the OUTLET BOX(1), and mount the MOUNTING BRACKET(6) or the universal mounting plate to the OUTLET BOX(1), using MOUNTING SCREWS(20).
5. Attach the power supply wire to the fixture lead wire by connecting BLACK SUPPLY WIRE(4) to BLACK FIXTURE LEAD WIRE(22), and WHITE SUPPLY WIRE(2) to WHITE FIXTURE LEAD WIRE(7). Connect the FIXTURE GROUND WIRE(21) to the POWER SUPPLY GROUND WIRE(3) using a WIRE CONNECTOR(8).

## ASSEMBLY AND INSTALLATION (Continued)

6. Place the CANOPY(23) on the fixture over the OUTLET BOX(1) and onto the FIXTURE MOUNTING SCREWS(5), and adjust the FIXTURE MOUNTING SCREWS(5) until they protrude out from the CANOPY(23) 1/4". Remove the CANOPY(23) and secure the position of the FIXTURE MOUNTING SCREWS(5) by tightening the HEX NUT(24) against the MOUNTING BRACKET(6). Place the CANOPY(23) back onto the FIXTURE MOUNTING SCREWS(5), and secure into place using the DECORATIVE NUT(9) provided.
7. Unscrew and remove the THREADED SOCKET RING(18) from the EXTERIOR THREADED SOCKET(16). Slide the center hole of the SHADE(17) over the EXTERIOR THREADED SOCKET(16) and screw the THREADED SOCKET RING(18) back onto the EXTERIOR THREADED SOCKET(16).
8. Place a light bulb into the EXTERIOR THREADED SOCKET(16), with the type and wattage rating specified on the lamp replacement marking located on the fixture.

## INSTALLATION IS NOW COMPLETED

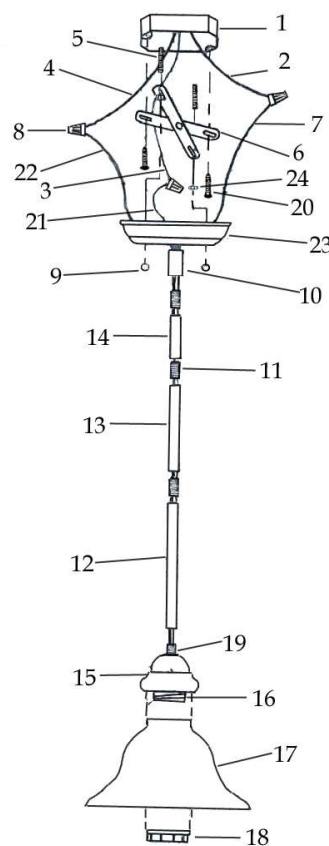

1. OUTLET BOX
2. WHITE SUPPLY WIRE
3. POWER SUPPLY GROUND WIRE
4. BLACK SUPPLY WIRE
5. FIXTURE MOUNTING SCREW
6. MOUNTING BRACKET
7. WHITE FIXTURE LEAD WIRE
8. WIRE CONNECTOR
9. DECORATIVE NUT
10. SWIVEL
11. NIPPLE
12. 18" TUBE
13. 12" TUBE
14. 6" TUBE
15. SOCKET CUP
16. EXTERIOR THREADED SOCKET
17. SHADE
18. SOCKET RING
19. SHADE HOLDER UNIT
20. MOUNTING SCREW
21. FIXTURE GROUND WIRE
22. BLACK FIXTURE LEAD WIRE
23. CANOPY
24. #8-32 HEX NUT

This product may not contain glass Shade. The drawing of glass shade shown in this instruction is a Representative, it may not match the Glass shade you ordered.