




ITEM #6631258
MODEL #SLL12RGBW

12FT RGBW MINI GLOBE STRING LIGHTS

Español p. 7

HARBOR BREEZE and logo design are trademarks or registered trademarks of LF, LLC. All rights reserved.

 ATTACH YOUR RECEIPT HERE

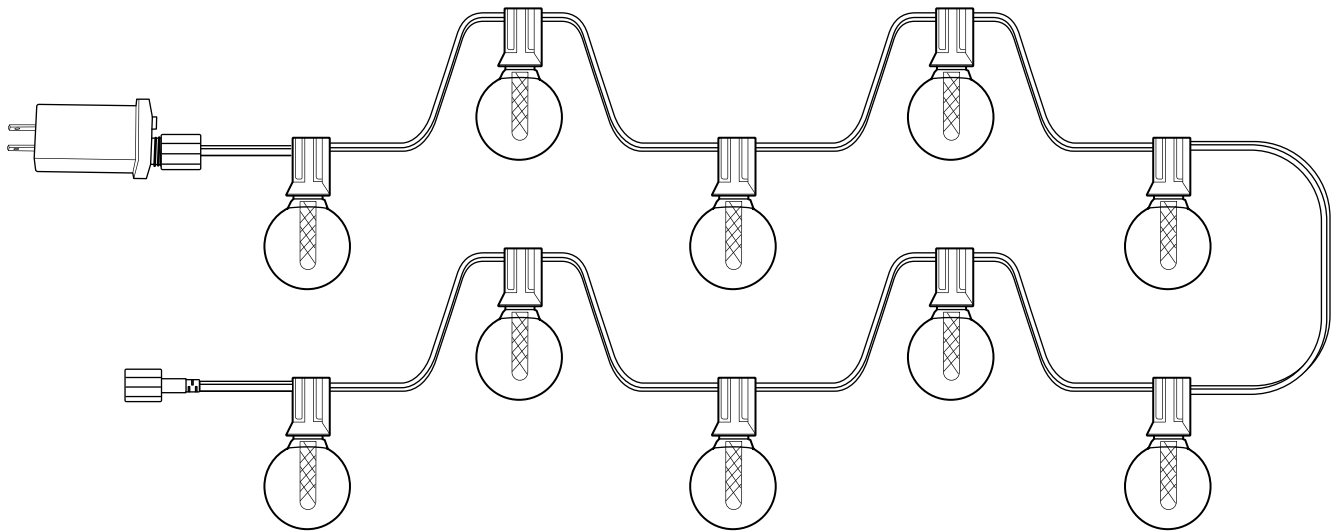

800665

APPROVED FOR USE
IN WET LOCATIONS

Purchase Date _____

Thank you for purchasing this HARBOR BREEZE product.

Questions, problems or missing parts?

Before returning, contact us on:

888-251-1003, 8 a.m-8 p.m., EST, Monday-Sunday or **ascs@lowes.com**.

TABLE OF CONTENTS

Package Contents 2

Safety Information 3

Preparation 4

Assembly Instructions 4


Operating Instructions 5

Care and Maintenance 6

Troubleshooting 6

Warranty 6

 PACKAGE CONTENTS

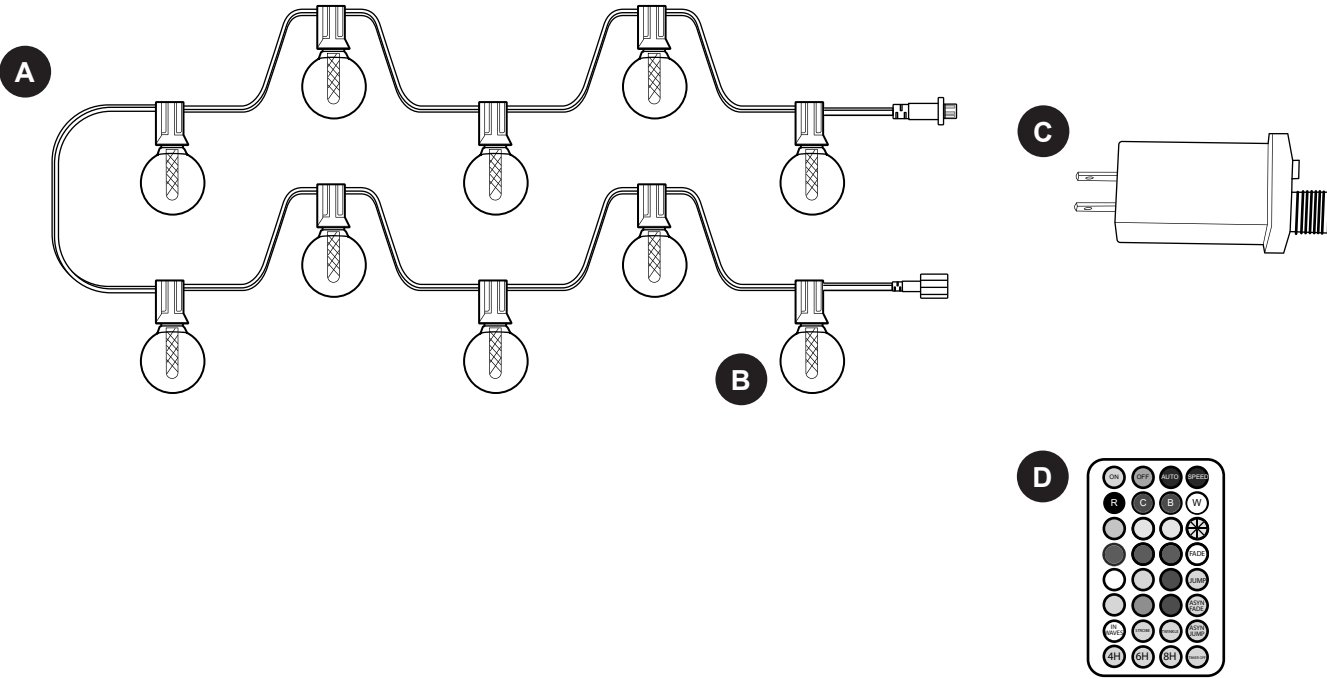

PART	DESCRIPTION	QUANTITY
A	Lights	1
B	Bulb (preassembled to string lights (A))	10
C	Plug-in Controller (preassembled to lights (A))	1
D	Remote Control	1

SAFETY INFORMATION

READ AND SAVE THESE INSTRUCTIONS.

DANGER

- For indoor and outdoor use. If using this light in a WET location, connect this product to a Ground Fault Circuit Interrupting (GFCI) outlet to reduce the risk of personal injury, electrical shock or DEATH. If one is not provided, contact a qualified electrician for proper installation.

WARNING

- NEVER use with an extension cord unless the plug can be fully inserted. DO NOT alter the plug.
- To reduce the risk of electric shock, DO NOT use the product if power cord is frayed or broken.
- To reduce the risk of burns, fire, electric shock or injury to persons, DO NOT mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- DO NOT use staples or nails to secure wiring/power supply cord from lights. DO NOT place wiring/power supply cord on sharp hooks or nails.
- This is not a toy! To avoid risk of fire, burns, personal injury and shock it should not be played with or placed where small children can reach it.
- DO NOT hang ornaments or other objects from power supply cord, wire or lights.
- DO NOT close doors and/or windows on the power supply cord as doing so may damage the insulation wire(s).
- DO NOT cover the lights with cloth, paper or any material that are not part of the lights itself.
- As a safety precaution, unplug power supply cord when not in use.

CAUTION

- Risk of Fire: DO NOT use bulbs having a wattage greater than the maximum value stated on the product.
 - The lighting string is rated 8 watts; do not overload. Connect end-to-end a maximum of 16 watts light strings or decorative lighting of the same type. Connect up to 2 sets with included 0.8 watts bulbs.
- *NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- * Reorient or relocate the receiving antenna.
 - * Increase the separation between the equipment and receiver.
 - * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, (2) this device must accept any interference received, including interference that may cause undesired operation.

Distributed by: Litex Industries Inc., P.O. Box 535639, Grand Prairie, TX, 75050; 800-527-1292

PREPARATION

Before beginning installation of product, compare parts with package contents list and make sure all parts are present. If any part is missing or damaged, do not attempt to assemble, install or operate the product.


Estimated Installation Time: 10 minutes. No tools required for installation.

ASSEMBLY INSTRUCTIONS

1. **⚠ WARNING:** Do not secure the cord with staples or nails.


Hang lights (A) in the desired location.

WARNING: When replacing bulb(s) (B), please allow bulb(s) (B) to cool down before touching. Replacement bulbs are available on [lowes.com](https://www.lowes.com).

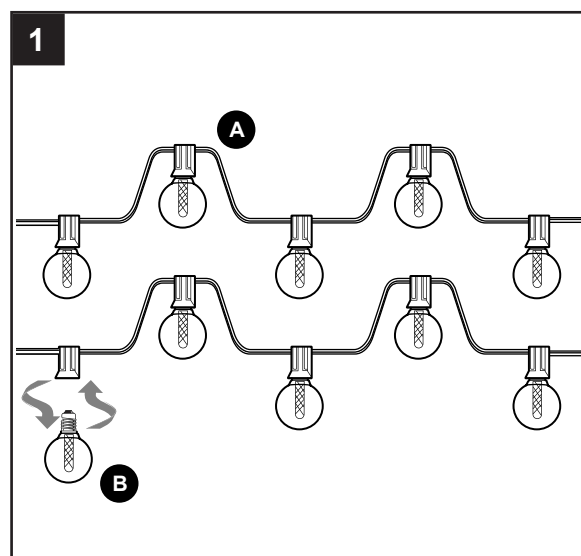

2. **⚠ DANGER:** If using this light in a WET or DAMP location, connect this product to a Ground Fault Circuit Interrupting (GFCI) outlet to reduce the risk of personal injury, electrical shock or DEATH. If one is not provided, contact a qualified electrician for proper installation.

⚠ WARNING: Risk of electric shock: Install only to a covered Class A GFCI receptacle that has an enclosure that is weatherproof with the attachment plug cap inserted or removed. NOT for use with receptacles that are only weatherproof when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed).

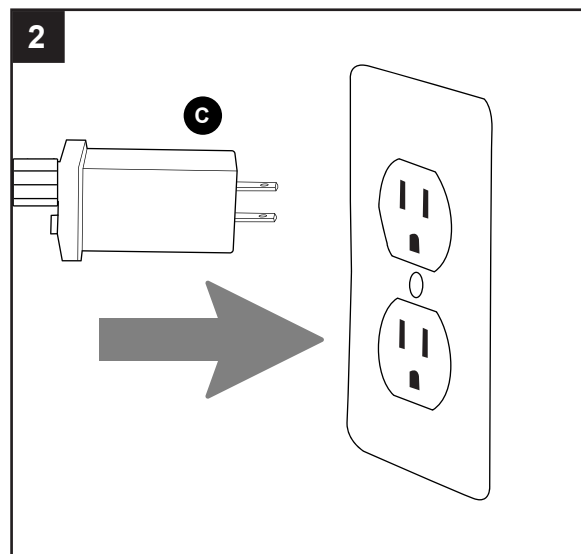

Insert plug-in controller (C) into wall outlet.

OPERATING INSTRUCTIONS

***NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, (2) this device must accept any interference received, including interference that may cause undesired operation.

Distributed by: Litex Industries Inc., P.O. Box 535639, Grand Prairie, TX, 75050; 800-527-1292


1. REMOVE PLASTIC TAB FROM BOTTOM OF REMOTE CONTROL (D).

IMPORTANT: Remote control (D) will not operate at distance greater than 12 feet. Store remote control (D) away from excess heat or humidity.

Operation buttons on panel of remote control (D):

ON button	Turns <i>lights ON</i>
OFF button	Turns <i>lights OFF</i>
AUTO button	Cycles through all modes
SPEED buttons	Press once to change the speed of the <i>light flashes</i> (Speeds 1-4)
R/G/B/W COLOR buttons	Select the button of the color you wish to display
 button	EACH <i>light</i> will change quickly from one color to another.
FADE button	<i>Lights</i> will change slowly to one color at same time.
JUMP button	<i>Lights</i> will change quickly to one color at same time.
ASYN FADE button	<i>Lights</i> will change slowly to one color at same time while one light blinks.
ASYN JUMP button	<i>Lights</i> will change quickly to one of the color patterns.
TWINKLE button	<i>Lights</i> will flash quickly as one of the color patterns.
STROBE button	<i>Lights</i> will quickly change color while whites lights flash.
IN WAVES button	<i>Lights</i> will change color slowly five bulbs at a time
TIMER buttons	<i>Lights</i> will remain on for a set time before turning off: 4 hours/ 6 hours/ 8 hours/ OFF

 
Note: When lights (A) are turned off with remote control (D), the last color command will appear when lights (A) are turned back on.

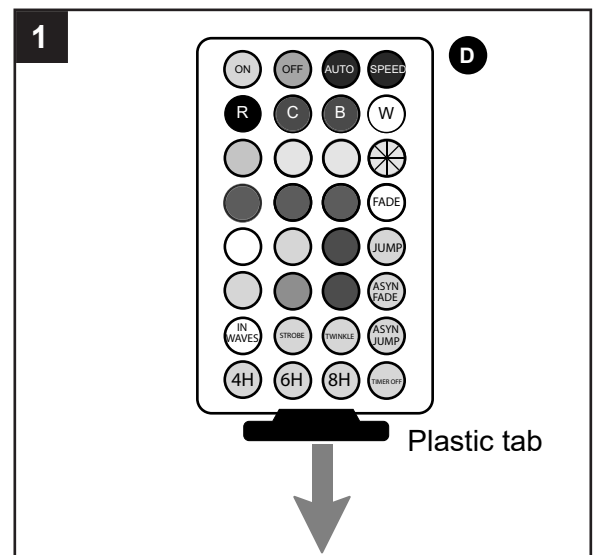

OPERATING INSTRUCTIONS

- Press button on plug-in controller (C) to change between **fifteen** different light patterns. Press and hold button for 3 seconds to turn string lights (A) off.

Note: When lights (A) are turned off with plug-in controller (C), the last color command will appear when lights (A) are turned back on.

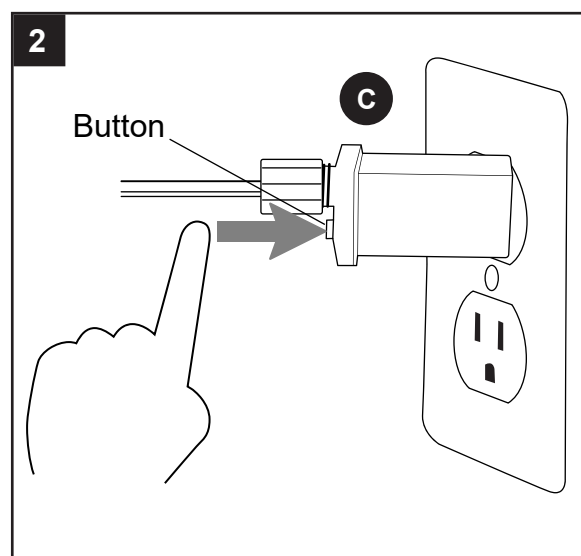

CARE AND MAINTENANCE

- Clean only with a dry, soft cloth. Do NOT use abrasive cleaner.
- Bulb Replacement: Use only E12-base 0.5 watt max. LED bulbs. (sold separately). Replacement bulbs are available on [lowes.com](https://www.lowes.com).

⚠ WARNING: Always unplug this product before replacing bulbs (B). When replacing bulb(s) (B), allow bulb(s) (B) to cool down before touching.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Lights not longer turn on initially or no longer turn on.	1. Bulb(s) is/are burned out. 2. Power is OFF. 3. Lights are not plugged in.	1. Replace bulb(s). 2. Make sure power supply is ON 3. Plug lights into outlet.

WARRANTY

The distributor warrants all of its landscape lighting against defects in materials and workmanship for five (5) years from the date of purchase. If within this period the product is found to be defective, take a copy of the bill of sale as a proof of purchase and the product in its original carton to the place of purchase. The distributor will, at its option, repair, replace or refund the purchase price to the consumer. All costs of installation and removal of the landscape lighting is the responsibility of the consumer. This warranty does not cover landscape lighting becoming defective due to misuse, accidental damage or improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions of limitations on an implied warranty, the above exclusion and limitation may not apply. This warranty gives you specific rights and you may also have other rights which may vary from state to state