



Security Double Door Installation Instructions

Spanish en el reverso

PART	DESCRIPTION	QTY
А	Security Double Door	1
AA	4 inch one-way screws	9
BB	Top Bar	1
CC	One-way tool	1
DD	Cane-Bolt kit	1
EE	End Cap	2

NOTE: All parts not shown at actual size. Handle set and lock bolt sold seperately.



Questions, problems, missing parts? Before returning to your retailer, call

our customer service department at

202220986

PREPARATION

Tools Recommended for Assembly

Drill 3/16" bit, level or string plumb, and pencil.





IMPORTANT: Read all instructions carefully before starting installation.

NOTE: One-way screws are non-removeable once installed.

ASSEMBLY INSTRUCTIONS

1. Identify which side the operating door is located on. It can be on either the left or right side. Operating door includes the handle set lock box (Fig. 1).







4. Pre-drill holes marked in Step 3. Using the one-way tool, fasten the door to the house using three oneway screws. Tighten the one-way screws only halfway at this time, in case repositioning the door is required later (Fig. 4).

1-800-222-3667.



- FIGURE 4
- 5.With the stationary door in the closed position, position the operating door (the one with the locksets installed) over the remaining opening with the lock bolt extending and protruding into the respective holes in the stationary door (Fig. 5).



6. Insert end caps in ends of header (Fig. 6).

Leaving approximately 1/8-in space above the doors, mount the top bar at top of door using the one-way tool and 3 one-way screws.



FIGURE 5

FIGURE 6

3. Place the stationary door (the one without locksets) in front of opening at desired height, making sure that the security door is vertical and plumb. Determine where to drill by marking through the pre-drilled holes on the hinge bar with pencil (Fig. 3).



SECURITY DOUBLE DOOR

7. Cane Bolt Installation Instructions



A. Position bottom bracket 1" from the bottom of the door as shown. Attach with two #10 x ¾" selfdrilling screws.



E. Raise bolt until the bottom clears bottom bracket.



 B. Position top bracket with 3-1/2" of space between it and the bottom bracket. Attach with two #10 x ³/₄" self-drilling screws.



F. Insert bolt into bottom bracket.



C. Insert short leg of the cane bolt through underside of top bracket.



G. Drill hole into sill to accept bolt.



D. Continue motion until peg on bolt bypasses notch in top bracket.



H. To open door, lift bolt and rotate to store on bracket.

MAINTENANCE

- 1. Security doors are finished with a heavy-duty powder coat finish. In order to maintain your finish we require cleaning and waxing the security door 2 times per year, preferably late fall and early spring. Doors directly subjected to the sun, salt-air or moisture may require more maintenance.
- 2. Any scratches or abrasions to the door finish must be immediately touched up with enamel or rust protective paint.
- 3. To keep your door looking like new, any signs of rust should be sanded with mild sandpaper and touched up immediately with enamel or rust protective paint.
- 4. Hinges and lockset (sold separately) should be oiled and lubricated regularly to reduce friction wear.
- 5. Make sure any sprinklers near your new door are directed away.
- 6. Do not allow vegetation on your security door. This will lead to extra maintenance.
- 7. Make sure to keep your weed eater and lawn mower away from your security door. It may create unwanted chips to your door finish.

WARRANTY

3-YEAR LIMITED WARRANTY

5-YEAR LIMITED WARRANTY Monterey, Pasadena

1-YEAR LIMITED WARRANTY

Gibraltar Max

Covington, Gibraltar, Ventura

This Warranty applies if you are a residential purchaser and covers—under normal and proper use and normal conditions, and as long as the product was properly installed in accordance with the Installation Instructions provided with the product—any defects or malfunctions relating to the structural integrity of your Comfort Bilt® product's metal structure and framing, including all welding. What are **Comfort Bilt®'s obligations under the Warranty?** If any part covered by the Warranty, when properly used, is found upon inspection to be defective. Comfort Bilt® will repair or replace the defective product or part(s), without charge. Replacements will be made with the same or a comparable quality model, and may not be the same color or style as the original due to changes and discontinuances in styles. Comfort Bilt® shall not be responsible for securing the affected property while products are being repaired or replaced. **How long does the Warranty coverage last?** The Warranty terminates if you sell or otherwise transfer the product—consisting of the original receipt, showing the date and place of purchase, and the purchase price—to Comfort Bilt®. 2333 Eastbrook Drive, Brookings, SD 57006, Attn: Warranty Claims. Comfort Bilt® reserves the right to inspect any product before making any adjustment covered by this Warranty. What does this Warranty More cover? This Warranty does NOT cover any defect or problem caused by abuse, misuse (including, but not limited to, improper installation), failure to provide proper maintenance of the warranted product, ang users, or attempted break-ins. This Warranty does not cover screen material which is pushed out of its groove and damage to your home, loss of property or personal injury or death caused by vandals, break-ins, or attempted break-ins. This Warranty does not cover screen material which is pushed out of its groove and damage to your home, loss of property or personal injury or death caused by vandals, break-ins, or attempted break-ins. This Warranty be ND INCOT BILT® BE