

Tools Needed:

Implementos
necesarios:

 
 


For warranty info visit
mdbuildingproducts.com

Para obtener información sobre la
garantía, visite mdbuildingproducts.com

TOP PIVOT PIN & BRACKET

1. Remove door by lifting door up and tilting outward.
2. Remove existing top pivot pin and bracket.
3. Install new top pivot pin and bracket.
4. Re-install door by inserting top pivot pin and guide roller into bracket and track first, then insert bottom pivot pin into bracket.
5. If necessary, adjust vertical and horizontal alignment using bottom pivot pin.

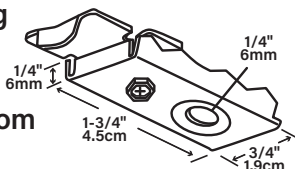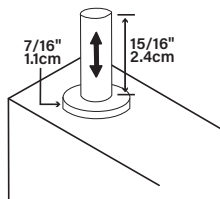

PASADOR PIVOTANTE SUPERIOR Y SOPORTE

1. Desmonte la puerta alzándola e inclinándola hacia afuera.
2. Retire el pasador pivotante superior existente y el soporte.
3. Instale el pasador pivotante superior nuevo y el soporte.
4. Vuelva a instalar la puerta insertando el pasador pivotante superior y el rodillo guía en el soporte y el primer riel, y luego inserte el pasador pivotante inferior en el soporte.
5. Si es necesario, ajuste la alineación vertical y horizontal utilizando el pasador pivotante inferior.

Made in China. Hecho en China.
M-D Building Products, Inc.
Oklahoma City, OK 73118
Rev 07/24 mdteam.com

⚠ WARNING: Cancer and Reproductive Harm
- www.P65Warnings.ca.gov.

ADVERTENCIA: Cáncer y Daño Reproductivo
- www.P65Warnings.ca.gov.



QUESTIONS? | PREGUNTAS?
800.654.8454
MDBUILDINGPRODUCTS.COM

