


BR001-95 Beverage Refrigerator

User Manual

SKU: BR001-95BL-USZX

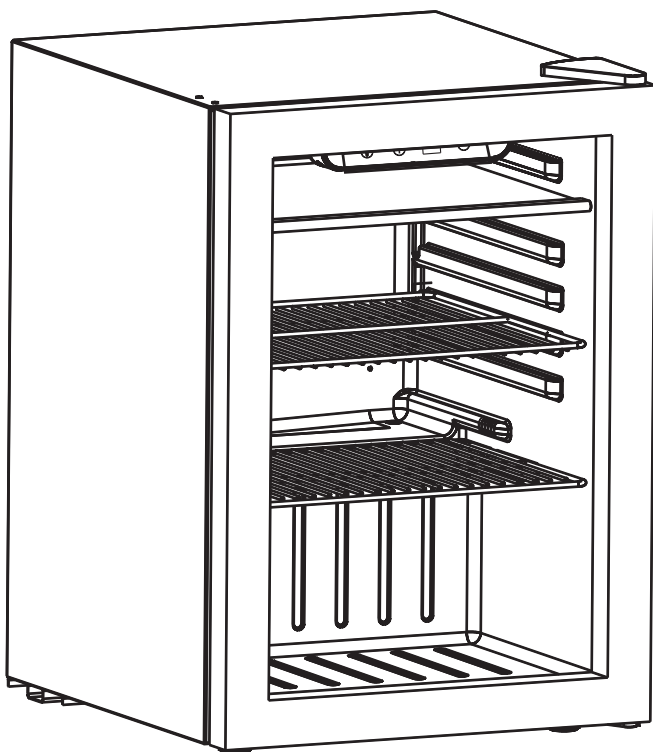

support@homyd.com



1-833-632-0897

THANK YOU FOR CHOOSING US

Thank you for choosing our product.

We sincerely appreciate your trust and support. Your satisfaction is our top priority, and we are committed to delivering high-quality products and attentive service.

If you have any questions or suggestions during use, please do not hesitate to contact us. We are always here to assist you.

Contact Information

Email: support@homyd.com (Replies within 24 hours on business days)

Toll-Free: 1-833-632-0897 (Monday to Friday, 9:00 AM – 6:00 PM ET)

We hope this product brings ease and enjoyment to your daily life.

Warranty Statement

This product is covered by a limited warranty that protects against defects in materials and workmanship under normal household use.

If your product develops a fault after the return period of your purchase platform has ended, please contact us directly. We will do our best to assist you based on the warranty terms.

For warranty-related inquiries, please reach out using the contact details listed above.

Contents

Important Safety Instructions	01
Key Components And Structure	04
Installation Guide	05
Door Reversal Instructions	06
Getting To Know Your Beverage Refrigerator	08
Maintenance	10
FAQs	11
Troubleshooting	13
Specs	15
Warranty Policy	16
Return Policy	17

IMPORTANT SAFETY INSTRUCTIONS

 To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:

Basic Precautions:

1. Read all instructions before using the appliance.
2. **DANGER or WARNING:** An empty beverage refrigerator can be hazardous for children or small pets. If disposing of the beverage refrigerator, remove all gasket seals, latches, lids, or the entire door from your unused appliance, or take other actions to ensure the beverage refrigerator is harmless.
3. Never allow children to operate, play with, or crawl inside the appliance.
4. Never clean appliance parts with flammable fluids or harsh chemicals. The fumes can create a fire or explosion.
5. **DO NOT** store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire or explosion.

Basic Precautions:

6. Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
7. **DO NOT** use mechanical devices or other means to accelerate the defrosting process other than those recommended by the manufacturer.
8. **DO NOT** store explosive substances in this appliance, such as aerosol cans with a flammable propellant.
9. **DO NOT** use extension cords or ungrounded (two-prong) adapters.
10. This appliance is intended to be used in households and similar applications such as staff kitchen areas in shops, offices, and other working environments; hotels, motels, and other residential-type environments; bed and breakfast environments; catering and similar non-retail applications.
11. **DO NOT** pull on the power cord when disconnecting the power plug of the beverage cooler. Firmly grasp the plug and pull it out from the socket directly.

INSTALLATION OF YOUR APPLIANCE

12. The appliance is designed for freestanding installation.
13. **WARNING:** DO NOT store or install the appliance outdoors.
14. **CAUTION:** This appliance is designed for storing and cooling beverages or wines. **DO NOT** store perishable food, medicine, or other medical products.

15. Place your appliance on a hard, level floor that is strong enough to support it when fully loaded.
16. To level your appliance, adjust the leveling legs at the bottom of the appliance, if necessary.
17. Allow at least **2 inches (50mm)** of space between the back and sides of the appliance, which allows the proper air circulation to cool the compressor and condenser. We **DO NOT** recommend installing the appliance on a rug or carpet.
18. **DO NOT** install the appliance near an oven or other heating source. Direct sunlight may affect the acrylic coating, and heat sources may increase electrical consumption. For best performance, **DO NOT** install the appliance behind a cabinet door or block the base grille. Extreme cold ambient temperatures may also prevent the appliance from performing properly.
19. Avoid locating the appliance in an area that may be exposed to excessive moisture.
20. WARNING: We **DO NOT** recommend using beverage cabinets outdoors, as this accelerates aging and malfunctions. Avoid direct sunlight exposure if necessary when using outdoors.
21. **DO NOT** use an extension cord with this appliance. However, if you must use an extension cord, it is absolutely necessary that it be a UL-Listed, **3-wire** grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord is 115 volts and at least **15 amperes**.

WARNINGS RELATED TO ELECTRICITY

Use a Properly Grounded Dedicated Outlet: This appliance requires a standard **115V/120V AC ~/60Hz** electrical outlet with a reliable three-prong grounding connection (rated 15A or more). Have a qualified electrician check the wall outlet and circuit to ensure they are properly grounded.

Dedicated Circuit Required: Always plug the appliance into its own electrical outlet with a matching voltage rating (per the appliance label). **DO NOT** share the outlet with other electrical appliances. This ensures the best performance and prevents overloading house wiring circuits, which could create a fire hazard from overheating.

Handle the Power Cord & Plug Safely:

22. **DO NOT** damage the power cord under any circumstances. Be careful not to damage it when moving the appliance.
23. **DO NOT** plug or unplug power plugs with wet hands.
24. Never unplug the appliance by pulling the power cord. Always grip the plug firmly and pull straight out from the receptacle.
25. Immediately repair or replace all power cords that have become frayed, cracked, abraded, or otherwise damaged. **DO NOT** use a damaged cord.

- 26. To prevent accidental injury, the cord should be secured behind the appliance and not left exposed or dangling.
- 27. Voltage Requirements: The beverage cooler uses an AC power supply of **115V/60Hz**. If the voltage fluctuation exceeds the range of **115V ±10%**, it can cause accidents or damage the cooler.
- 28. Gas Leak Procedure: In case of leaking gas, turn off the leaking valve and open all doors and windows. **DO NOT** unplug the cooler yourself, as it may cause a fire. Contact customer support immediately.
- 29. No Items On Top: For your safety, **DO NOT** place any electric devices (like microwaves) on top of the cooler.
- 30. Grounded Plug Warning: Improper use of the grounded plug may result in the risk of electrical shock.

WARNINGS RELATED TO USE


- 31. Make sure there is ample ventilation space surrounding the beverage cooler.
- 32. Be careful not to get your fingers or any dangling accessories caught in the cooler door.
- 33. This cooler and its packaging are not intended to be played with or used by children. If a child uses the cooler, it must be supervised by an adult to avoid injury.
- 34. Children are strictly prohibited from climbing or entering the internal components of the equipment.
- 35. Keep the cooler away from moist,damp or,humid environments and situations so as not to damage the electrical insulation.
- 36. **DO NOT** use the base, cooler door, etc., as pedal or support.
- 37. **DO NOT** place heavy objects on top of the cooler to prevent accidental damage or injury.

WARNINGS RELATED TO PLACING ITEMS

- 38. **DO NOT** put flammable, explosive, volatile, or highly corrosive items in the cooler to prevent damage to the product or fire accidents.
- 39. **DO NOT** place flammable items near the cooler to avoid fires.
- 40. **DO NOT** cover or close ventilation and exhaust holes.

KEY COMPONENTS AND STRUCTURE

1. Control Panel
2. Glass Shelf
3. Shelves
4. Reversible Double-pane Glass Door
5. Leveling Legs (Adjustable)
6. Hinged Cover
7. Protective Film (The machine is covered with a protective film that does not affect its functionality. You may remove it if desired.)
8. Drip Tray

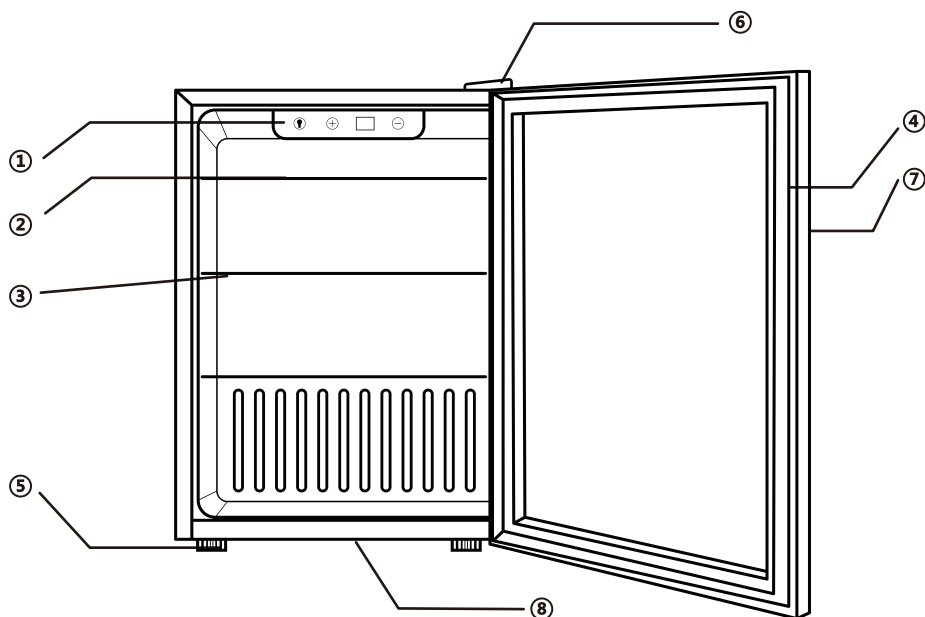

INSTALLATION GUIDE

BEFORE USING YOUR APPLIANCE

1. Remove the exterior and interior packaging.
2. Before connecting the appliance to the power source, let it stand upright for approximately **24 hours**. This will reduce the possibility of a malfunction in the cooling system caused by handling during transportation.
3. Clean the interior using lukewarm water and a soft cloth.

INSTALLATION LOCATION

The beverage refrigerator should be placed in a dry, well-ventilated area with convenient access for daily use.

DO NOT install the appliance where the temperature will go below **10°C (50°F)** or above **32°C (90°F)** because it will not maintain proper temperatures. Be sure to install your beverage refrigerator on a floor strong enough to support it when it is fully loaded.

FREESTANDING INSTALLATION

A freestanding installation will allow you to install the beverage refrigerator anywhere you desire, provided the required clearance space around the appliance is respected. In every setting, there must be adequate ventilation and access for service. Never install or operate the unit in an enclosed area, such as a closed cabinet. And allowance of at least **5cm (2 inches)** of space between the back and sides of the appliance is suggested, which allows for the proper air circulation needed to cool the compressor and condenser.

Suggested clearances within an open and ventilated space:

- Sides: **5cm (2 inches)**
- Top: **5cm (2 inches)**
- Back: **5cm (2 inches)**

DOOR REVERSAL INSTRUCTIONS

Tools Required



#2 Phillips
screwdriver



Flat head
screwdriver



Hex Wrench

Tools Needed:

- #2 Phillips Screwdriver
- Flat Head Screwdriver
- Hex Wrench

This beverage refrigerator comes with the door hinge bracket installed on the right side.

The beverage refrigerator door can be reversed, so you can move the hinge to the left side so that the door opens from right to left.

If you plan on reversing the door hinges, **DO NOT** plug the beverage refrigerator into the power outlet prior.


REMOVE METAL SHELVES BEFORE REVERSING THE DOOR.

IMPORTANT: **DO NOT** place the beverage refrigerator upside down during installation, as this may cause damage to the appliance.


Door Reversal Procedure:

Before operation, store all parts for later use.

Step 1: Gently remove the four plastic plugs from the left side of the top of the beverage refrigerator using a flat-head screwdriver.

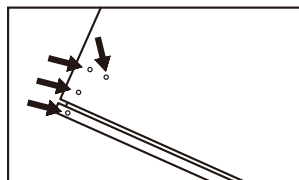

Step 2: First, push the hinge cover on the top right backward, lift it up, and slide it forward to remove. Next, use a #2 Phillips screwdriver to unscrew the three screws, and then remove the upper hinge.

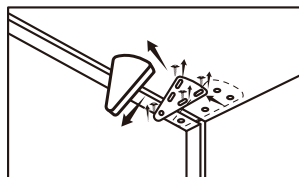


Step 3: Gently tilt the appliance 90° so that the door is facing upwards, then use a #2 Phillips screwdriver to remove the three screws from the bottom right hinge. Take off the hinge.


Then, use a hex wrench to turn the hinge shaft counter-clockwise and remove it. Rotate the hinge shaft 180° and reinstall it into the hinge.

Next, use the #2 Phillips screwdriver to remove the two screws from the left side and install them into the corresponding holes on the right side.


Finally, rotate the hinge 180° and attach it to the left side using the three screws previously removed from the right side.

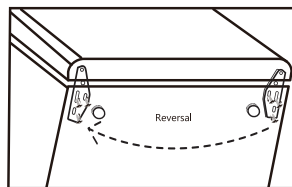

Step 4: Reinstall the top right hinge that was previously removed onto the left side, aligning its holes with the holes on the top of the cabinet. Tighten the three screws to secure it. Then, press down on the hinge cover to complete the installation.

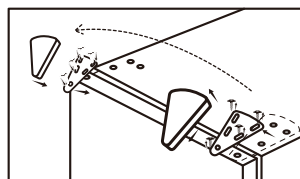

Step 5: Finally, insert the plastic plug (previously removed from the left side) into the hole on the upper right side of the appliance and set the appliance upright.

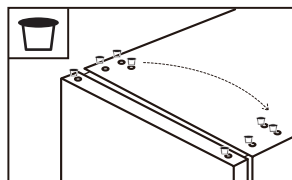


IMPORTANT:

After completing the door reversal process, **DO NOT** plug in the beverage refrigerator for **at least 24 hours**. During the reversal procedure, the refrigerant and compressor oil may become mixed.

It is essential to allow sufficient time for these fluids to separate and settle, ensuring the compressor functions properly.

Failure to follow this instruction may result in serious mechanical damage—including potential failure of the compressor or motor—and will void the product warranty.

GETTING TO KNOW YOUR BEVERAGE REFRIGERATOR

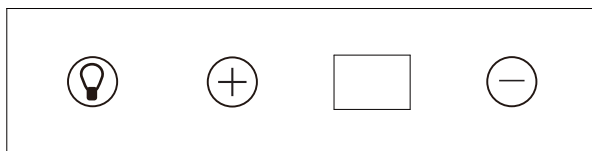

PROPER USE OF BEVERAGE COOLER

Startup

Connect the power cord to a standard wall outlet. After the connection, you will immediately hear a short beep.

Display Controls

The default temperature is **6°C (43°F)**. Use the **+** and **-** buttons to set the desired temperature between the range of **9°C – 16°C (40°F – 61°F)**.

The display will flash while the temperature is being set. The numbers displayed on the screen will indicate the setting temperature, and after it flashes 5 times, the screen will indicate the current internal temperature value. The digital display reading will adjust as the unit cools.

While the unit is adjusting to the new setting, press the **+** or **-** buttons to view the selected temperature setting.

If there is a power outage, the unit will revert to the previous temperature setting once power is restored.

LED LIGHT

Press the  button to turn the LED light on and off.

To extend the lifespan of the LED light and conserve energy, it is recommended to turn on the light only when selecting or placing beverages. At other times, it is best to keep the light turned off.

Loading Beverages

When first loading the beverage cooler to full capacity, we recommend the following steps to effectively cool a large number of beverages.

1. Set the temperature to the default temperature.
2. Allow the beverage cooler to cool for a minimum of two hours.
3. Load the beverages.

4. After initially filling with beverages, the internal temperature will rise as indicated on the display.
5. Once the beverage cooler has cooled the beverages to the default temperature, you can select a cooler internal temperature if desired using the Adjustable Control.
6. Allow several hours for the beverage cooler to cool to the desired lower temperature.

Note: Temperature variations inside the unit are normal. Areas near the door may be slightly warmer than the interior.

Shutdown

If the beverage refrigerator will not be used for an extended period, disconnect it from the power outlet, clean the inside thoroughly, and leave the door open to prevent mildew.

Safety Warning

The appliance is not intended to be used by young children or infirm persons without supervision. Young children should be supervised to ensure they **DO NOT** play with the appliance. This beverage refrigerator should not be positioned within a recessed or enclosed cabinet. It is designed for freestanding installation only. This unit is not designed to be installed in an RV, garage, or any outside installation. The surface of the compressor may become hot during normal operation. **DO NOT** touch, as this may cause injury.

Other Dangers

Keep the beverage refrigerator away from any combustible or volatile liquids or gases, including gasoline, oil, alcohol, paint, paint thinners, and solvents. Such chemicals should never be stored in the unit.

MAINTENANCE

DISCONNECTING THE BEVERAGE REFRIGERATOR

Unplug the power plug from the socket to disconnect the cooler.

Defrost the Beverage Refrigerator

To defrost the refrigerator:

1. Turn off the machine using the button and stop the compressor, unplug the power cord to melt the frost layer. (Never use mechanical devices or methods not recommended by the manufacturer to accelerate defrosting.)
2. Allow the frost to melt on its own, making sure that the internal drain is not blocked.
3. During this time, the melted frost will flow through the internal drain hole into the water collection tray on top of the compressor. The heat of the compressor will evaporate the liquid (if the drip tray is overfilled, it will need to be cleaned manually.)
4. Clean the interior with warm water and a soft cloth, wipe dry thoroughly, and reset the temperature and cool for 2 hours.

Cleaning Your Beverage Refrigerator

Dusting behind the beverage refrigerator and on the ground will improve the cooling effect and save energy. The interior of the beverage refrigerator should be cleaned to avoid any odors. Follow the cleaning procedure below.

1. Unplug the beverage refrigerator and empty the food from the cabinet.
2. Create a cleansing mixture comprising using 3 - 4 tablespoons of baking soda dissolved in warm water.
3. Moisten a sponge or a gentle cloth with the solution and use it to clean your beverage refrigerator.
4. Maintaining the cleanliness and suppleness of the gaskets is imperative to guarantee an effective seal. Adhere to the general guidelines to clean the door gaskets every three months. A light application of petroleum jelly on the hinge side of the gaskets will preserve their suppleness and ensure a secure seal.
5. Reconnect the beverage refrigerator once it is clean and dry.

Note:

DO NOT use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents, or metal scouring pads; some of these substances may erode, damage, and/or discolor your beverage refrigerator.

DO NOT use hard brushes, wire brushes, abrasives, organic solvents, boiling water, acid, or alkaline items as this may damage the surface and interior of the beverage refrigerator.

FAQs

1.Is this rated for outdoor use? I see pictures of an outdoor island.

This beverage refrigerator is primarily designed for indoor use. You can place it on a balcony or near a door, but please avoid using it in open outdoor environments to ensure its proper operation and longevity.

2.Has anyone installed this under the counter? And does that void the warranty?

This model is not designed for under-counter installation. Placing it under the counter may affect its performance.

3.What is the temperature range of the cabinet?

The temperature of the wine cabinet can be set between 40 - 61 °F (4.4–16.1°C), but due to the influence of internal and external environments, the actual displayed temperature may vary slightly.

4.Is this unit quiet enough to keep in a bedroom?

This beverage refrigerator features a low-noise design that produces only 36 dB of noise when running, so it's quiet enough to put in your bedroom or any other quiet environment without disturbing your sleep.

5.Is it possible to change the direction of the door?

The orientation of the beverage refrigerator door can be changed. Our manual contains a detailed tutorials.

6.Does this beverage refrigerator need to be installed?

The beverage refrigerator does not require installation. After receiving it, let it stand for 24 hours before turning it on for use.

7.What are the warranty specifications?

We provide a 12-month warranty and lifetime technical support for this refrigerator. If you would like to learn more, contact our customer service team.

8.Can the shelves inside the refrigerator be moved?

The shelves inside the refrigerator are adjustable and can be moved.

9.Is it normal for a beverage cooler to get hot outside?

It is normal for a refrigerator to emit some heat on the outside. This happens because refrigerators work by transferring heat from inside the unit to the outside, keeping the inside cool.

10.Does it keep food securely cold?

Our beverage refrigerator is primarily designed to store drinks, particularly for chilling wine, beer, and other beverages. It features different temperature settings to keep drinks at their ideal temperatures.

It can also be used to store some food items that **DO NOT** require specific temperature settings.

However, for food items that need to be frozen, we recommend using a freezer that is specifically designed for food storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
The appliance does not operate	There is a power failure, or the appliance is not plugged in	Ensure the appliance is plugged in and the power outlet has power
	A house fuse has blown, or the circuit breaker is tripped	Replace the broken fuse or reset the breaker
The appliance is not cold enough	The appliance is placed too close to a heat source	Adjust the temperature. Keep the appliance away from sunshine or other heat sources
	The door is opened too often, or the door is not closed completely	Close the door tightly and DO NOT open the door too frequently or for a long period of time
	The door gasket does not seal properly	Ensure the door gasket is not loose
The appliance frequently turns on and off	The ambient (room) temperature is too low or too high	Decrease or increase the ambient (room) temperature
	A large amount of content has been added to the appliance	To minimize internal temperature fluctuation, DO NOT overstock the appliance
	The door is opened too often, or the door is not closed completely	Close the door tightly and DO NOT open the door too frequently or for a long period of time
	The door gasket does not seal properly	Ensure the door gasket is not loose. It is normal for the fan to come on and turn off to circulate the air inside of the unit for even temperature distribution and to save energy

Problem	Possible Cause	Solution
The appliance makes too much noise	The noise may come from the flow of the refrigerant, and the expansion of the inside walls may cause popping and crackling noises	It is normal that, as each cooling cycle ends, you may hear rattling or gurgling sounds caused by the flow of refrigerant in the appliance. The high-efficiency compressor may make a pulsating or high-pitched sound
	Contraction and expansion of the inside walls may cause popping and crackling noises	Some popping or cracking noises are normal. They are caused by the expansion and contraction of the inside walls due to temperature changes
	The appliance is not level	Make sure the unit is placed on a hard and level surface. DO NOT place the appliance on carpet
The door does not close properly	he appliance is not level	Make sure the appliance is on a hard and level surface. Avoid placing the appliance on a carpeted or soft surface
	The door was reversed and not properly installed	Reinstall door
	The shelves are out of position	orrectly install the shelves
Condensation builds up on the glass door	The ambient temperature or humidity is high	Lower the room humidity with a dehumidifier or air conditioner
The machine is not cooling at all	The refrigerant hasn't completely settled	et the unit stand upright for 24 hours before plugging it in (in order to stabilize after transportation)
	The temperature wasn't set correctly for the first use	After powering on, set the temperature to the temperature you want using the adjustable control. Before fully loading beverages, pre-cool the unit for 2 hours at the default temperature
	The door is not closed properly	Check the door seal for any damage. If not, close the door tightly and wait for more than 2 hours .If it does not resolve the issue, check if the display still works and contact the after-sales team for assistance

SPECS

SKU	BR001-95BL-USZX
MODEL	BR001-95
VOLTAGE	115V~60HZ
RATED CURRENT	1.0A
REFRIGERANT	R600a 0.81Oz/23g
PRODUCT DIMENSIONS	17.4*18.9*25.0 inches
NET WEIGHT	43.08 Lbs
GROSS WEIGHT	51.32 Lbs

WARRANTY POLICY

1-Year Limited Warranty

Toll-Free Call: 1-833-632-0897 Mon to Fri, 9AM - 6PM (ET)

Email: support@homyd.com

Thank you for choosing our products. We provide a 1-Year Limited Warranty for items purchased through our official channels. Please kindly note that this warranty is for the original purchaser and is non-transferable. If you purchase from an unauthorized seller, please get in touch with them directly.

We are committed to ensuring that our products are free from defects in materials and workmanship for one year from the date of purchase, as long as they are used under normal household conditions and maintained according to the User Manual. **Please note that certain conditions and exclusions apply:**

Should you find any defects in the original product or its non-wearable parts, we will be happy to repair or replace the item within one year of purchase. If a replacement is necessary, the warranty period will continue from the original purchase date. Please be aware that normal wear and tear or damage due to mishandling, accidents, or failure to follow instructions are not covered. However, replacement parts are available for purchase. Feel free to contact us for more information.

Please also note that this warranty does not cover damage caused by exposure to liquids or foreign materials, unauthorized repairs or modifications, or use in commercial or non-household environments (unless specified for commercial use).

If you encounter any issues with your product, we are here to help. You can reach us by phone at **1-833-632-0897(US)** or email us at **support@homyd.com**. For certain product categories, we also offer the option to upgrade your warranty to our VIP service.

Our friendly phone support team is available from **Monday to Friday, 9 AM - 6 PM (ET)**. To assist you more efficiently, please have your product with you when you call. We aim to respond to emails within 24 business hours. If you don't receive a reply after sending us an email within this time frame, kindly check your spam folder to ensure you don't miss our response.

In addition to the one-year warranty, we also offer lifetime technical support. After the warranty period, service is still available at an additional cost. Please don't hesitate to contact us with any questions or concerns.

RETURN POLICY

We offer a 30-day return policy for purchases made directly through our company. This policy is separate from and does not override the return policies of third-party platforms.

Return Eligibility

Items must be returned within 30 days of purchase.

Products should be in new or like-new condition, with original packaging and all accessories (manuals, handles, keys, etc.).

Returns not related to quality issues will require the buyer to cover return shipping costs, which will be deducted from the final refund.

How to Initiate a Return

Contact our customer service team for return authorization.

Provide the following information:

Proof of purchase (e.g., screenshot with platform name, order number, date, item, and amount)

After approval, we will send a return shipping label. Attach it to the product box and return via the designated carrier.

Once we receive and inspect your return, we will process your refund within **2–3 business days** (excluding original processing or handling fees).

***Note:**

Returned products that are damaged or missing parts may not qualify for a refund.

This return policy does not affect your warranty rights.

For details, please refer to the “Return Policy” section of this manual or the return policy on your purchase platform.

SKU: BR001-95BL-USZX

