 


MID-CENTURY MODERN TV STAND WITH CABINET

Carefully review assembly and care instructions before using this product. Save this document for future reference.
Assemble components on a soft, clean surface to avoid scratching or damaging the finish.

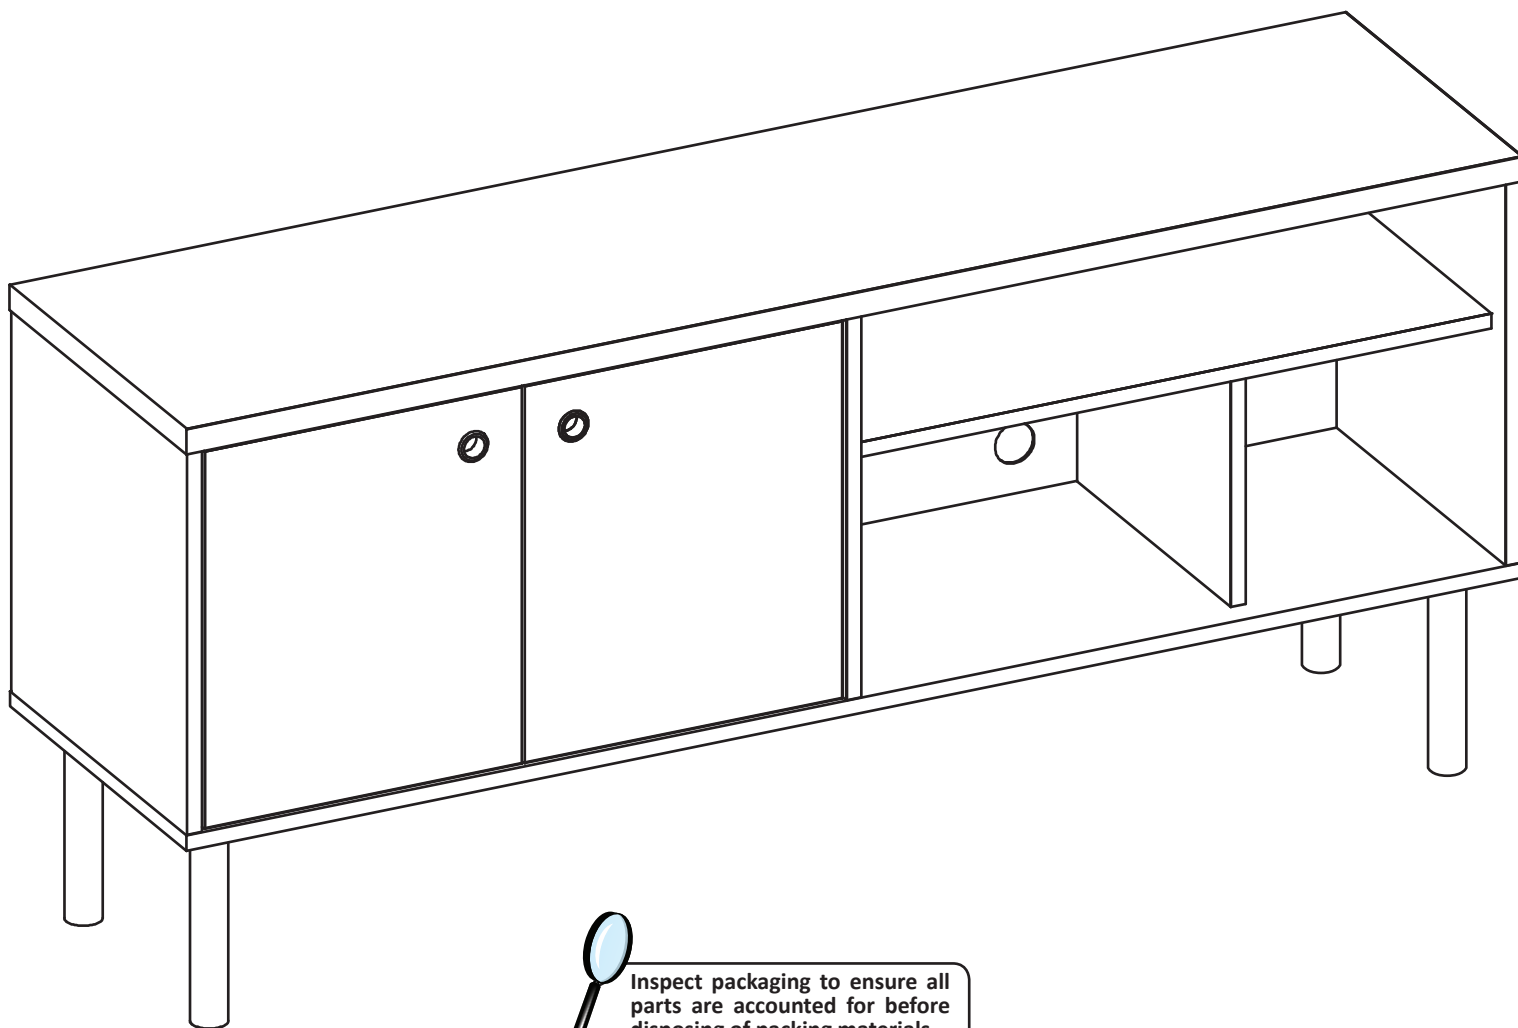

Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

⚠ WARNING ⚠

CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children and pets away during assembly.

ⓘ HELPFUL HINTS

Sunnydaze Decor advises reading this manual fully, and assembling the item soon after purchase. Check that all parts are accounted for and familiarize yourself with the assembly before beginning.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

INTRODUCTION

Read the manual carefully to ensure you fully understand all use, care, assembly, and safety information.



 
Read this manual carefully and follow the assembly instructions in the order listed. Pay close attention to assembly drawings.



Regularly clean with a clean microfiber cloth to prevent dust accumulation.



Do not paint the unit.
Do not use abrasive materials or cleaners to clean the furniture.

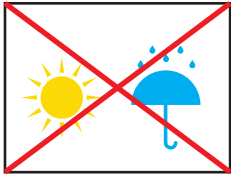

Indoor use only.
Do not expose the furniture to heat or humidity.



When cleaning nearby the furniture, do not allow contact with water or cleaners as it may deteriorate the furniture.



Do not allow metal components to come in contact with water or cleaners as it may cause rust and staining.



Assemble on a soft, flat, clean, and dry surface.



Use a soft, protective barrier when assembling the furniture.

TIP: Use the box carton as a protective layer to separate and protect the parts from scratches and other damage during assembly.



Do not push or drag furniture as doing so may damage the unit.

 


Only move furniture when it is empty.
Always ask for help when moving furniture.



Avoid Accidents - Do not climb, sit or stand on the furniture.


Do not allow children to play on or inside the furniture.

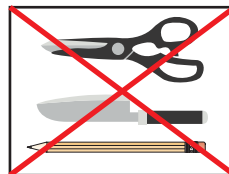

Keep sharp objects away as they may scratch or damage the unit.

Do not use the furniture as a writing surface without a padded barrier.

 WEIGHT CAPACITY


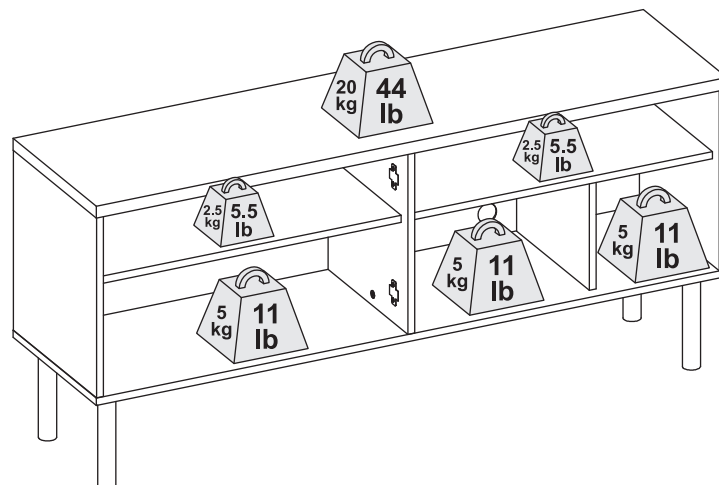


COMPONENTS

BEFORE BEGINNING ASSEMBLY:

✓ **Check all components match the parts list; the parts come with the code stamped on, as shown in the drawing to the left**

  
✓ **Separate hardware by type**

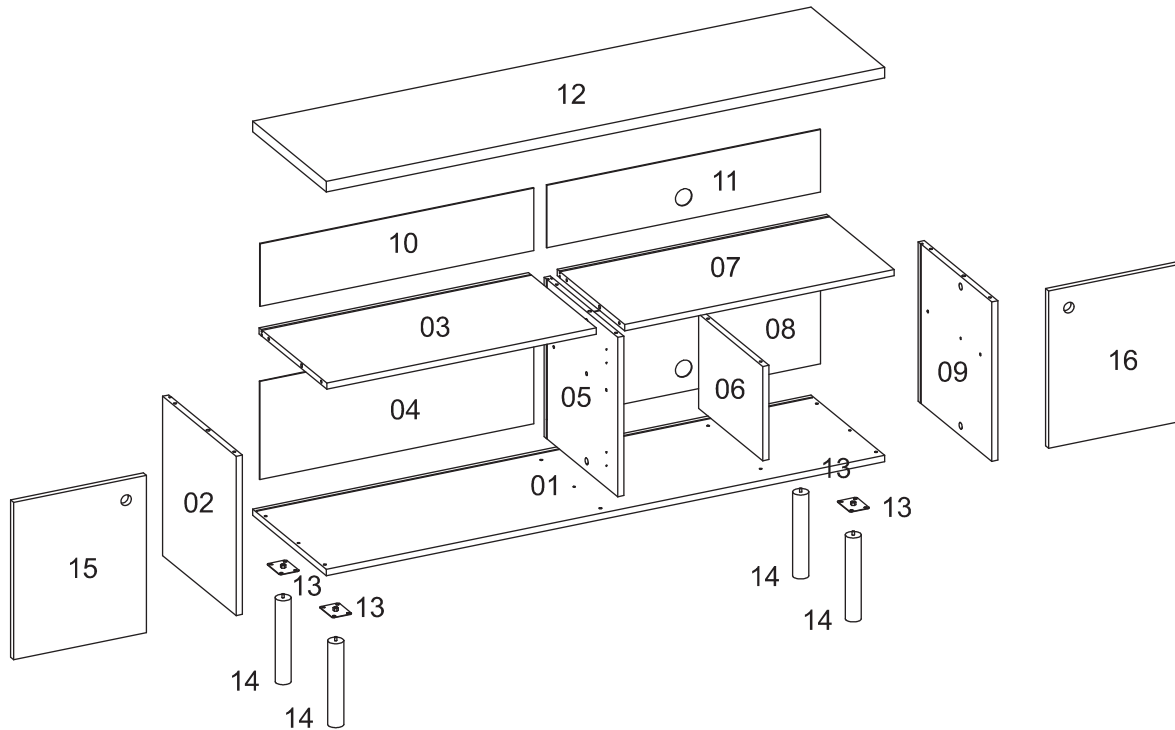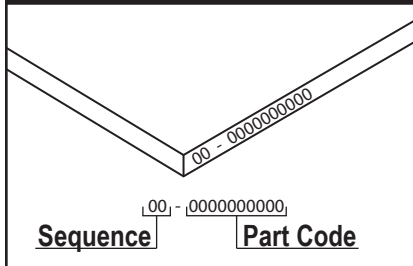


SEQ.	PART CODE	PART NAME	QTY.
01	50937	Bottom Shelf	1
02	50941	Left Side Panel	1
03	50942	Left Middle Shelf	1
04	50947	Lower Left Back Panel	1
05	50939	Left Division Panel	1
06	50945	Right Division Panel	1
07	50946	Right Middle Shelf	1
08	51133	Lower Right Back Panel	1
09	50940	Right Side Panel	1
10	50948	Top Left Back Panel	1
11	51132	Top Right Back Panel	1
12	50938	Top	1
13	MET0121	Leg Mounting Plate	4
14	PES0370	Leg	4
15	50943	Left Door	1
16	50944	Right Door	1

No.	HARDWARE	QTY.
A	Wood Dowel	24
B	Cam Screw	8
C	Cam Lock	10
D	Sticker	6
E	M3.5x12mm Flat Screw	16
F	M3.5x12mm Round Screw	32
G	Guide Pin	2
H	Plastic Wedge	16
I	Hinge Plate	4
J	Hinge	4
K	Grommet	2
L	Double Ended Dowel Pin	1

 TOOLS REQUIRED (not included)



Phillips Screwdriver

 


Rubber Mallet

⚠ IMPORTANT INSTALLATION INFORMATION ⚠


For the stability of the unit, it is important that furniture connectors are installed correctly.
See drawings and tips below for proper installation.

 Wood Dowel

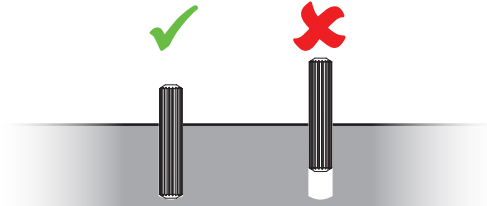


Install wood dowels by gently tapping them into the designated hole using a rubber mallet.

 Cam Screw

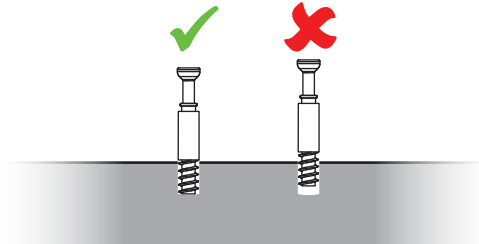

Use a screwdriver to secure the threaded end of the cam screw into the designated hole, as shown.

 Cam Lock

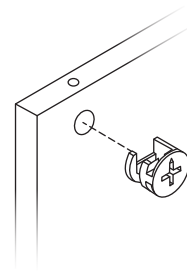

Align the cam lock opening (arrow) with the pre-drilled hole. Use a screwdriver to adjust alignment.

IMPORTANT: Take care not to over-tighten screws as doing so may crack the wood or strip the screw hole, causing a weak connection and reduced stability.

ASSEMBLY

STEP 1

 
 
PARTS REQUIRED

01 x1

HARDWARE REQUIRED

B  x3

TOOLS REQUIRED

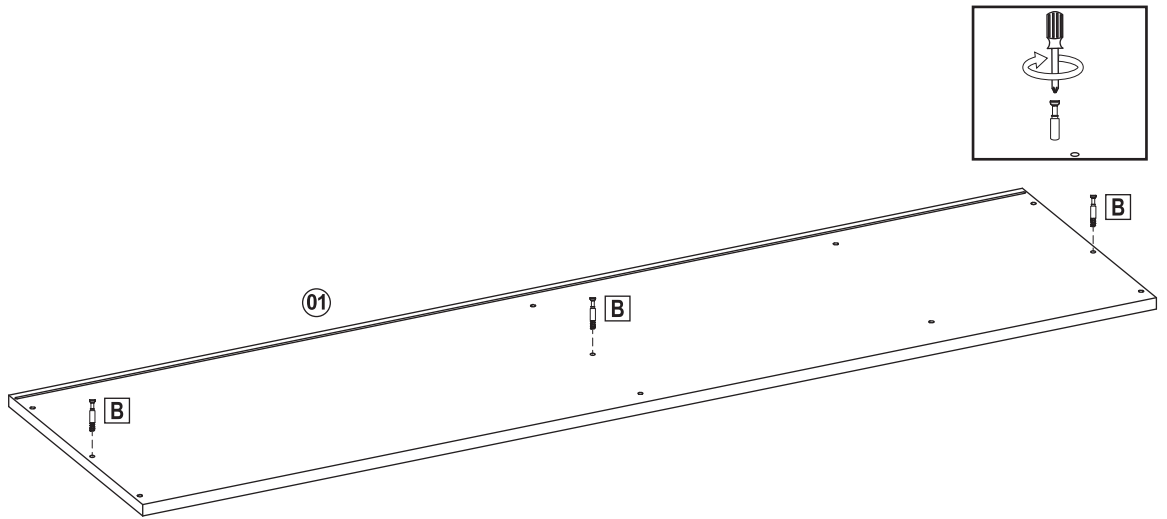

STEP 2

PARTS REQUIRED

 
 
 
12 x1

HARDWARE REQUIRED

B  x3

G  x2

TOOLS REQUIRED

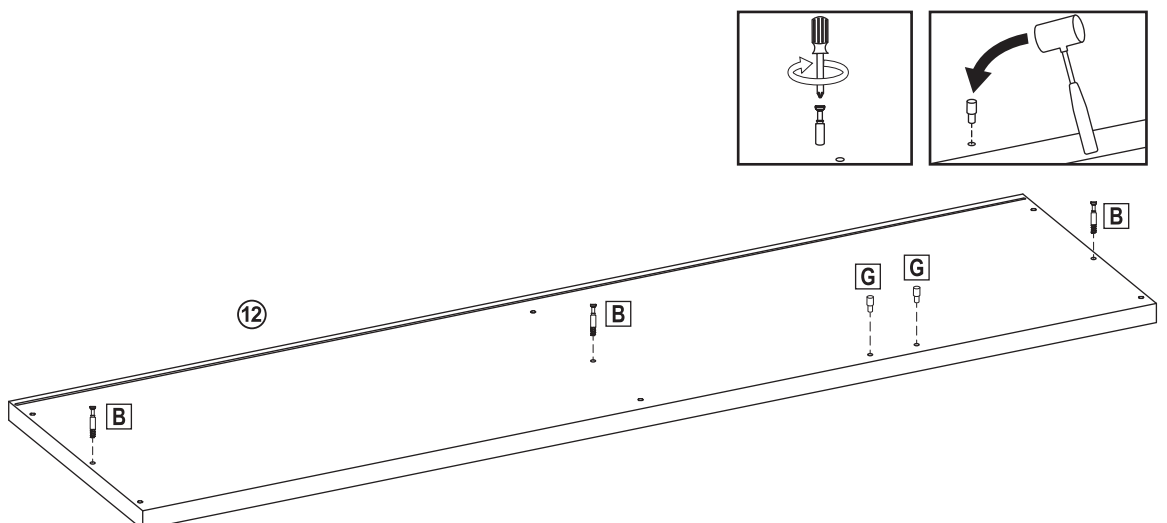

STEP 3

 
PARTS REQUIRED

03 x1 07 x1

HARDWARE REQUIRED

A  x8
C  x4

TOOLS REQUIRED

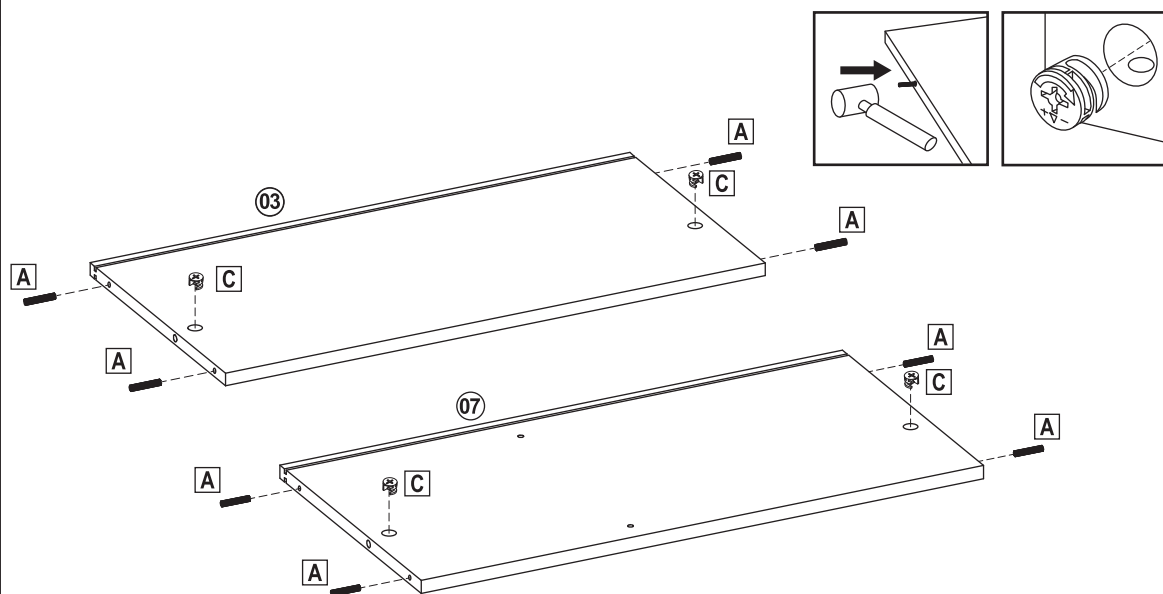

STEP 4

 
 
PARTS REQUIRED

06 x1 09 x1

HARDWARE REQUIRED

A  x8
B  x1
C  x2

TOOLS REQUIRED

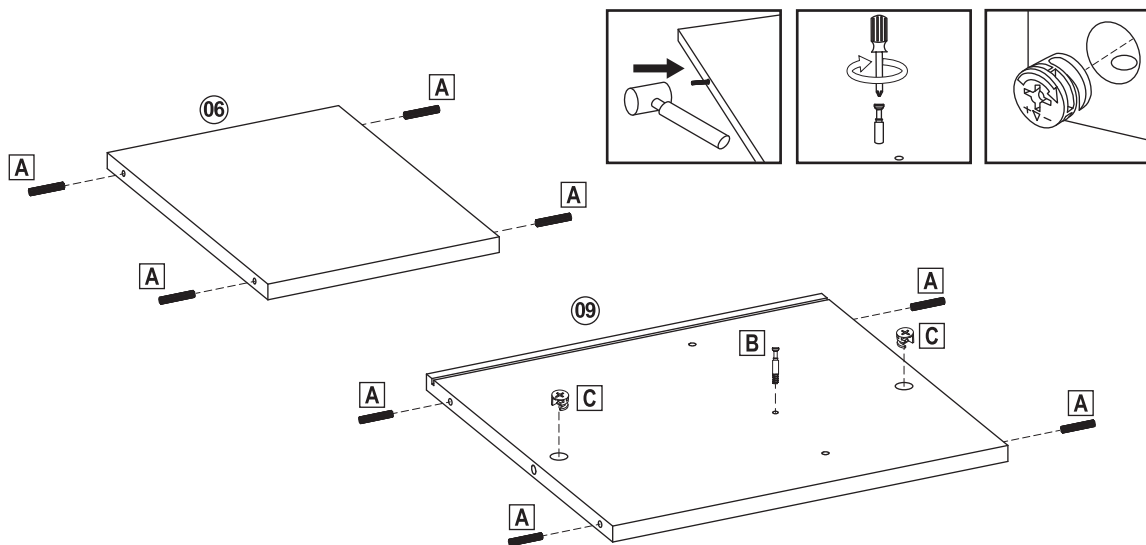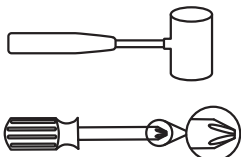

STEP 5

 
PARTS REQUIRED

02 x1

HARDWARE REQUIRED



A  x4
B  x1
C  x2
F  M3.5x12mm x4
I  x2

TOOLS REQUIRED

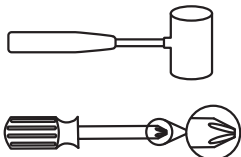

IMPORTANT:

  Ensure the hinge plate is installed with the adjustment screw mounted towards the rear of the cabinet.

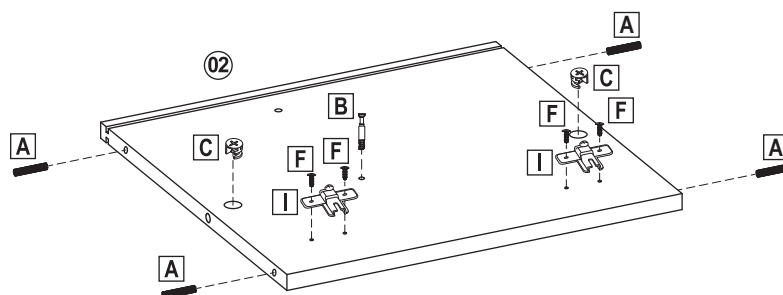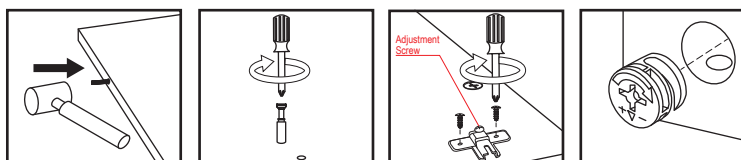

STEP 6


PARTS REQUIRED

05 x1

HARDWARE REQUIRED



A		x4
C		x2
L		x1
F	 M3.5x12mm	x4
I		x2

 TOOLS REQUIRED

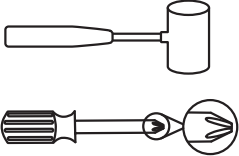

IMPORTANT:

  Ensure the hinge plate is installed with the adjustment screw mounted towards the rear of the cabinet.

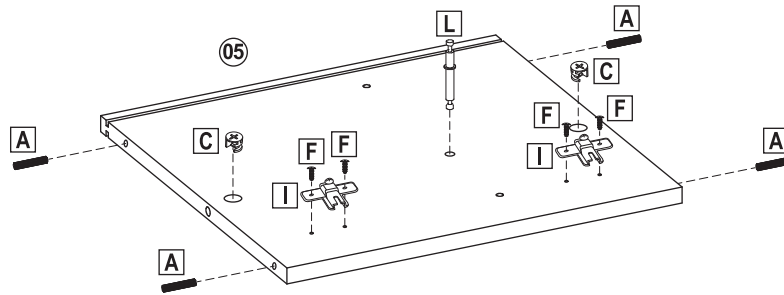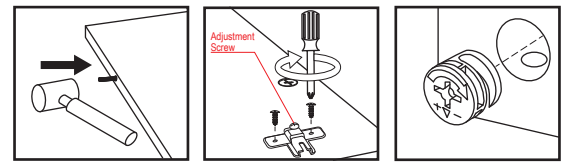

STEP 7




PARTS REQUIRED

15 x1 16 x1

HARDWARE REQUIRED

F	 M3.5x12mm	x8
J		x4
K		x2

   TOOLS REQUIRED

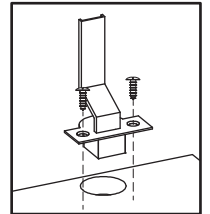
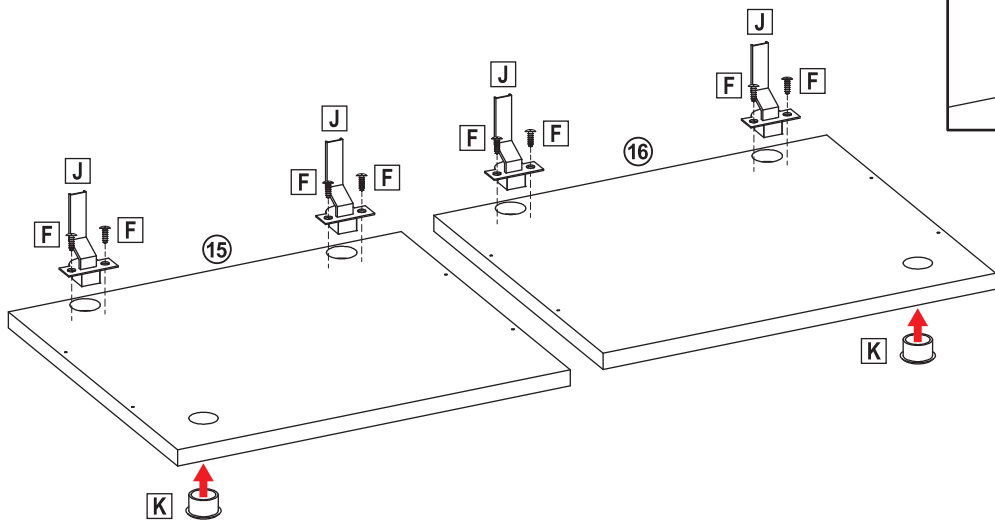



STEP 8

HARDWARE REQUIRED


D x1

   TOOLS REQUIRED

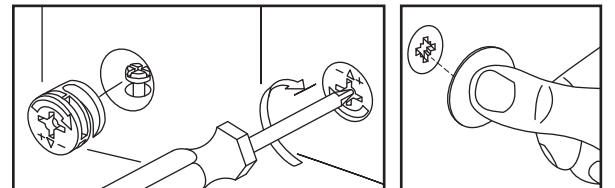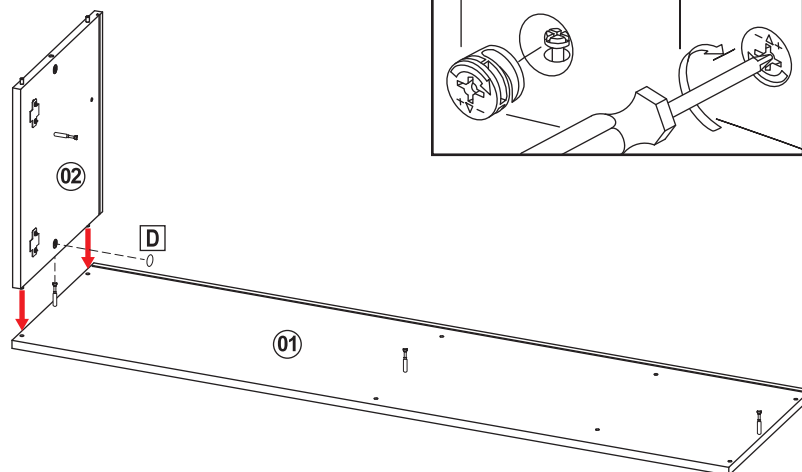


STEP 9

 TOOLS REQUIRED



TIP: Position the assembled components on their side before connecting the shelf.

 
Ensure the grooves for installing the back panels are facing the back of the unit, as shown.

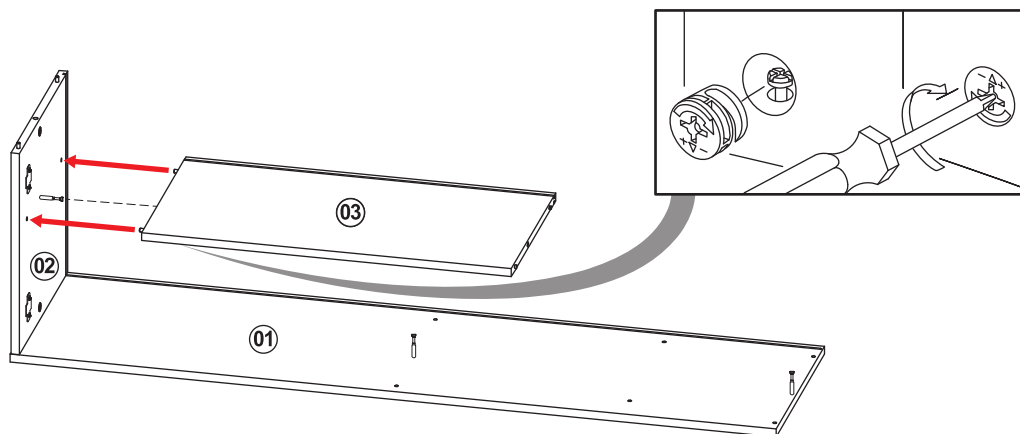

STEP 10

PARTS REQUIRED

 04 x1


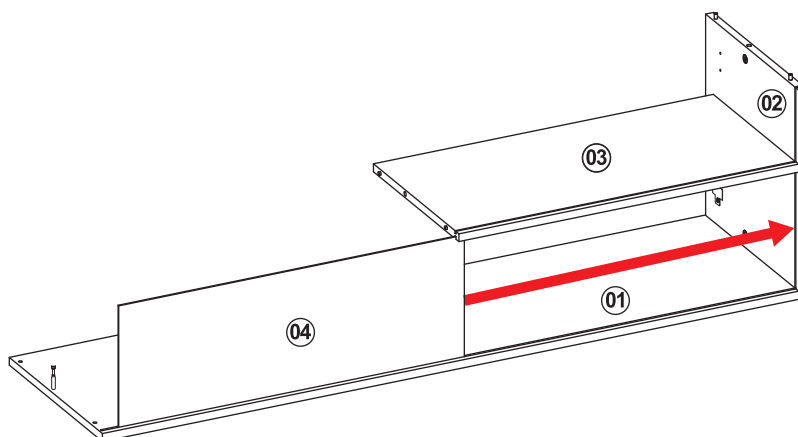


STEP 11


HARDWARE REQUIRED

D x1

  TOOLS REQUIRED

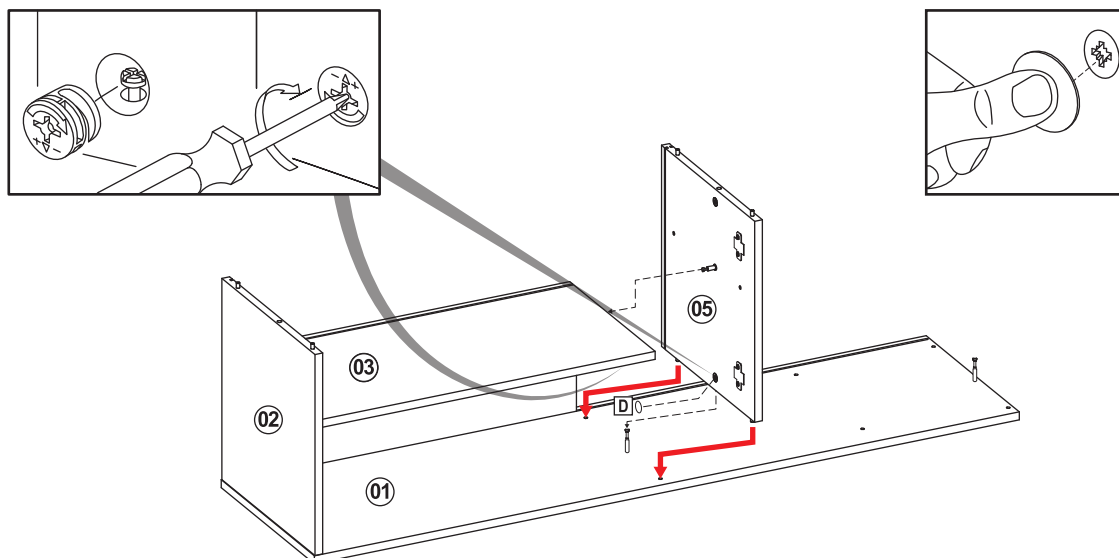



 STEP 12

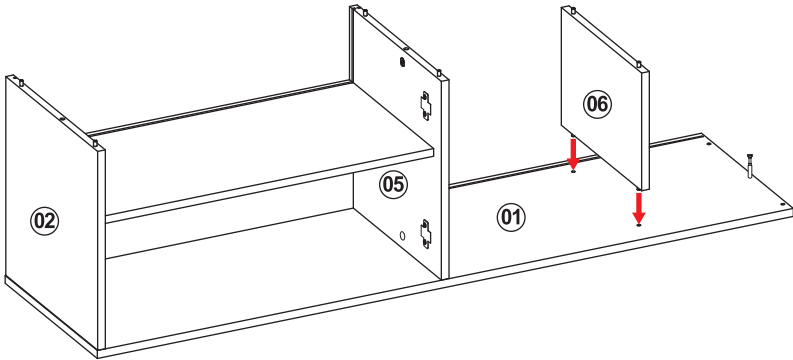

STEP 13

  
TOOLS REQUIRED

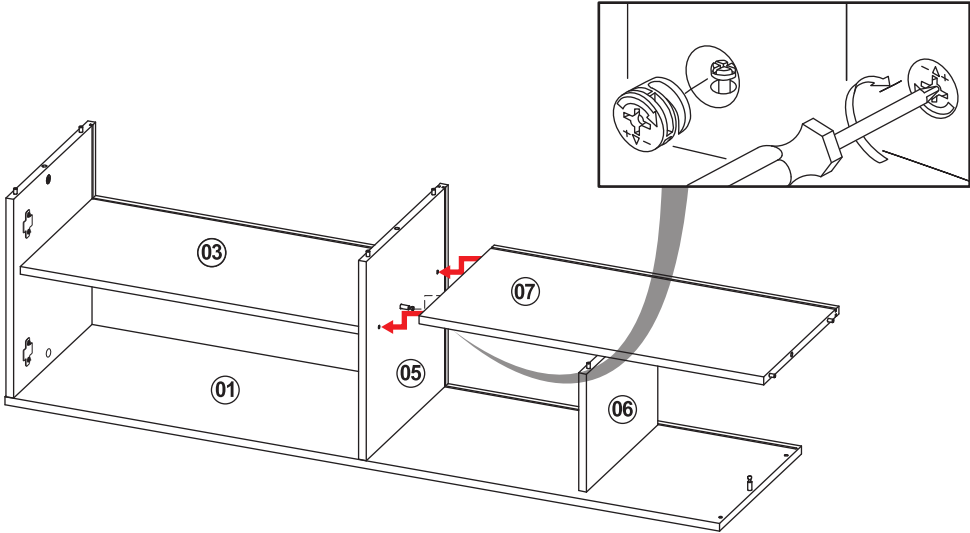

STEP 14

PARTS REQUIRED

 08 x1


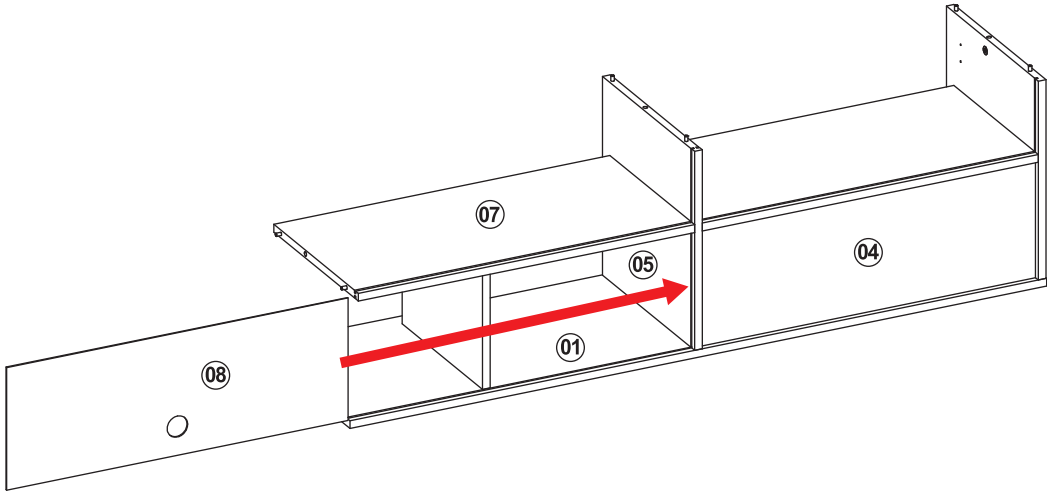


STEP 15

HARDWARE REQUIRED

D  x1

  
TOOLS REQUIRED

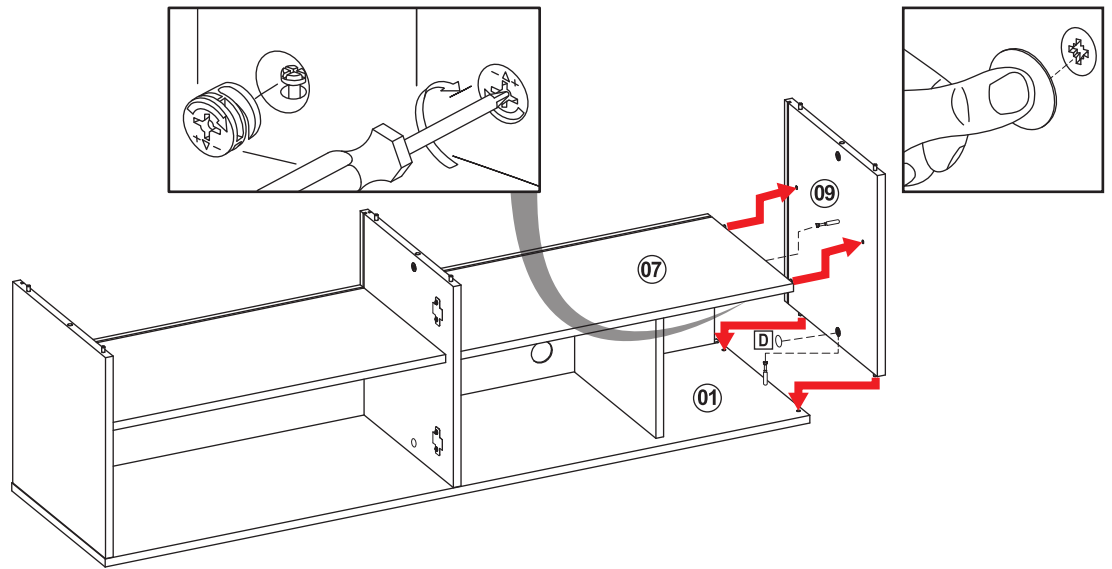

STEP 16

PARTS REQUIRED

 10 x1 11 x1


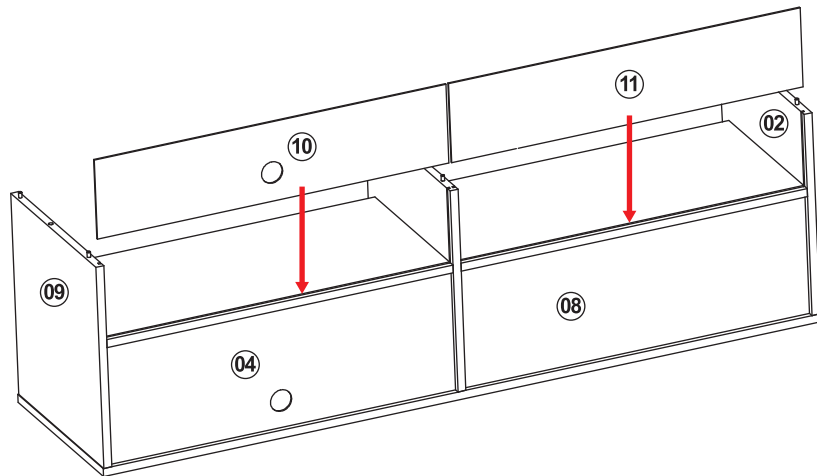


STEP 17

HARDWARE REQUIRED

D  x3

  TOOLS REQUIRED


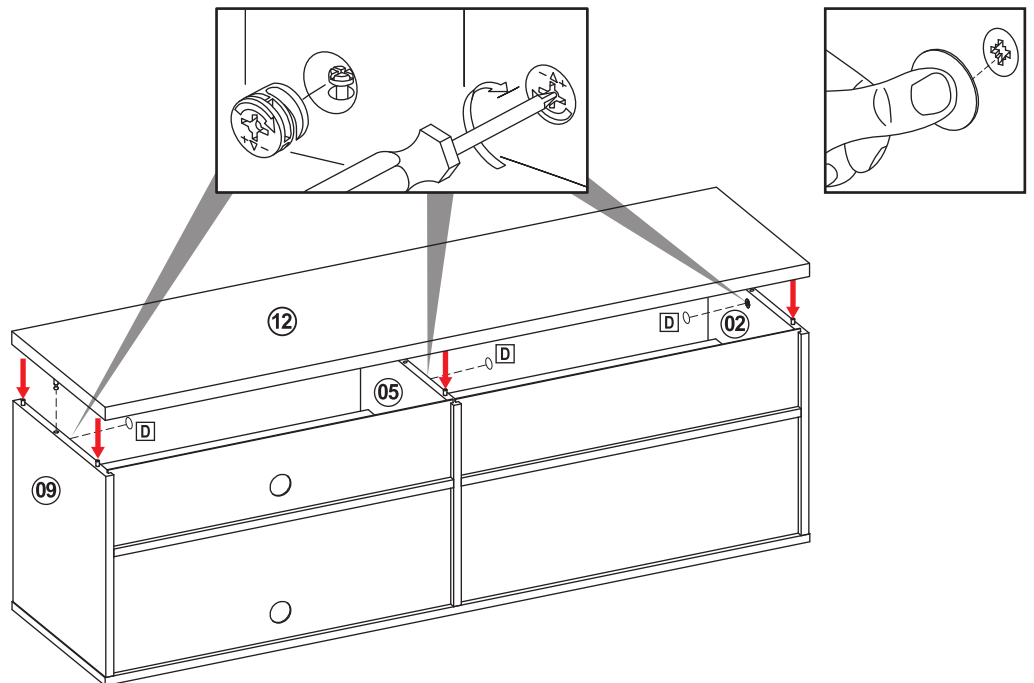



STEP 18

HARDWARE REQUIRED

E		M3.5x12mm	x16
H			x16

   TOOLS REQUIRED

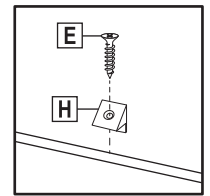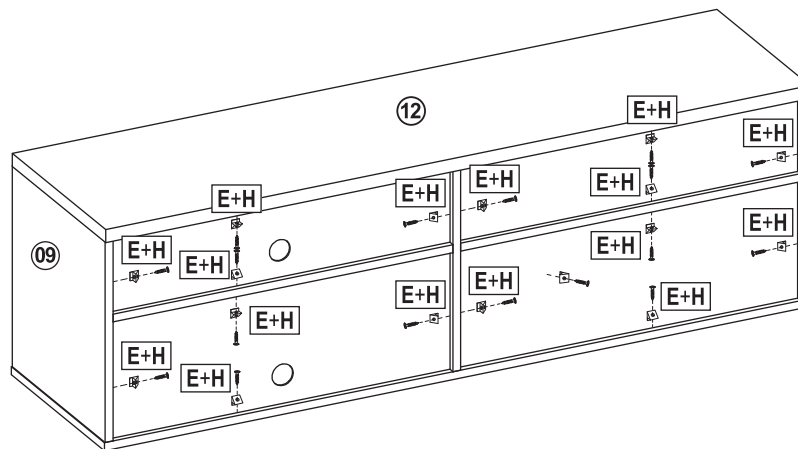

STEP 19




PARTS REQUIRED

13 x4

HARDWARE REQUIRED

F		M3.5x12mm	x16
---	---	-----------	-----

   
TOOLS REQUIRED

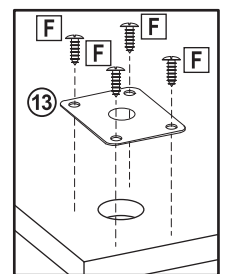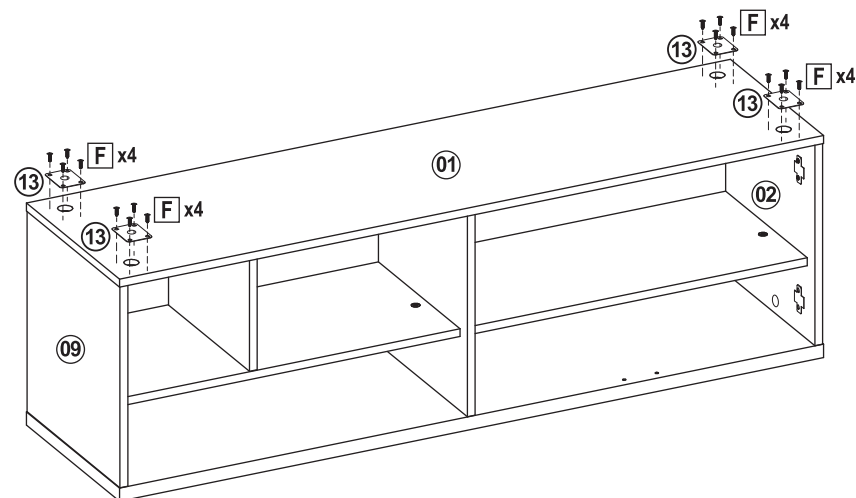

STEP 20




PARTS REQUIRED

 14 x4

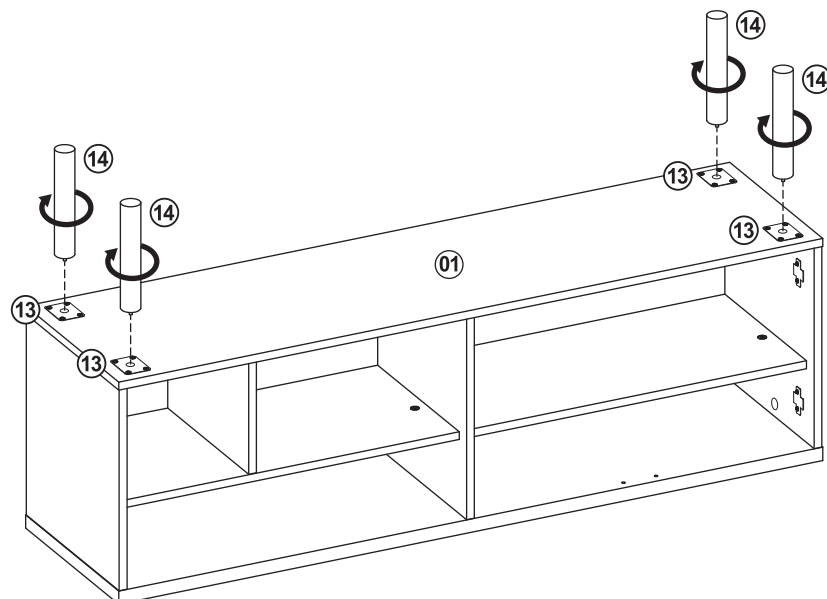

STEP 18

   TOOLS REQUIRED

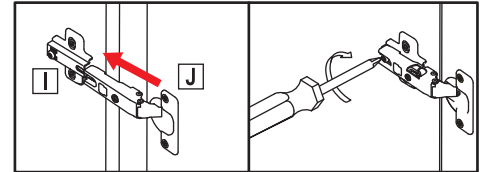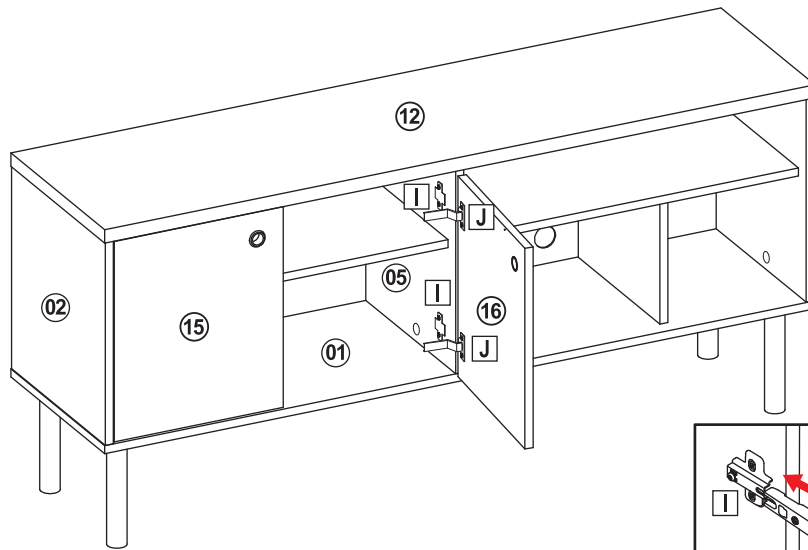

HINGE ADJUSTMENT INSTRUCTIONS

Door Installation:

Please note, the cabinet box must be level and plumb for the door to work properly. Under certain conditions, wall surfaces may not be plumb, which results in a slight gap, either at the top or bottom, or between the doors.

Carefully hold the door and slide the hinge onto the hinge plate. Please note, the pin on the hinge slides into the slot of the hinge plate and the slot in the hinge slides under the screw head. Tighten the hinge screw to secure the door to cabinet.

Door Adjustment Procedure:

Please note, care must be taken during hinge adjustment to avoid damage.

Only a slight adjustment is required. Rotate the Door Adjustment screws 1/8 to 1/4 turns at a time, then check the door position. Rotate adjustment screws as necessary until doors are properly aligned.

! SAFETY STATEMENTS & WARNINGS !

- Residential use only. Not for commercial or industrial use.
- For indoor use only.
- Ensure fittings are tight before use. Periodically check fitting to ensure they are tight.
- Only use this unit on a flat, level surface.
- Do not sit, stand or climb on the unit.
- Supervise children; never allow children to climb or sit on this unit as it may tip over and cause serious injury.
- Do not place liquids or hot items on the furniture.
- Never use chemical cleaning products or polishes as they may damage the finish.
- Do not overload the shelves as doing so may cause the shelves to sag.
- Do not place the unit in direct sunlight.
- Avoid placing unit near heating or cooling vents as forced air is very drying and can damage the unit.
- Do not write on furniture without a padded barrier to protect the surface.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team directly through one of the methods mentioned at the top of page 1.

Please have the item number and order information ready to expedite response time.

! NOTICE:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.