


NS016

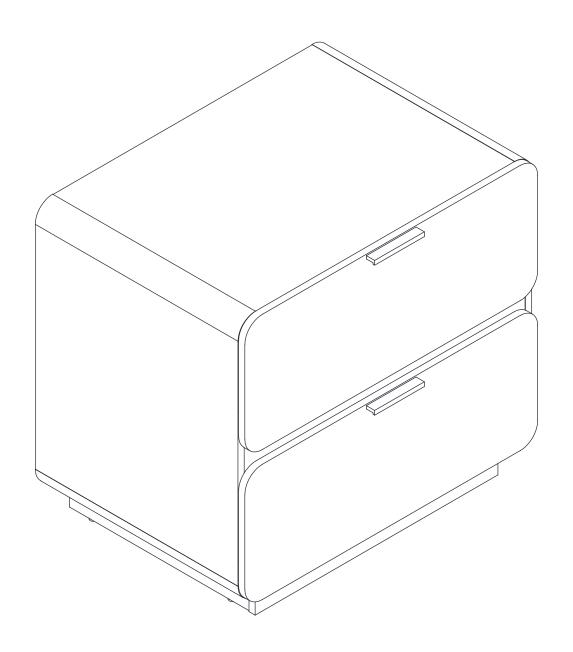





STOP!


Before beginning the assembly process, ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

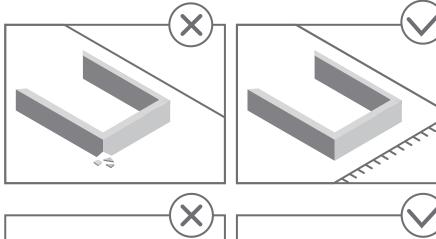

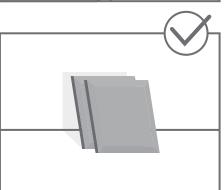

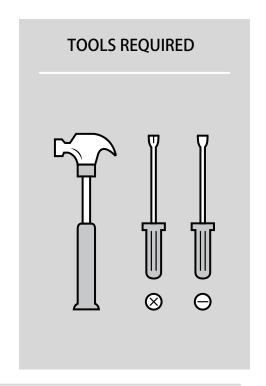



View our assembly video online: WWW.MANHATTANCOMFORT.COM




Stuck? Question? We are here to help. tel: 908-888-0818

e-mail: help@manhattancomfort.com

Support Site



Included in this package:

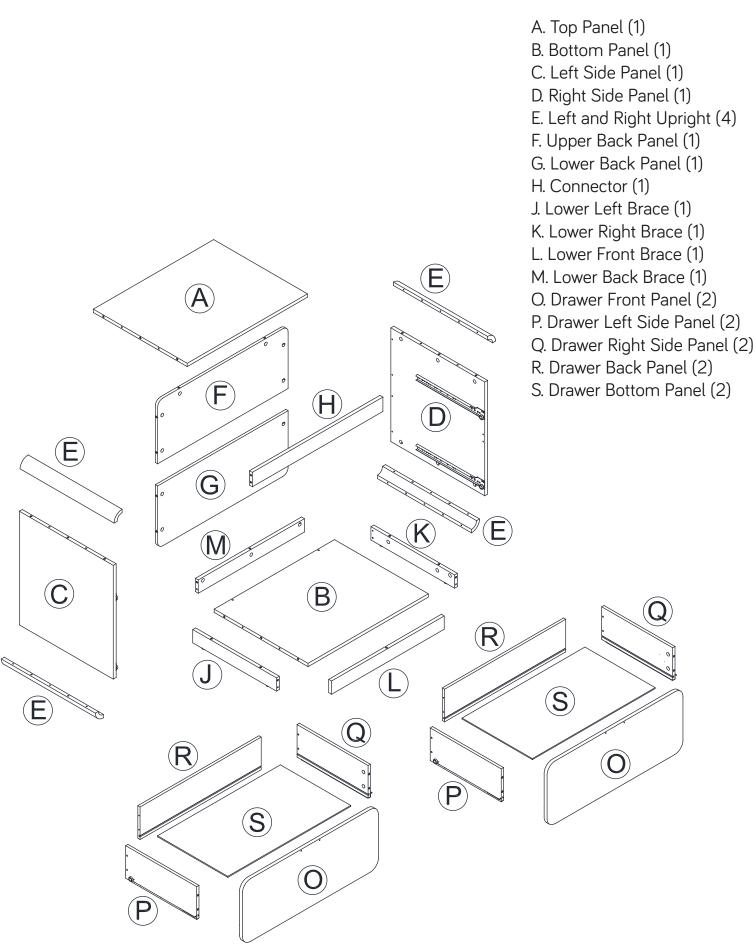


Hardware Identification

 - CAM SCREW 56PCS
- HIDDEN CAM 56PCS
- (3) APPLIQUE CARD 10PCS








 - WOOD DOWEL 20PCS 6 PULL 2PCS **(4)**
- PAN HEAD SCREW M5*30mm - 10PCS











- PAN HEAD SCREW (8) M4*18mm - 4PCS




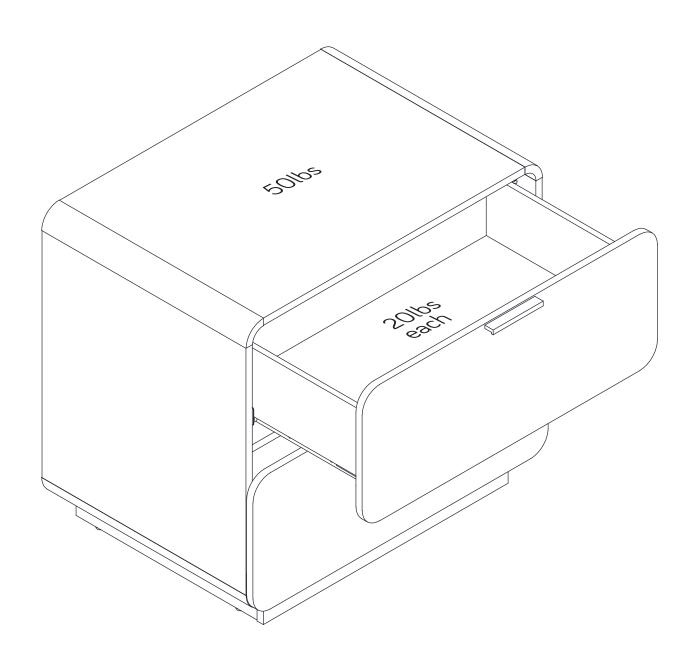

Screw fifty-six pieces CAM SCREW (1) into the Top Panel (A), the Bottom Panel (B), the Left and Right Side Panel (C and D), Lower Left/Right Brace (J and K), Lower Front Brace (L) and Drawer Front Panel (O).

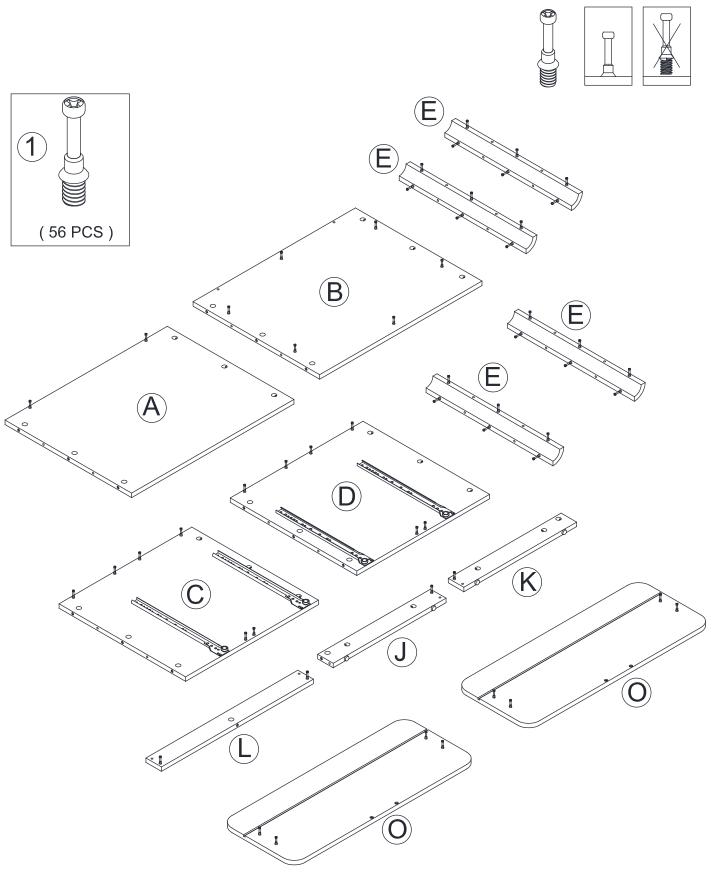


Attach thirty-eight pieces HIDDEN CAM (2) into the Top Panel (A), the Bottom Panel (B), the Left and Right Side Panel (C and D), the Connector (H) and the Upper and Lower Back Panel (F and G).

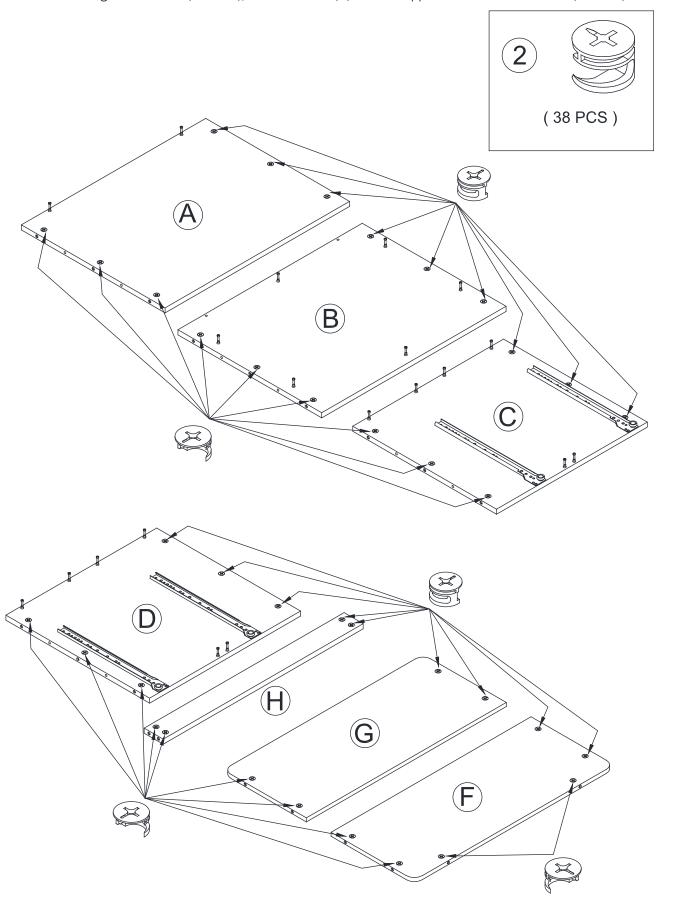


NS016


Attach eighteen pieces HIDDEN CAM (2) into the Lower Left and Right Brace (J and K), the Lower Front and Back Brace (L and M) and the Left and Right Drawer Side (P and Q).




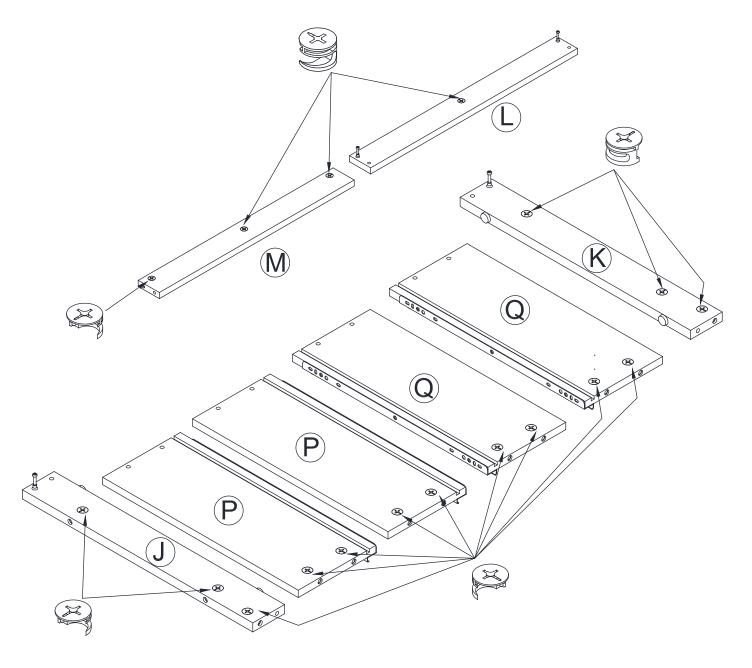


   • Insert four pieces WOOD DOWEL (4) into the Left and Right Upright (E) and the Left and Right Side Panel (C and D) then fasten the HIDDEN CAM (2).










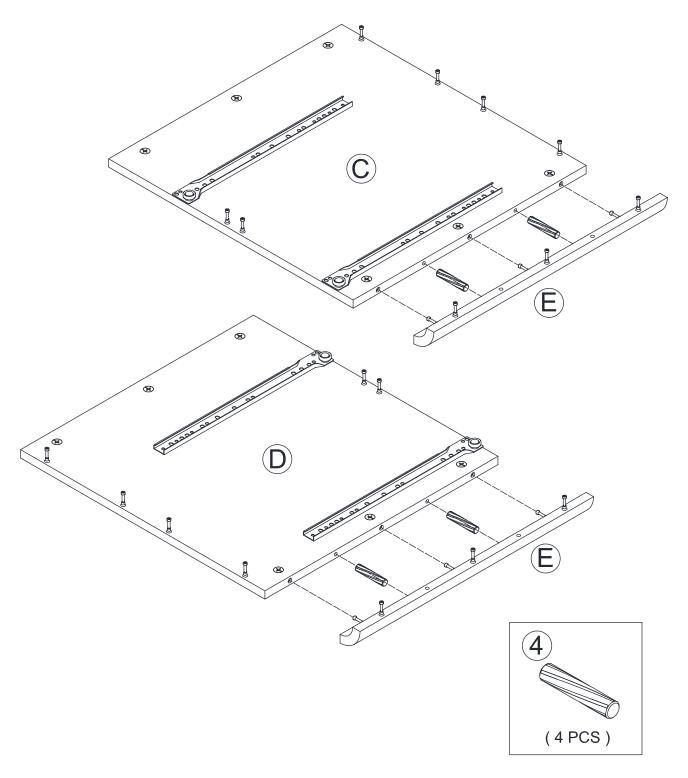


   ♦ Attach the Upper Back Panel (F) and Lower Back Panel (G) to the Left Side Panel (C) then fasten the HIDDEN CAM (2).









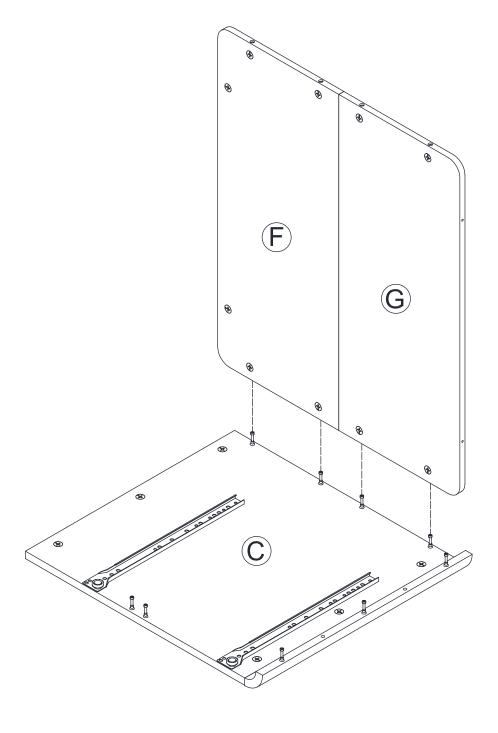



Insert the two pieces WOOD DOWEL (4) into the Bottom Panel (B) and the Left Side Panel (C)

   then fasten the HIDDEN CAM (2).









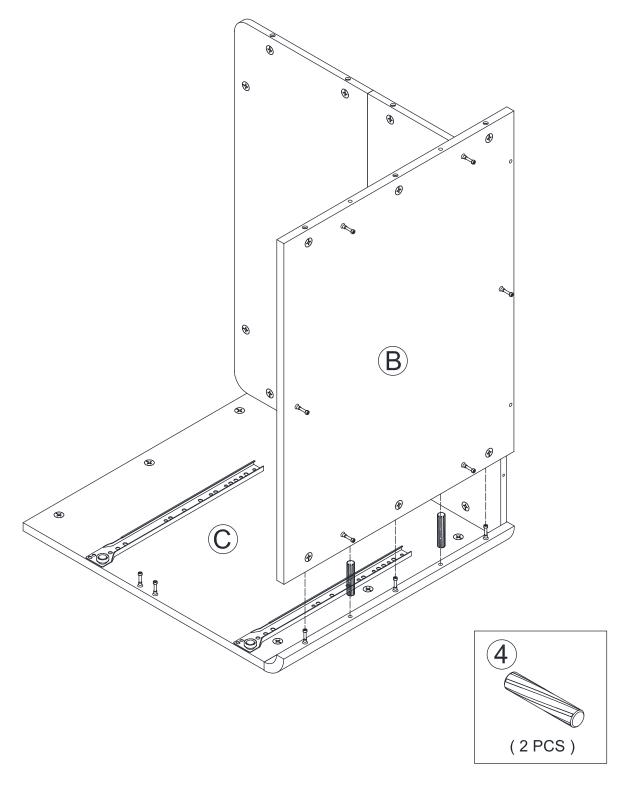



• Use two pieces of PAN HEAD SCREW (7) to attach the Bottom Panel (B) to the Lower Back Panel (G).

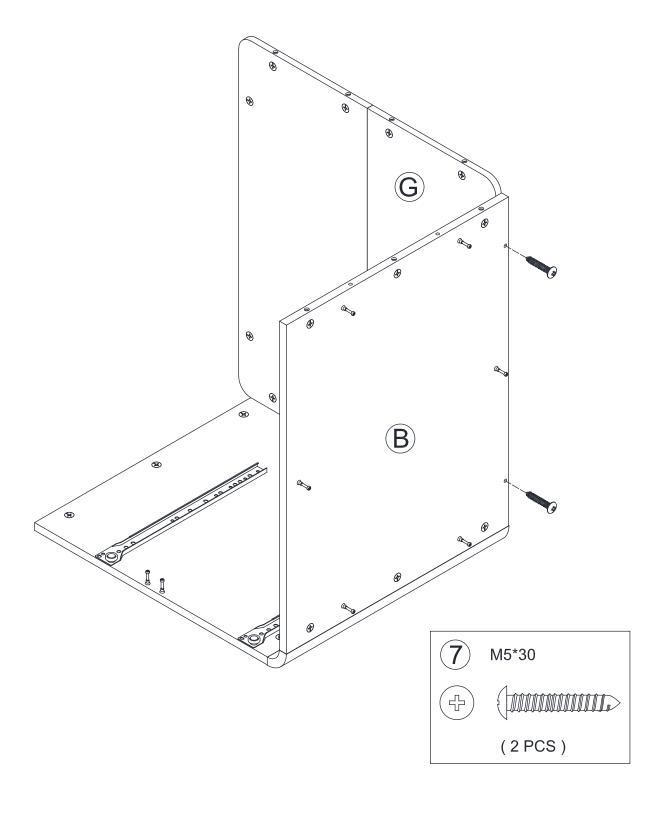


   ◆ Attach the Connector (H) into the Left Side Panel (C) then fasten the HIDDEN CAM (2).









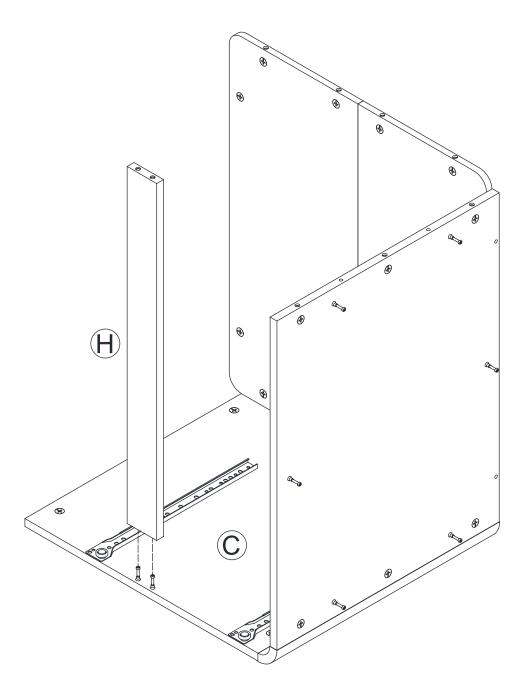

Insert two pieces WOOD DOWEL into the Right Side Panel (D) and Bottom panel (B), Then attach it to the Upper and Lower Back Panel (F and G), the Connector (H) and the Bottom Panel (B) then fasten the HIDDEN CAM (2).

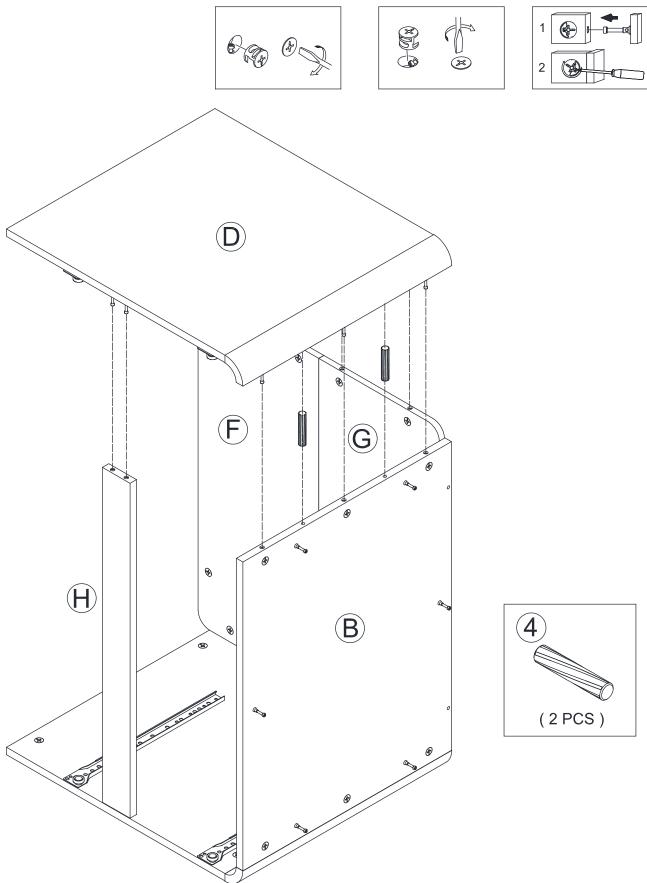



♦ Insert four pieces of WOOD DOWEL (4) into the Brace (J, K, L and M) then fasten the HIDDEN CAM (2).

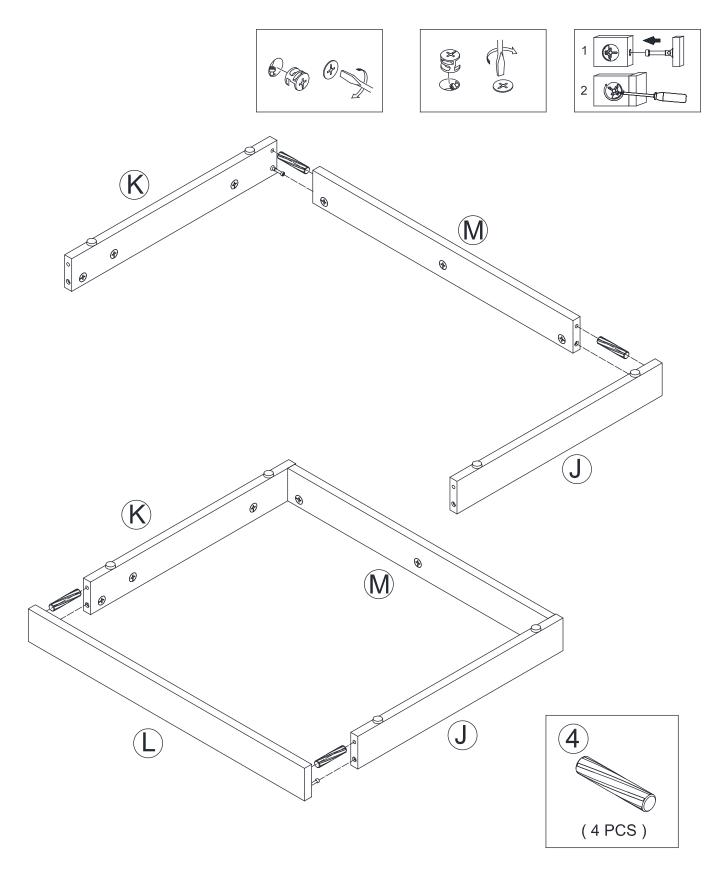



NSO16 Page 15

   ♦ Attach the Brace (J, K, L and M) to the Bottom Panel (B) then fasten the HIDDEN CAM (2).









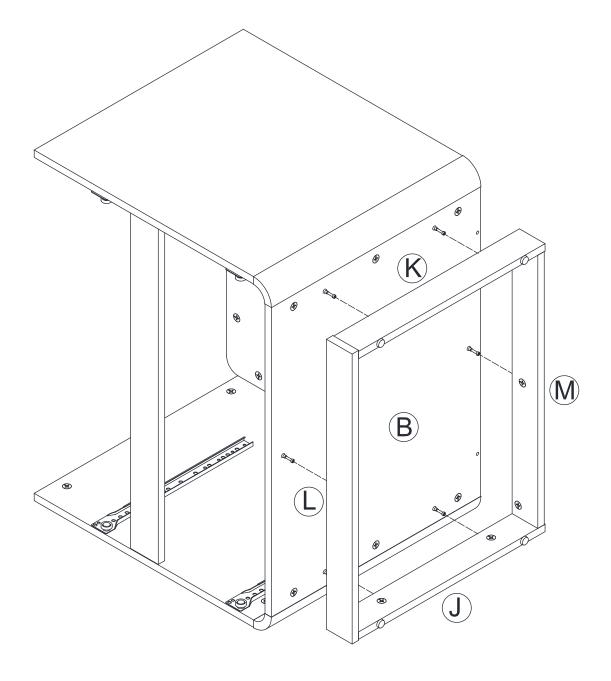



Page 16 NS016

   • Insert four pieces WOOD DOWEL (4) into the Left and Right Upright (E) then attach it to the Top Panel (A) by fastening the HIDDEN CAM (2).








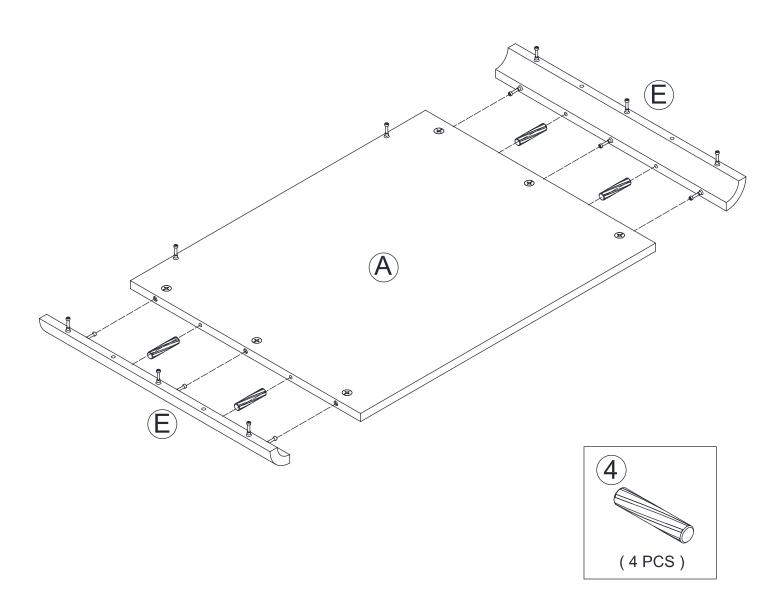


Insert four pieces WOOD DOWEL (4) into the Left and Right Side Panel (C and D) then attach the Top Panel (A) and Upper Back panel (F) by fastening the HIDDEN CAM (2).

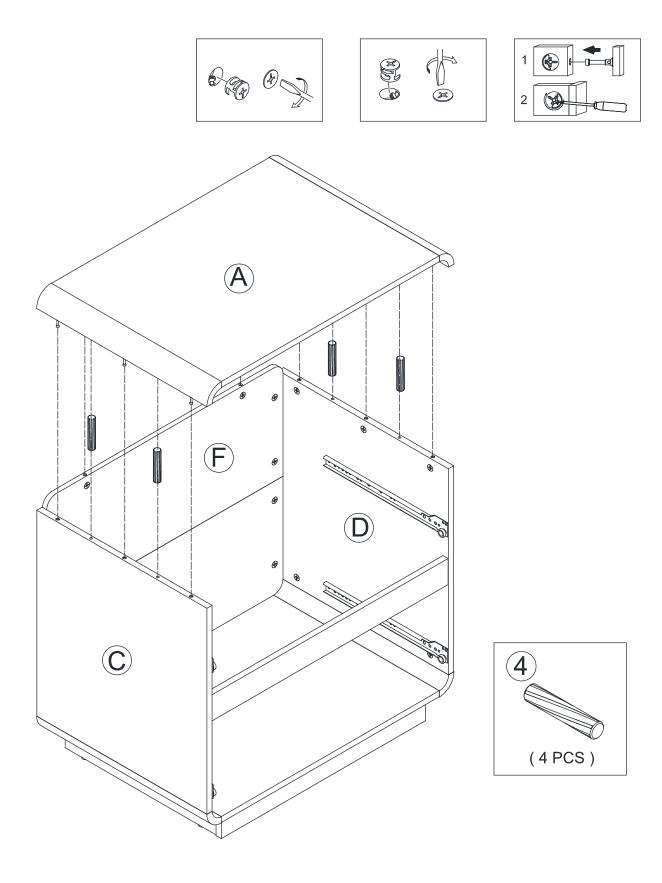


Page 18 NS016


• Use eight pieces of PAN HEADF SCREW (7) to attach the Left and Right Drawer Side Panel (P and Q) to the Drawer Back Panel (R). Repeat it for the second drawer.

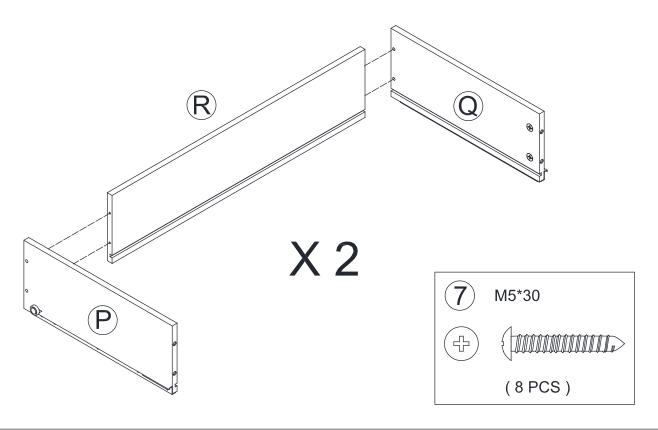


• Insert the Drawer Bottom Panel (S) into the groove of Drawer Back Panel (R) and Drawer Side Panel (P, Q). Repeat it for the second drawer.

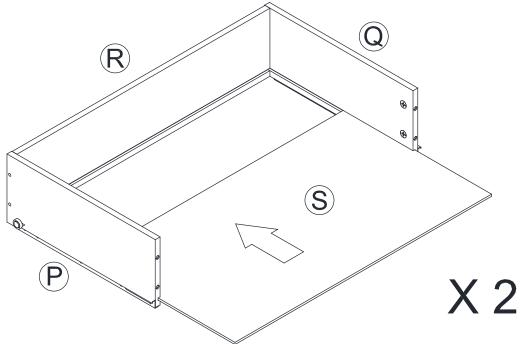

Attach the Drawer Front (O) to the Left and Right Drawer Side (P and Q) by fastening the HIDDEN CAM (2). Repeat it for the second drawer.

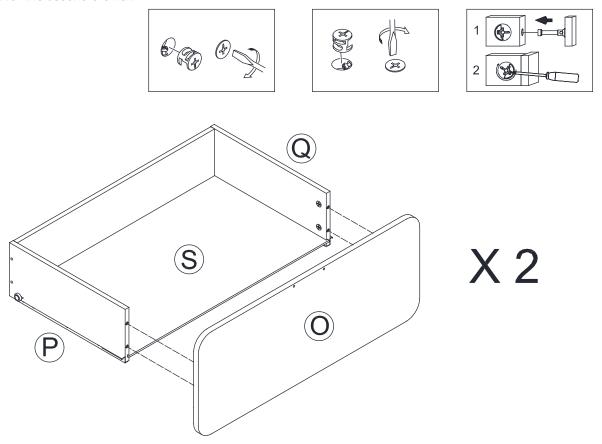


• Use four pieces of PAN HEAD SCREW (8) to attach two the PULL (6) to the Drawer Front (O). Repeat it for the second drawer.

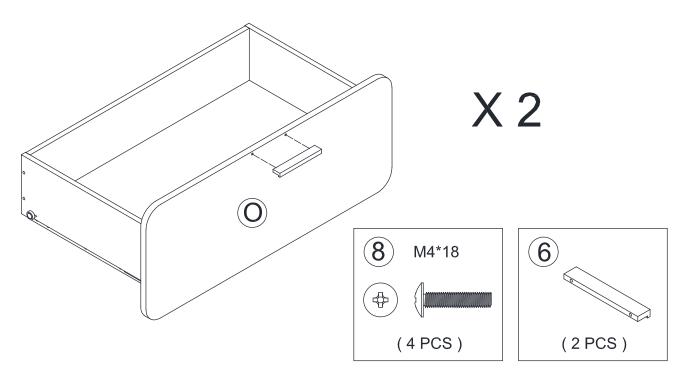


Page 20 NS016

♦ Insert the Drawer into the unit.

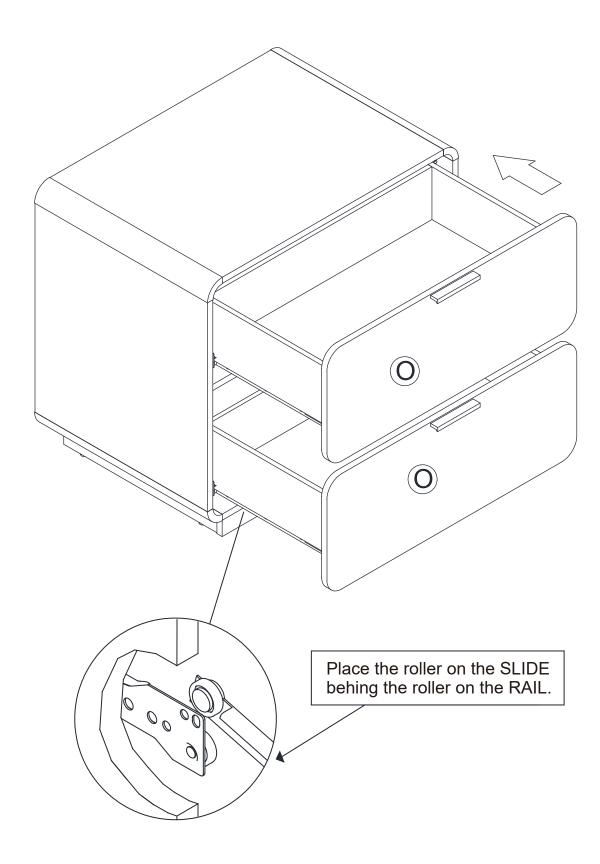

• Peel APPLIQUES from the APPLIQUE CARD (3) and stick them onto each visible HIDDEN CAM.

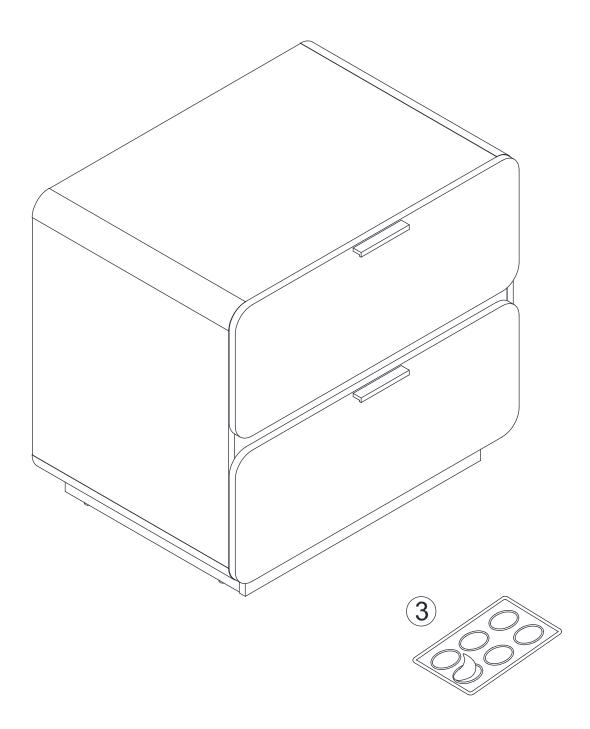

Page 22 NS016



WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.

