


Replacement

Part	Description
A	Peak Cap
B	Ceiling Assembly
C	Top Cap
D	Eave Assembly
E	Leg Assembly
F	Leg Assembly
G	Wheeled Storage Bag
H	Fabric Top
I	Stake
J	Guy Rope

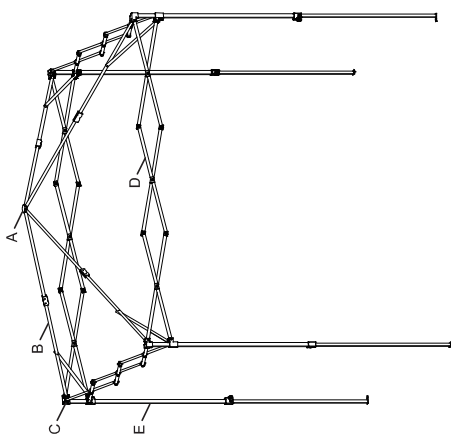

IMPORTANT:

Carefully read and follow the instructions provided with this product.

WARNING:


Keep all flame and heat sources away from this canopy top and sidewall fabric. This canopy top and sidewallis made with flame resistant fabric which meets CPAI-84 specification. It is NOT FIRE PROOF. The fabric willburn if left in continuous contact with any flame source. The application of any foreign substance to this fabric may render the flame resistant properties ineffective.

WARNING:


Do not set-up or leave the canopy unattended in the following conditions: gusty wind, rain, hail, sleet, snow, drizzle, or any other harsh weather conditions. Doing so may cause damage to the entire canopy and will void the warranty.

Set Up The Canopy


1. Stand on the opposite side of your partner and lift the frame off of the ground while walking backwards away from your partner.

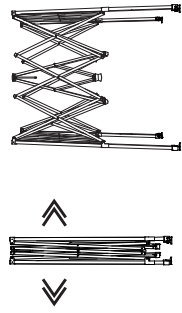


2. Unfold the canopy top and place the top over the opened frame. Secure the canopy top to the corners of the canopy frame using the Velcro connections.

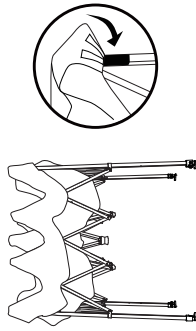

3. Lift up the slider at each corner of the canopy frame until it clicks into the spring button. Finish attaching the large canopy inside the canopy frame using the Velcro loops.

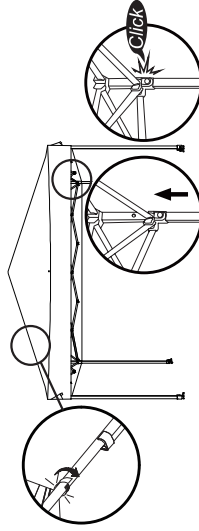


4. Pull the red part on each leg, raise or lower to adjust the canopy height. And press the red part when the adjustment is finished.

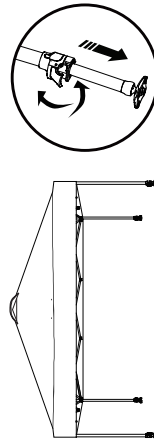

5. Insert a stake into the foot of each canopy leg.


Measure out each leg to a proper distance and secure four stakes to the ground. Attach the ropes to the canopy top and tie the attached ropes to the stakes in the ground.

Ensure the ropes have the proper tension by adjusting the plastic adjusters on the ropes.

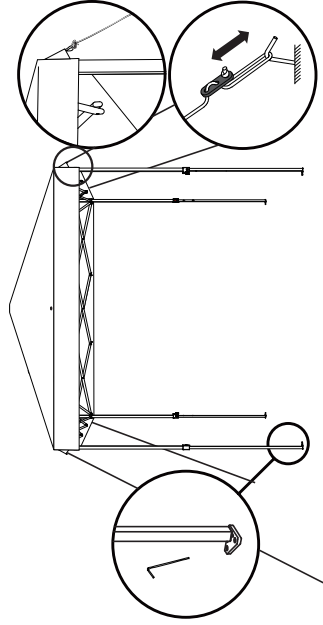


Take Down The Canopy


Pull up all stakes from the ground. Press the red button on each leg and retract the legs to their original height. And press back the red part to position.

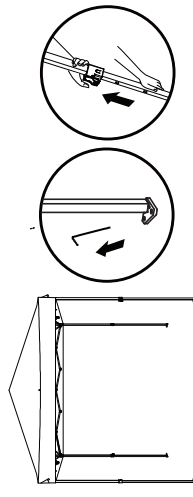

Press the red button at each corner of the canopy, and pull down the slider until the spring button appears.

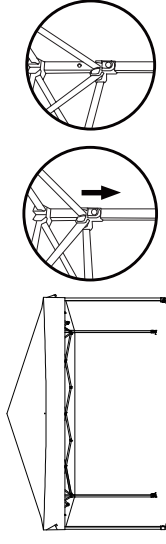

Lift one leg of the frame until the two neighboring legs are raised off the ground. Push inward until the frame is fully closed.

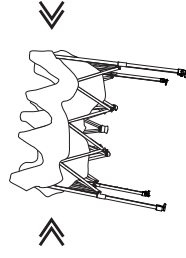

With the canopy feet facing the rollers, slide the wheeled storage bag over the closed canopy frame.

Close the zipper on the wheeled storage bag.

