


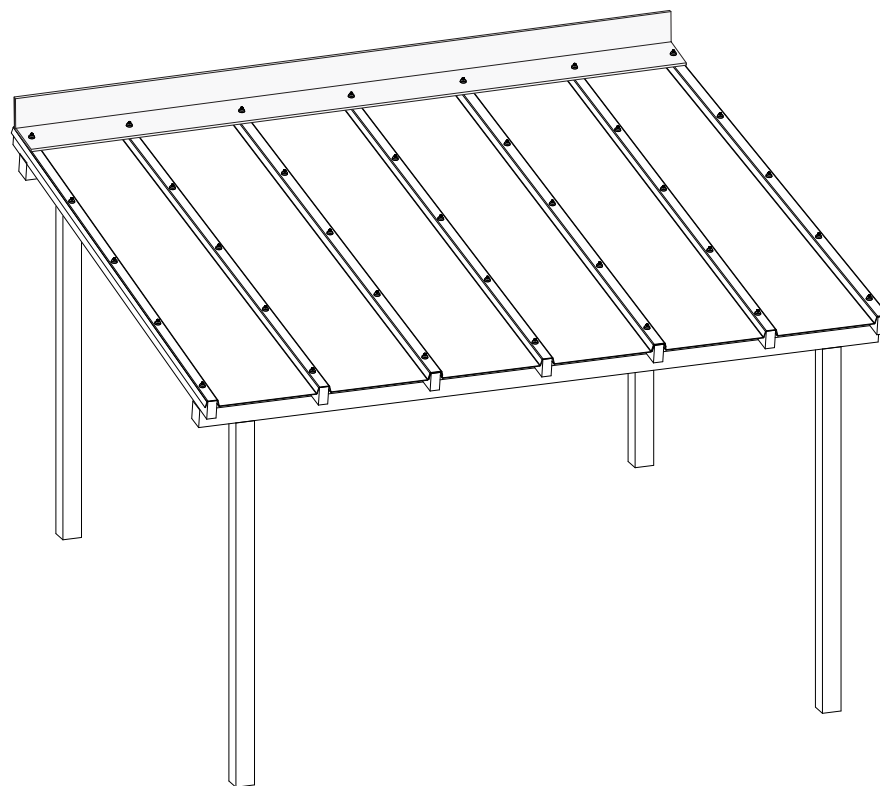

EZ Glaze™ | Installation Guide



UV Resistance



Snow Load



Wind Resistance



Aesthetics



Easy To Install



EZ Glaze™ - Product Page 




Installations video 



palram.com/us 

Installation


Recommended Safety Equipment

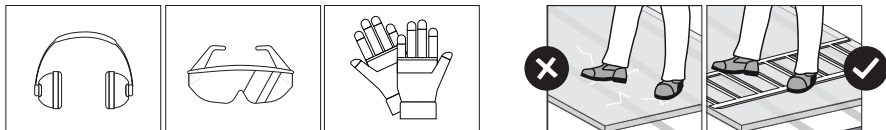


Do not step directly on the sheets between the purlins!

When installing EZ Glaze or doing maintenance work, always use ladders or crawl boards, supported by minimum three roof structural elements.

Required Tools

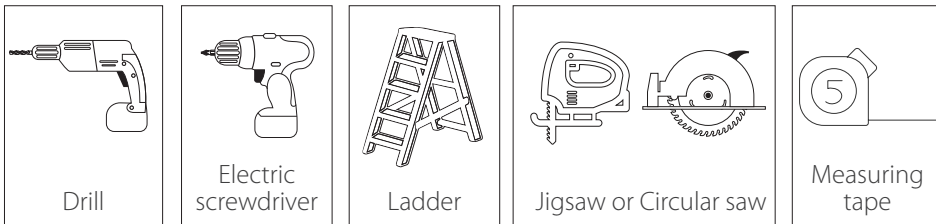


Profile drawing

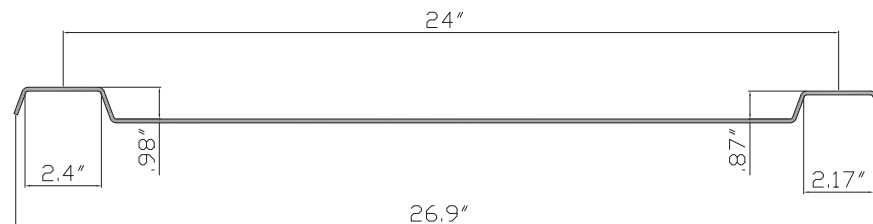

Overlapping

One side of the panel corrugation is larger than the opposite side panel corrugation.

Top corrugation (Overlapping) is larger than the lower one

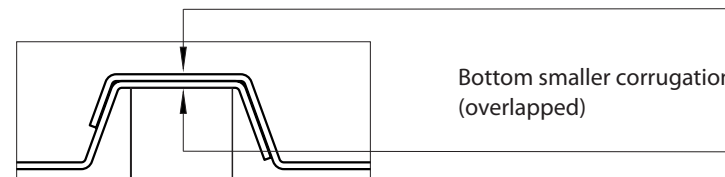

Bottom smaller corrugation (overlapped)

 
Accessories - Supplied by others




Expanding Foam Tape




Butyl Sealing Tape




Silicon Sealer

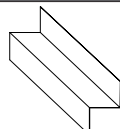


Z-Bar Flashing

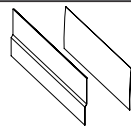

Flat Flashing

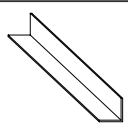


Aluminum Angle

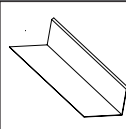


Head/Side Wall Flashing

 By Palram




Foam Tape

 

Wood Screw with 3/4" EPDM Washer

Minimum Roof Slope

To ensure proper water runoff, pitch should be at least 12.5% (1.5" rise over 12" run).

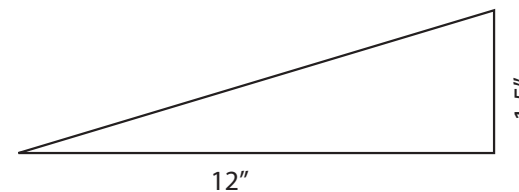


Installation Preparation




Measure and spacing

Measure rafter spacing

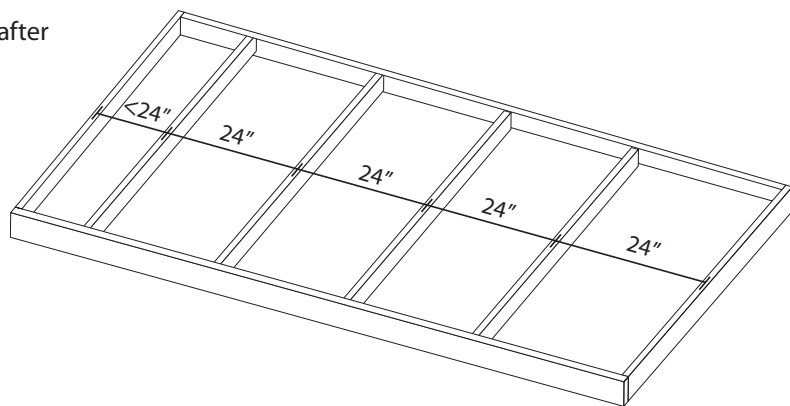

- To install EZ Glaze directly on rafters, the inner rafters must be 24" on center.
- If end rafters are less than 24" on center, then the end roof panels must be cut to proper width before installation (see typical finishing details in the last page).
- Make sure the rafters are perfectly perpendicular to the beams/wall.
- Max load for 24" rafter spacing = 80 psf.

Measure purlin spacing

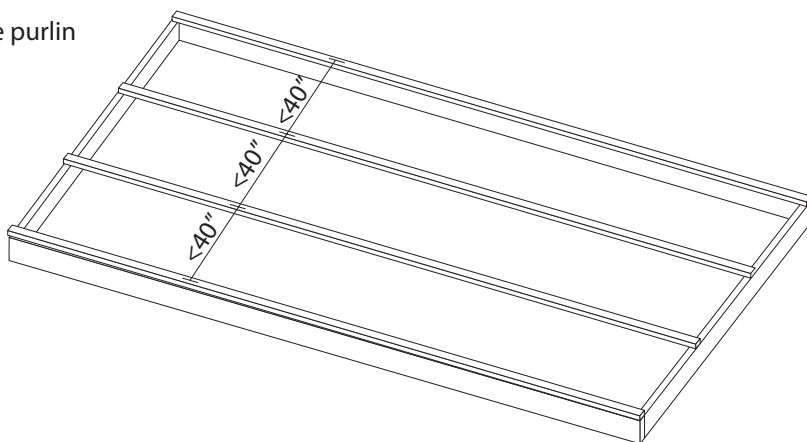


- The maximum distance between horizontal purlins for EZ Glaze is 40" on centers.
- Max load for 40" purlin spacing = 60 psf.




EZ Glaze - Installation direction recommendation

Up to 10 panels

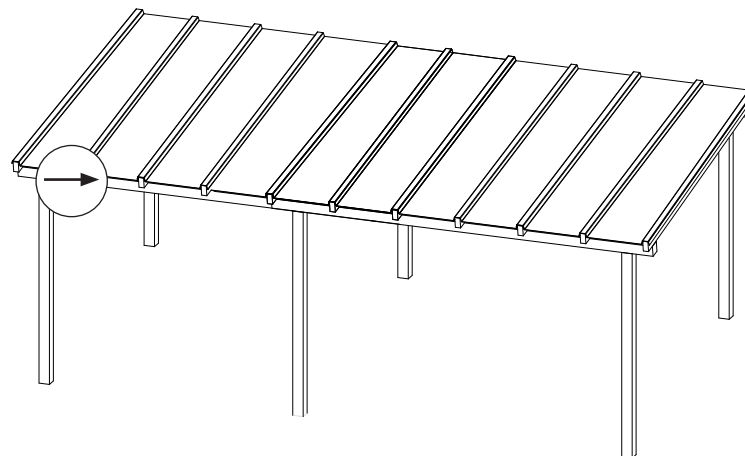

For 10 panels or less, start on one end of the structure and work across.


More than 10 panels

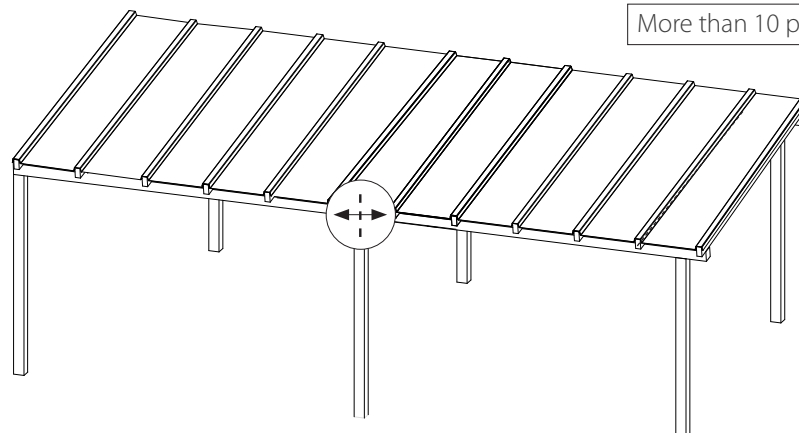

For more than 10 panels, start in the center of the structure and work out in both directions.


Installation

1 Foam tape application

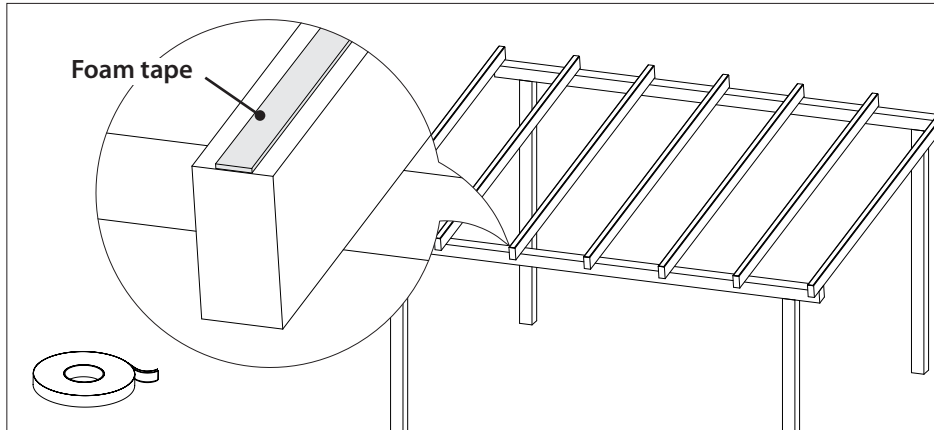


Applying foamed tape on each rafter will reduce friction.

2 Attaching the first EZ Glaze panel

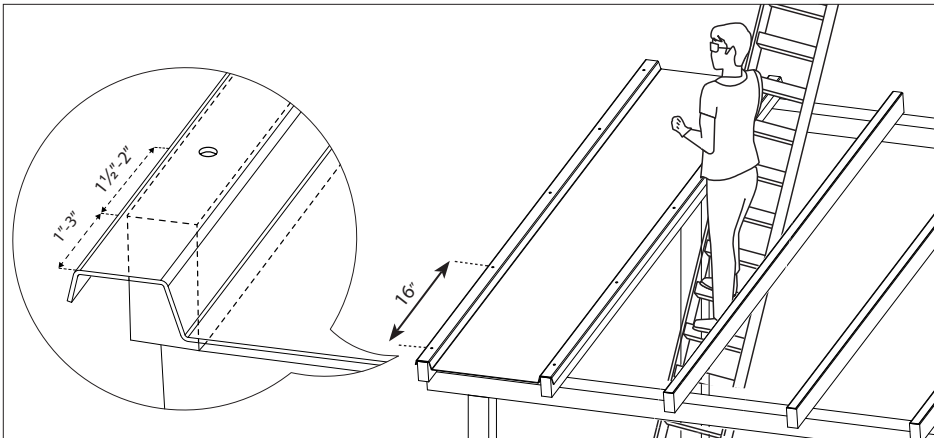


- Install the first EZ Glaze panel on the rafters, leaving 1"-3" overhang.
- Drill 3/8" holes along the outer corrugation, every 16".
- First and last pre-drilled holes should be located 1 1/2"-2" from the rafter's top and bottom edges.

3 Attaching the first EZ Glaze panel

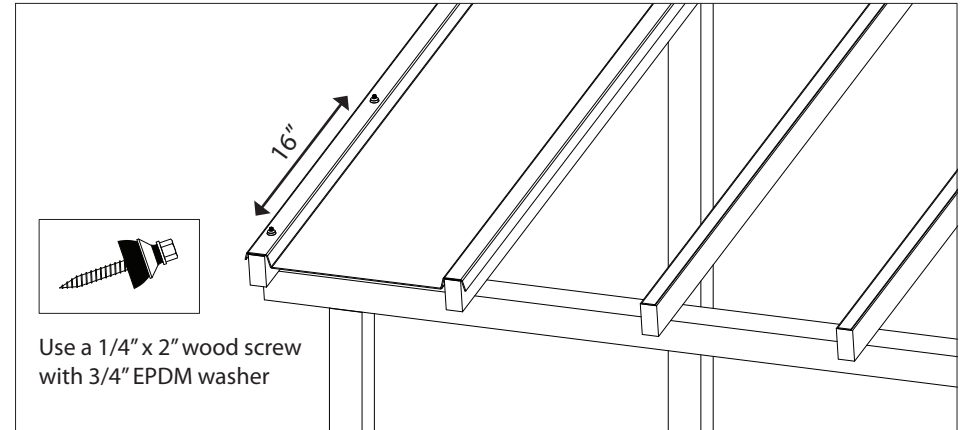

Attach the first EZ Glaze panel's outer corrugation, using specified screws and washers through the pre-drilled holes. Start at the bottom edge and work your way up.


4 Attaching the second EZ Glaze panel

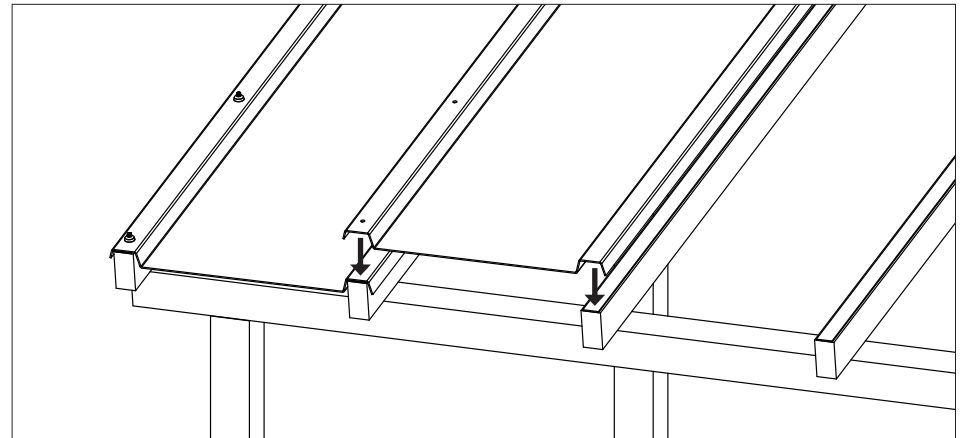

- Attach the second panel, overlapping the first one.
- Drill 3/8" holes through **both** panels on the lateral overlap, every 16".


Installation (Flashing accessories supplied by others)

5 Attaching the second EZ Glaze panel

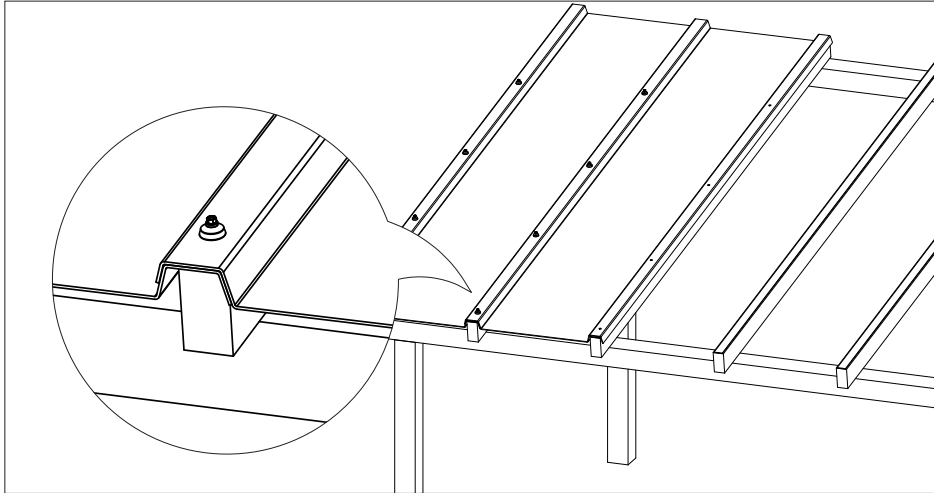


Using specified fasteners, attach the panels to the structure by fastening through the pre-drilled holes. Start at the bottom edge and work your way up.

6 Completing the installation

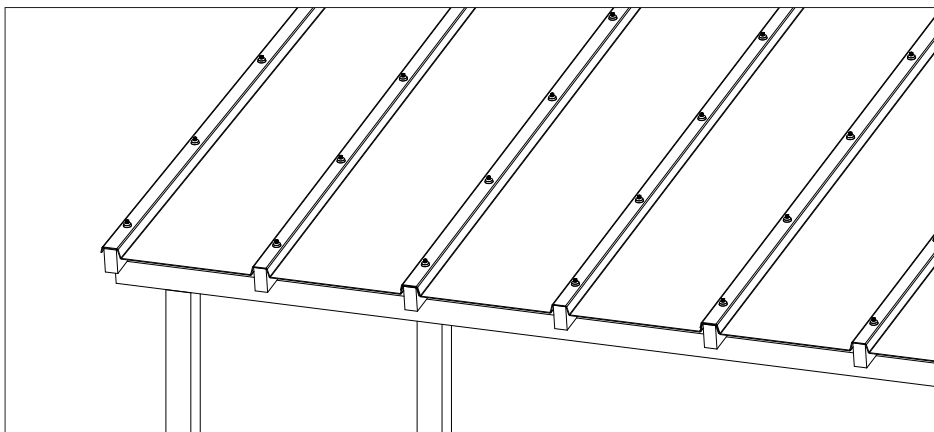


Repeat steps 4 & 5 with the remaining panels.

7 Applying Expanding foam tape

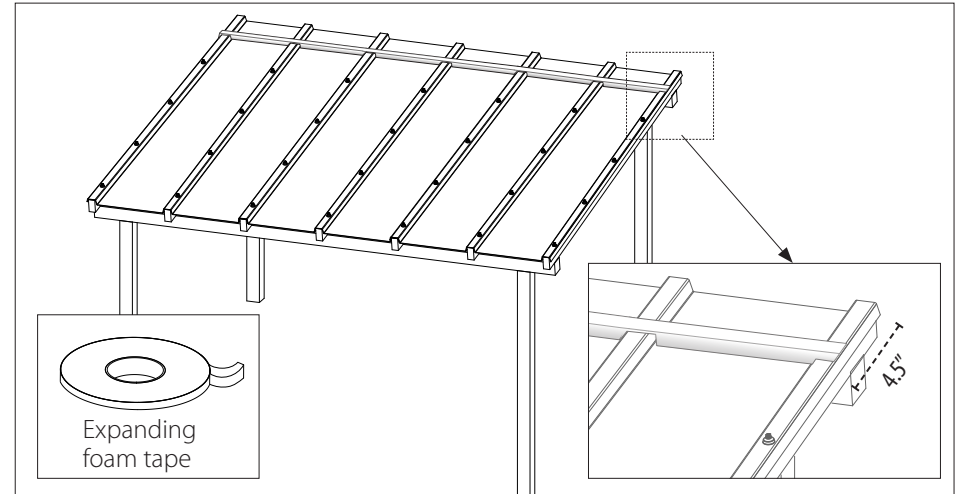


Expanding foam tape must expand to a dimension no less than 1.75".

8 Installing Head Wall Flashing

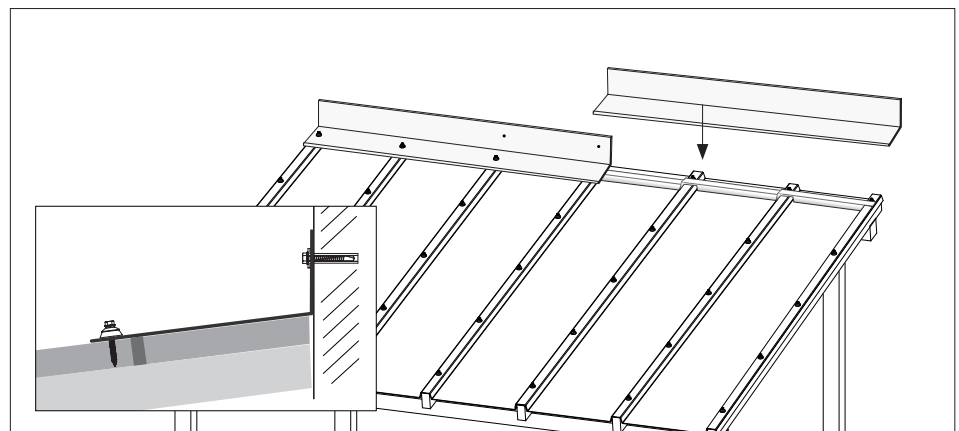


Installation - Typical Finishing Details (Flashing accessories supplied by others)

9 Applying Silicone

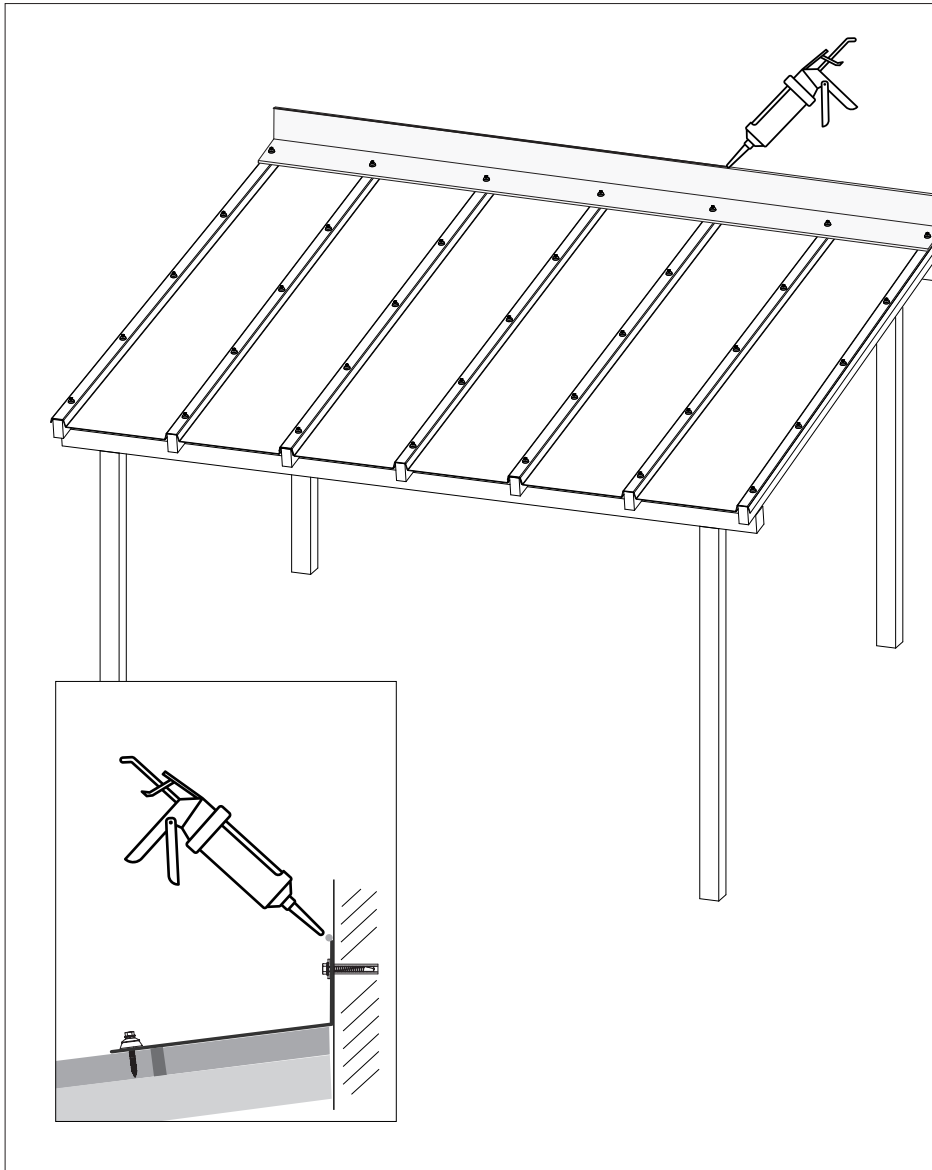




10 Side Wall Flashing

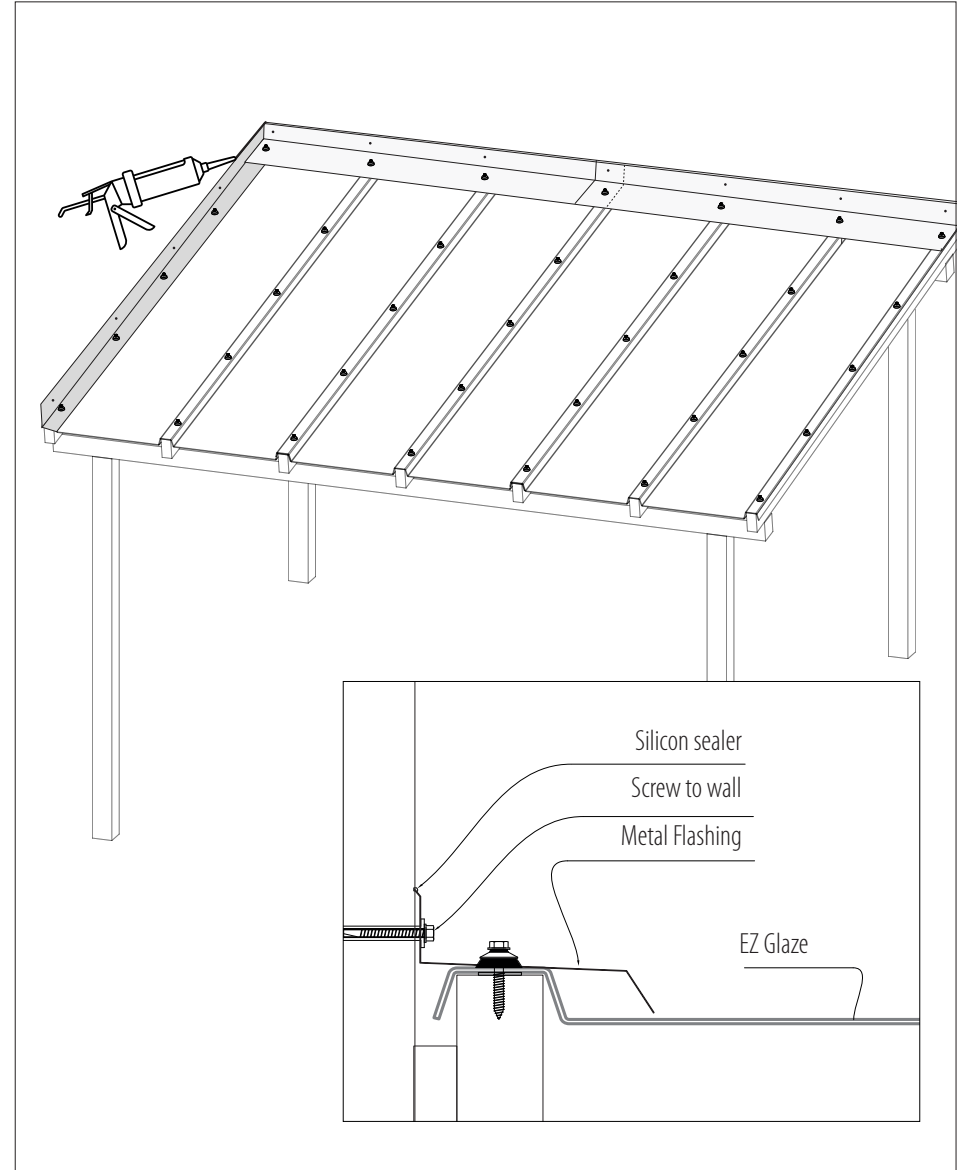

Installation - Typical Finishing Details (Flashing accessories supplied by others)




Installing Side Wall Flashing with trimmed EZ Glaze

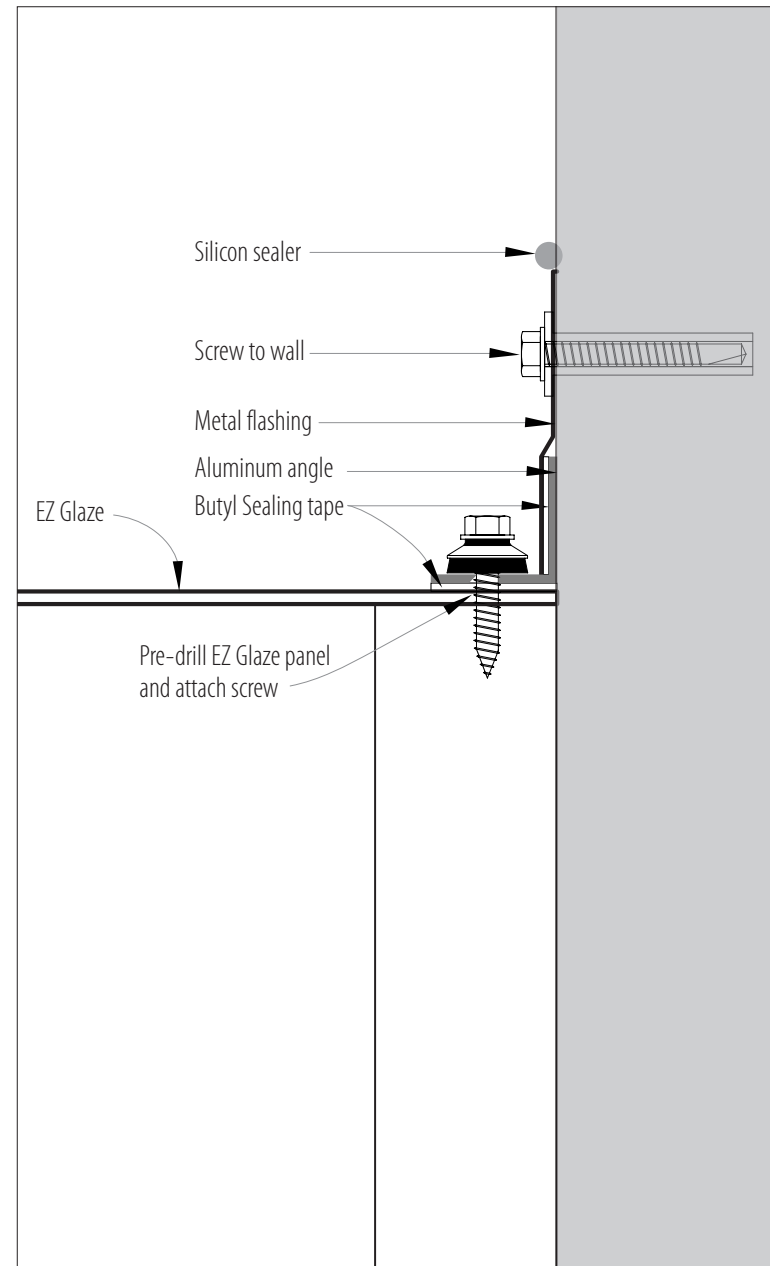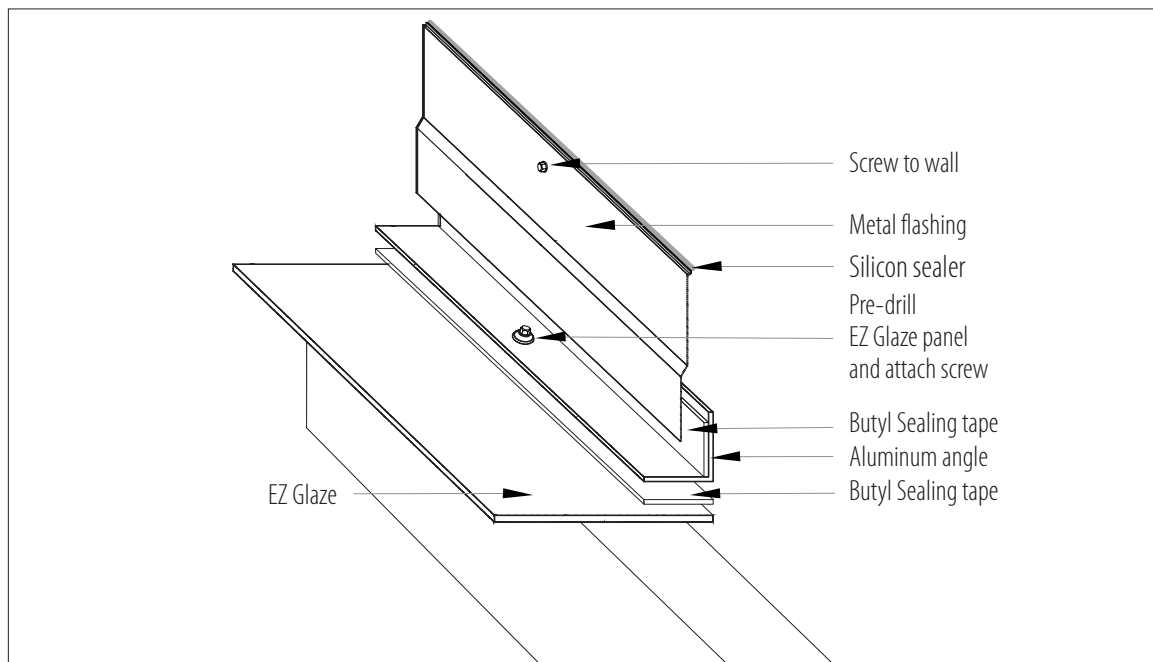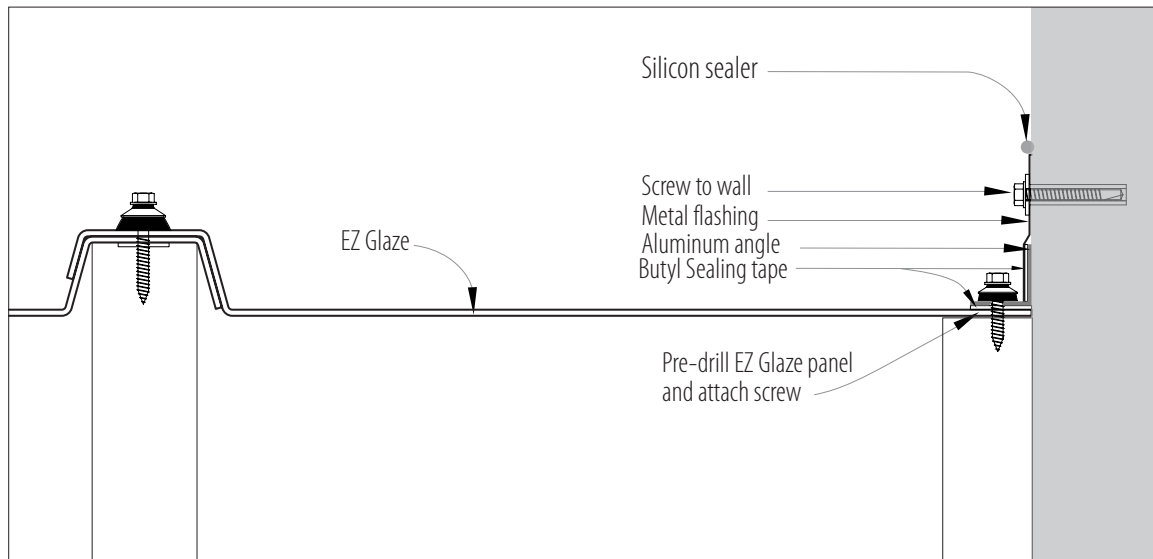



EZ Glaze™ | Installation Guide

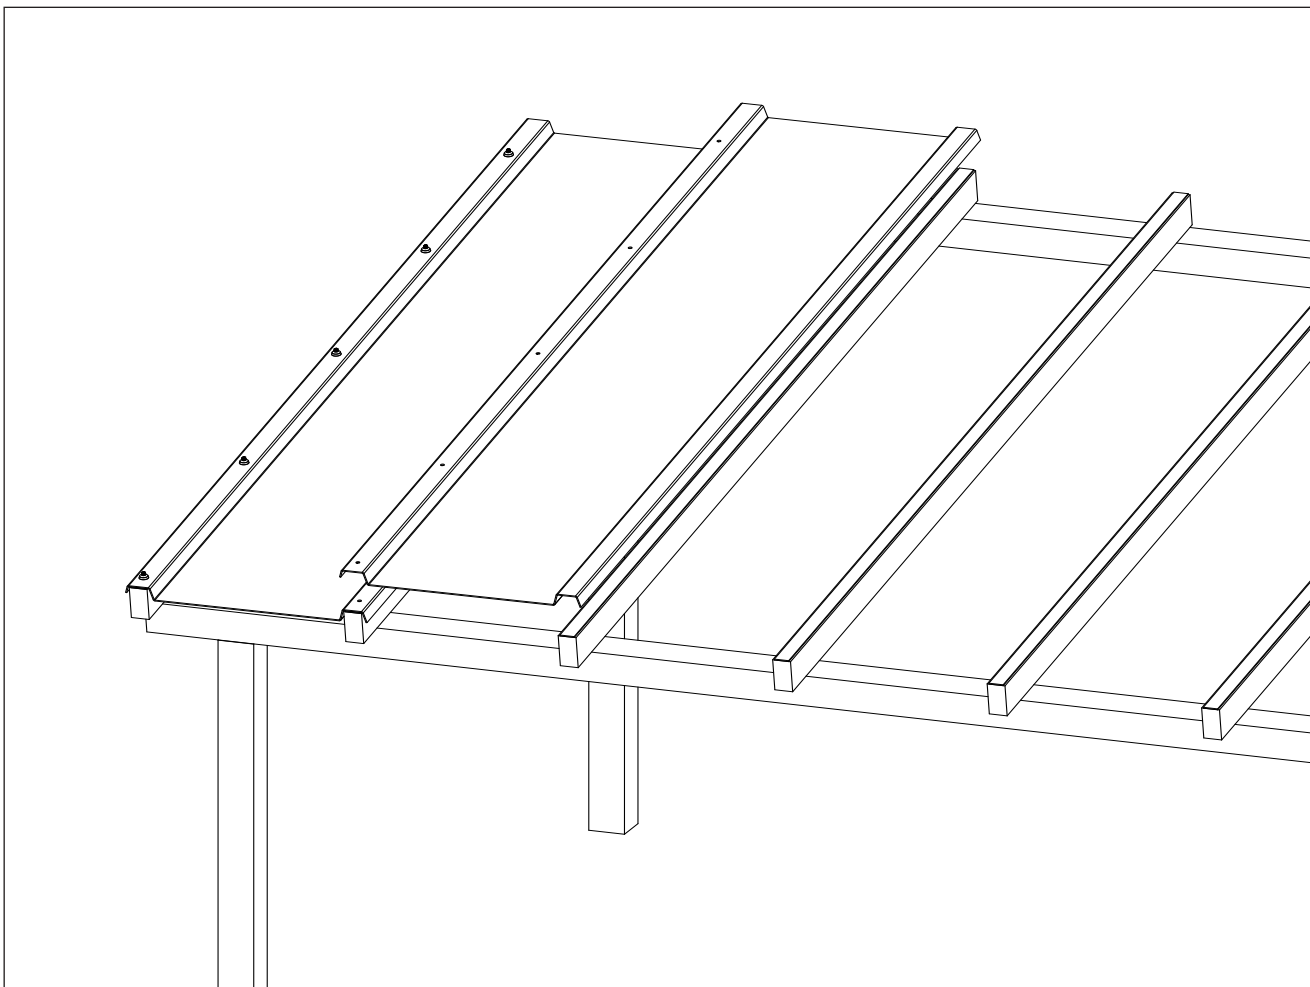

PALRAM AMERICAS
9735 Commerce Circle
Kutztown, PA, 19530 USA
800.999.9459
ContactUs.USA@palram.com
palram.com/us



Authorized Distributor

F 755 080823 KE



Inasmuch as Palram Americas has no control over the use (and/or installation method) to which others may put this material, it does not guarantee that the same results as those described herein will be obtained. Each user of the material should make their own test to determine the suitability of the material for their own particular use. In the event of a warranty claim for product failure, Palram Americas reserves the right to inspect any or all of the sheets involved and the installation site itself while the sheets are still in their original position and have not been removed or moved or altered in any way.
© 2023 Palram Americas