 



Instruction Manual

Corded Mini-Fogger

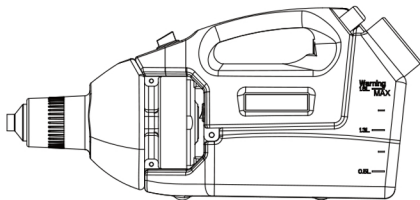

Please read this instruction manual carefully before using the device.  
Warning: Liquid cannot go past the warning line in the tank. Do no overfill.

 I . Product Spare Parts Description

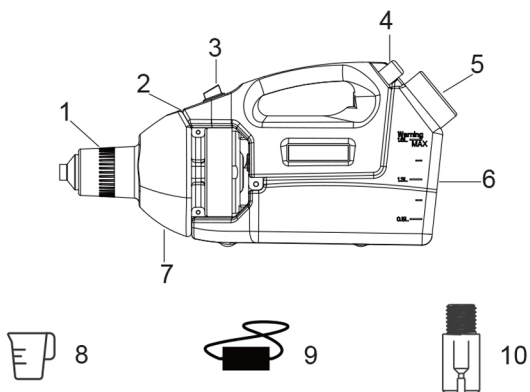

- 1.Atomizer
- 2.Air pipe
- 3.Switch
- 4.Waterproof interface
- 5.Tank Cap
- 6.Tank
- 7.Motor
- 8.Measuring cup
- 9.Ground Fault Circuit Interrupter (GFI)
- 10.Nozzle

 
II . Product Specifications and Technical Parameters

Corded Mini-Fogger


Rated voltage : AC 110  
Capacity : 1.5L  
Rated power : 200W  
Spray volume : 25-350ml/min(adjustable)  
Droplet size : 35-60μm  
Spraying distances : 4-5M  
Product size : 408\*186\*117.8mm

III . Instructions


1. Add the disinfectant liquid into the tank. After adding the disinfectant, tighten the tank cap. (Please note: Do not add more liquid than the maximum capacity of the water tank; otherwise, the liquid will flow into the motor and damage the machine.)
2. Plug the power cable into an electrical outlet. Turn on the power switch of the device. The device will then start to work. (Refer to picture below.)

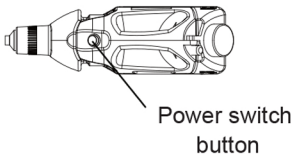

 3. When there is a little bit of liquid left in the device, please do not tilt down the spray nozzle. Make sure the liquid does not accumulate in the front of the container.
4. Please note: Do not tilt the device excessively at any time, which can cause the liquid in the container to go past the warning line.

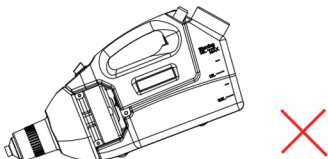

 5. It is only suggested to tilt the device at an upward angle when the liquid is less than 0.5L.

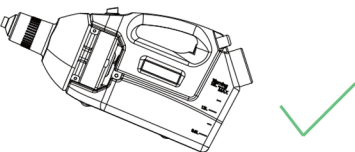

6. Once the disinfectant liquid runs out, put some water into the tank and fog for 1-2 minutes to make sure that the disinfectant liquid does not block or corrode the nozzles and pipes.

IV. Fault Analysis and Solution

Reason	Solution
1. Fault phenomenon: the motor does not run.	
A.Overload operation, machine suddenly stops working. B. The power line leakage switch is activated.	A.Wait a few minutes for device to start working normally. B.Press the leakage switch button again.
2. Fault phenomenon: the motor runs but does not spray.	
A.No liquid in tank. B.The tank cap is not tightened. C.The nozzle is blocked.	A.Add liquid B.Check whether the cap is tightened. C.Remove the nozzle to clean.

VI. Attentions

1. If water has entered the device, please wait for the device to dry completely before turning it on.
2. Please use the device at the ambient temperature between 0-40°C. Do not strike the device with heavy or sharp objects and prevent it from falling.
3. While using the device, please be careful regarding the high surface temperature of the motor.
4. Do not use highly corrosive liquids in the device. When using water-soluble chemicals, make sure the chemicals are dissolved completely before putting it in the device. Any liquid added to the tank must be free of impurities to prevent any clogging of the pipeline.
5. After a long-term use of the machine, please remove and clean the cotton filter, dry it and then put it back in the device for future use.
6. The warning line determines the maximum amount of liquid that can be added into the machine.
7. Please turn off the power immediately if one of the following situations occur:

1. Water leaks into the device
2. The pump system stops working suddenly
3. The pump sound changes noticeably
4. The tank leaks water
5. The pump does not work, or other abnormal conditions
8. It is prohibited to use the device in the rain.
9. Do not use a wet hand to plug and unplug the adapter. Keep the device away from a flammable, explosive and high-temperature environment.

VII. Warranty

1. All devices have 12 months of warranty starting the day of sale.
2. Maintenance Requirements: Invoice or other certifications which prove that the device was ordered from our company. The machine must be shipped back to company for repair.
3. If for any reason the fault of the machine not working is caused by human error or improper operation, the warranty is not valid.