

OCIOC

F1

TECHNICAL SPECIFICATIONS


Ceiling Fan Light

Model: TLVCFU03

Input: AC120V-60Hz

Power: 48W(18+30W)

Size: 32"Hx10"inch

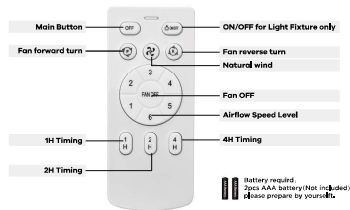

If the remote controller fails to control the fan, please follow the way below to pair codes.
Codes pairing: Turn off the power for 30sec by wall switch, then turn on the power; press "2" and "1H" at the same time for 3 seconds. Codes pairing is done.

WARNING
Disconnect power prior to installation or inspection. Do not touch wires, lights or when it is hot. If there is any problem with the fan, turn power off and do not attempt to repair unless you are a qualified technician. Do not expose to water or rain.

PACKING LIST



Expansion pipe



Ceiling Screw



Ceiling Screw



Terminal



Motor



Light Fixture



Fan Blades

INSTALLATION GUIDE



1 Unscrew the base and remove the remote control.



2 Unscrew all blade screws.



3 Unscrew all blade screws.



4 Align screw holes and clip all blades.



5 Rotate the lamp plate to position screw hole of each blade in turn and tighten blades with screws.



6 Rotate the controller cover to position 2 screw holes of each blade in turn and tighten blades with screws.




7 Lock the safety rope and connect the wires of the light.



8 Lock the light fixture clockwise to the lamp plate.



9 Connect the controller.

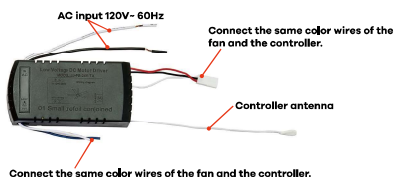


Connect the same color wires of the fan and the controller.



11 Hook the fan by safety string.



12 Connect ground wires, live wires (BLACK) and null wires (WHITE).

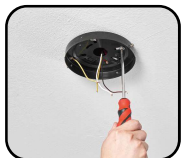

10 Tighten the base.



Notice:
1. Please be sure the ceiling is thick enough to drive the screws.
2. The whole fan weighs 7lb, please be sure the ceiling can shoulder freely.
3. Please make sure that the installation base is stable and will not shake after installation.



13 Hook the fan to the ceiling.



14 Tighten the fan, installation is done.