

Model: AF067



Page 1 V.09062024




## STOP!

Before beginning the assembly process, ensure all boxes and parts have been delivered.

#### FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

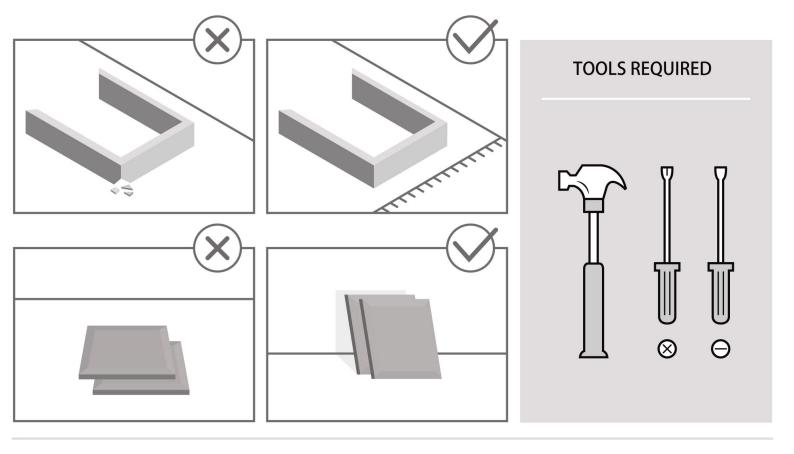



View our assembly video online: WWW.MANHATTANCOMFORT.COM




Stuck? Question? We are here to help.


tel: 908-888-0818

e-mail: help@manhattancomfort.com

#### Support Site




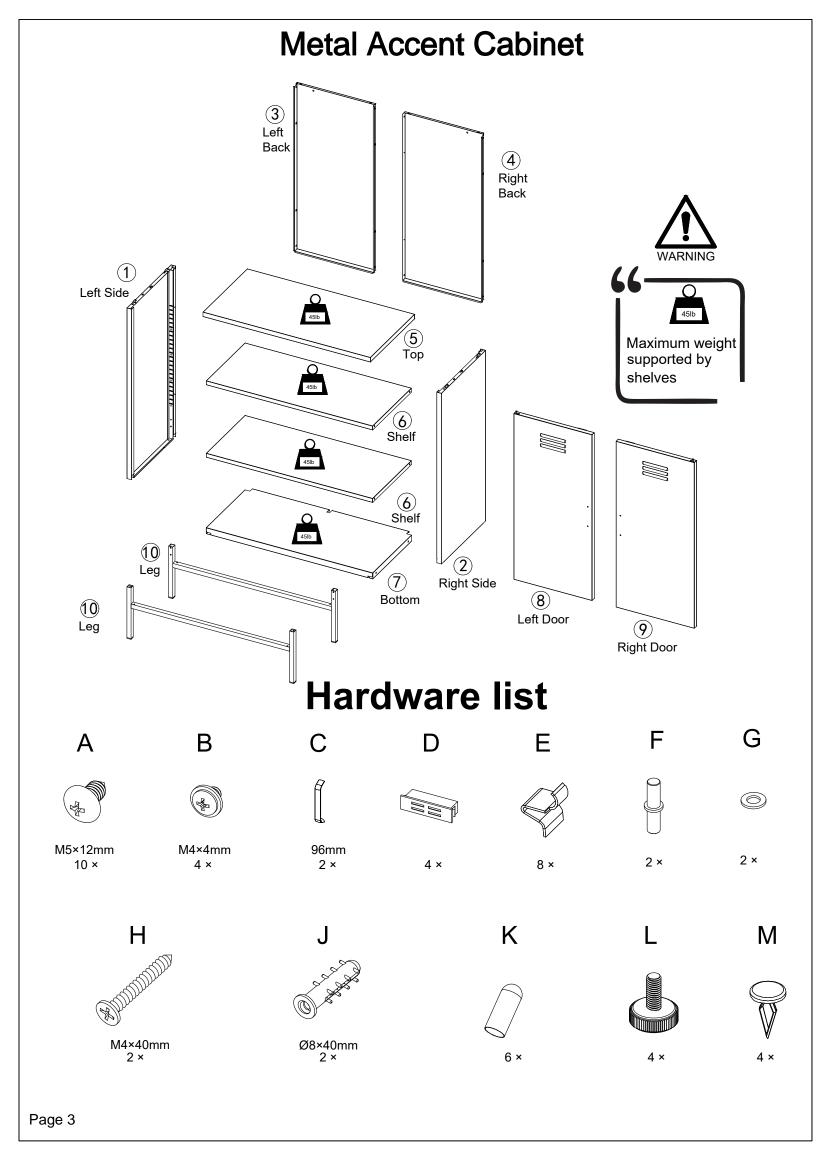

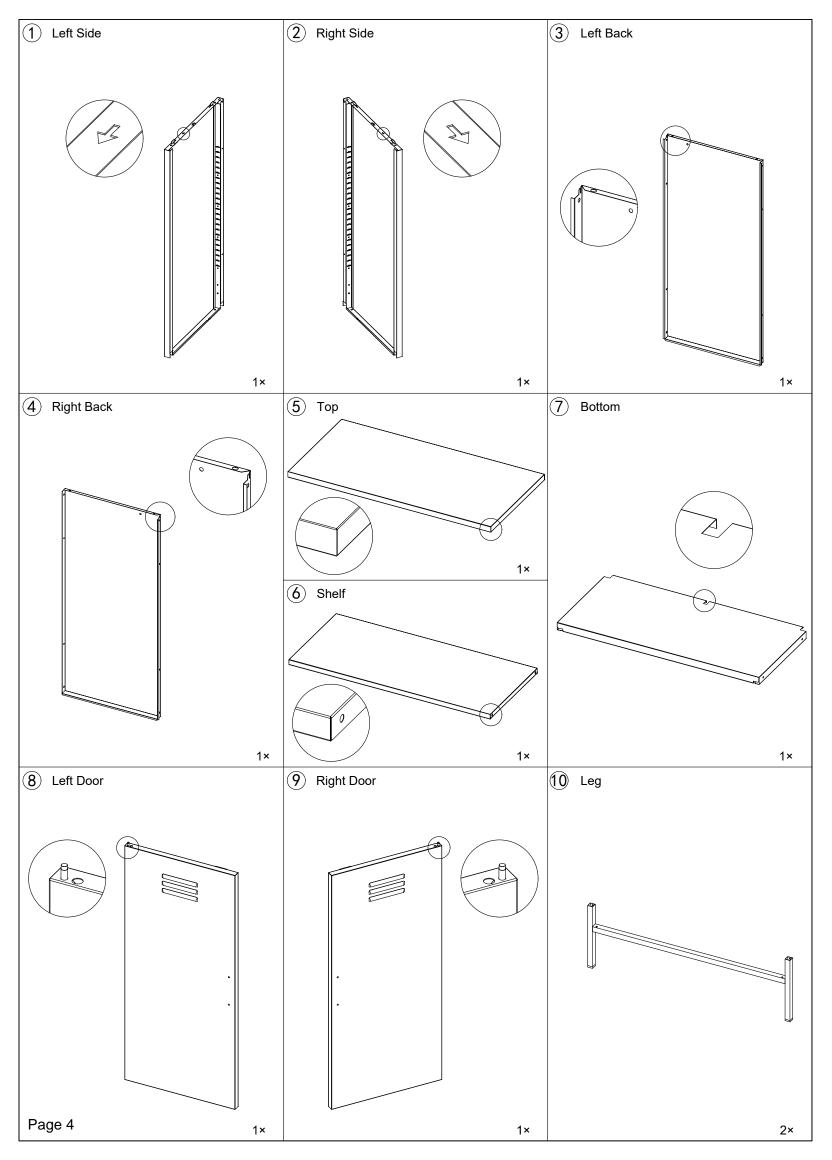




Fit the height-adjustable feet L on the bottom of Leg 10

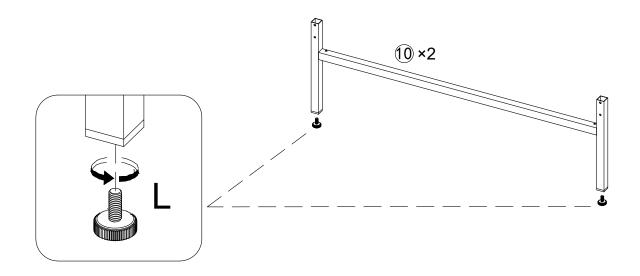

STEP 2


1- Fit the Left side ① and Right side ② into Leg ①
2- Put the Part M into the Leg ① to fix Left side ① and Right side ② together with Leg 10

77

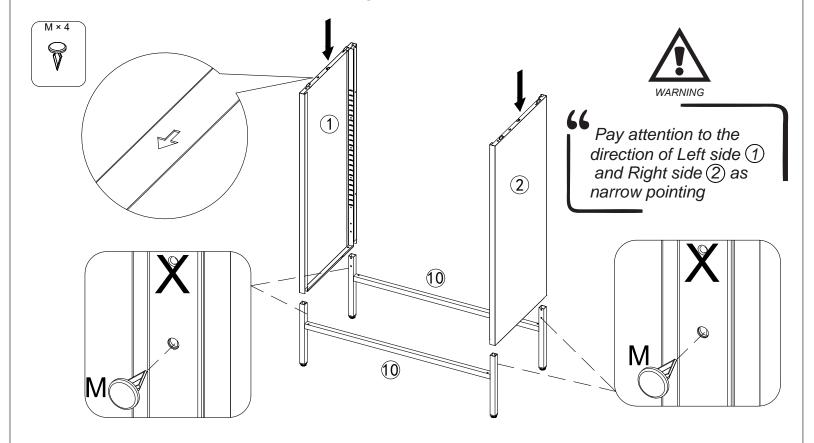


Page 5

Put Left back 3 and Right back 4 at the back

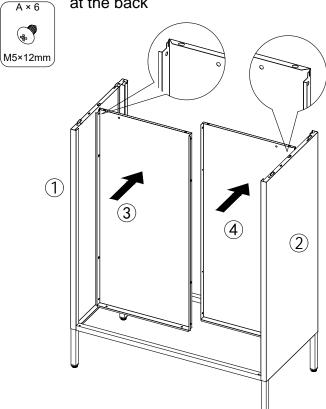


- 1- Fix Left back ③ and Right back ④ with Left side ① and Right side ② by Screws A
  2- Fix Left back ③ and Right side ④ together by Screw A
  3- Bend the small metal part on Left back ③ and Right back ④ to fix with Left side ① and Right side ②

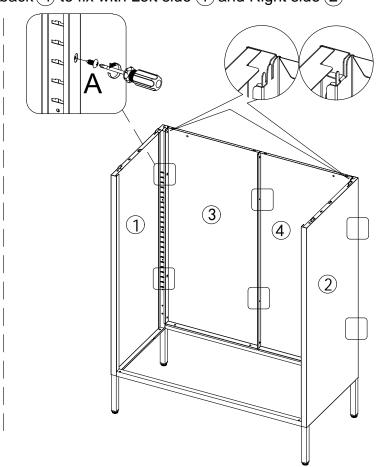


### STEP 4




Put Part K on the Screw A at the back side

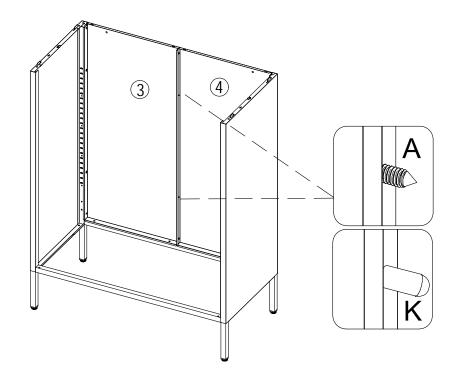


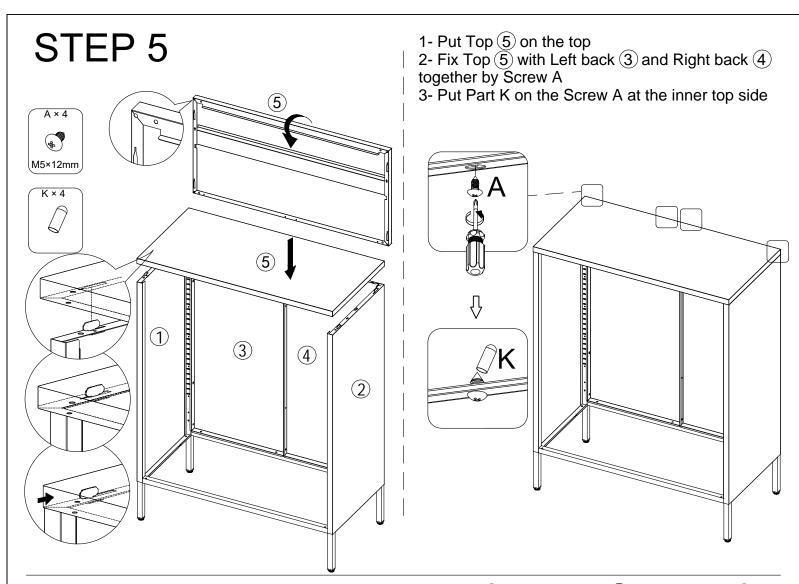




- 1- Bend the small metal part on Left side 1 and Right side 2 to fix with Top 5 2- Fit Bottom 7 in diagonal position to insert it at the bottom of cupboard
- 3- Bend the small metal part on Left side (1) and Right side (2) to fix with Bottom (7)

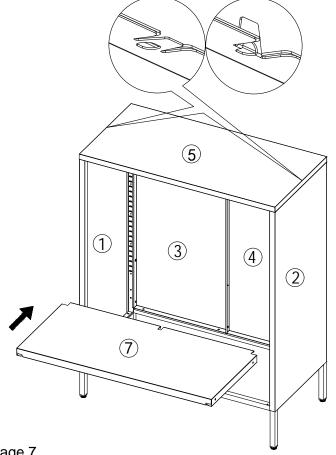

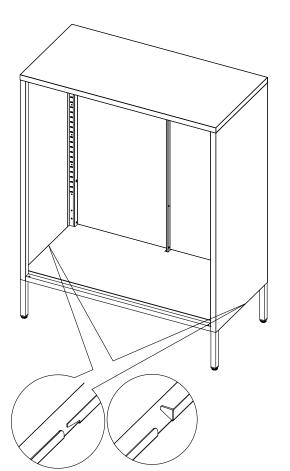

Page 7

- STEP 7 1- Fix Shelf clip E on the Left side 1 and Right side 2 and make sure in the same height height
  - 2- Fit Shelf (6) in diagonal position to insert it inside the cupboard
  - 3- Place Shelf 6 on Shelf clip E

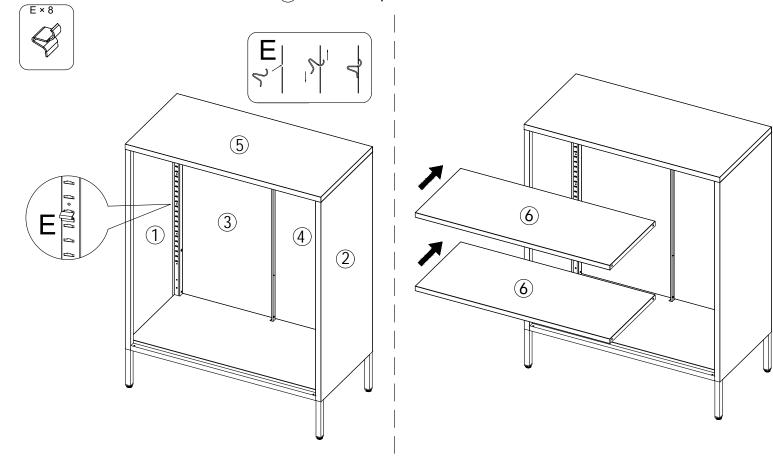








- 1- Fix Magnet D on the Left door 82- Fix Handle C on the door by Screw B

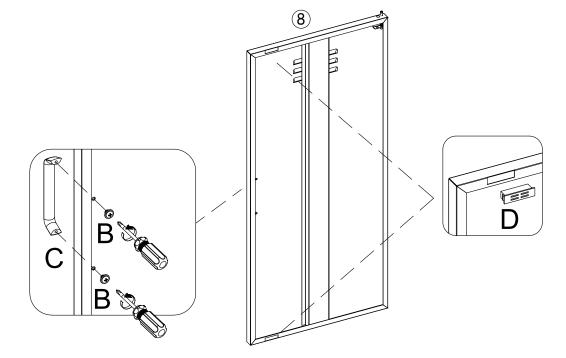









- 1- Fix Magnet D on the Right door 9
- 2- Fix Handle C on the door by Screw B

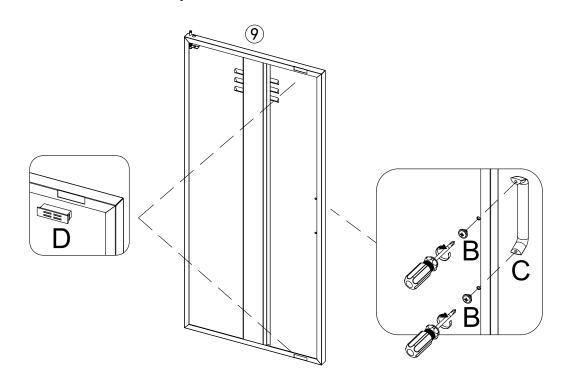

- STEP 10 1 To assembly the doors, fit lower hinge bolt of Left Door (8) into the hole on Leg 10 and make Gasket G between Leg 10 and lower hinge bolt of Left door 8 2 - Pull the upper hinge bolt of Left door 8 down, align the door and release
  - the upper hinge bolt to fit the hole of Top (5)
  - 3- Repeat the step for Right Door (9)

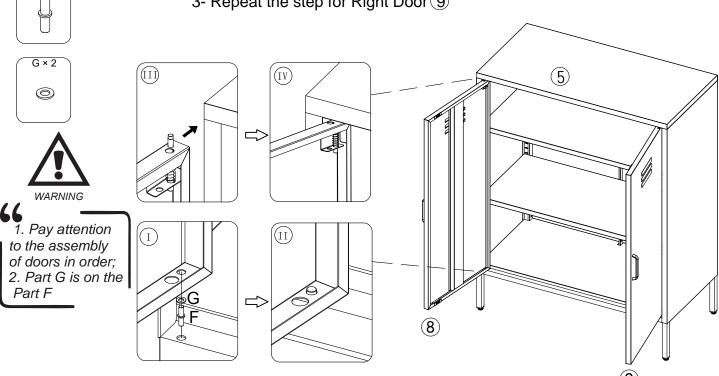

# STEP 11 1- Mark the wall holes by a pencil 2- Drill the wall where marked on the wall 3- Insert Part H (plastic expansion bolt) into the holes 4- Use the hammer to insert part H until it overcomes 5- Fix Part J at the Left back 3 and Right back 4 with wall WALL WALL WALL WALL Page 10



#### WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.


Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

#### THE WARRANTY DOES NOT COVER:


- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.



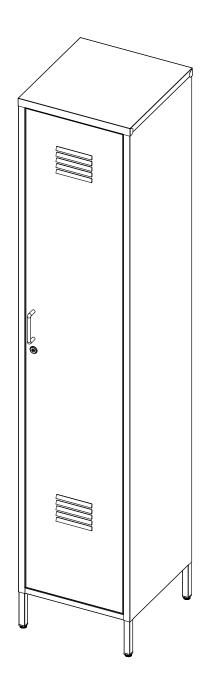

V.10122024

### **Metal Accent Cabinet**

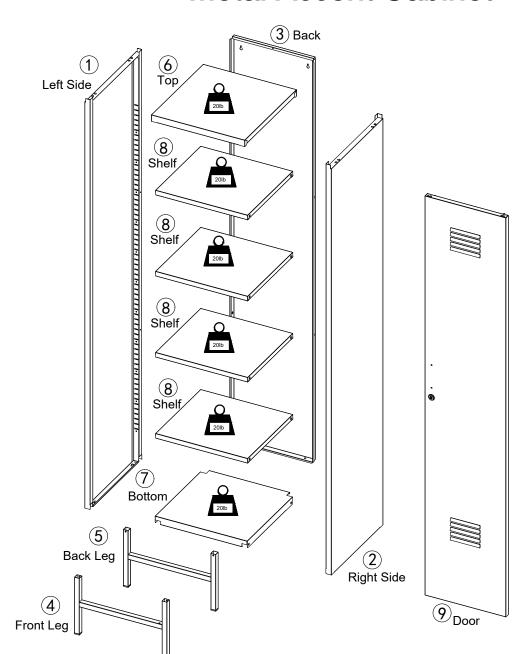



### **Hardware list**

В

C

F

G

M5×12mm 25 ×

M4×4mm 2 ×

96mm 1 ×

16 ×

1 ×

M4×40mm 2 ×




Ø8×40mm 2 ×

K






4 ×

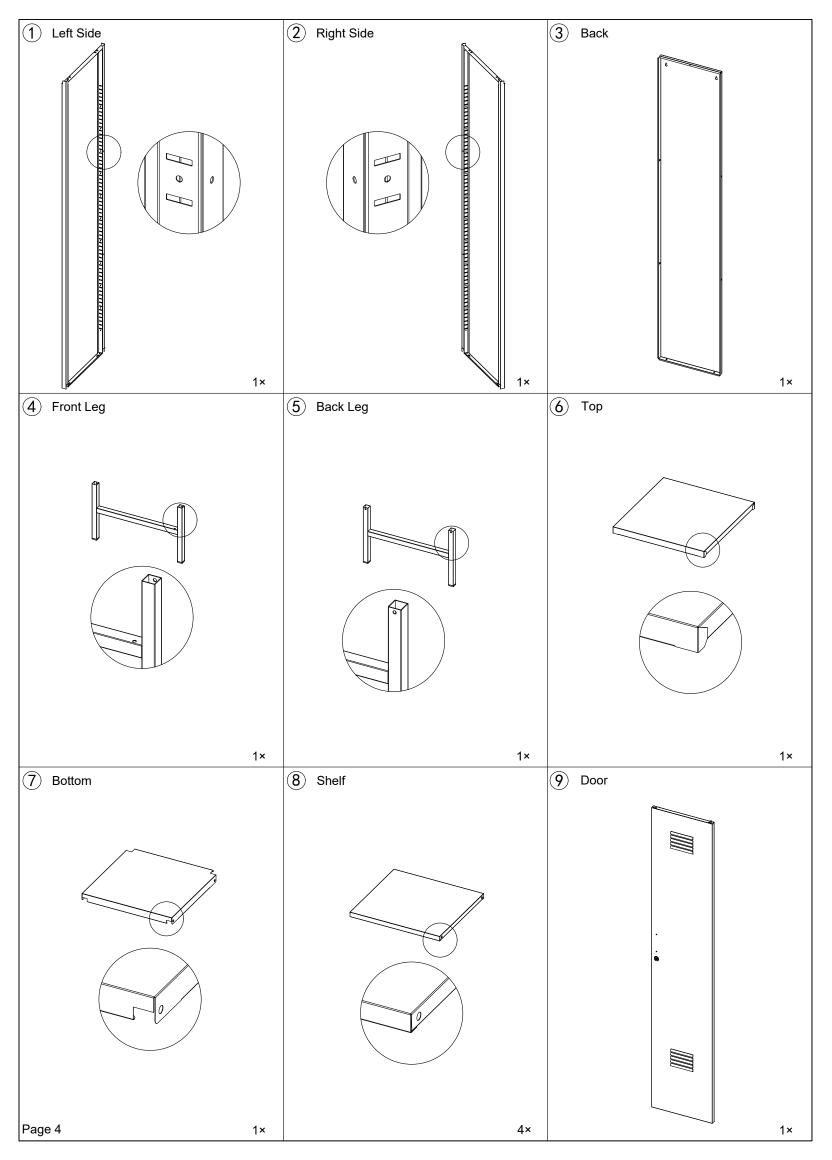



Fix the height-adjustable feet L on the bottom of Front Leg 4 and Back Leg 5

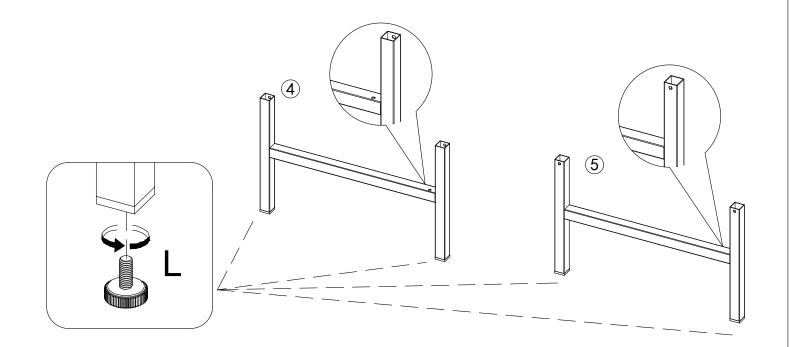



### STEP 2



Fix Triangular plate D on Front Leg 4 and Back Leg 5 by Screw A




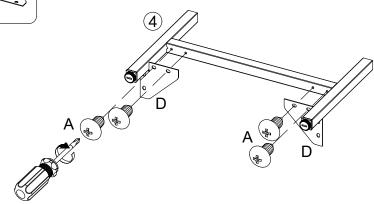

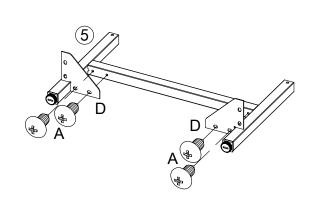


STEP 3


1- Fix Left side ① and Right Side ② into Front Leg ④ and Back Leg ⑤
2- Fix Triangular plate D with Left Side ① & Right Side ② and Front Leg ④ & Back Leg ⑤

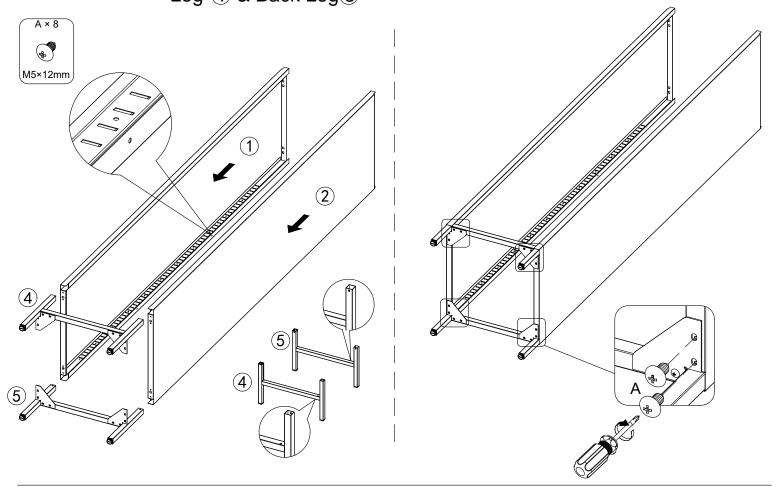


STEP 4 Fix Back 3 at the back with Left Side 1 and Right Side 2 by Screw A

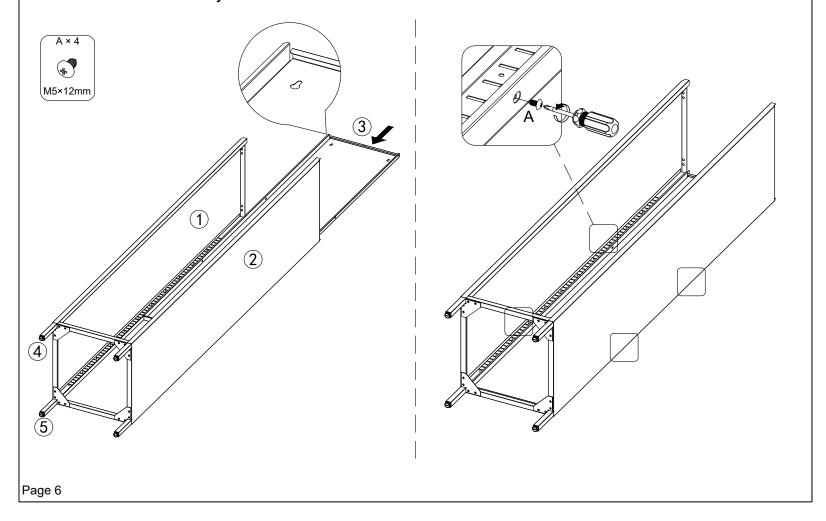


# STEP 5 1- Put Top 6 at the top 2- Fix Top 6 with Left Side 1, Right Side 2 and Back 3 by Screw A 4 M5×12mm STEP 6 (6) 1 (2) 3 1- Put Part K on the Screw A at the inner top side K 2- Fix Bottom 7 in diagonal position to insert it inside the cupboard **(5)** Page 7

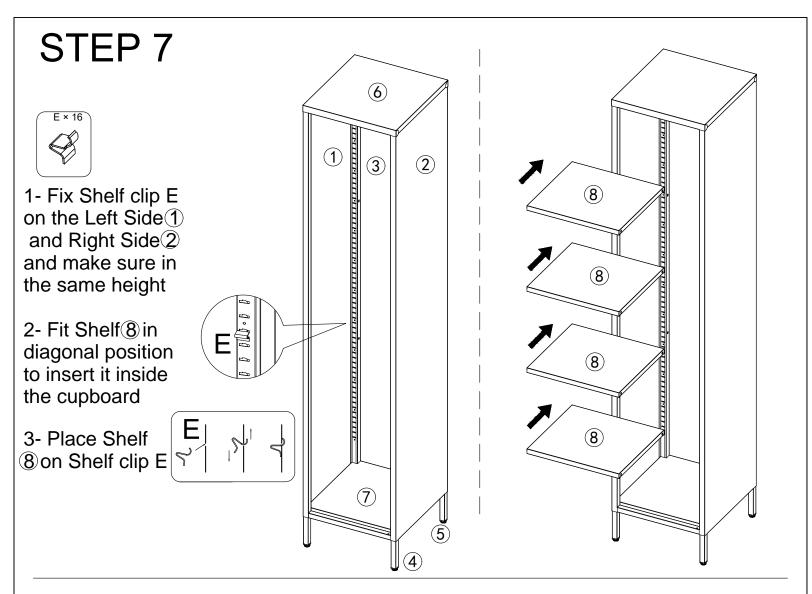


### STEP 8 Fix Handle C on the door by Screw B

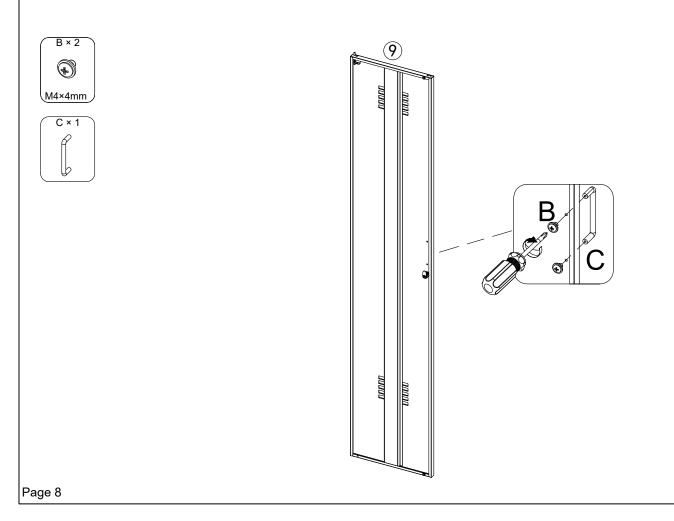


# STEP 9 0 6 1- To assembly the door, fix Lower hinge bolt F of Door 9into the hole on Front Leg4 and make Gasket G between Door 9 and Lower hinge bolt F 2 - Pull the upper hinge bolt of Door 9 down, align the door and release the upper hinge bolt to fit the hole of Top® Ī [I]Page 9

 

 

Page 10

- 1- Mark the wall holes by a pencil
- 2- Drill the wall where marked on the wall
- 3- Insert Part J (plastic expansion bolt) into the holes
- 4- Use the hammer to insert part J until it overcomes the wall

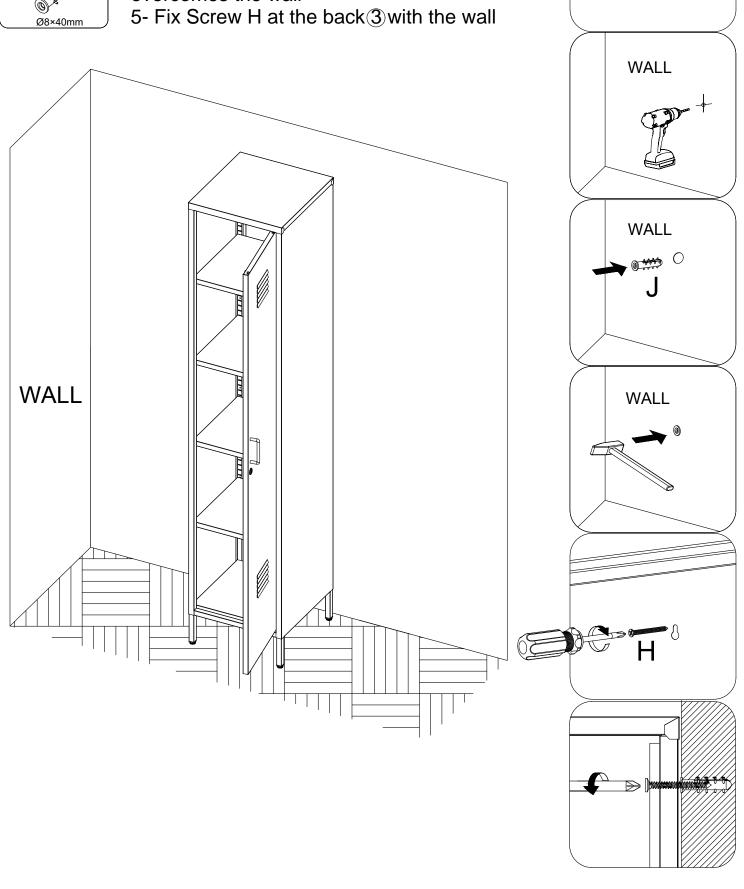



#### WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

#### THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.