
specifications

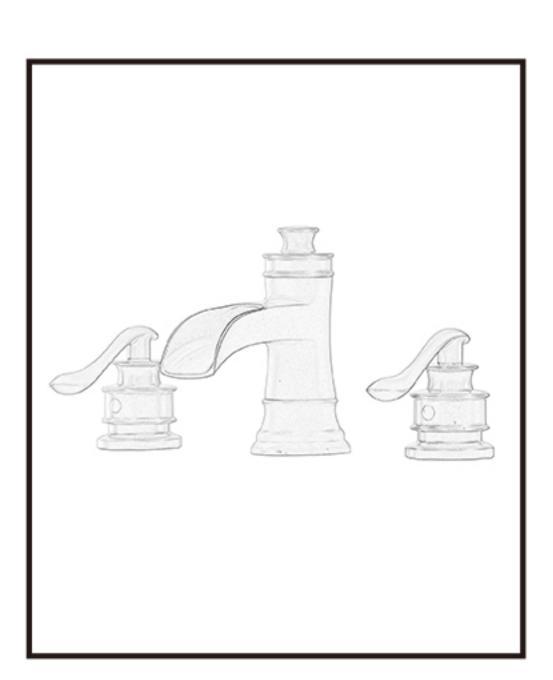


Single-handle Lavatory Faucet


NOTE: THIS FAUCET IS DESIGNED TO BE
INSTALLED THRU 1 HOLE / 3 HOLES.



Submitted Model No.:

<u>6556-S</u>

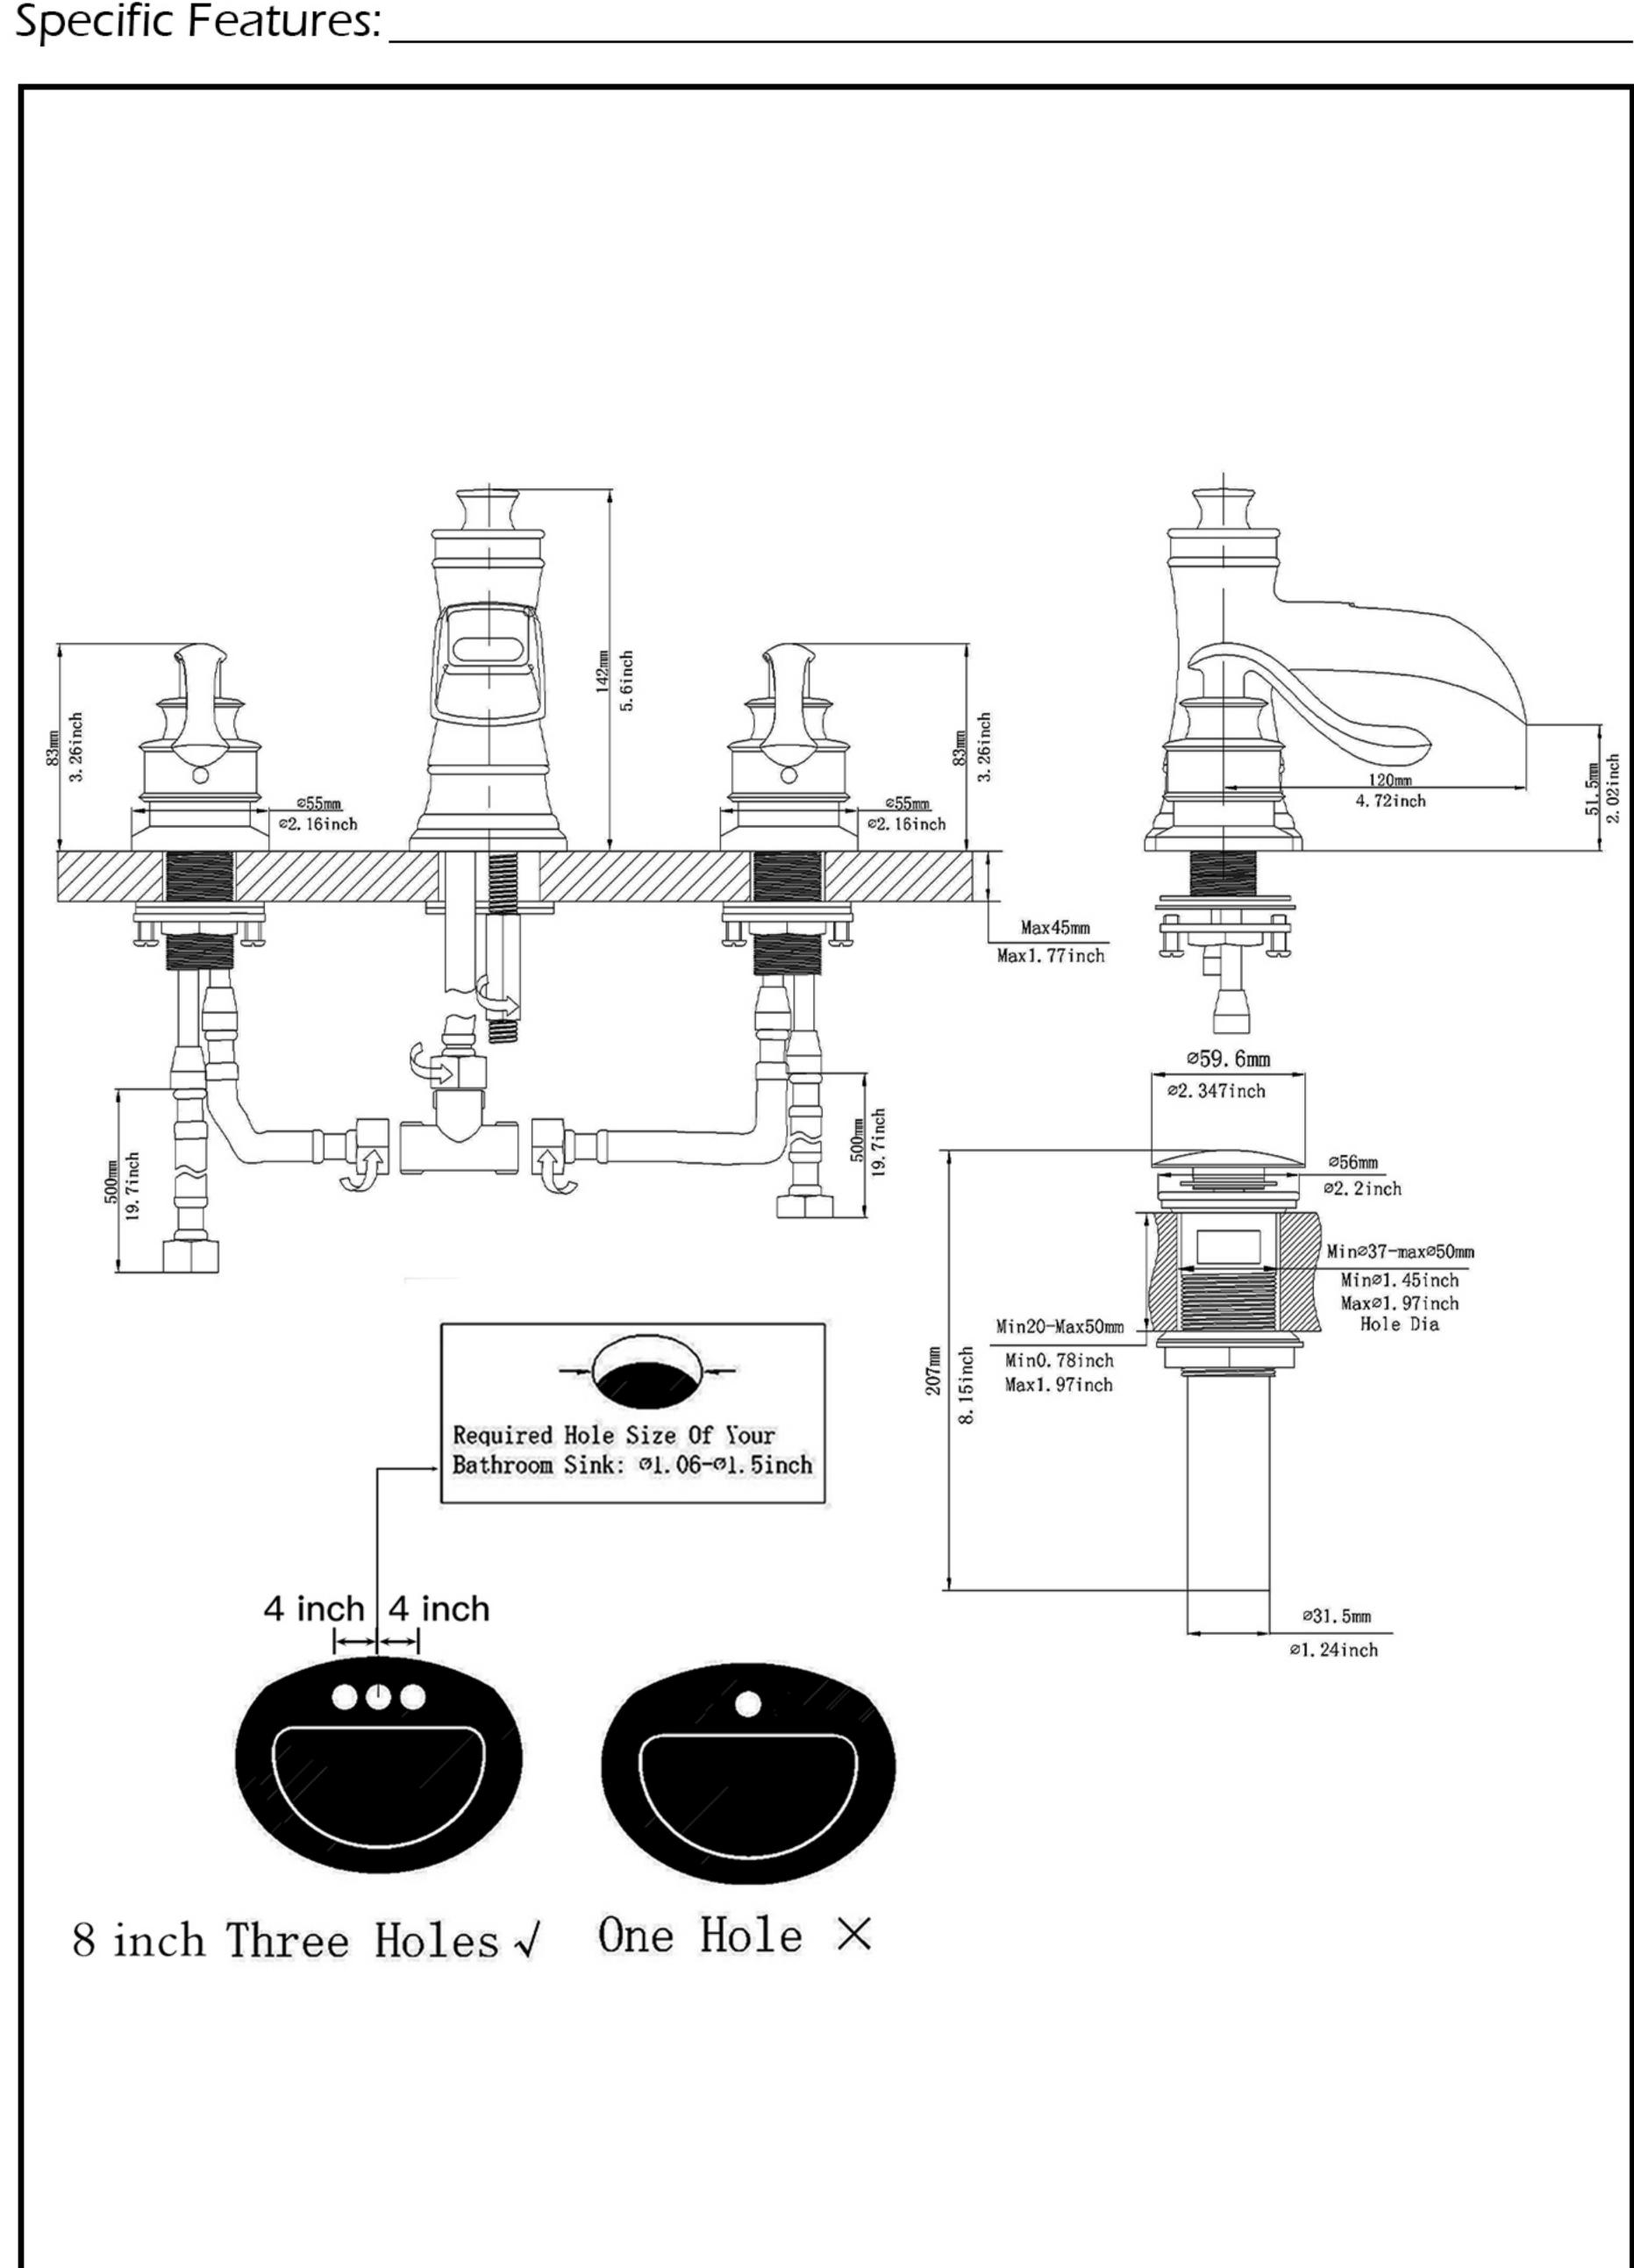

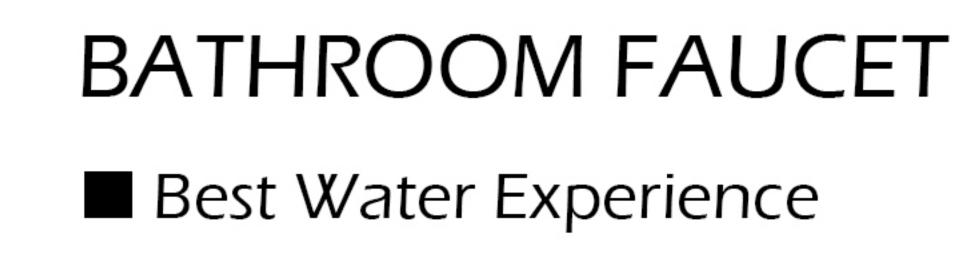

Notes before installation:


- Please check that all components are present.
- 2.Before installation ensure that all feed lines are clear of debris and on / off valve is present.
- 3.Ensure water pressure is between 20-125 PSI (includes combination of hot and cold feed lines).
- 4.Pictures in the manual are general in content and may not represent exactly your purchased faucet. If you are having difficulties please contact a professional plumber.
- 5.If you will be away from home for an extended period you should shut off the main water supply.

Daily maintenance:

- 1.Use a soft cloth and vinegar to remove hard-water spots.
- 2.Check aerator (if present) regularly for calcium build up are when water stream is not optimum.
- 3.DO NOT use caustic cleaning products as the use will break down finish and will void the product warranty.
- 4.Acceptable cleaners include vinegar or mild non-abrasive liquid detergents.
- 5.If the water pressure appears to be less than optimum remove, inspect, clean or replace aerator.

▲ Desianate proper finish suffix

- 1.Remove the rubber washer, metal washer and locking nut from the faucet.
- 2. Screw and hand tighten the hot and cold flexible hoses to the faucet. DO NOT use a wrench to tighten hoses as this may damage the hose and / or the hose threads.
- 3.Install faucet through center hole.
- 4.Re-install the rubber washer followed by the metal washer and lock-nut. Hand tighten then tighten further using a screw driver to tighten lock-nut screws.

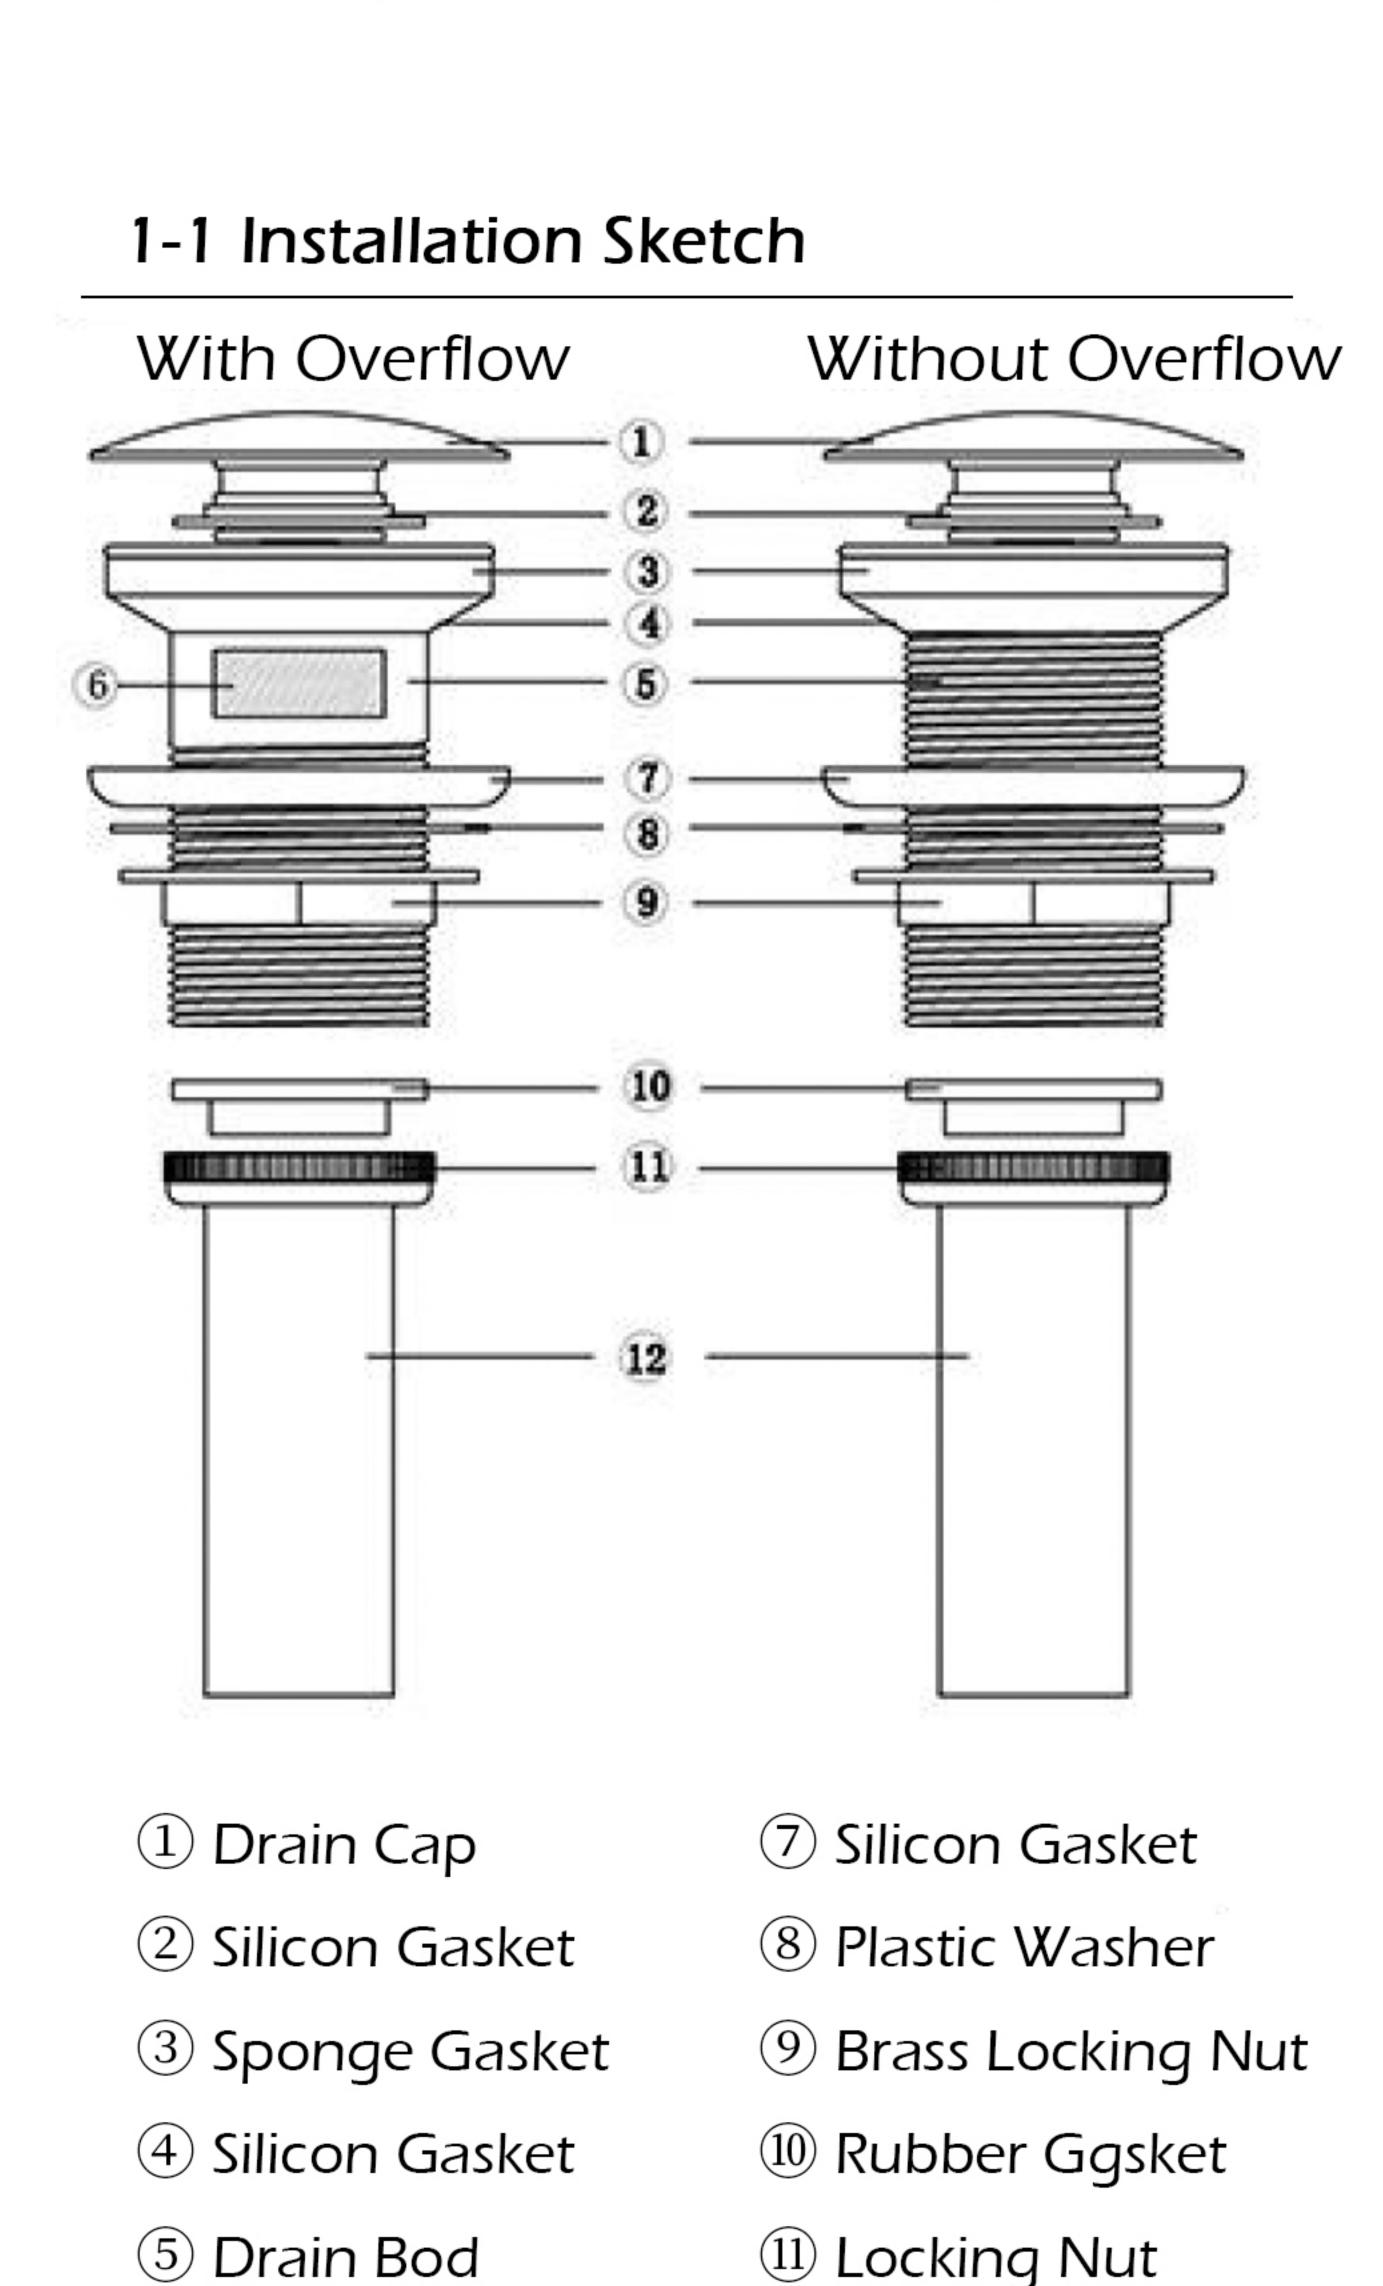

12 Tail Pipe

6 Overflow

