



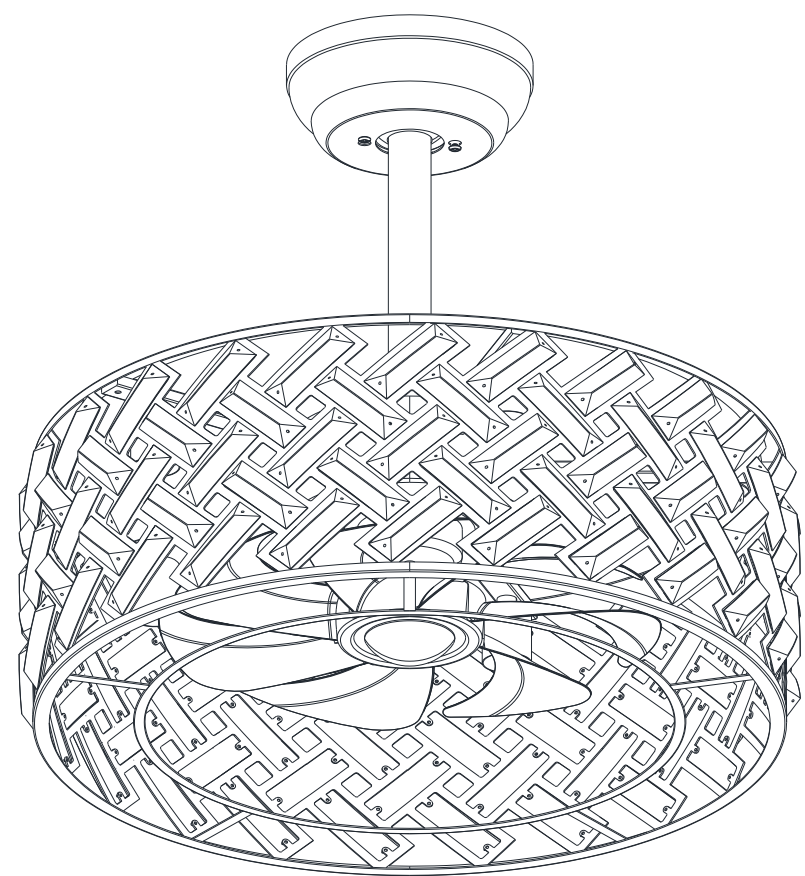

20-INCH DEROCATE CEILING FAN USE AND CARE GUIDE

Installation of the hanging bracket

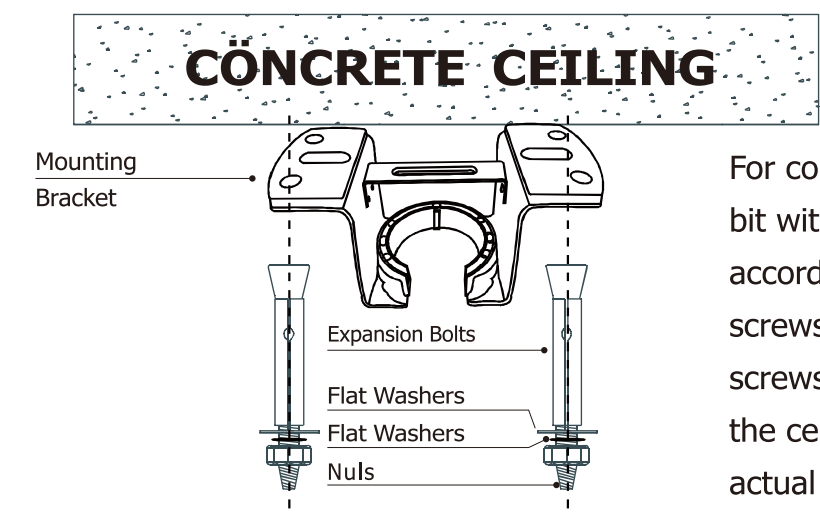


For concrete ceiling, use the percussion bit with diameter 8mm to drill holes according to the length of expansion screws. Then use the attached expansion screws to fix the hanging bracket onto the ceiling (selection is made according to actual requirements of the customers).

STEP 1 A-CONCRETE CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

- 1) Use the Mounting Bracket as a guide, mark the spots where the 4 Expansion Bolts will be drilled.
- 2) Remove the Mounting Bracket, drill 2 holes and insert 2 Expansion Bolts into the concrete ceiling, install the mounting bracket and secure with Flat Washers, Spring Washers and Nuts.

IMPORTANT : SCREWS & NUTS MUST BE TIGHTENED TILL SNUG

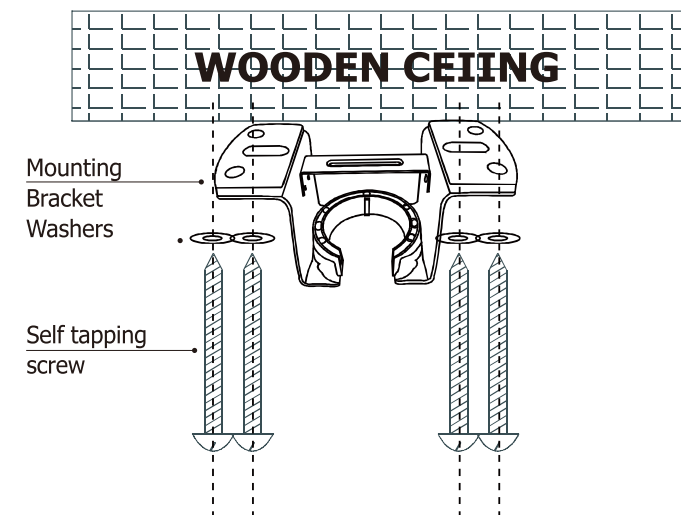


For wooden ceiling, use wood screw to drill on the wooden beam or the "junction box" to fix the hanging bracket(selection is made according to actual requirements of the customers)

STEP 2 A-WOODEN CEILING


SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

- 1) Use the Mounting Bracket as a guide, mark the spots where the 4 Self Tapping Screws will be drilled.
- 2) Remove the Mounting Bracket, drill 4 holes for 3MM diameter, install the mounting bracket onto wooden ceiling with the 4 Self Tapping Screws & Washers

Pre-Installation

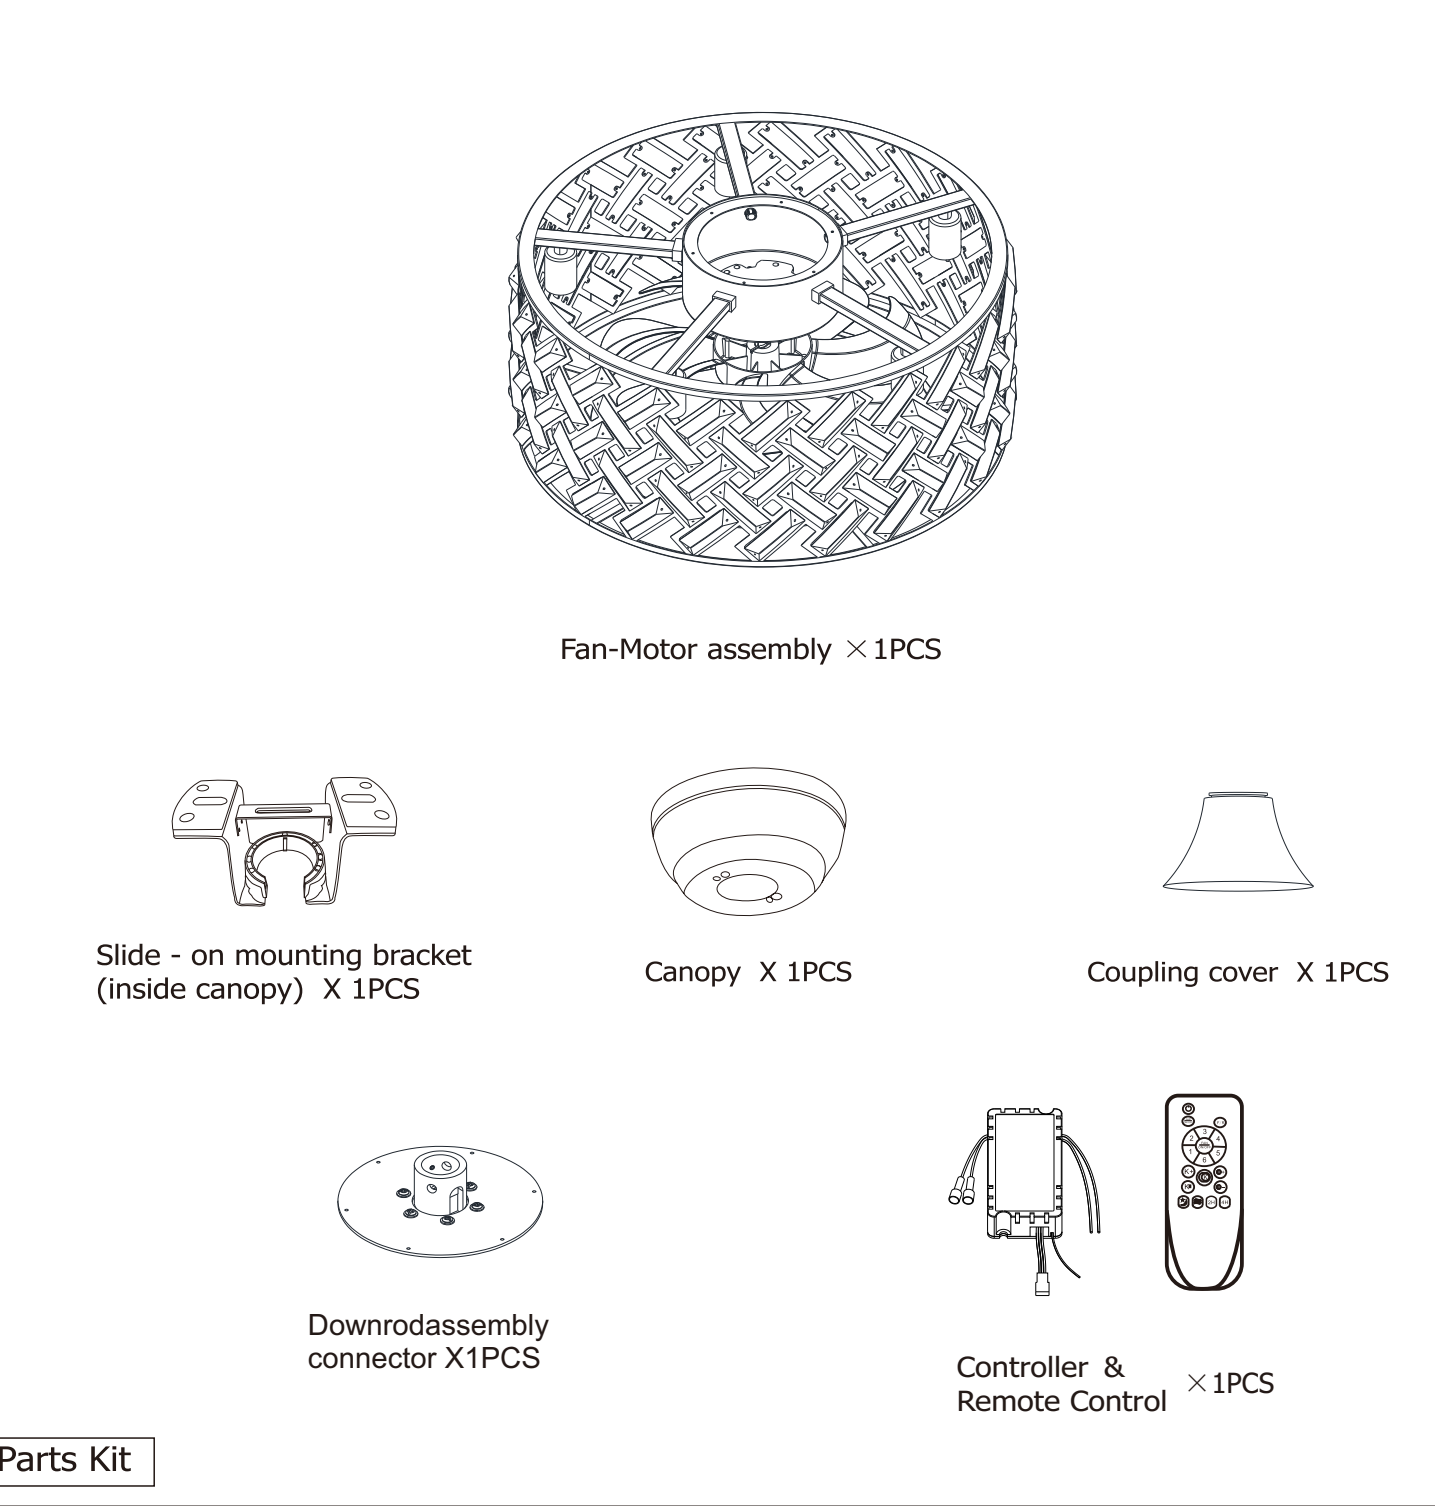


Parts Kit

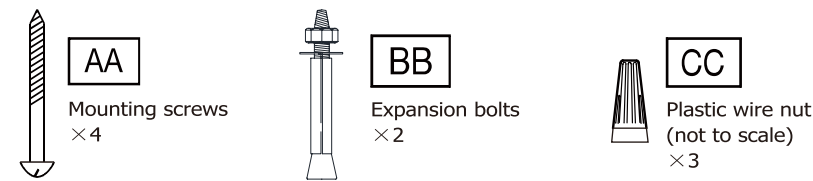

NOTE



Hardware not shown to actual size.

Fastening the blade arms to the motor

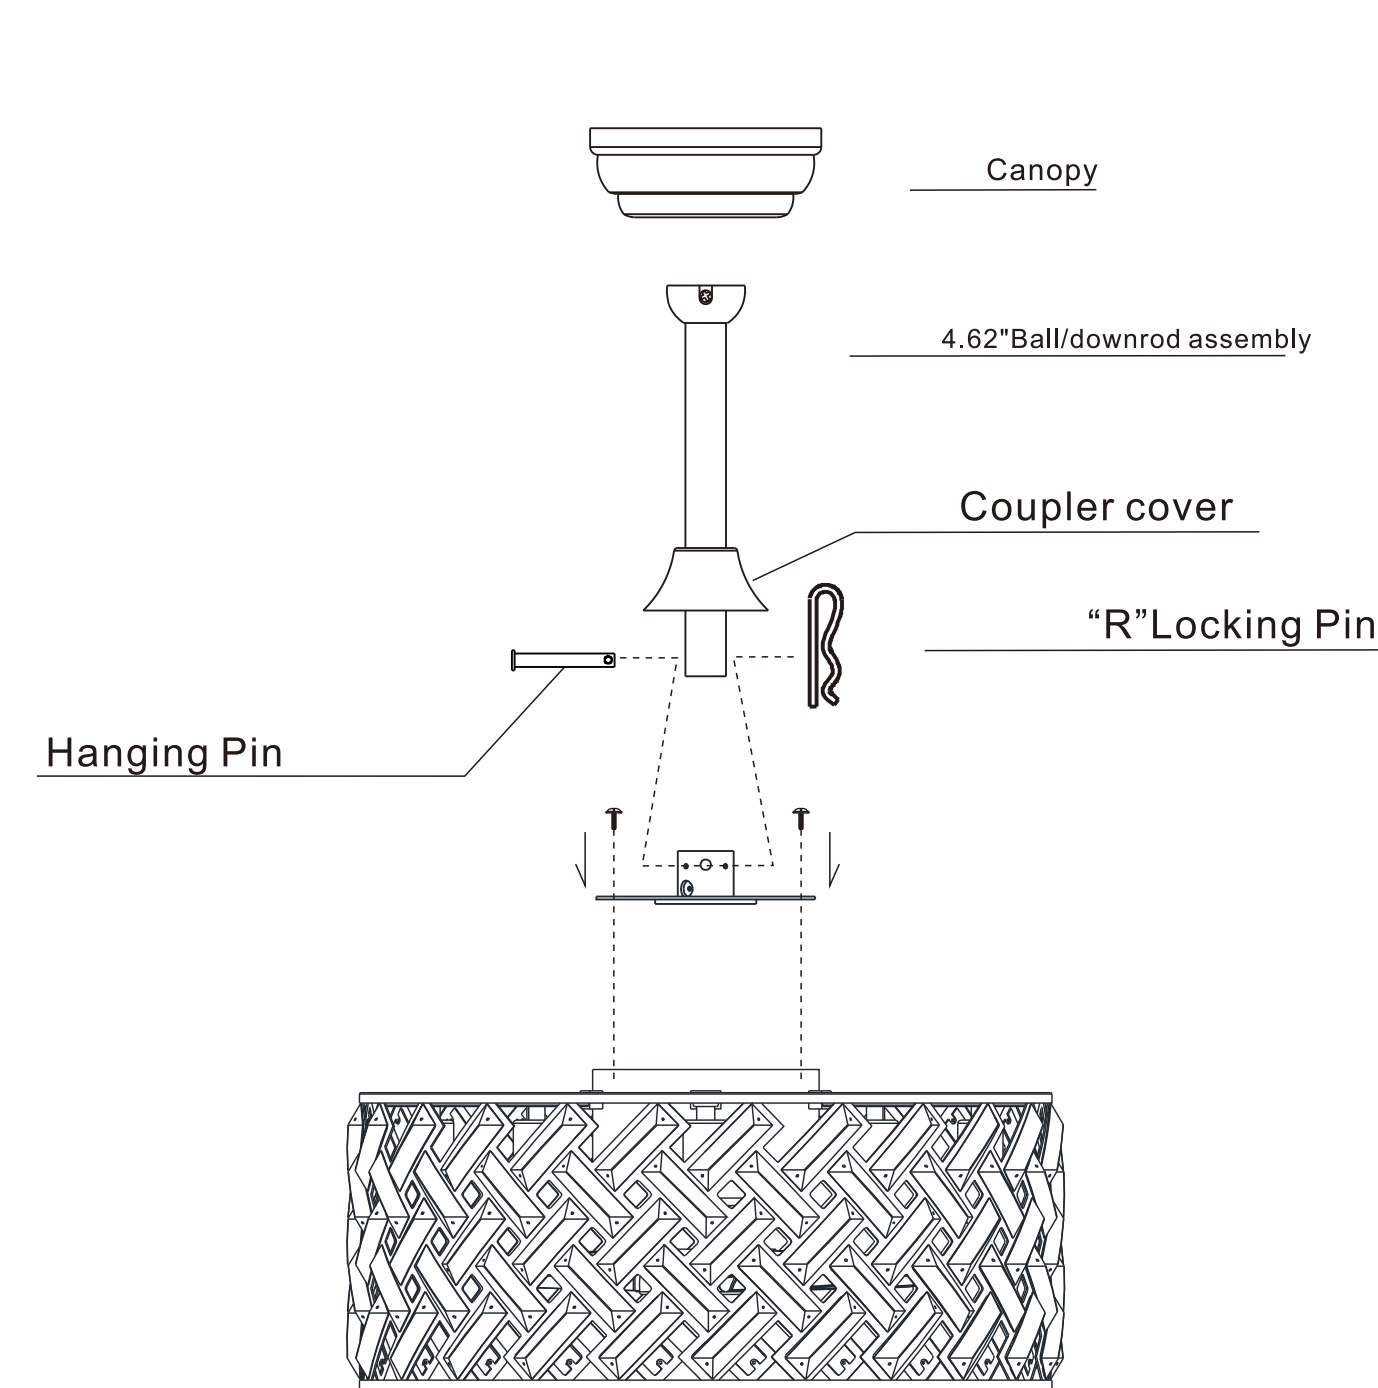


- ☐ Loosen, but do not remove, the two setscrews on the collar on top of the motor housing.
- ☐ Align the holes at the bottom of the downrod with the holes in the collar on top of the motor housing.
- ☐ Carefully insert the hanger pin through the holes in the collar and downrod. Be careful not to jam the hanger pin against the wiring inside the downrod. Insert the locking pin through the hole near the end of the hanger pin until it snaps into its locked position. Re-tighten the two setscrews on the collar on top of the motor housing.

Making the electrical connections

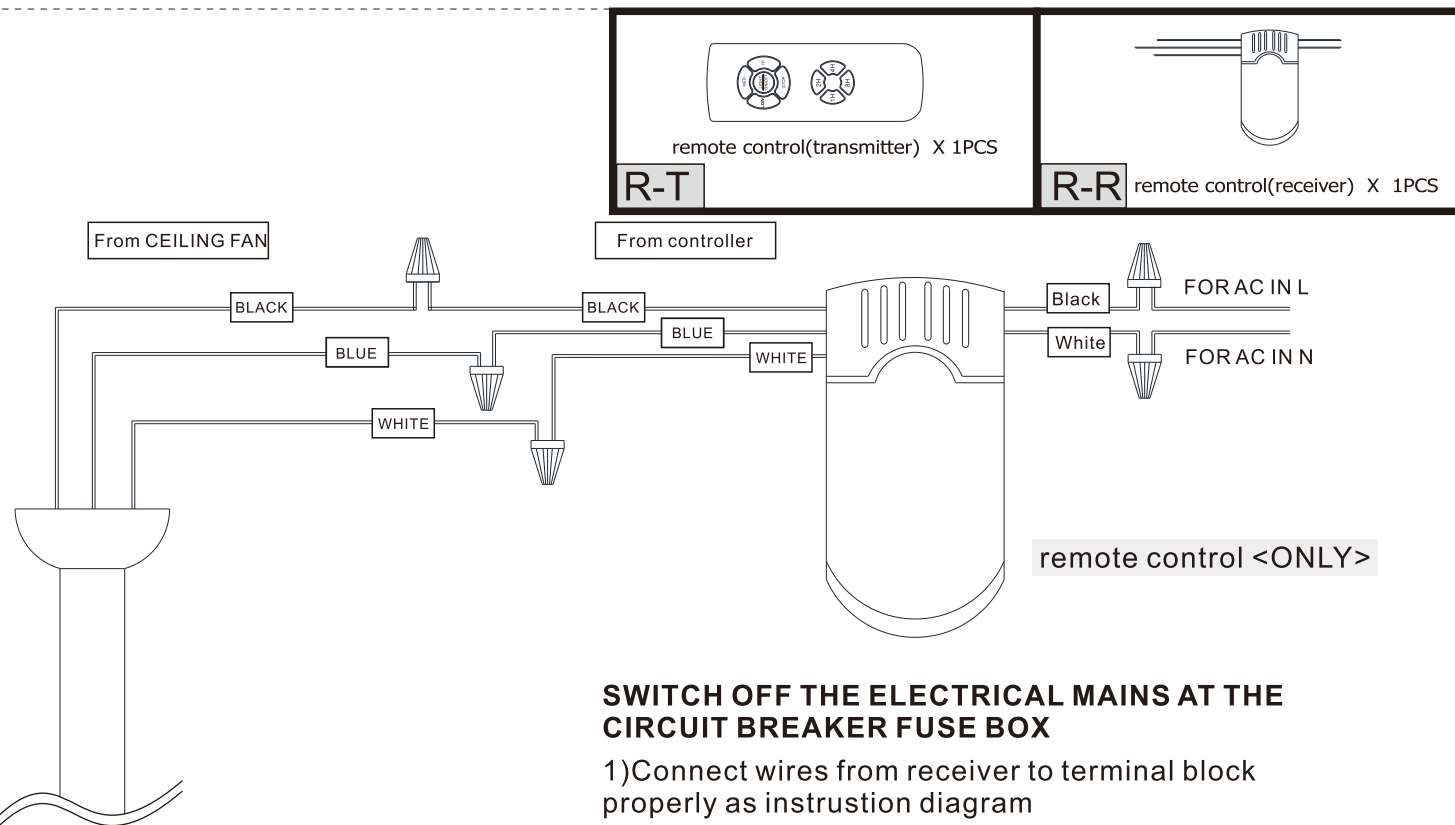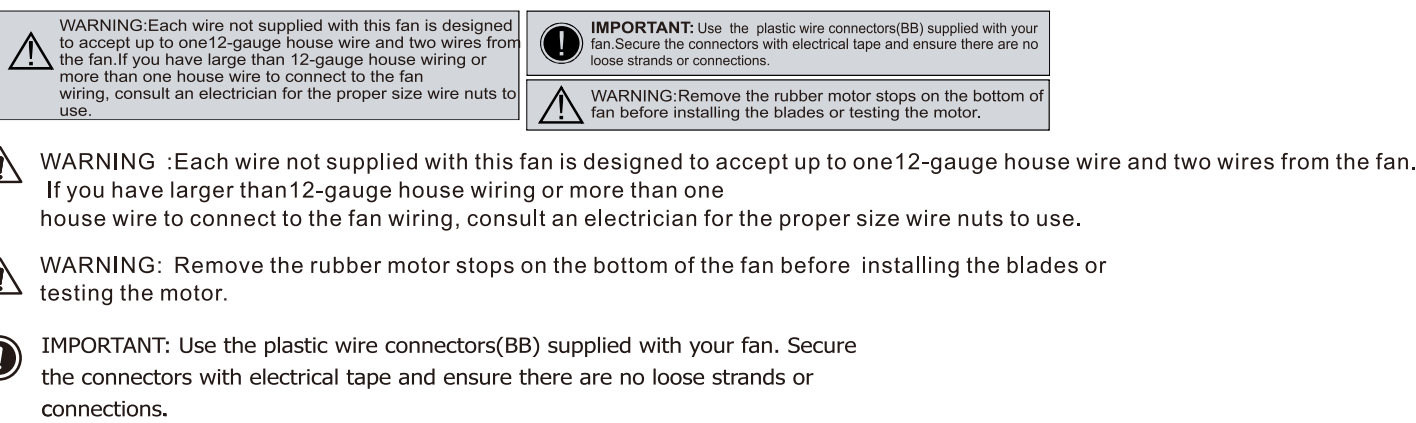


Assembly - Hanging the Fan(continued)


Preparing for mounting

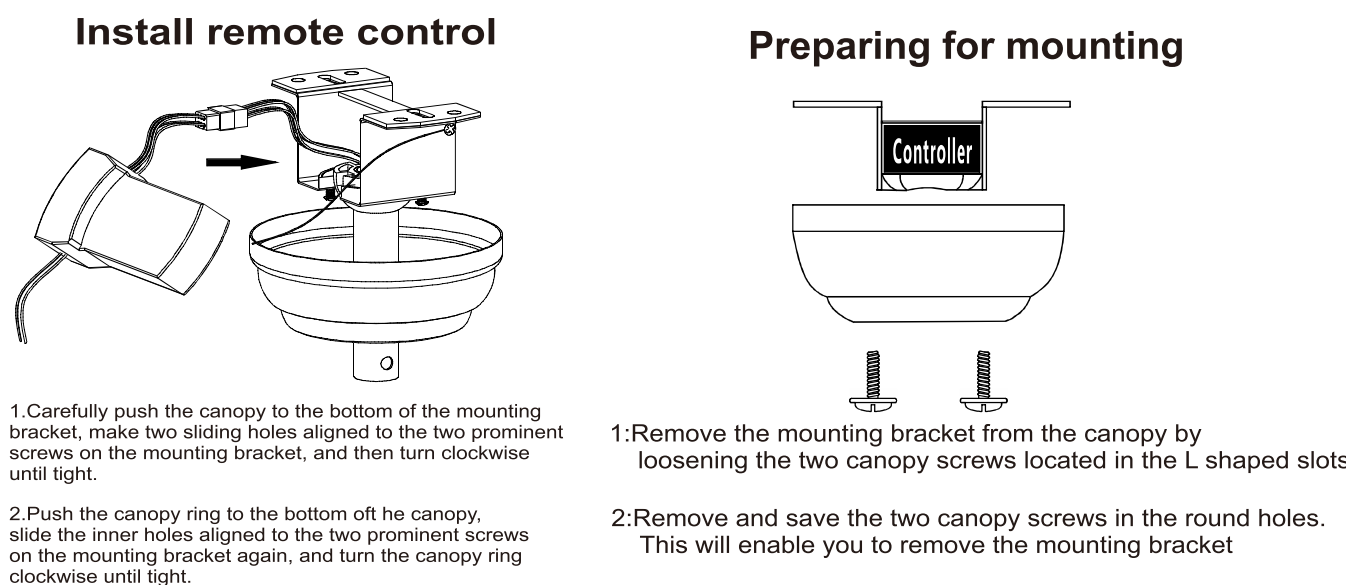


INSTALLATION INSTRUCTION

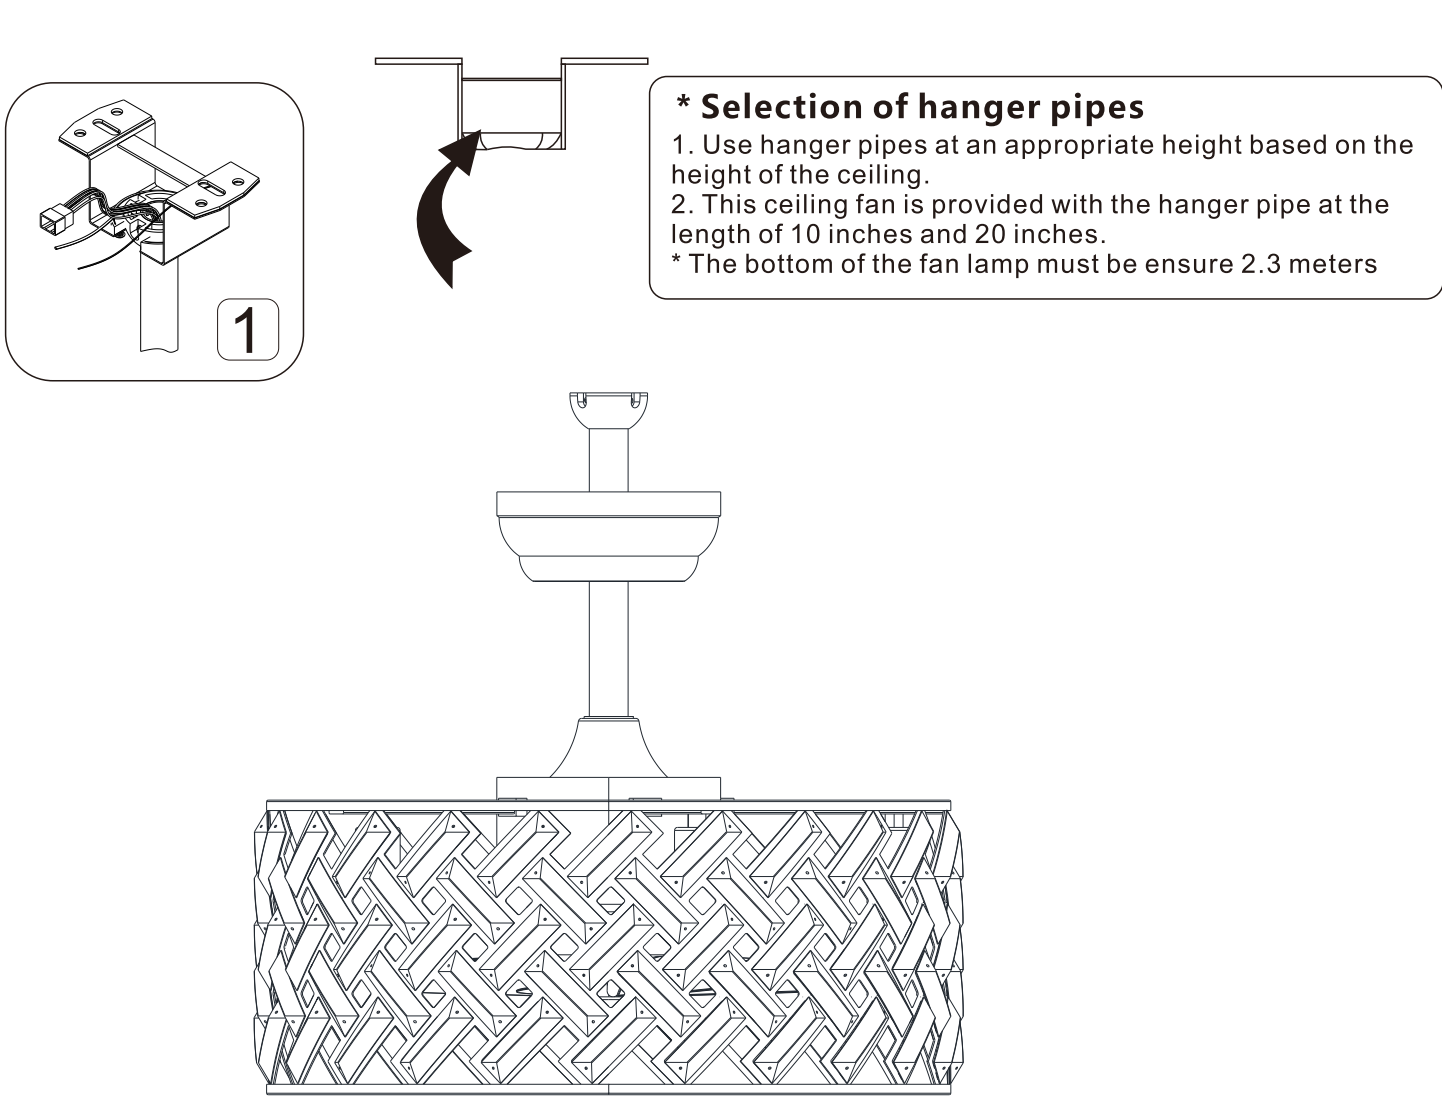


Install remote control

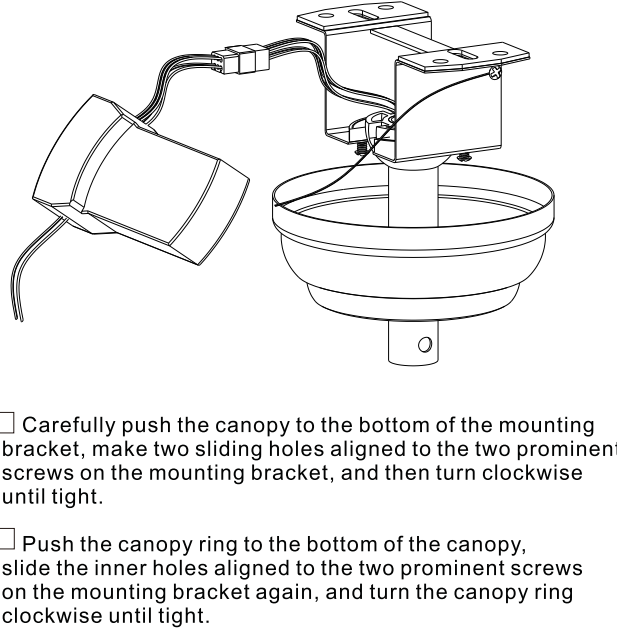

Preparing for mounting

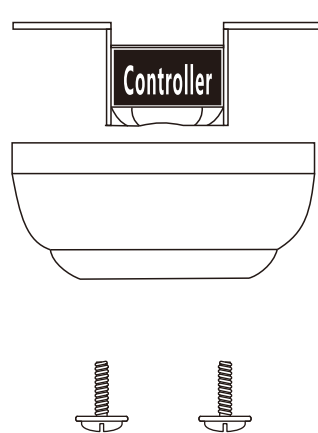

Use of remote control

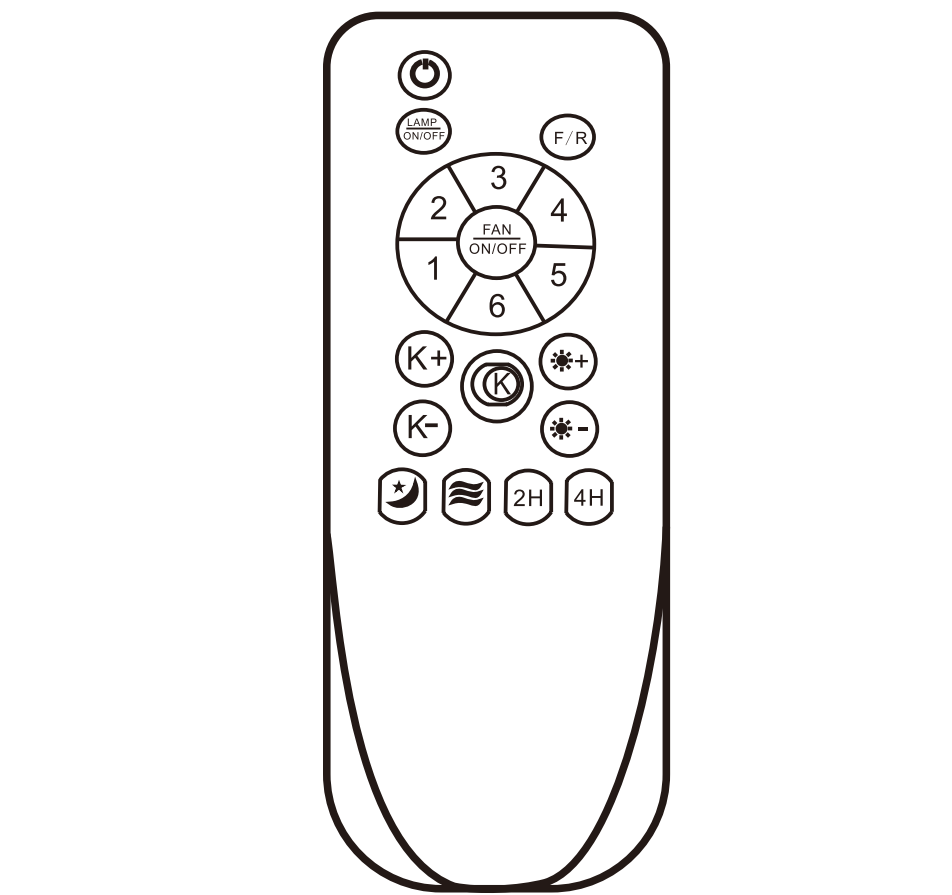

Fan NO/OFF
Light NO/OFF

Reduce air volume
Increase air volume
Air volume Gear(1-6)

Natural wind
Frowar
Reverse

Froward or Reverse operation: To chang fan rotating direction
Fanchange dirsction.

Auto off after 4hr
Auto off after 8hr