ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED



Screwdriver (Not included)



Allen Wrench



2 - People

ASSEMBLY RATING











- DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION# 24-05-20

CHECK
BEFORE STARTING

Are you missing anything?	Check out our Quick Tips!
Double-check all parts, hardware and accessories listed are all acccounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements?	Prep Time!
Are there any irregularities or flaws in the parts? We can send replacements!	Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

ROUND END TABLE



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.



PARTS



 


TABLE TOP





TABLE LEG

HARDWARE





(H2) 12 PCS



(H3) 12 PCS



M6X40MM JCBC SCREW





SPRING WASHER



FLAT WASHER





WOOD DOWEL






LEG GLIDE






ALLEN KEY

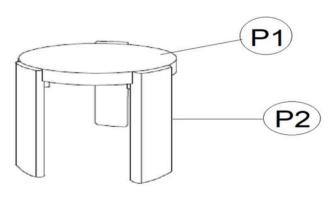

is packed in 1 carton

Carton	Designation	Part List		Hardware List	
	Table Top	P1			
	TABLE LEG	P2			
				9	H1 x 12 pc
	M6x40 JCBC SCREW	H1		M6x40 JCBC SCREW	
				0	H2 x 12 pc
	SPRING WASHER	H2		Spring Washer	
				0	H3 x 12 pc
	FLAT WASHER	Н3		Flat Washer	
					H4 x 6 pc
	WOOD DOWEL	H4		Wood Dowel M8x30mm	
					H5 x 6 pc
	LEG GLIDE	Н5		LEG GLIDE	
					H6 x 1pc
	ALLEN KEY	Н6		Allen Key	

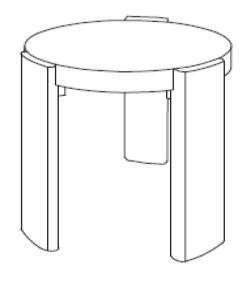

ASSEMBLY INSTRUCTIONS

Please read instructions carefully

Remove all wrapping materials, staples and packing straps from the carton. Refer to Parts List and Hardware List and ensure they are complete before you start assembling. Place all wooden parts on a clean, flat and soft surface (e.g carpet or rug) to prevent parts from being scratched. CAUTIONS: 1) DO NOT FULLY TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.

- 2) DO NOT OVER-TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.
- 3) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.

PARTS LIST

NO.	COMPONENT	QTY.
P1	TABLE TOP	1
P2	TABLE LEG	3

HARDWARE LIST

NO.	DESCRIPTION		QTY.
H1	M6X40MM JCBC SCREW	<u> </u>	12
H2	SPRING WASHER	@	12
Н3	FLAT WASHER	0	12
H4	WOOD DOWEL M8 x 30mm		6
H5	LEGS ADJUSTABLE GLIDE	O	6
Н6	ALLEN KEY		1



COMPLETE ASSEMBLY


P2

* MALLET (NOT PROVIDED)

STEP 1




Lay the table top (P1) upside down on a flat soft & clean surface. Prepare the table leg (P2) by inserting the wooden dowel into the designated holes.

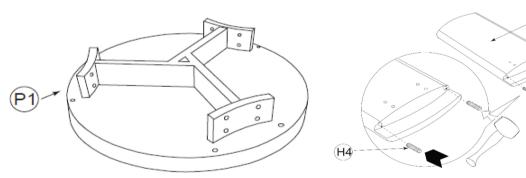


STEP 2



Align and attach the table leg (P2) to the table top (P1) by using assembly of Bolt (H1) with spring washer (H2) and flat washer (H3).

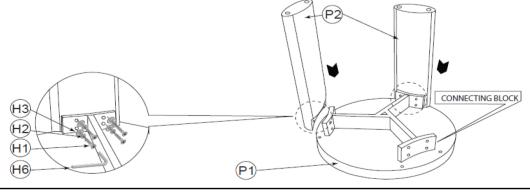


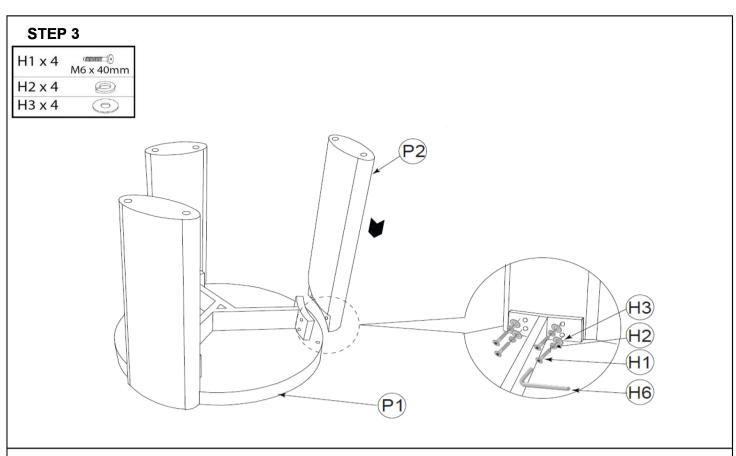

STEP 4

H5 x 6

Attach the leg glide (H5) to the table base (P2).

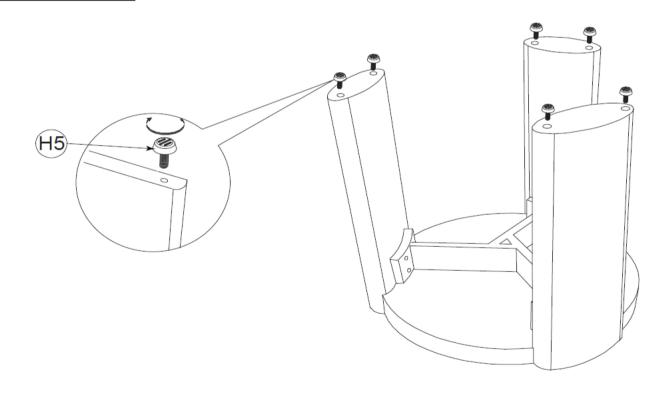


THEN, CAREFULLY PUT THE TABLE UPRIGHT

CARE AND MAINTENANCE

SAFETY - To avoid any risk of suffocation to children or animals, dispose off the plastic bags immediately.

CLEANING - Clean with damp cloth and mild detergent. Do not use bleach or abrasive products.

FITTINGS - Tighten bolts and nuts from time to time to ensure all parts of product are securely fitted.

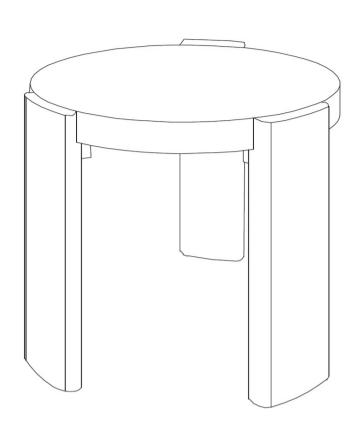

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

✓ Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use .

CARE AND MAINTENANCE

SAFETY - To avoid any risk of suffocation to children or animals, dispose off the plastic bags immediately.

CLEANING - Clean with damp cloth and mild detergent. Do not use bleach or abrasive products.

FITTINGS - Tighten bolts and nuts from time to time to ensure all parts of product are securely fitted.