

Assembly Instructions & User's Manual

 
19 inch Smokeless Fire Pit

Model Number: FT-10893C



After-sale email: cbec@china-yayi.com

Any problems, please contact us. We will help you within 24 hours.

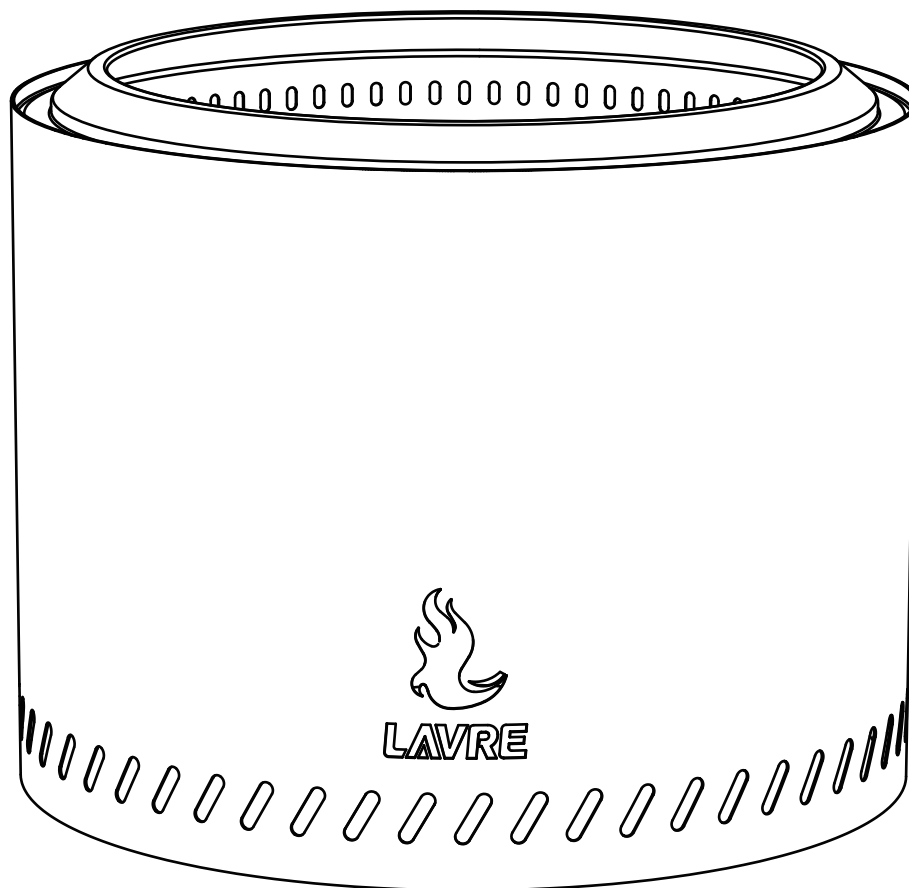

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Assembly Instructions & User's Manual

Table of Contents

Quality Statement.....	3
Important Safety Information.....	3
Package Contents.....	4
Product Information.....	5
Components.....	5
Assembly.....	6
Operating Instructions.....	7
Maintenance.....	8
Care and Cleaning.....	8

Assembly Instructions & User's Manual

Quality Statement

Question or Comments? We would love to hear about your experience!

Important Safety Information

- Please read all instructions carefully before assembling this product.
- Where applicable, and for your safety, assembly by an adult is strongly recommended.



WARNING: For outdoor use only!
Never leave a fire unattended!



CAUTION: Burn only untreated wood, fire logs
or wood pellets in this fire pit.



WARNING: Do not burn over 8 lb untreated
wood or fire logs in this fire pit.



CAUTION: Do not use gasoline or kerosene to
start the fire in this fire pit



WARNING: Never leave the burning fire bowl
unattended, and always extinguish the fire
completed.



CAUTION: Do not use this unit on a wood deck,
long or dry grass and/or leaves, or on
combustible surfaces.



WARNING: Do not allow children or pets near
fire pit without supervision.



CAUTION: Do not attempt to move the fire pit
while it is hot or in use.



WARNING: Do not touch the surface of the
fire pit while in use as it may cause burns.



CAUTION: Place the fire pit no closer than 8 ft.
from walls or combustibles during use.



WARNING: Never burn in vehicles, tents or
indoors. CARBON MONOXIDE HAZARD.



CAUTION: Adequate fire extinguishing material
should be readily available.



WARNING: Do not use water to extinguish as
this is dangerous and can cause damage to
the fire pit.



CAUTION: Do not use this fire pit in windy
conditions.



 
CAUTION: Do not wear flammable or loose
clothing during operating the fire pit.



WARNING: FUELS USED IN WOOD OR CHARCOAL BURNING APPLIANCES, AND THE PRODUCTS OF COMBUSTION OF SUCH FUELS, CAN EXPOSE YOU TO CHEMICALS INCLUDING CARBON BLACK, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, AND CARBON MONOXIDE, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. For more information go to: www.P65Warnings.ca.gov.

Assembly Instructions & User's Manual

Package Contents

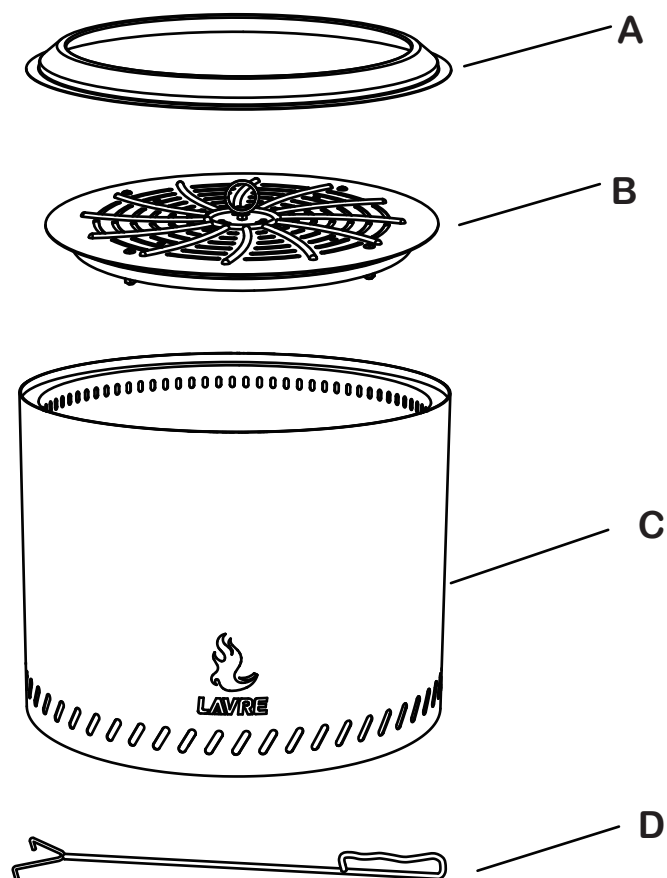

Component	Description	Quantity
A	Ring	1
B	Ashtray	1
C	Fire Bowl	1
D	Poker	1

 
Assembly Instructions & User's Manual

Product Information

Product dimension: 19.3in Dia. x 15 in H (49cm Dia. x 38 cm H)

Poker and cover included


Components

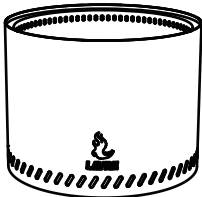Component A Ring Qty 1	Component B Ashtray Qty 1	Component C Fire Bowl Qty 1
		
Component D Poker Qty 1		
		


Assembly Instructions & User's Manual

Assembly

 - 1** Put the Ashtray (B) into the Fire Bowl (C).

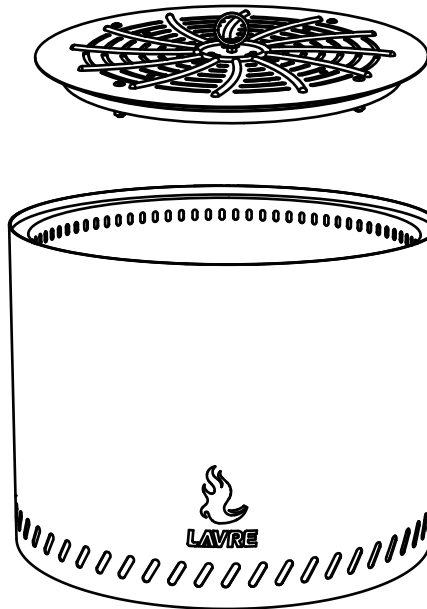

- 2** Flip the Ring (A).

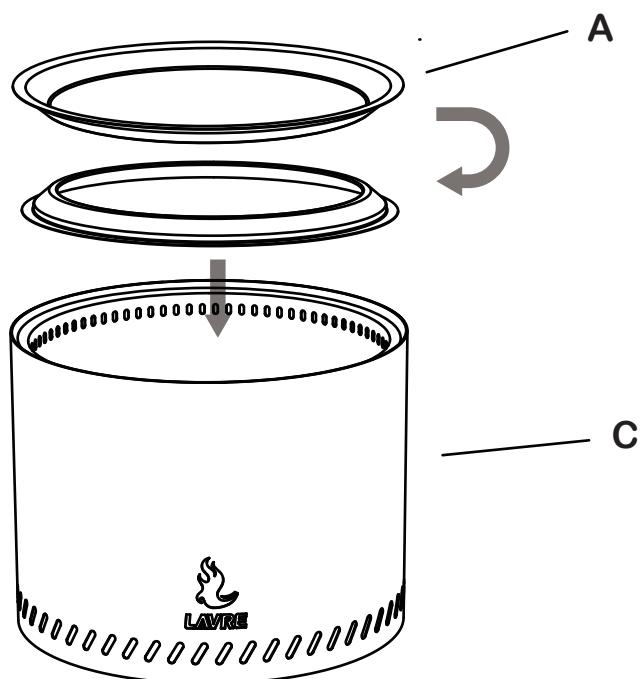 

Assembly Instructions & User's Manual

Operating Instructions

Lighting

- Place a small amount of kindling or fire starter material in the center of the fire pit.
- Arrange fire wood properly. (Recommend using wood log size within Dia. 2 in x L9 in).
- Use a long match or stick lighter to light.
- Add additional logs as needed.
- Please wear heat-resistant gloves during use.



NOTE: When fire lit, there will be some smoke, which will decrease over time as the unit achieves full efficiency.

Make the fire pit less smoke

- Stack fire wood below the interior vent hole (Figure 1).
- Use dry fire wood.
- Create a hot fire.
- Use hardwoods like oak, maple, or hickory etc.
- Avoid burning trash or debris.
- Do not use in gusty weather.
- Build fire wood properly as below teepee and log cabin structure(Figure 2), leaving gaps between the logs for air circulation.



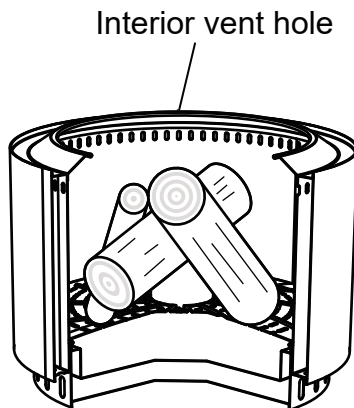 


Figure 1

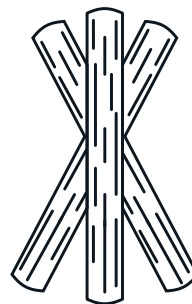 

TEEPEE

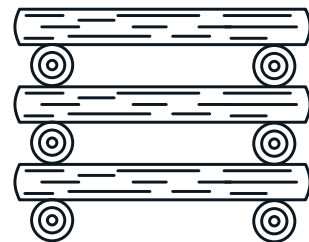 

LOG CABIN

Figure 2

Extinguishing the Fire

- Allow the fire to burn itself out.
- Except in the event of an emergency, do NOT use water to extinguish a fire as this is dangerous and can cause damage to the outdoor fire pit.

Assembly Instructions & User's Manual

Maintenance

- Due to extremely high temperatures, discoloration of the fire pit will occur and is considered normal.
- To extend the life of your fire pit, clean it after each use.
- To protect fire pit finish, use a soft cloth in lieu of bare hands while handling.
- Clean the fire bowl after each use once ashes have cooled.
- Store assembled fire pit in a cool, dry location away from children and pets.

Care

- Do not attempt to clean the fire pit until the fire is completely out and cooled completely.
- Carefully take away the Ring, Take out the Ashtray with the Poker. (Figure 3).
After the cleaning is complete, put it back into the original position and wait for the next use

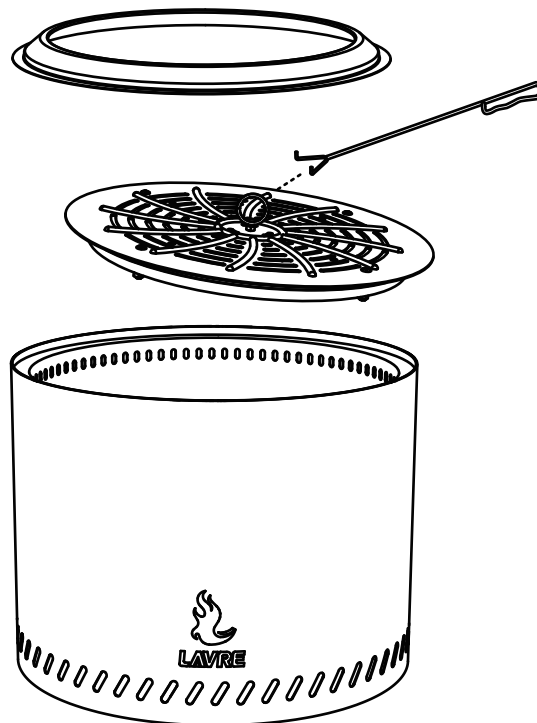 


Figure 3