

HOW TO INSTALL

CORRECT



INCORRECT



Perfect Water Technologies

Home Master® Jr. Series Filter Change Instructions

Home Master Jr. - Filter Change Schedule

<u>Maintenance Item</u>	<u>TMjrF2E</u>	<u>TMjrF2</u>	<u>TMjrPLUS</u>	<u>TMJR</u>
O-Ring121	3 Months	3 Months	Annually	Annually
CFF25-10	3 Months			
CFF25-10		3 Months		
CFB1-10			Annually	
CFB5-10				Annually
Sanitize System	AT FILTER CHANGE			

Home Master Jr. Filter Change Schedule:

www.theperfectwater.com/which-filter-change-set-do-i-need.html



Perfect Water Technologies,
Inc.
1-877-693-PURE Copyright
© 2021

Filter Change Instructions

Tools Required:

- Towel
- Unscented Bleach, H2O2 (or other non-toxic cleaner)

1. Turn off water supply to filter.
2. Unscrew housing by hand. "Righty-tighty, lefty-loosey" If the housing is stuck, try using a rubber gripper pad on each end (available at no extra charge upon request). Also, try soaking the housing in hot water. Worst case, you may send the entire unit to us for servicing. Please call to inquire.

3. Remove used cartridge and discard. Remove O-ring from sump and wipe groove and O-ring clean.

IMPORTANT: This step is important to ensure proper seal of the filter. Ensure the O-ring is seated level in the groove. If O-ring appears to be damaged or crimped it should be replaced at this time.

Lubricate O-ring with a coating of clean silicone grease. Do not use Vaseline or petroleum-based lubricant. Place O-ring back in sump, and press firmly into groove using two fingers, all the way around.

4. Rinse out housing and fill about 1/3 full with water. Add 2-3 tablespoons of bleach and scrub thoroughly with a CLEAN brush or sponge. Rinse thoroughly and allow to air dry.

5. Insert a new cartridge into the sump making sure that it it slips down over the standpipe. If the filter has an orientation arrow, make sure it is pointing towards the inlet and outlet. Usually this means that the arrow will be pointing down when in service.
6. Screw the sump onto the cap and hand-tighten.
7. Turn on the water supply slowly, to allow housing to fill with water.
8. Run water up to 20 minutes or until water runs clear and is free from air bubbles.
9. Check for leaks before ending installation. If unit leaks, replace with a new O-ring.

CONTACT US:

Phone: 877-693-7873

Email: Support@theperfectwater.com

Live Chat: <https://direct.lc.chat/6498911/>