
## **Assembly Instructions**

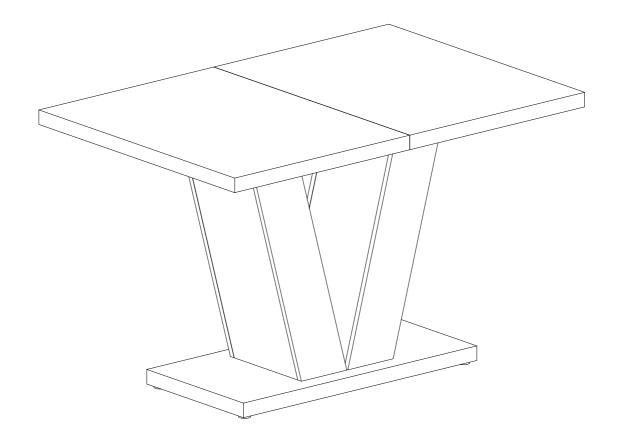

**Dining Table** 

Model No.

HOGA-JW0669/HOGA-JW0752 HOGA-JW0879/HOGA-JW1043


# Contact Us We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


#### Warm Tips

- 1. Carefully read these instructions and keep them for future reference.
- 2. Check the parts list and confirm everything's there before starting assembly.
- 3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
- 4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

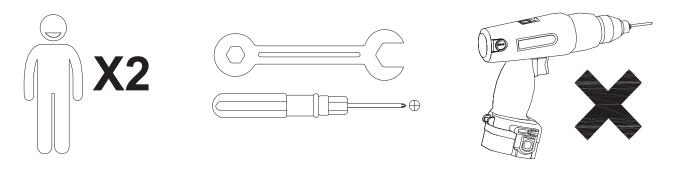


#### We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

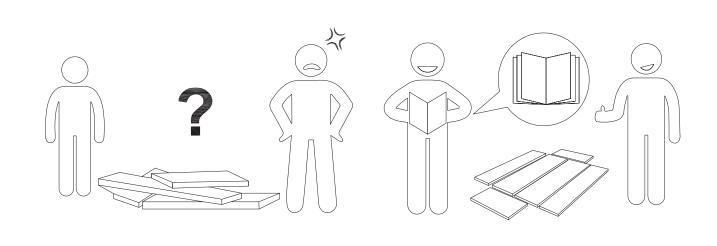

#### **AVOID SCRATCHES**


In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

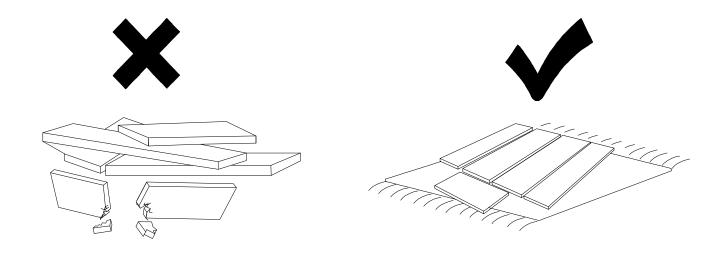

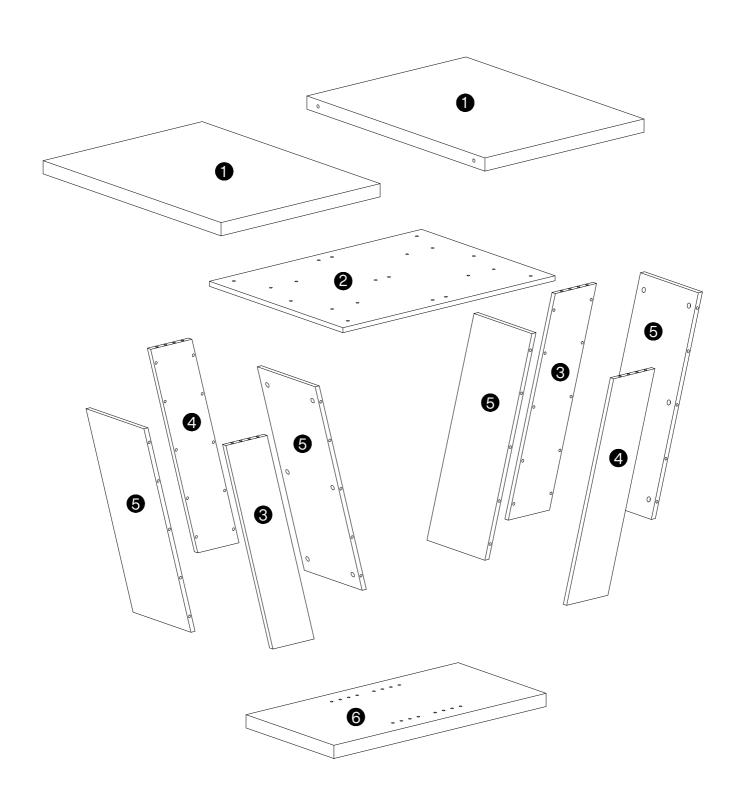



Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

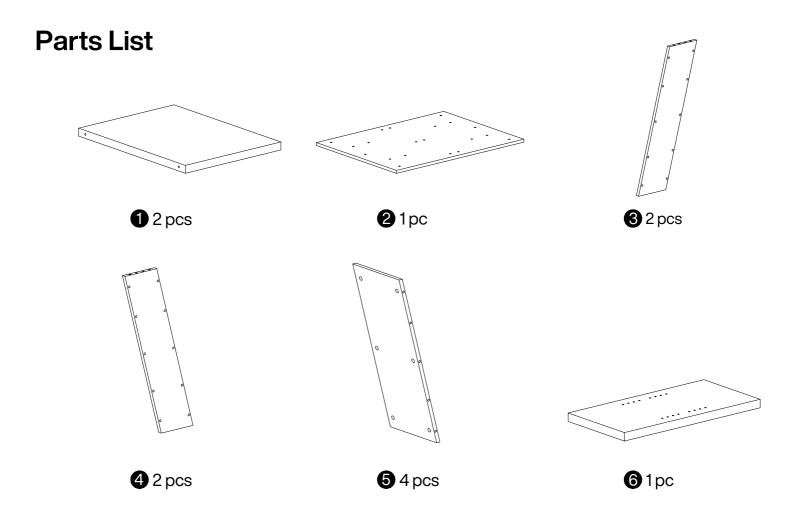



### **Hardware List**

Α	X24+1	В	X24+1	С	X32+1	D	X2+1	Е	X8+1
Ø6X35 mm		Ø15X12 mm		Ø8X30 mm		Ø10X50 mm		Ø7X47 mm	


F	X8+1	G	X12+1	Н	X4		X1		
Ø7X	Ø7X67 mm		30 mm	M6XØ	30 mm	M4X64 mm			




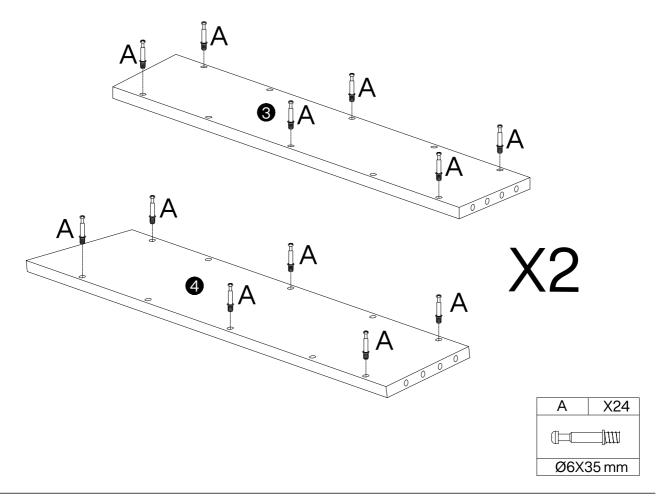

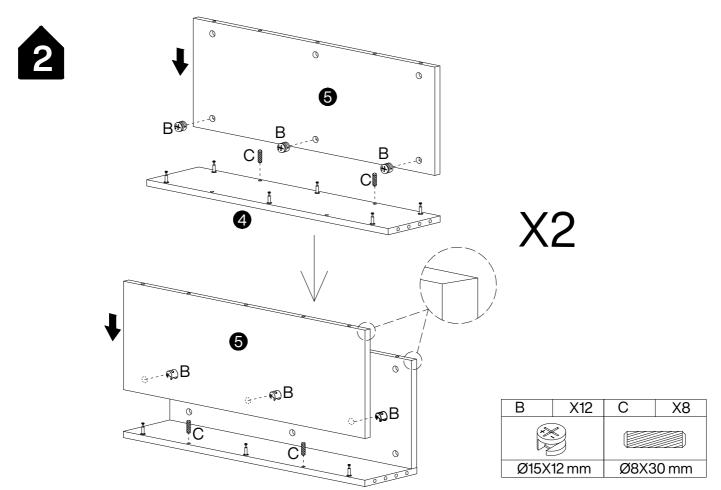




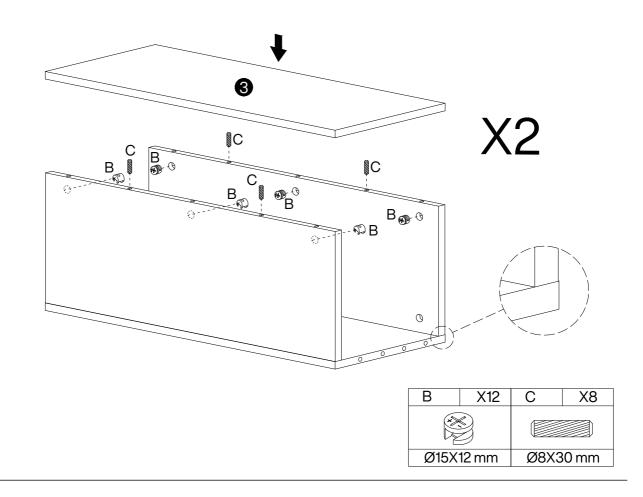


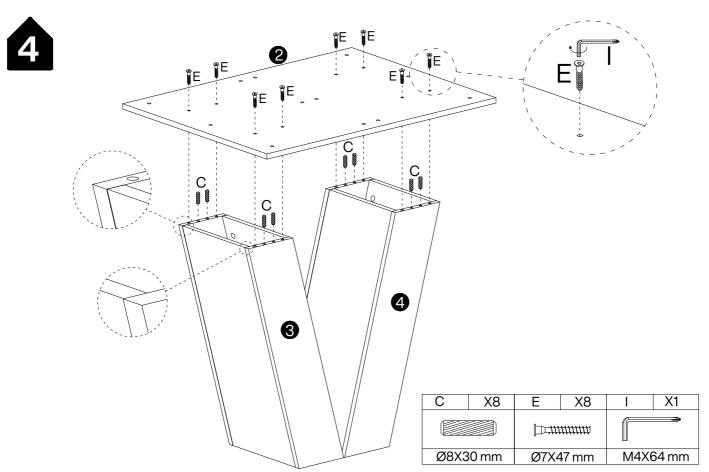





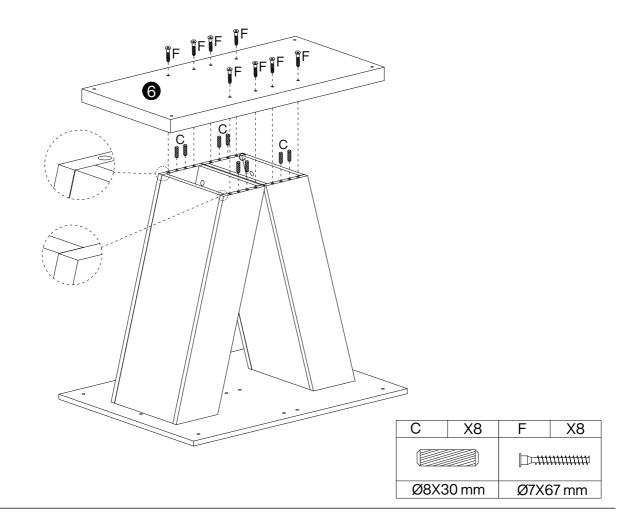



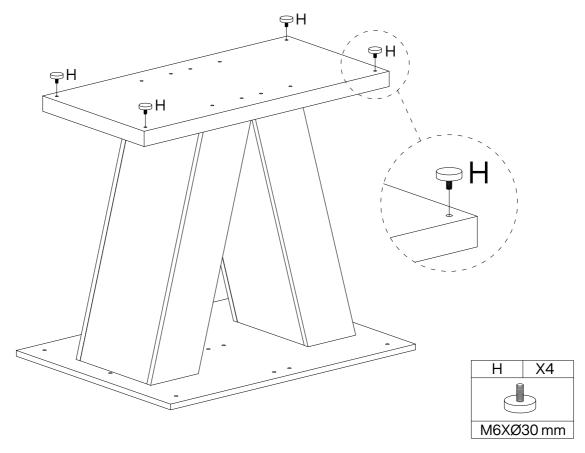

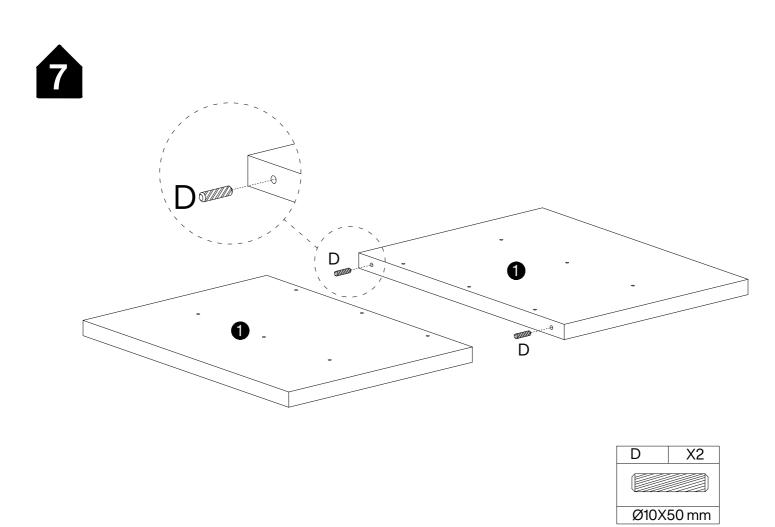

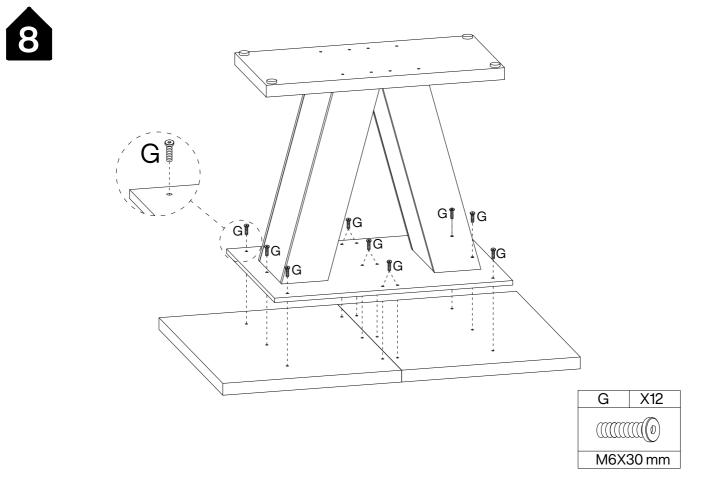

## Thank you for your support!

