

Hanover Outdoor Furniture



To expedite any future warranty claims, please retain the Instruction Sheet, Warranty Card and receipt for future use.

Care and Maintenance

Store furniture in an upright position. Be careful to never allow water to build up in frames as this will cause corrosion and freeze damage in cold climates. Wash all frames with a solution of mild soap and water. Rinse with clean water and dry with a soft absorbent cloth towel. Frames can be treated with a liquid wax for maximum protection against UV rays and/or salty, damp air. If your set includes cushions, slings, and/or an umbrella they may be cleaned by hand with a solution of soap and water with a clean water rinse. (Never machine wash cushions, slings or umbrella covers as this will result in shrinkage or damage). After cleaning cushions tip on end and allow to drip dry. (Never use a commercial or home dryer to tumble dry fabric goods). Do not use bleach or solvents to clean any product! This will void the warranty.

For additional on-line support on assembly, troubleshooting and care & maintenance of your outdoor furniture, please visit our website at: **www.hanover-products.com**.

PART LIST

PART#	DESCRIPTION	PICTURE	Q'TY
A	Table top		1
в	Legs		4
с	Hex Head Bolt M6 x 25 mm		16
D	M6 Washer	\bigcirc	16
E	M6 Spring Washer		16
F	Bolt Cap		16
G	Wrench		1

Assembly Steps: Note: Do not fully tighten bolts until assembly is completed and alignment is correct.

Step 1. Carefully place the table top frame (A) upside down on a non-abrasive surface. Assemble the table legs (B) to the table top (A) with Hex Head bolts (C), M6 Spring Washer (E) and washers (D) by Wrench (G), then cover the bolts with bolt cap (F) as show in Figure 1.





Step 2. Verify all bolts are securely tightened before use and turn your table right side up (See Figure 2). Your table is now ready to use.

