Product Legend

Description of key functions













Air pump instructions

Air pump instructions

This product is suitable for,

All kinds of cas (excluding trucks and engineering vehicles),
motorcycles, electric cars, all kinds of bicycles, balls, balloons, life
buoys, swimming rings, indictable mats, kayoks and other indictable
products.

This product for the need to indicte the parts of the automatic indictable
function, oir pressure reaches the standard value can automatically
stop, intelligent settings, simple operation. This product is also a
precision aligital display of pressure measurement tool, any need to
measure oir pressure parts, can use this product for measurement.

This product is equipped with long-range ED lighting function and
daily lighting function, which allows you to operate clearly in the dark
environment without lights, without fear of darkness.

This product is set up with four pumping modes, "car", "motorcycle",
"alcycle", "ball", you can choose the appropriate mode according to
their own needs, each mode has a different oir pressure default value, You do not need
to set your own, of course, if these default values do not meet your
needs, you can set your own air pressure value, pumping, and so on,
when the air pressure reaches your set value, the pump will
automatically stop, do not have to be on the sidelines to guard, you
can do things while pumping, without delay.

Operating Instructions

Automobile\Motorcycle\Electric Vehicle\Bicycle Category
Connect the nozzle tube of the accessory to the air outlet hole of the
pump and screw it lightly, fasten the nozzle to the air outlet hole of the the
and then fasten the pressure handle, press and hold. © to turn on
the pump, then it will flash for a few times and then show the tire
pressure value, make sure that the pumping models correct and
then press. © to start the pump to start pumping, and then it will
stop by itself when it reaches the set value.

Balls/Swimming Rings/Air Cushions

Connect the nozale fube of the accessory to the air outlet hole of the inflatable pump and screw if fightly, fasten the nozale to the ball needle (or other two kinds of conversion nozales) and then fasten the pressure handle, make sure that the pumping made is correct and then press (i) to start pumping, and then it will stop by itself when it reaches the set value.

The product offers four air pressure units for you to choose from. PSI,Bar,Kpa,Kg/cm²













Power button (1)

Long press to turn on/off, short press to start/stop inflation after turning on, automatic shutdown after 1 minute unused

Mode switching (

This product provides four inflatable modes for you to choose, it is convenient for you to switch to use in different places. These four modes are: "car", "motorcycle", "lokycle", "ball" you can use the You can use the Mode button of to switch between the four modes, and the default value of the air pressure will be changed automatically after selection.

Unit switching

This product provides four pressure units for you to choose from. To facilitate the use of habits in your location, switch to use by yourself. These four units are: "PSI": BAR", "KPA"; "kg/cm2" You can switch using the unit key.

number you set. At this time, press the **(b)** key to start the air pump.

LED lighting 💥

This product is equipped with long-range LED lighting function and daily lighting function, so that you can operate clearly in a dim environment without lights, without fear of the night.

Press — The far spotlight is on, press 2 the far spotlight to switch SOS. Press 3 on the light with weak gear, 4 on the light with strong gear, Press 5 to turn off the LED light, and then press 5 to turn off the LED light.

Operating Instructions

- Light weight, easy to carry and store. It is a road trip, outdoor
- Multiple functions in one: tire pressure detection, air pump, night lighting. Eight-fold protection for safe use. Strong inflation capacity up to 150PSI. High precision tire pressure
- Wide range of high and low temperature operating temperature operature operatur

Emergency starting power supply instructions

product.
2. Use the matching ally to connect the car battery:
3. Start the car:
4. Unplug the battery clamp from the product:
5. Remove the clamp from the positive and negative terminals of the car battery.

Precautions for emergency power start

1. before each start, please fully charge to ensure sufficient power (more than 75%); 2. Fully insert the battery cable connector into the EC5 interface of

2. Fully Insert the battery cable connector into the bus interaction.
3. the red clip fully clamp the positive (+) pole of the battery, the black clip fully clamp the negative (-) pole of the battery (very important).
4. offer the content pole of the pole of the battery (very important).
5. do not start continuously, start times should not exceed 5 seconds.
Start unsuccessful interval of more than 1 minute to start the second time (do not start continuously, very important).
6. before starting the car, please turn off all electronic equipment in the car, such as: air conditioning, lights, entertainment system, etc.

Matters needing attention

This product is not allowed to be used by children alone, and children need to be accompanied by adults. Never inflate a trached into the mouth, ears, nose, or eyes of a human or animal! Do not use this product as a toy.

Do not use this product part flammable and explosive liquids and gases (such as gas stations, filling staflans)! Inflation will produce a high pressure operation of the physical heat phenomenon, please be careful when disassembling the gas pipe hot.

hot.
After 10 minutes of continuous use, it is necessary to interval 15 minutes, and then continue to use the machine after cooling to extend the life of the machine.

Q&A

Phenomenon	The reason/solution
Machine failure	① Check whether the battery is in a low state; ② If the above situation, please charge the battery before use.
The air pressure display is not accurate	① Check whether the connection between the inflation tube joint and the life nozzle is too flight (the department which cannot be connected too lightly, and the interface can be gradually loosened for testing; ② Check whether the air pressure unit is correct (the inflation tube can be disconnected from the tire inflation nozzle, and the air pump can be disconnected from the power supply affer 5 seconds, reconnect the power supply to operate.
	① If the power cord is curled, please

The power plug or power cable overheats (I) If the power cord is curied, please completely expand the line: (I) If the car power socket is wet and dirty, please wheet flead and dirty. (I) If the working time is too long, please cool if before use.

Conversion of 100kpa = 14.5psi = 1kg = 1.01bar Introduble 100kpa = 12.5psi = 1kg = 1.01bar Interference 100kpa = 12.5psi = 1kg = 1.01bar Interference 100kpa = 12.5psi = 12.5psi

AIR PUMP & EMERGENCY STARTING POWER SUPPLY













