



#### PACKAGE CONTENTS

PART	DESCRIPTION	QUANTITY
Α	Fixture	1
В	Glass Shade	5
O	Canopy	1

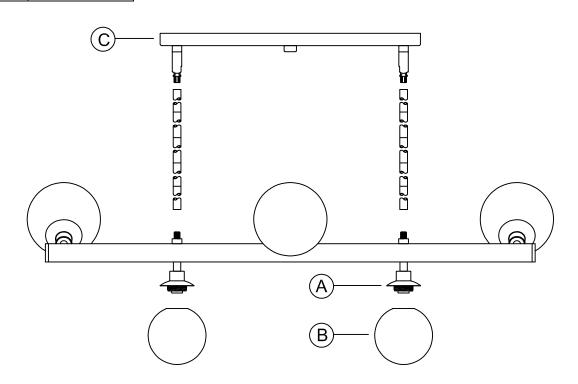

# HARDWARE CONTENTS (not actual size)

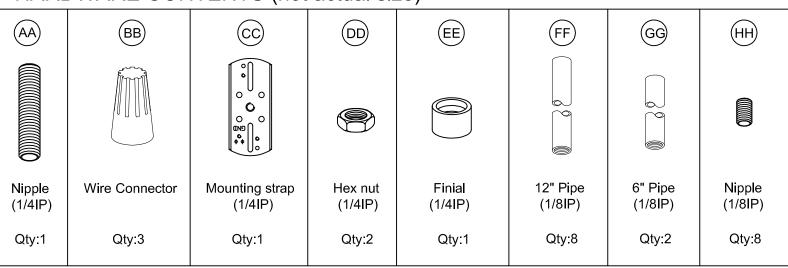

For more product information, assembly assistance or help with missing parts:

Please visit www.avechome.com/help

#### SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

**CAUTION:** Read instructions carefully and turn electricity off at main circuit breaker panel before beginning installation.

**CAUTION:** Risk of fire. Min. 90°C supply conductors. Consult a qualified electrician to ensure correct branch circuit conductor

**WARNING:** If any Special Control Devices are used with this Fixture, follow instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electrical contractor.

**CAUTION:** All glass is fragile, use care when handling glass shades and bulbs.


#### **PREPARATION**


- 1. Before beginning installation, make sure all parts are included using the contents diagrams from page 1. If any part is missing or damage, do not attempt to assemble, install or operate the product.
- 2. Estimated assembly time: 30 minutes.
- 3. Tools required for assembly (not included): Phillips screwdriver, pliers, wire stripper, safety glasses, electrical tape, ladder, drill.

### CARE AND MAINTENANCE

Shut off main power supply before cleaning product or changing light bulbs. To clean, wipe with damp cloth. Do not use abrasive cleaners or cleaners that contain alcohol.


## **ASSEMBLY INSTRUCTIONS**

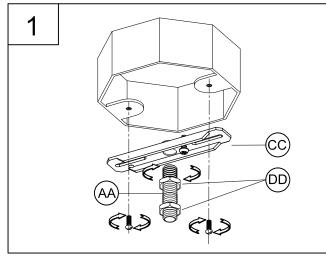

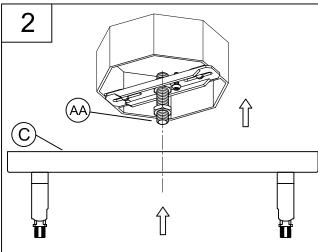

- 1. Loosely thread the hex nut (DD) onto the nipple (AA) and then install this assembly onto the mounting strap (CC). Next, install this assembly to the outlet box using the mounting screws supplied with the outlet box (not included).
- 2. In this step, you will adjust the depth of the nipple in relation to the canopy depth.

Take the canopy (C) and slip it over the nipple (AA). You will need to adjust the nipple so at least 1/4" of the threaded portion is exposed through the canopy hole. This is done by adjusting the depth of the nipple (AA) on the mounting strap (CC). When the nipple depth is correctly adjusted, remove the canopy (C) and tighten the top hex nut (DD) against the mounting strap (CC).

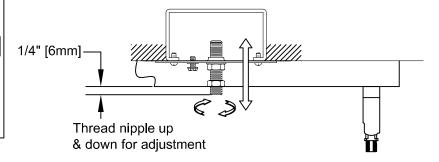



## **Assembly Instructions**

NOTE: During this step, determine the hanging length of your fixture by adding or removing pipes. The electrical and ground wire may also optionally be cut to length.

Do NOT cut electrical or ground wires until this overall length is determined. Leave at LEAST 6 inches MINIMUM of wire length on the canopy ceiling side to allow for easy connections in step 4.

3. Once hanging length is determined, pass wires through pipes (FF/GG) and nipples (HH), tightening pipes to assembly as you go to avoid twisting the wires, then tightening the pipe assembly onto the fixture (A) making sure that both swivels are facing the same direction. Pass wires up through the canopy (C) and secure the canopy tightly to pipe assembly (FF).

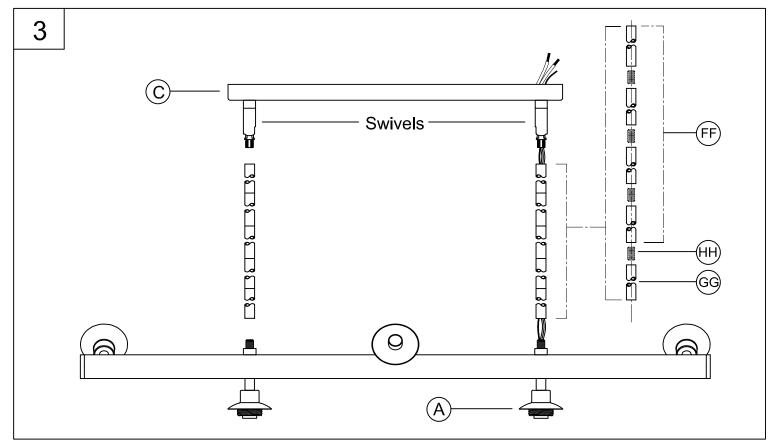


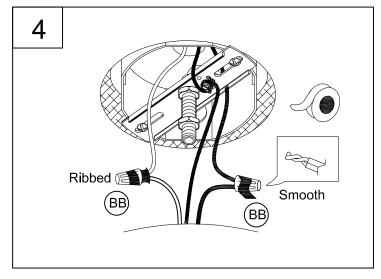

4. Strip 3/8" of insulation from the electrical wire ends. Using the wire connectors (BB), connect the RIBBED fixture wire to the WHITE supply wire from the outlet box; connect the SMOOTH fixture wire to the BLACK supply wire from the outlet box.

Connect the fixture ground wire and supply ground wire together using a wire connector, or fasten both to the ground screw on the mounting strap. Push all the wire connections carefully into the outlet box.

## **Assembly Instructions**

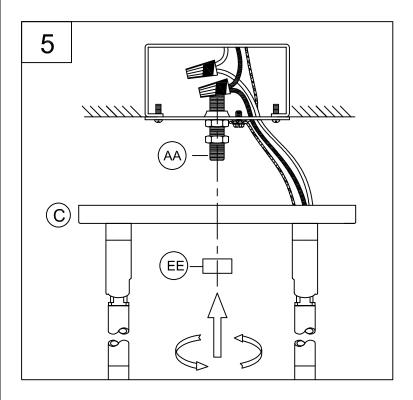

5. Position and attach the canopy (C) onto the nipple (AA) and use the finial (EE) to secure the canopy (C) tightly to the ceiling.

6. Thread the lamps (not included) into the fixture sockets. Use 60-watt MAX incandescent candelabra base, SBCFL or SBLED.

Attach the glass shades (B) to the fixture sockets (A) and rotate clock-wise to screw the glass shades (B) into place.

