



42" Tower Fan with Remote Control

Features:

- 3 Powerful Speeds
- Wide Oscillation for Full Room Cooling
- Full Function Remote Control
- Carry Handle with Pushbutton Controls
- Large, Easy-to-Read LED Control Panel
- 8-Hour Timer Feature
- Easy Assembly Without Tools
- Perfect for Home or Office
- 120V A.C. / 60 Hz.

INTENDED USE:

This product is intended for indoor residential and office use only, not for industrial or other commercial applications. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances. If you have any questions whether your wiring is adequate, consult a qualified electrician.

While using your fan, you should follow the IMPORTANT INSTRUCTIONS listed below. As part of those instructions, we have used the word “**WARNING**” to indicate the level of hazard: **WARNING** indicates a hazard which, if not avoided, could result in injury or death.

IMPORTANT INSTRUCTIONS

As with all electrical appliances, basic safety precautions should always be followed to reduce the risk of electric shock, fire, or injury to persons, including the following precautions:

- Read all the instructions before using this fan.
- Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause electrical shock, fire or injury to persons.
- Do not operate the fan with a damaged power cord or after the fan malfunctions or has been dropped in any manner.
- Use of extreme caution is necessary when any fan is used by or near children, disabled persons or pets and whenever the fan is left operating unattended.
- Do not place the fan on a small, unlevel, uneven or any surface which might allow fan to tip or fall.
- For proper operation, fan should be placed on a smooth, non-combustible, level surface.
- Always unplug fan when not in use, when moving from place to place, when assembling or disassembling parts, and before cleaning.
- The use of attachments, not recommended or sold by the manufacturer, may cause hazards.
- Do not use outdoors.
- Do not use fan in window. Rain may cause electrical hazard (for non-window models).
- Do not operate the fan with blade guards or any safety device removed.
- Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 14 AWG and rated not less than 1875 watts.
- Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
- Do not insert or allow any object to enter any openings on the fan. Doing so may cause electric shock and/or fire hazard. Avoid contact with moving parts.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.

READ & SAVE THESE INSTRUCTIONS

WARNING: SHOCK HAZARD

Use your fan only in dry environments. This fan is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate fan where it may fall into a bathtub or other water receptacle. Do not use in damp environments such as flooded basements.

WARNING: HOT SURFACES

Do not touch fan motor when in use. This motor is hot when in use, to avoid burns, do not let bare skin touch hot surfaces.

WARNING: FIRE HAZARD

Fans have arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat. Do not use in areas where gasoline, paint or flammable materials are used or stored. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the fan.

WARNING: ELECTRICAL SHOCK HAZARD

Do not use with damaged cord or plug. Use with adequate electrical system that is up to code.

CAUTION: TO PREVENT ELECTRIC SHOCK

This product has a polarized two prong plug (one blade is wider than the other) that must be fully inserted in to a matching properly grounded outlet. This plug is designed to fit a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If the plug still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK

Do not use this product with any solid-state speed control device. Do not operate any fan with a damaged cord or plug or after fan malfunctions, has been dropped or damaged in any manner. Do not operate fan with a broken blade, safety cage or any visual imperfections. Disconnect power before servicing. For repairs covered under warranty, see warranty statement. For all other repairs contact World and Main Customer Service by telephone or mail for information and assistance.

 
Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over. Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 14 AWG and rated not less than 1875 watts. Do not use an extension cord unless the plug can be completely inserted into its receptacle. Unplug the fan when not in use. Do not operate fan with its ventilation obstructed.

WARNING: LITHIUM BATTERY COIN CELL SAFETY



Keep lithium coin batteries out of the reach of small children; coin cell batteries can be accidentally ingested. If ingested, these batteries may leak harmful contents causing chemical burns, perforation of soft tissue, and in severe cases may cause death. Lithium coin batteries must be removed immediately if swallowed. Seek medical attention immediately.

If you or your doctor suspects that a battery has been ingested for assistance in the US call the NATIONAL BATTERY INGESTION HOTLINE any time at (202) 625-3333; in Canada call 416-813-5900.

PRODUCT OVERVIEW:

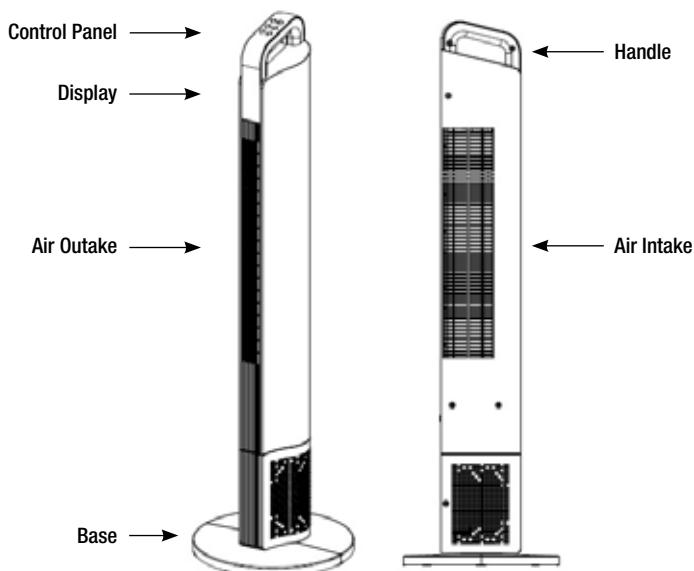

PRODUCT FEATURES:

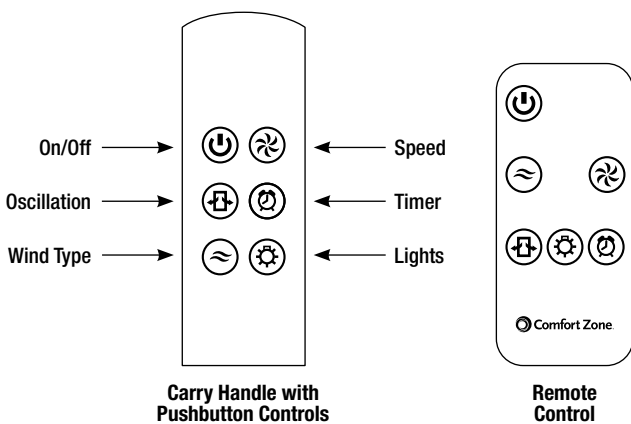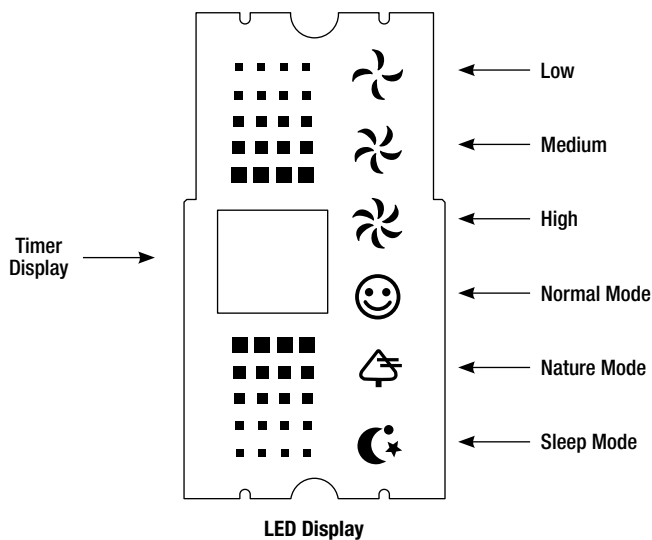  



OPERATION & FUNCTIONS:

FAN OPERATION: Always operate the fan in the upright position following all instructions and recommendations listed in this manual.


FAN LOCATION: Place the fan in the area of the room that will provide proper fan cooling.

FAN CONNECTION: Plug fan directly into 120 volt A.C., 60 Hz wall outlet. Be sure plug fits tightly in outlet. A loose connection may cause overheating and damage to the plug or fan. **NOTE:** To prevent overloading a circuit, do not plug the fan into a circuit that is servicing other electrical needs.


 **ON/OFF FUNCTION:** Press the button on the control panel or the remote once to turn the fan ON. The fan will start on MEDIUM speed in the Normal mode. Press again to turn the fan OFF.

 **SPEED SETTING FUNCTION:** Press the button on the control panel or the remote to choose the HIGH, MEDIUM or LOW setting. The LED display will show the setting you choose.


MODE FUNCTION: Press the button to select Normal, Nature or Sleep mode. In each mode, press the Speed Setting button to choose the mode that's right for you.

 **NORMAL MODE -** Fan speed is consistent with the speed chosen and operates like a standard fan.

1. HIGH SETTING: Keeps the fan at constant high speed.
2. MEDIUM SETTING: Keeps the fan at constant medium speed.
3. LOW SETTING: Keeps the fan at constant low speed.




 **NATURE MODE -** Designed to replicate natural air, the fan will vary the wind speed among OFF/LOW/MED/HIGH settings and repeat every 40 seconds per cycle.

1. HIGH SETTING: The fan varies the wind speed as follows: OFF/MED/HIGH/LOW/HIGH (a cycle) and then repeats.
2. MEDIUM SETTING: The fan varies the wind speed as follows: MED/LOW/HIGH/OFF/MED/LOW (a cycle) and then repeats.
3. LOW SETTING: The fan varies the wind speed as follows: OFF/MED/LOW (a cycle) and then repeats.

 **SLEEP MODE -** Fan will vary the fan speed like Natural mode, but it is timed to slow down after a period of time. The speed will change as follows:

1. HIGH SETTING: The fan will run 30 minutes on high setting in Nature mode, then 30 minutes on medium setting in Nature mode, and then continue to operate on low setting in Nature mode.
2. MEDIUM SETTING: The fan will run 30 minutes on medium setting in Nature mode, and then continue to operate on low setting in Nature mode.
3. LOW SETTING: The fan will run same as low setting in Nature mode.

 
OPERATION & FUNCTIONS: (cont.)

-  This button activates the oscillating function. Simply press once to start. To end the oscillating function, press this button again.
-  This button allows you to enter the 'TIMER' Mode. Press to increase the number of hours (1, 2 to 8) you wish the fan to remain operational.
-  This button turns the lights ON/OFF on the display.

REMOTE CONTROL:

The remote control uses a button cell battery, type CR2025 (3V).

Before using the remote control, you must remove the insulating film as shown in the figure below.

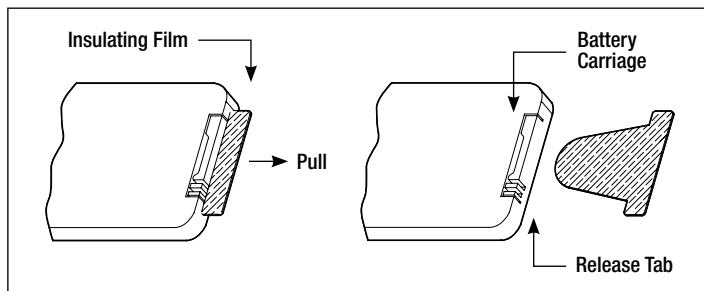

To remove the battery carriage use your thumb to squeeze the release tab to the right and then pull the carriage out. Place the battery into the carriage and slide the carriage back into the remote. (see **Fig.1**). We recommend the use of a Lithium Ion battery for longer use.

NOTE: Follow battery disposal instructions on battery packaging, or contact your local safety council for safely disposal of batteries.

1. All functions performed with remote control work identically to the fan control panel.
2. Aim the remote control at the fan control panel to operate the fan.

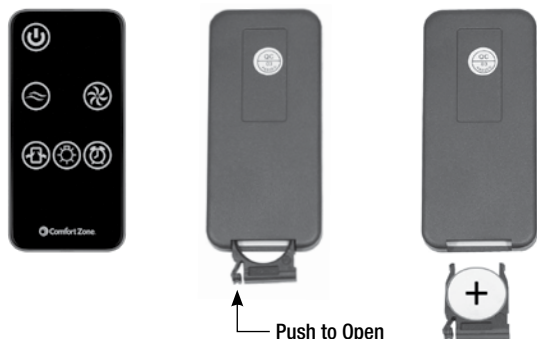 


Figure 1

 
REMOTE CONTROL: (cont.)

BATTERY WARNINGS:


- Do not install the batteries backwards. Install batteries with the proper polarity (+ and -). There is a risk of explosion or leakage if battery is incorrectly installed.
- Always remove discharged batteries from the product to avoid damage by possible battery leakage.
- Always remove battery when the product is not going to be used for long periods of time.
- Do not dispose of batteries in fire because batteries may explode or leak.
- Do not short circuit battery terminals.

FAN ASSEMBLY:

STEP 1: Connect the two pieces of the Base to each other with 4 screws.

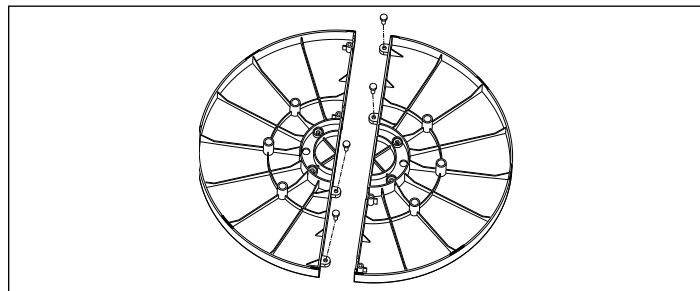

 STEP 2: Aim the Position Pillar with assembled Base with the screw holes of the Fan Body. Using 4 screws, connect the Body and Base.

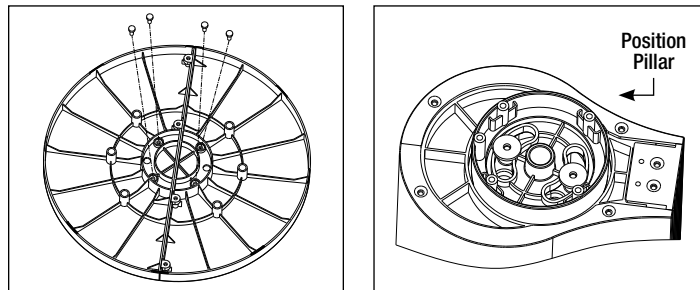

CARE AND MAINTENANCE:

CLEANING: CAUTION – Before cleaning the fan be sure to disconnect power cord from the plug. Clean the grille surface with a clean damp cloth. Do not use harsh chemical or abrasive cleaners. **DO NOT IMMERSE THE FAN OR ANY WIRES IN WATER.** Allow fan to dry completely before use. Periodic grille cleaning with a vacuum will prevent dust build up.

MAINTENANCE: The internal motor bearings are permanently lubricated at the factory and do not require any additional lubrication.

REPAIR: DO NOT USE THE FAN IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANY WAY.

STORAGE: Keep original carton for storage of the heater. Coil and tie the power cord to avoid damage during storage.

NOTE: Some models come with a plug where you can replace a fuse. If your model has this, please read and follow the below instructions to replace the fuse.

This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

FUSE REPLACEMENT:

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover by sliding open fuse access cover on top of attachment plug towards blades (see **Fig. 2**).
3. Remove fuse carefully. Use a small tool to pry the end of the fuse from holder cavity. Be careful not to break glass window.
4. Replace fuse. **WARNING:** Risk of fire. Replace fuse only with identical 2.5 or 5.0 Amp, 125 Volt fuse (3.6 mm x 10 mm). Be sure fuse is properly seated within its cavity.
5. Close fuse cover by sliding it back to its original closed position.



Figure 1



Figure 2



Figure 3

LIMITED WARRANTY

This unit is guaranteed to the original retail purchaser against defects in quality or workmanship for a period of one year from the date of original purchase. If this unit fails because of a manufacturing defect within 30 days of purchase, return the unit, with your receipt, to the retailer. After 30 days, but within the warranty period, if the unit was purchased within the continental United States, return it, freight prepaid, to World and Main for repair or replacement. If the unit was purchased outside the continental United States, return the unit to the place of purchase. This warranty does not cover damage caused by misuse, abuse, overheating or alteration. Repairs made by anyone other than World and Main are not covered in this warranty. World and Main will not be held liable for any losses due to neglectful operation. All implied warranties, including the warranties of merchantability and of fitness of purpose, if applicable, are hereby limited in duration to the period of one year from the date of original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Incidental or consequential damages arising from a breach of either express or implied warranties are hereby disclaimed and excluded. Some states do not allow the exclusion of limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you. Upon the expiration of this warranty all such liability will terminate. No other warranties are expressed or implied.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No informal dispute settlement mechanisms are available. This limited warranty is given in lieu of all other warranties.

Manufactured for:
World and Main (Cranbury), LLC
324A Half Acre Rd.
Cranbury, NJ 08512 USA
800-221-6895
www.comfortzoneproducts.com

Rev. 11/2021