

CEILING FAN USER MANUAL

Read and keep these instructions

EN

CT06

WARNING:

To avoid fire, shock, and serious personal injury, please read the following instructions carefully.

Important Safety Instructions

1. Read all instructions and safety information before installing your new fan. Review the enclosed assembly diagrams.
2. Before installing the fan, disconnect the power by removing fuses or turning off circuit breakers.
3. Make sure all electrical connections comply with local codes, ordinances or the National Electrical Code. If you are not familiar with installing electrical wiring, hire a qualified electrician or consult a do-it-yourself wiring manual.
4. Make sure the installation site you choose allows the fan blades to rotate without any obstructions. Allow a minimum clearance of 7 feet from the floor to the trailing edge of the blades.
5. If you are mounting the fan on a ceiling outlet box, use a metal outlet box. Secure the box directly to the building structure. The outlet box and its support must be able to support the moving weight of the fan (at least 50 lbs.). Do not use a plastic outlet box. Attach the mounting bracket by using the hardware supplied with the ceiling outlet box.
6. If you are mounting the fan to a joist, make sure it is strong enough to support the moving weight of the fan (at least 50 lbs.)
7. After installing the fan, make sure all the connections are secured. This will prevent the fan from falling.
8. Do not insert anything into the fan blades while the fan is operating.
9. Turn the fan off and wait for it to stop before reversing the fan direction.
10. To reduce the risk of electrical shock and personal injury, do not install the fan on a sloped ceiling.
11. To reduce the risk of electric shock and personal injury, please do not place and fix other objects in any position of the fan


ASSEMBLY DRAWING & PARTS LIST-WITH LIGHT

Unpacking Your Fan

Please check each item for completeness prior to installation. To minimize scratches or possible damage, please disassemble the parts package when installation is required.

Ref.#	Description
1	Hanger Bracket
2	Canopy
3	Down Rod Assembly
4	Coupling Cover
5	Fan Motor Assembly
6	Blade
7	Light Plate
8	LED light
9	Shade
10	Remote Control
11	Receiver

Assembly Drawing

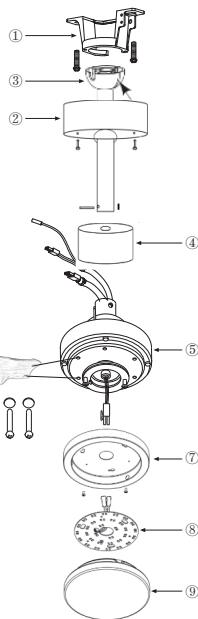

Scan the QR code to get up to 24 months of exclusive service, we will be happy to help you with any questions about installation and use.

HOW TO INSTALL THE FAN-WITH LIGHT

TOOLS REQUIRED



1.INSTALL THE HANGER BRACKET

For the concrete ceiling: Select the installation position for the ceiling fan. Mark the ceiling according to the 4 hole positions on the Hanger Bracket. Punch holes according to the marks. Use the provided 4 expansion screws to fix the Hanger Bracket and tighten the screws. (Fig.1)



The required screws are in the screw kit

For the Wood Ceiling: Select the installation position for the ceiling fan, and secure the Hanger Bracket to the building structure with four wood screws provided in the same manner as in the previous step. (Fig.2)



The required screws are in the screw kit

2.INSTALL THE BLADES



A. Remove the fan blade screws on the motor



B. Install fan blades as shown No text on the blade in the current view (the other side has the text "This side up")



C. Repeat the previous steps until all Blades are securely installed

3.INSTALL THE FAN LIGHT



A. Remove the light plate fixing screws.



B. Attach the light plate and fix it with the screws removed in the previous step.



C. Place the LED light flat and fix it with the magnetic suction behind the board.

4.INSTALL THE BOOM AND COVER



A. Take the down rod Assembly and remove the fixed pin(please choose the appropriate down rod length, our default is 10", if you need to use the 5" down rod, please refer to the fifth step to replace the Hanger Ball).



B. Put the Coupling coverand Canopy over into the down rod assembly, and put the wire through the down rod assembly as shown in the picture.



C. Place the down rod Assembly as shown in the figure and secure it with the previously removed fixed pin.




D. Fix the down rod assembly with screws.

5.CHANGE THE DOWN ROD ASSEMBLY(Optional Steps)

We offer 5" and 10" down rod options, and the Hanger Ball is installed on the 10" down rod by default, if you choose the 10" down rod, please ignore this step, if you choose the 5" down rod, you need to remove the Hanger Ball on the 10" down rod to install it on the 5" down rod.

Please note that the end of the down rod with the Hanger ball has 3 holes, 2 larger holes for the pin, the smaller hole need to be punched into the screw.

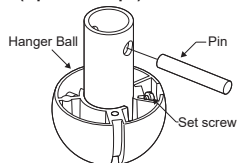


The installation method is shown in the figure

6.INSTALL THE RECEIVER

From:house

 From:Fan




Notices


WARNING:
Turn off the power supply before installation.

7.HANGING THE FAN

Carefully lift the fan, and set the down rod /hanger ball assembly on the hanger bracket attached to the ceiling joist. Be sure the groove in the ball is properly aligned with the tab on the hanger bracket.

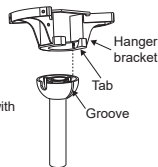

8.FIX THE HANGER COVER SHELL

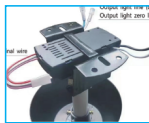

Put the Receiver into the canopy cover as shown in the figure.



Loosen the two screws on the diagonal of the Hanger Bracket (The two screws that are relatively loose).



Put the two screws through the two holes on the canopy, and then tighten the screws to fix the canopy.


9.SCREW ON THE SHADE AND COMPLETE THE INSTALLATION



Put on the lamp cover and rotate it to make it stable .

Please make sure it is firmly installed before releasing to prevent falling and breaking.

REMOTE CONTROL SETTING AND OPERATION

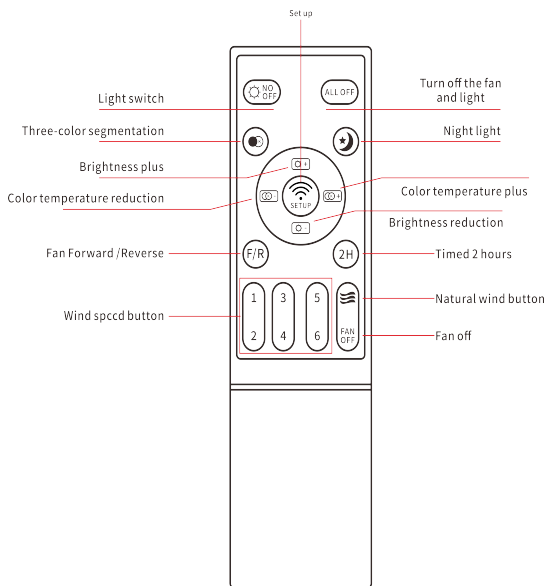

WALL CONTROL INSTALLATION INSTRUCTIONS

1. Remove the wall control fixing plate and install it on the wall switch box
2. Put 2 AAA batteries into the wall control
3. Insert the wall control into the wall switch box

Note: The wall control is battery-powered without additional wiring

CODE PAIRING/CLEARING USAGE SCENARIOS:

1. You have a new remote control for the fan, then the remote control needs to match the code with the fan (provided that the remote control can match the fan).
2. You want to control more than one fan with one remote control, then the remote control needs to match the code with the fan being controlled

Code pairing operation: Turn off the fan power and wait for 15 seconds, then press and hold the 2H button on the remote control (the remote control indicator is on at this time), and turn on the fan power at the same time, the light is on at this time, wait for 3 seconds, release the 2H button, and the code is successful

Code clearing operation: If you don't want other remote control to control this fan, then use the new remote control to operate the code pairing method 3 times in a row, and other remote control will be invalid

IMPORTANT REMINDERS

1. Please note: Receiver must be correctly installed in the mounting bracket on fan
2. When the transmitter cannot control the receiver, please check the battery has sufficient charge in the transmitter.
3. When the transmitter cannot control the receiver, please check if there is any existence of similar remote controlled products nearby, causing interference with each other.
4. Low power of battery will affect the sensitivity of the transmitter and the signal reception accordingly, must replace if the battery is getting low power.
5. Please take the battery out from the transmitter when leaving unused for a long time, to avoid battery leaks.
6. Isolation Switch "Must be connected in the line."
7. When power is cut off (by blackout or other means), the light will come on when power is restored.

PROTECTIVE FUNCTIONS OF THE RECEIVER

Lock protection- The DC motor has a built-in safety feature against blade or motor obstruction during operation. If something obstructs the fan blades or motor, the motor will keep trying to run and then stop operation after about 30 seconds of interruption. Please remove obstacles and reset.

To reset: Turn the fan off by remote control and then turn the fan on.

Overload protection (current limit)- The device will limit the maximum current output from the receiver/driver if the fan load has increased abnormally.

When the fan is turned on or operated using the forward/reverse function, it shutters & goes back & forth until it turns. This is normal and it will take a few seconds to run this operation.

MAINTENANCE

1. Periodic cleaning of your new ceiling fan is the only maintenance that is needed.

2. When cleaning, use only a soft brush or lint free cloth to avoid scratching the finish.

3. Abrasive cleaning agents are not required and should be avoided to prevent damage to finish.



WARNING

Do not use solvents when cleaning your ceiling fan. It could damage the motor and create the possibility of electrical shock.

RECOMMENDED:

Periodically check that the blade sets to the fan motor setscrews are secure and tight.