 


ASSEMBLY INSTRUCTION

ITEM NO.N715P293469

Dining Table

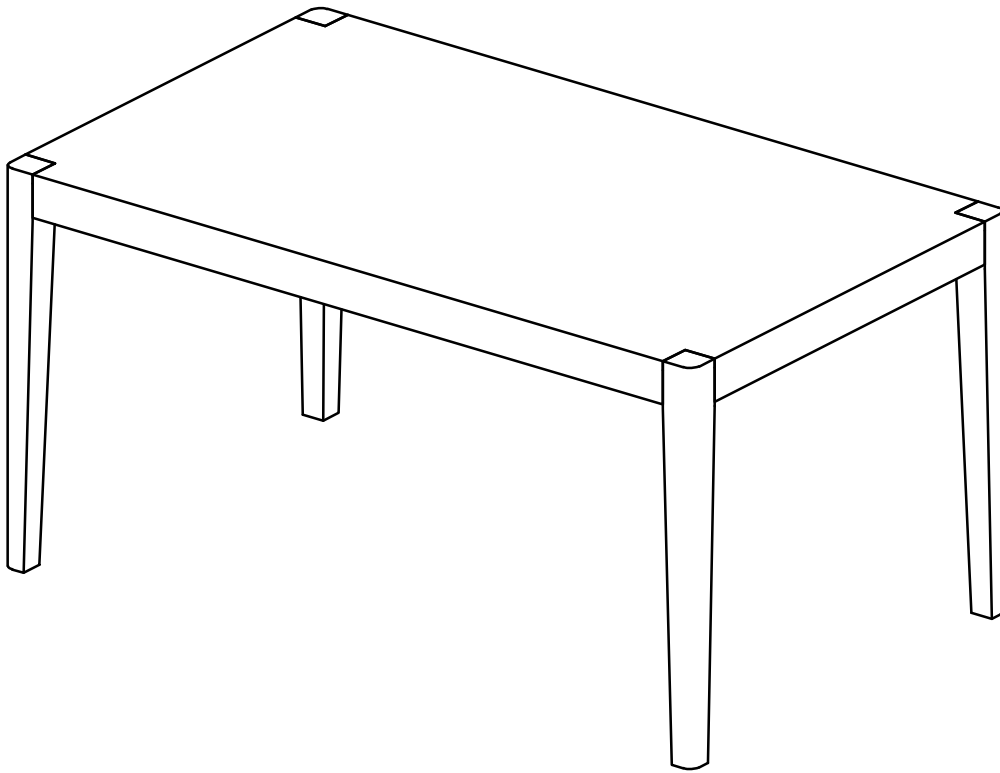

ASSEMBLY INSTRUCTION

ITEM NO.N715P293469

Please read these instructions fully before starting assembly:

 
1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the table is fully assembled.
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

ASSEMBLY INSTRUCTION

ITEM NO.N715P293469

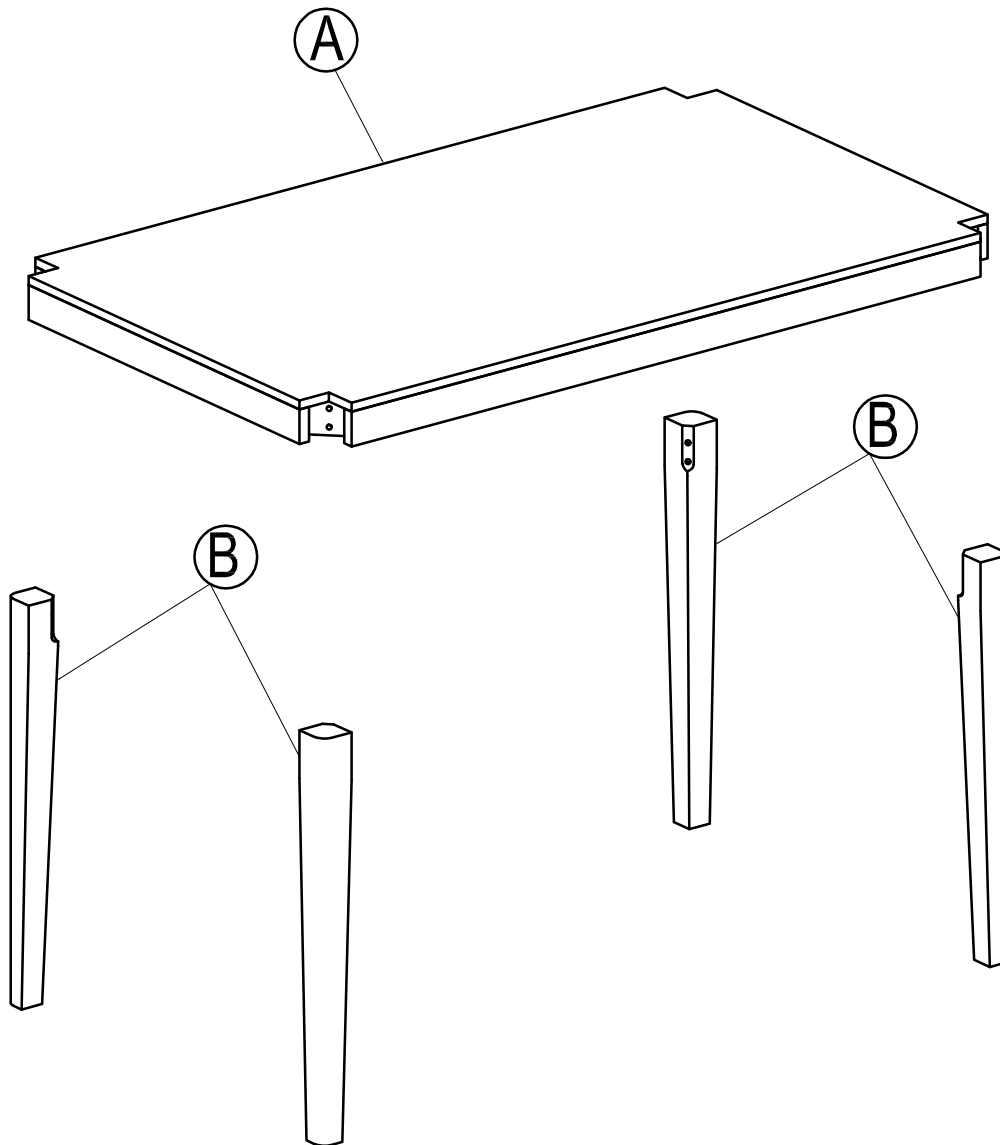

ASSEMBLY INSTRUCTION

ITEM NO.N715P293469

Part List

A


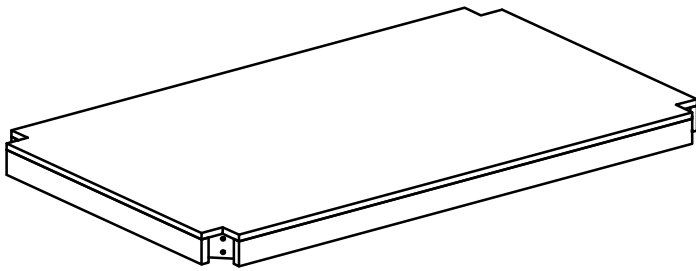 


TABLE TOP (1 pc)

 B




LEG (4 pcs)

ASSEMBLY INSTRUCTION

ITEM NO.N715P293469

Hardware List

 ①

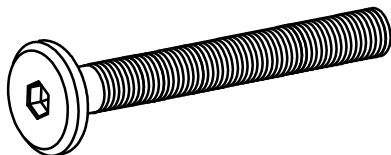

Ø 5/16" x 70 mm

BOLT (8 pcs)

 
②



Ø5/16" x 13 mm

LOCK WASHER (8 pcs)


③

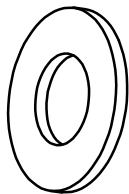

Ø5/16" x 19 x 2 mm

FLAT WASHER (8 pcs)

 ④

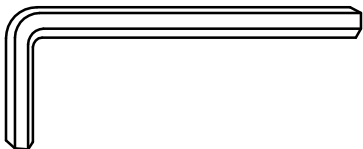


4 mm

ALLEN KEY (1 pc)

ASSEMBLY INSTRUCTION

ITEM NO.N715P293469

 
STEP 1:

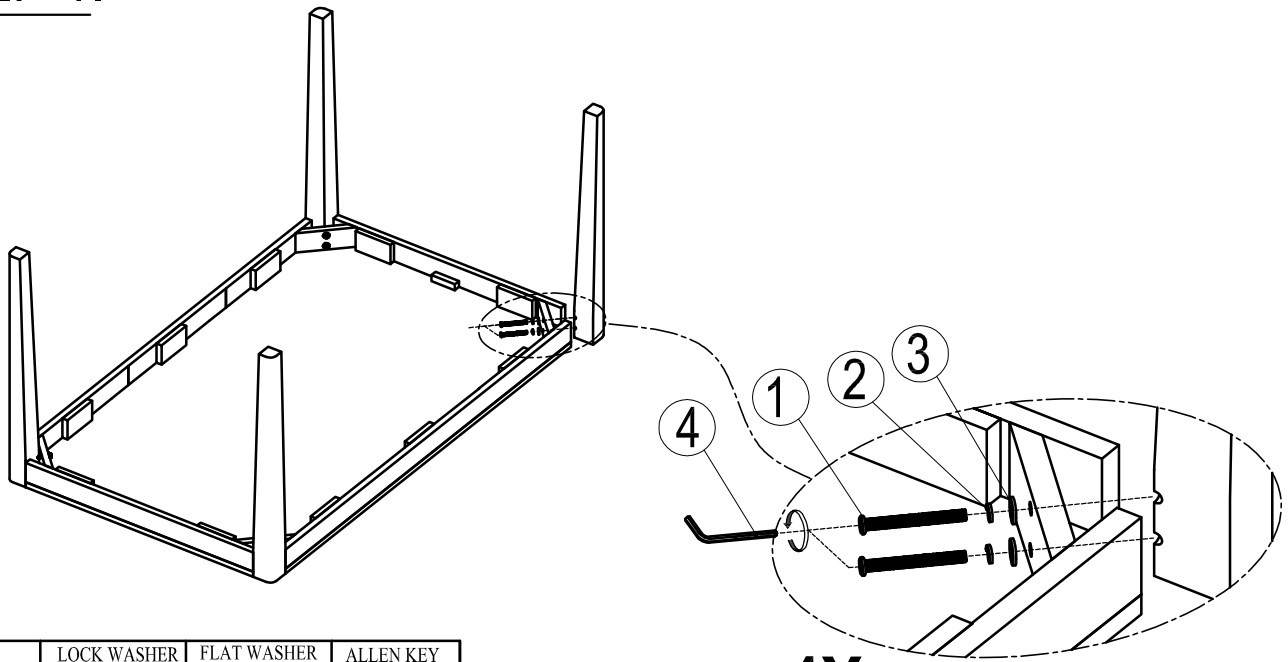

BOLT Ø 5/16" x 70 mm	LOCK WASHER Ø5/16" x 13 mm	FLAT WASHER Ø5/16" x 19 x 2 mm	ALLEN KEY 4 mm
			
① x 8	② x 8	③ x 8	④ x 1

4X

 
COMPLETE

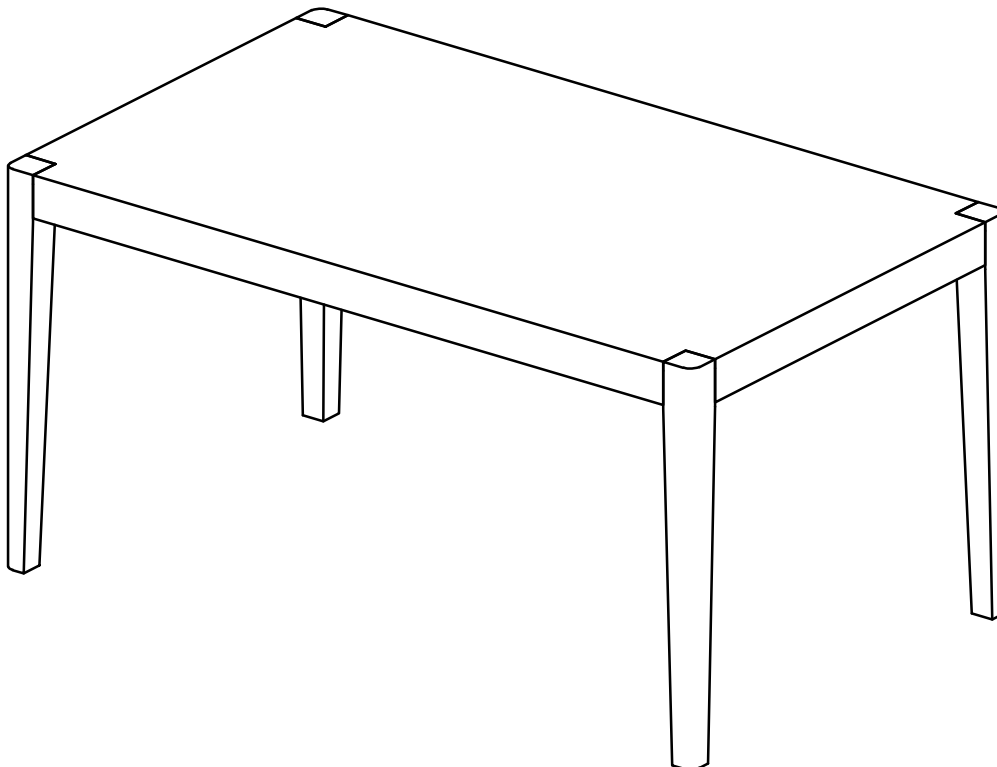

ASSEMBLY INSTRUCTION

ITEM NO.N715P293470

 Dining Chair

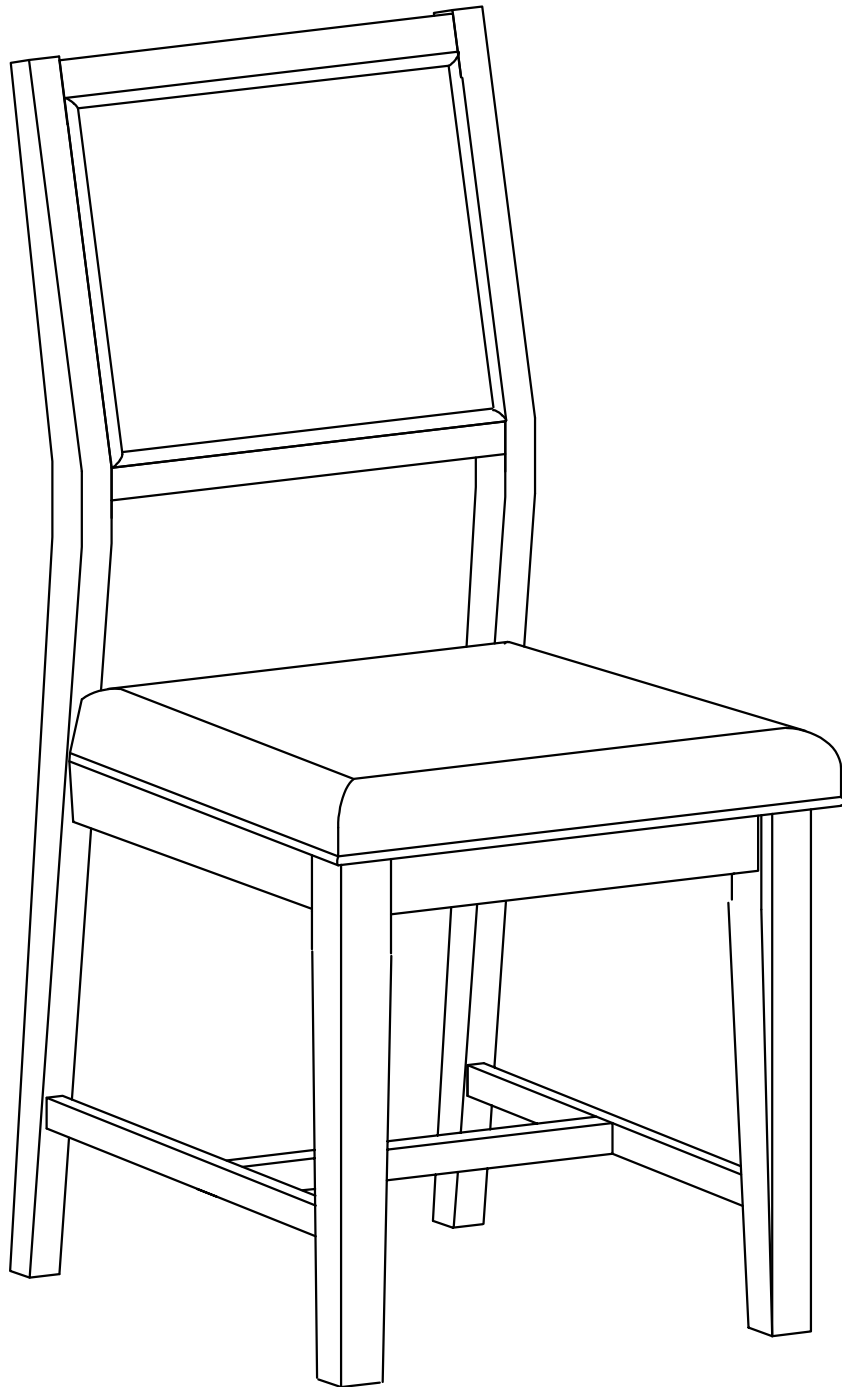

ASSEMBLY INSTRUCTION

ITEM NO.N715P293470

Please read these instructions fully before starting assembly:

 
1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the table is fully assembled.
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

ASSEMBLY INSTRUCTION

ITEM NO.N715P293470

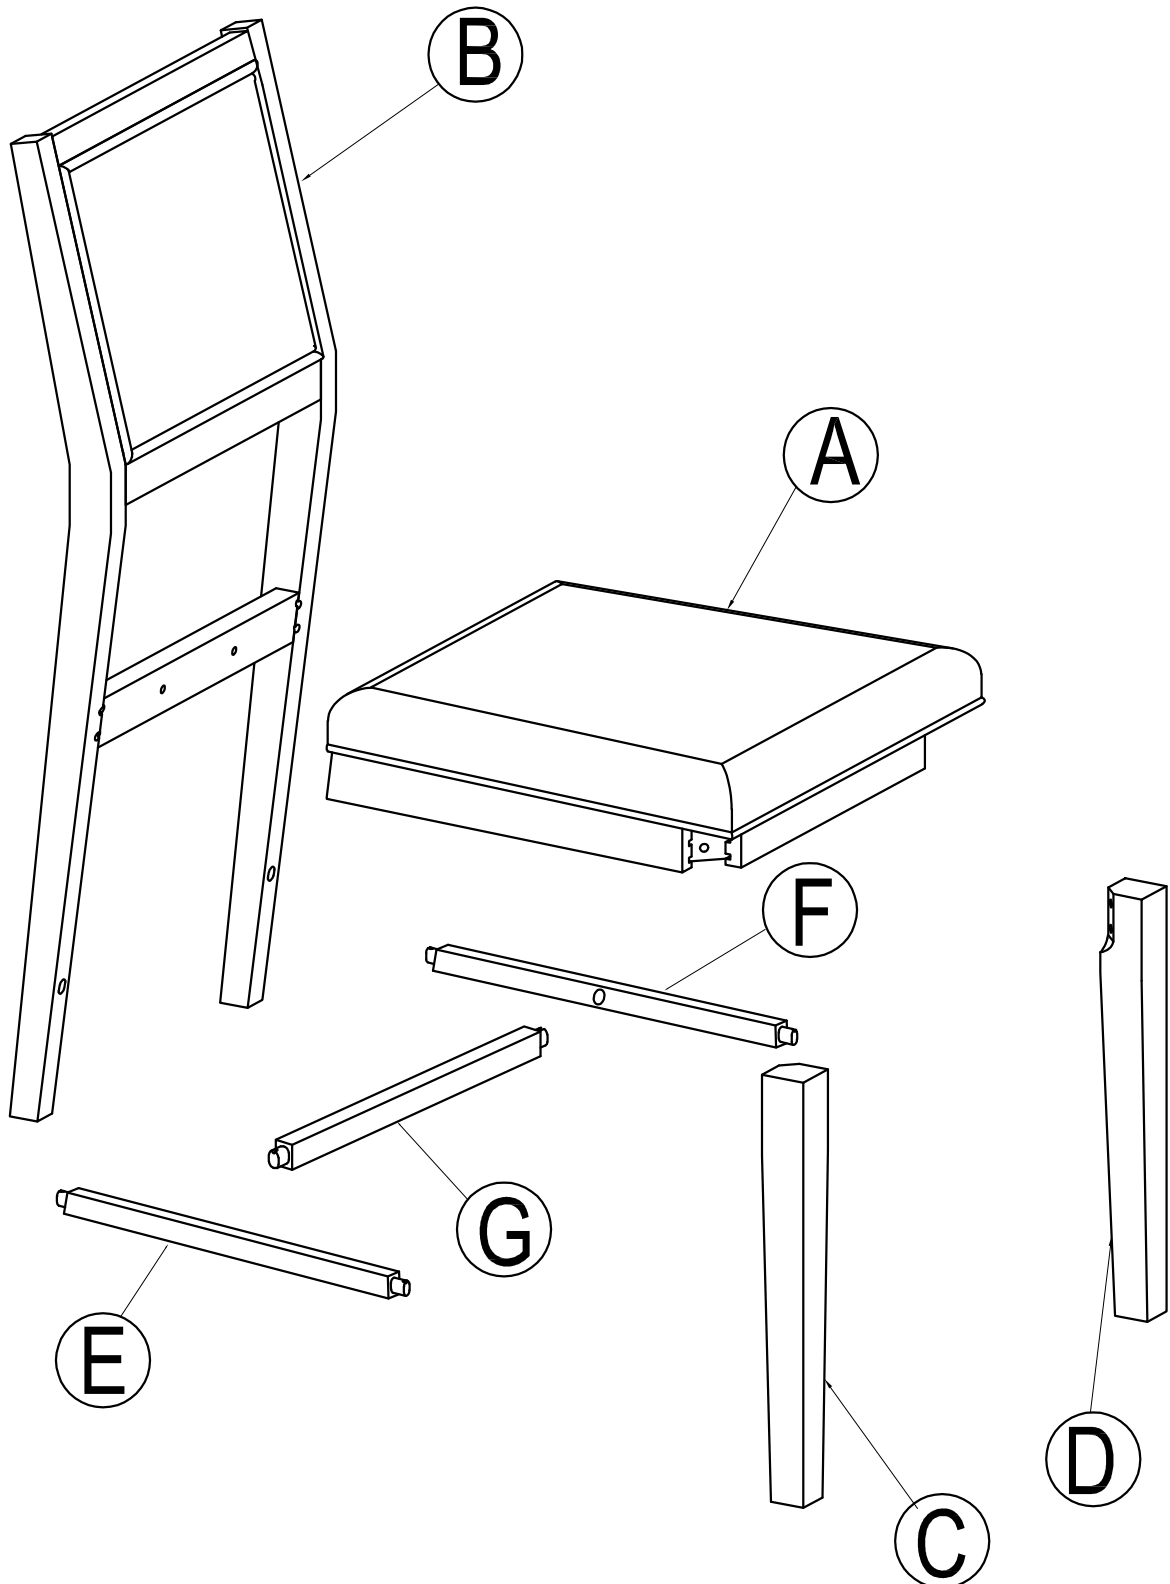


ASSEMBLY INSTRUCTION

ITEM NO.N715P293470


Part List For 2

 (A)

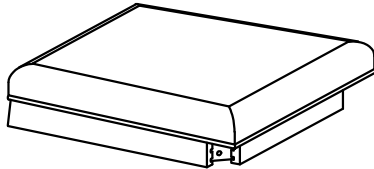


CUSHION SEAT (2 pcs)

 (B)

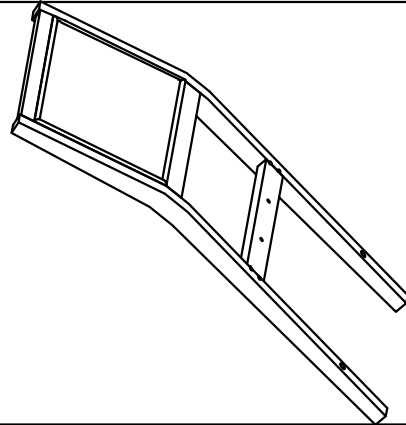


CHAIR BACKREST FRAME (2 pcs)

 (C)

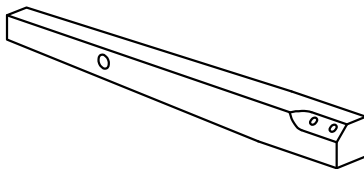


FRONT LEG LEFT (2 pcs)

 (D)

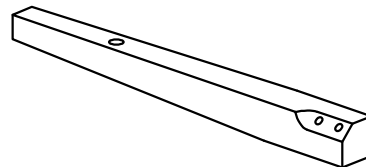


FRONT LEG RIGHT (2 pcs)

 (E)

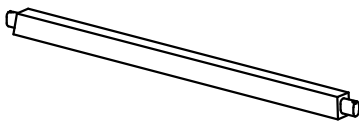


LEFT SIDE SUPPORT RAIL (2 PCS)

 (F)

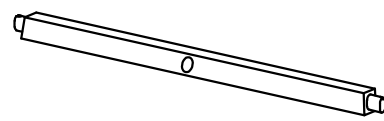

RIGHT SIDE SUPPORT RAIL (2 PCS)

 (G)

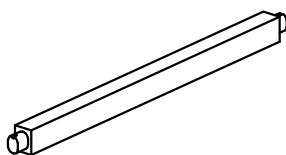


MIDDLE CONNECTING RAIL (2 PCS)

ASSEMBLY INSTRUCTIONS

ITEM NO.N715P293470

Hardware List For 2

 
①

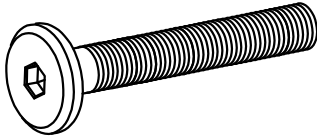

Ø 1/4" x 40mm

BOLT (4pcs)

 
②

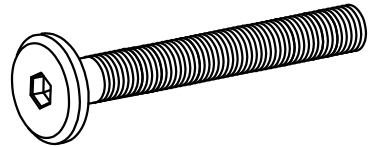

Ø 1/4" x 55mm

BOLT (8 pcs)

 
③

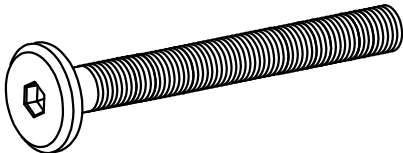

Ø 1/4" x 75mm

BOLT (8 pcs)

 
④



Ø5/16" x 13mm

LOCK WASHER (20 pcs)

 
⑤

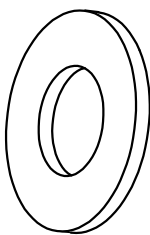

Ø5/16" x 19 x 2 mm

FLAT WASHER (20 pcs)

 
⑥

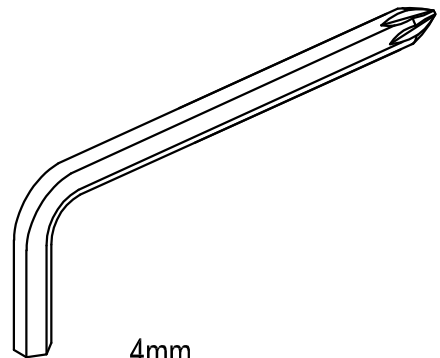

4mm

ALLEN KEY (1pc)

 ⑦




Ø4 x 38mm

WOOD SCREWS (12 pcs)

ASSEMBLY INSTRUCTION


ITEM NO.N715P293470

 
STEP 1:

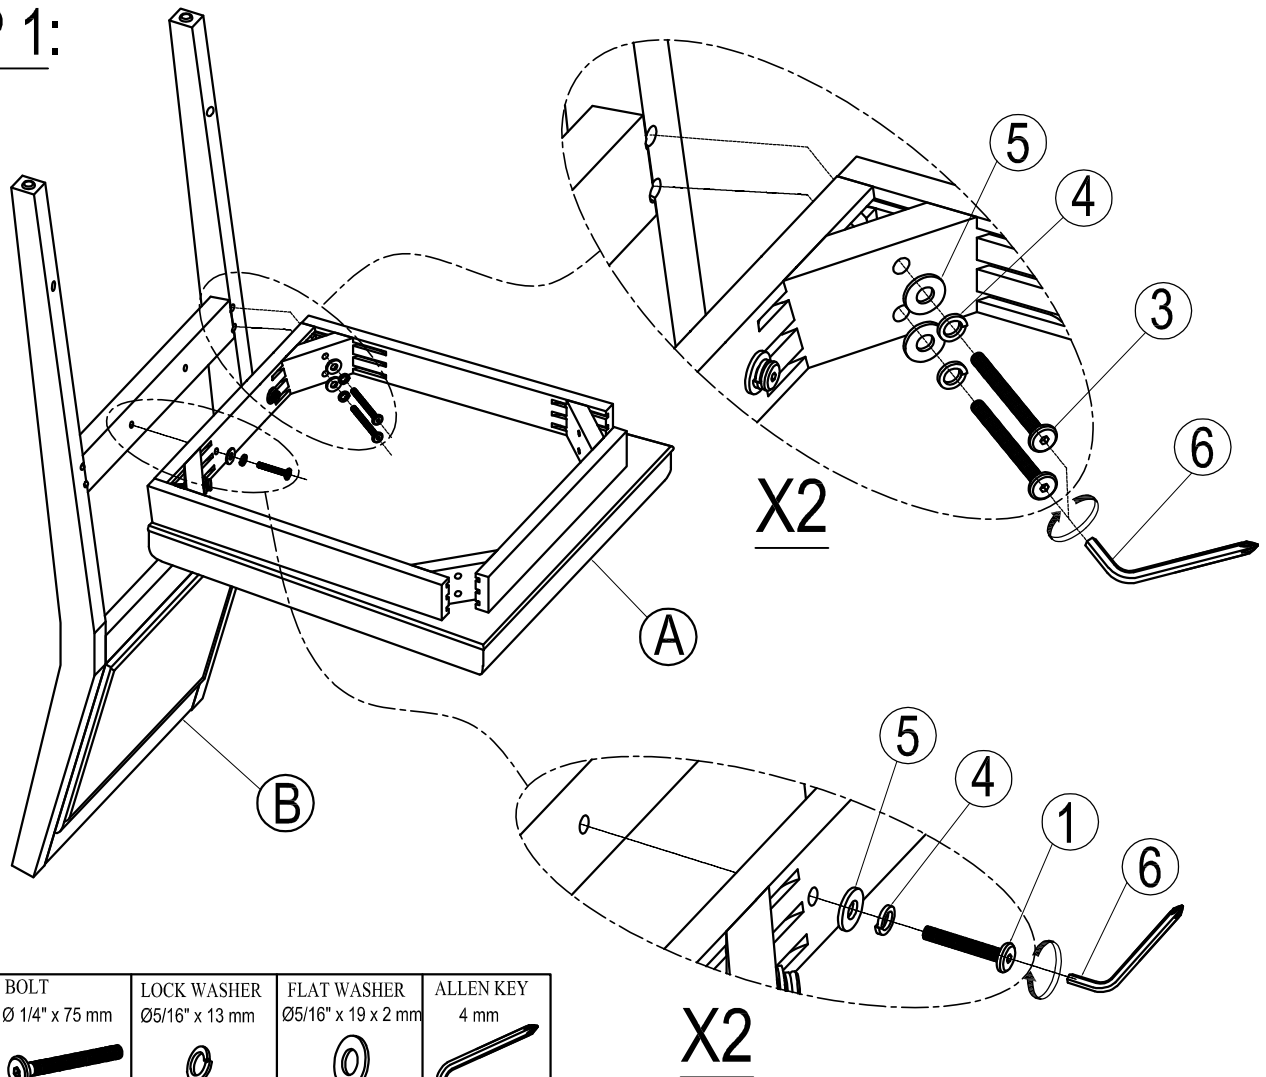

BOLT Ø 1/4" x 40 mm	BOLT Ø 1/4" x 75 mm	LOCK WASHER Ø5/16" x 13 mm	FLAT WASHER Ø5/16" x 19 x 2 mm	ALLEN KEY 4 mm
				
①x 2	③x 4	④x 6	⑤x 6	⑥x 1

  STEP 2:

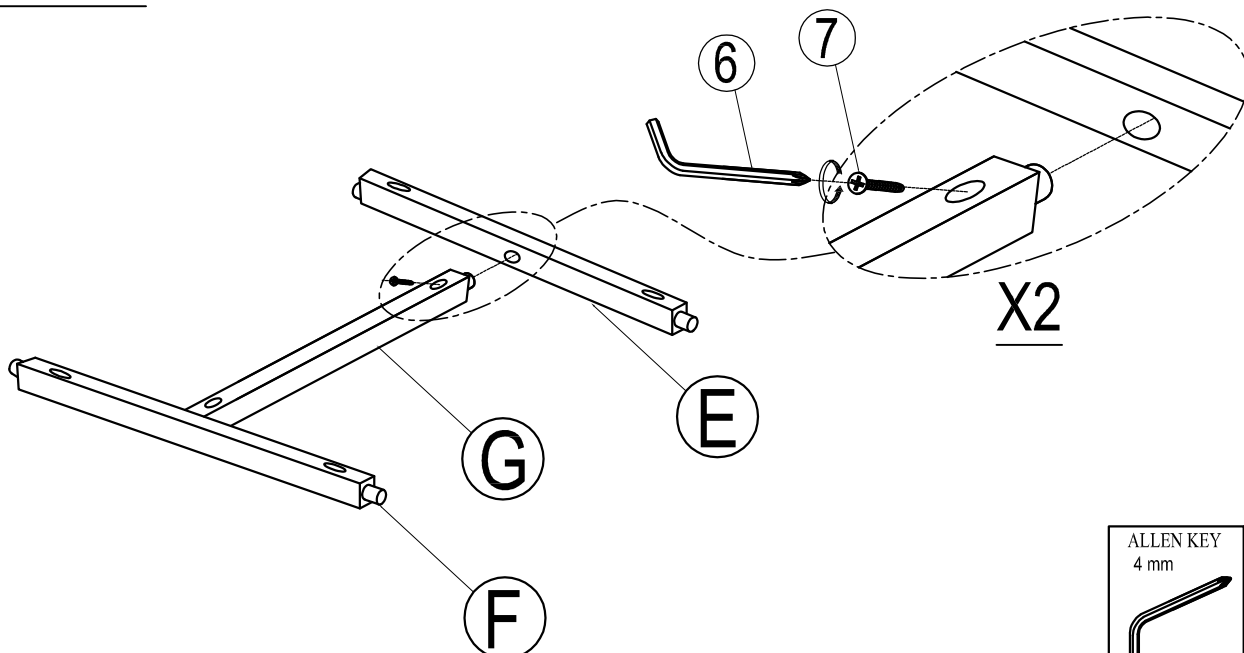



ALLEN KEY 4 mm	WOOD SCREWS Ø4 x 38mm
	
⑥x 1	⑦x 2

ASSEMBLY INSTRUCTION


ITEM NO.N715P293470

  
STEP 3:

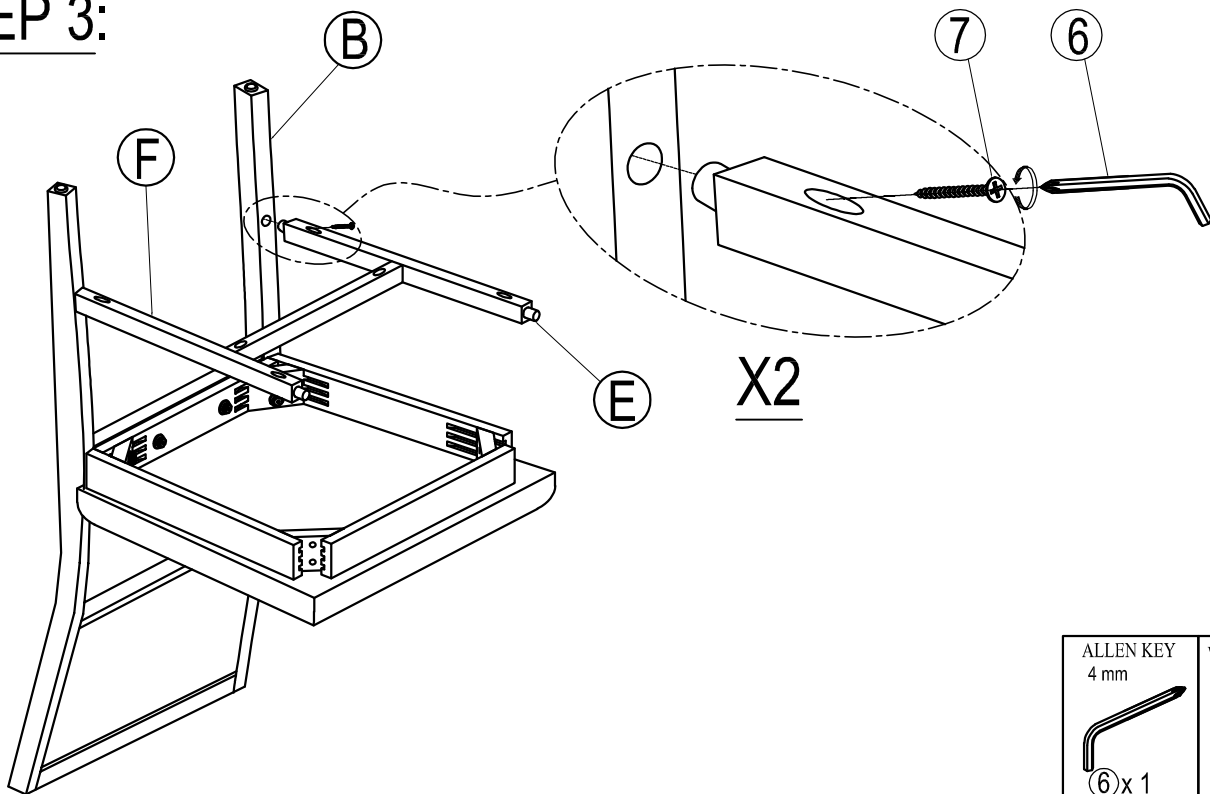

ALLEN KEY 4 mm	WOOD SCREWS Ø4 x 38mm
	
⑥ x 1	⑦ x 2

  STEP 4:

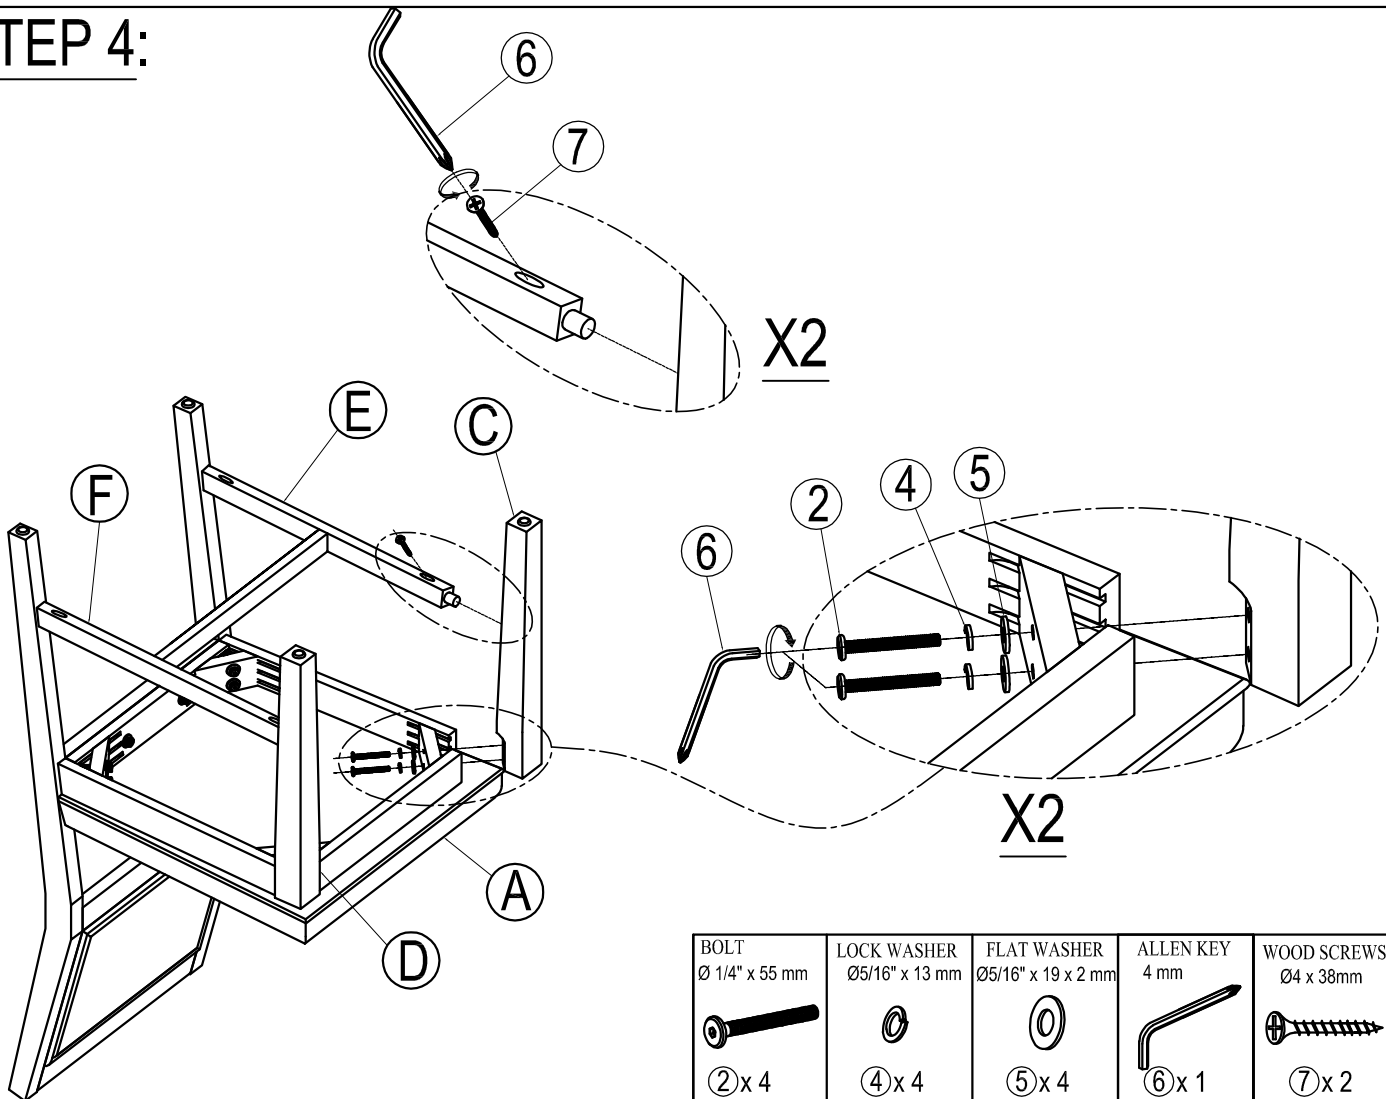


BOLT Ø 1/4" x 55 mm	LOCK WASHER Ø5/16" x 13 mm	FLAT WASHER Ø5/16" x 19 x 2 mm	ALLEN KEY 4 mm	WOOD SCREWS Ø4 x 38mm
				
② x 4	④ x 4	⑤ x 4	⑥ x 1	⑦ x 2

ASSEMBLY INSTRUCTION

ITEM NO.N715P293470

 
COMPLETE

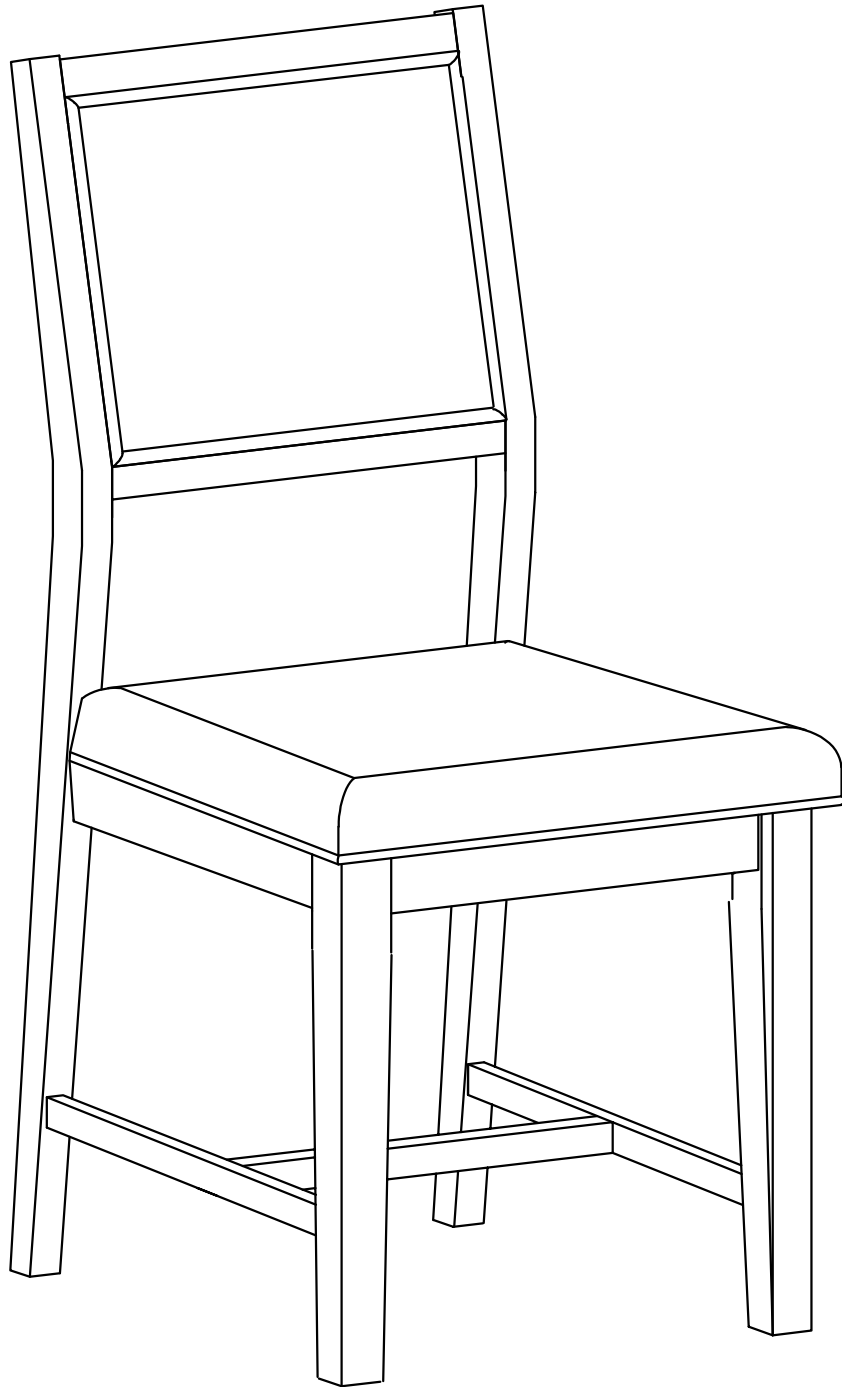

ASSEMBLY INSTRUCTION

ITEM NO.N715P293471

 Dining Chair

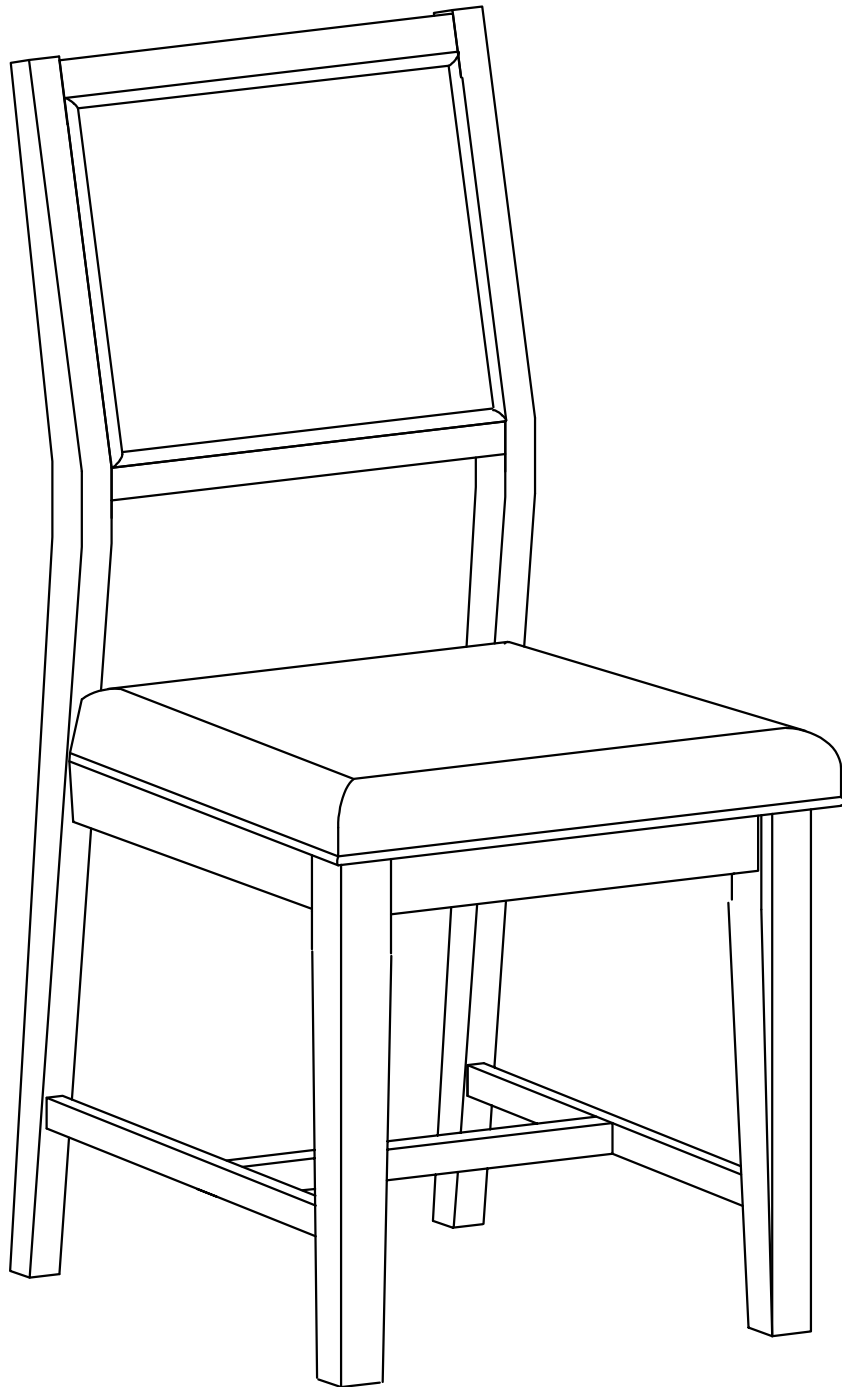

ASSEMBLY INSTRUCTION

ITEM NO.N715P293471

Please read these instructions fully before starting assembly:

 
1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the table is fully assembled.
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

ASSEMBLY INSTRUCTION

ITEM NO.N715P293471

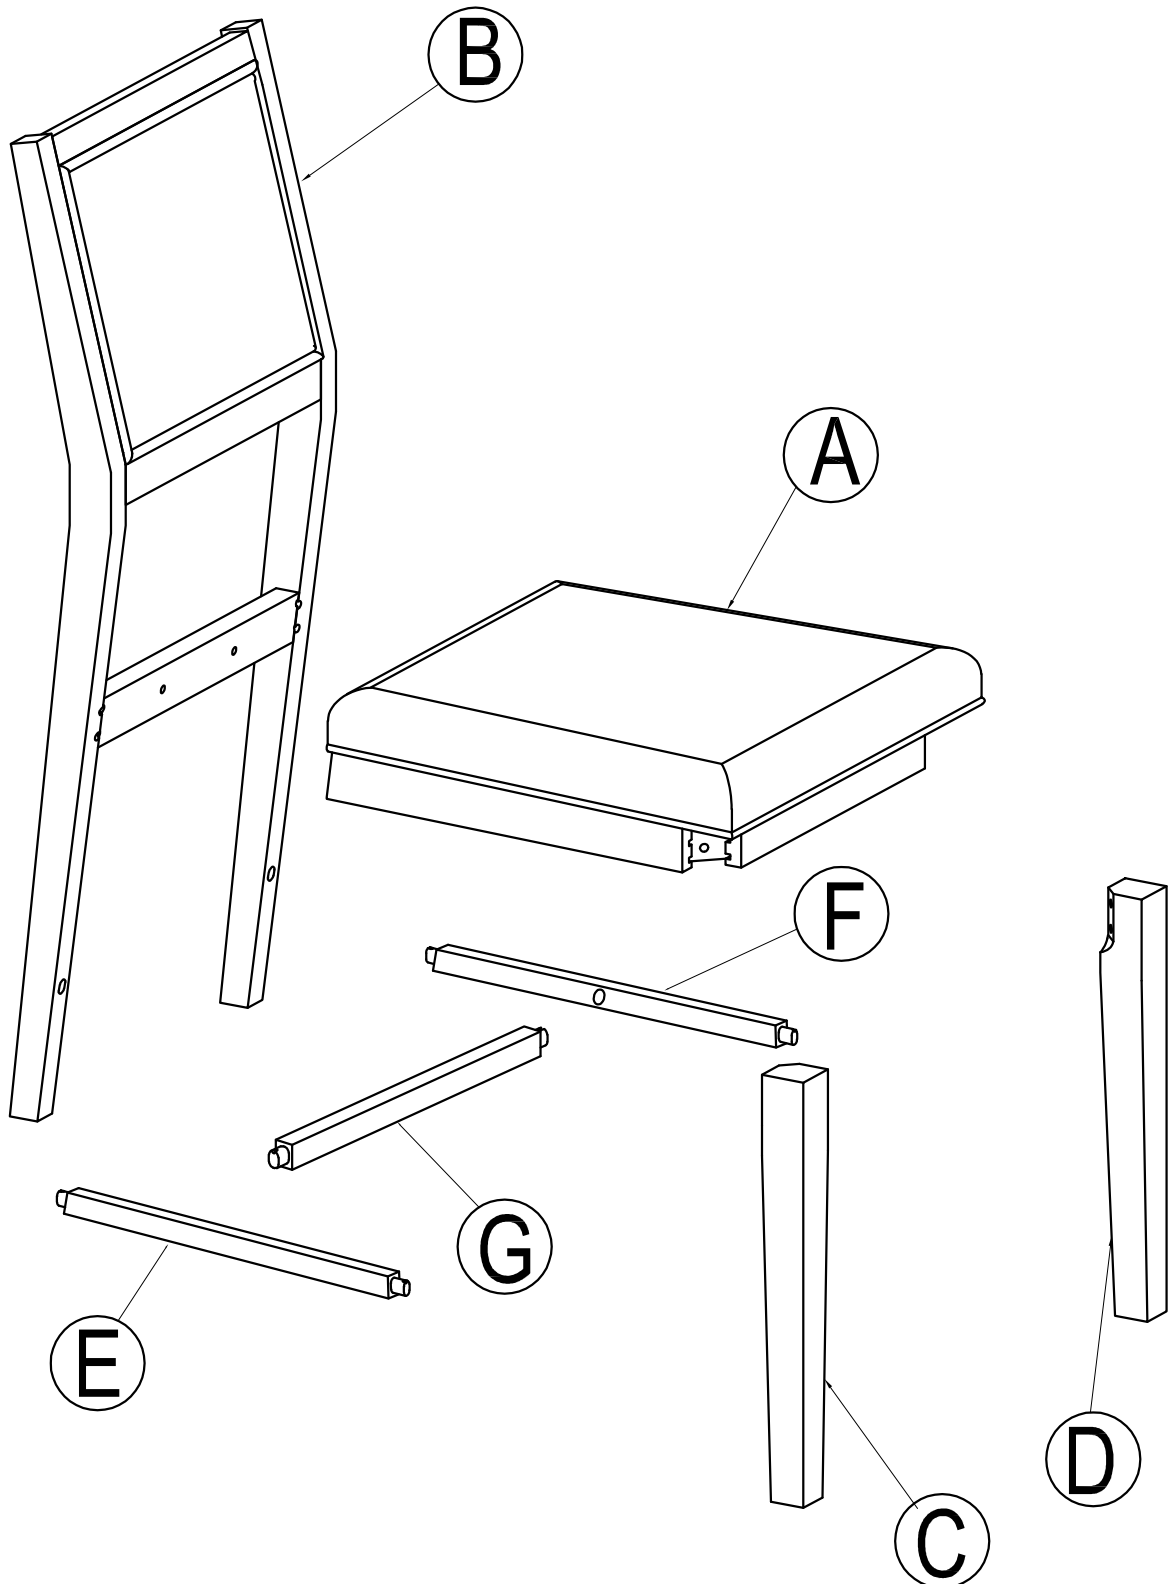


ASSEMBLY INSTRUCTION

ITEM NO.N715P293471


Part List For 4

 (A)

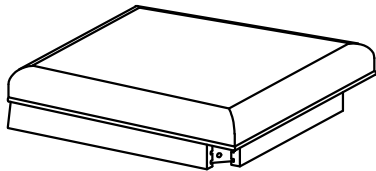


CUSHION SEAT (4 pcs)

 (B)

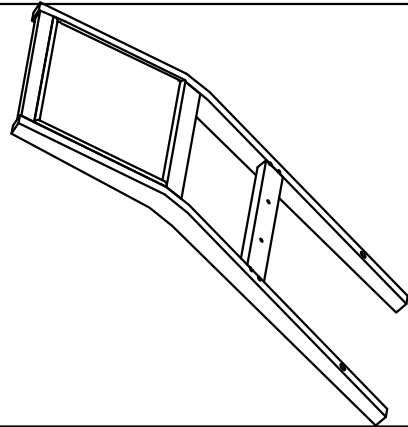


CHAIR BACKREST FRAME (4 pcs)

 (C)

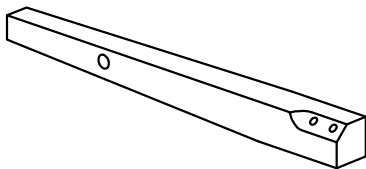


FRONT LEG LEFT (4 pcs)

 (D)

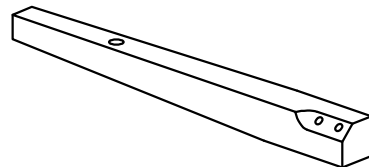


FRONT LEG RIGHT (4 pcs)

 (E)

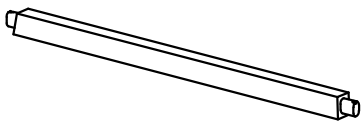


LEFT SIDE SUPPORT RAIL (4 PCS)

 (F)

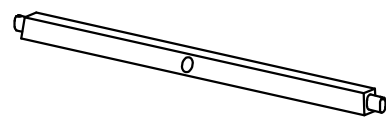

RIGHT SIDE SUPPORT RAIL (4 PCS)

 (G)

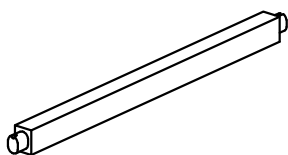


MIDDLE CONNECTING RAIL (4 PCS)

ASSEMBLY INSTRUCTIONS

ITEM NO.N715P293471

Hardware List For 4

 
①

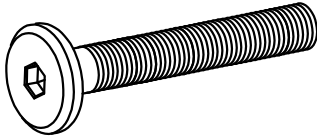

Ø 1/4" x 40mm

BOLT (8pcs)

 
②

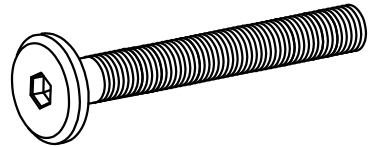

Ø 1/4" x 55mm

BOLT (16 pcs)

 
③

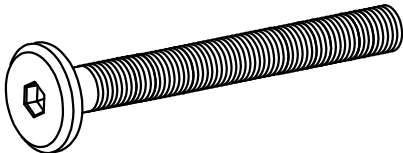

Ø 1/4" x 75mm

BOLT (16 pcs)

 
④



Ø5/16" x 13mm

LOCK WASHER (40 pcs)

 
⑤

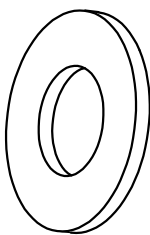

Ø5/16" x 19 x 2 mm

FLAT WASHER (40 pcs)

 
⑥

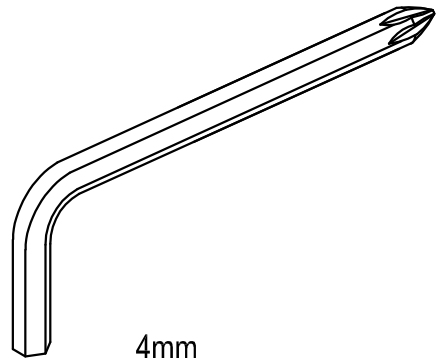

4mm

ALLEN KEY (1pc)

 ⑦




Ø4 x 38mm

WOOD SCREWS (24 pcs)

ASSEMBLY INSTRUCTION


ITEM NO.N715P293471

 
STEP 1:

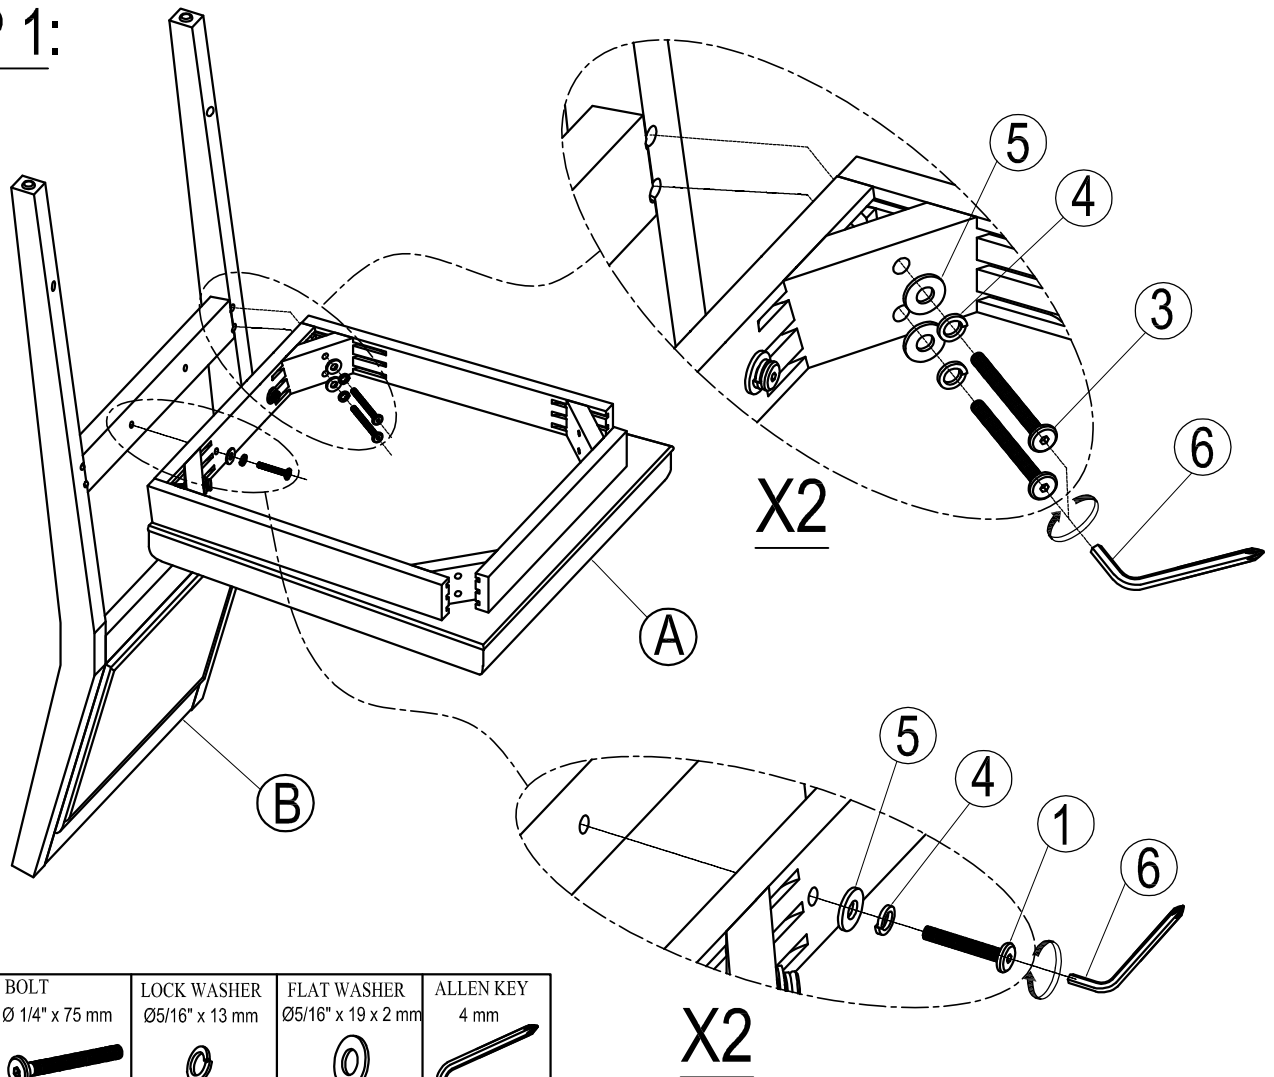

BOLT Ø 1/4" x 40 mm	BOLT Ø 1/4" x 75 mm	LOCK WASHER Ø5/16" x 13 mm	FLAT WASHER Ø5/16" x 19 x 2 mm	ALLEN KEY 4 mm
				
①x 2	③x 4	④x 6	⑤x 6	⑥x 1

  STEP 2:

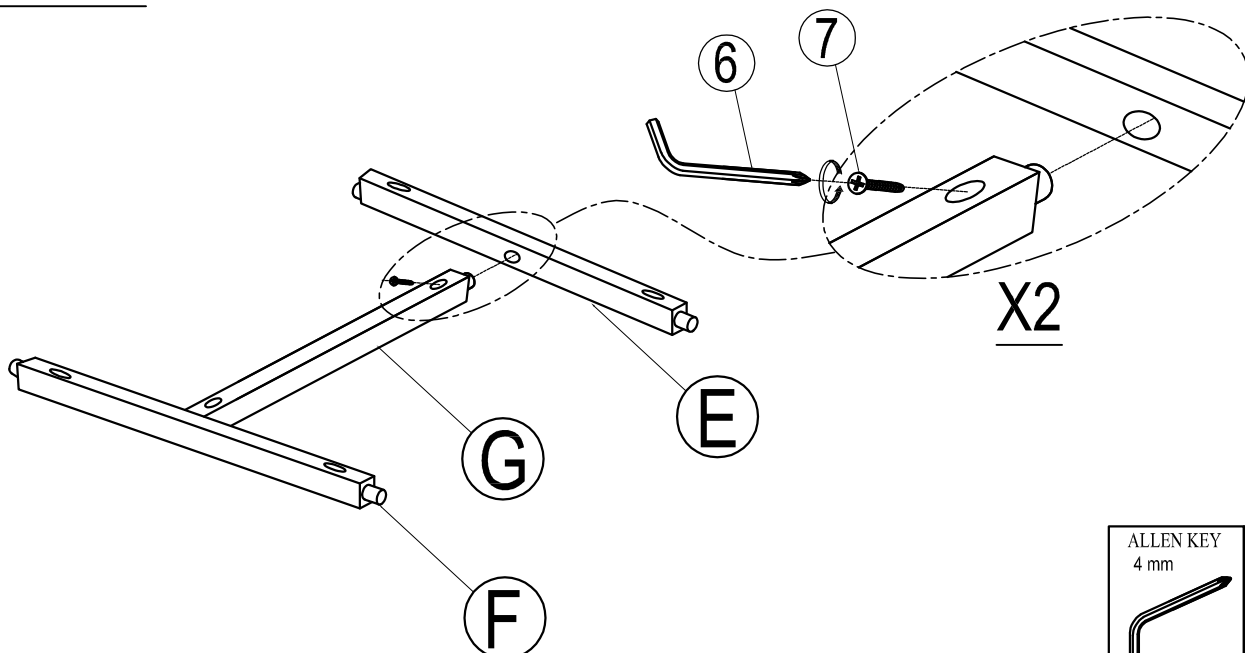


ALLEN KEY 4 mm	WOOD SCREWS Ø4 x 38mm
	
⑥x 1	⑦x 2

ASSEMBLY INSTRUCTION


ITEM NO.N715P293471

 STEP 3:

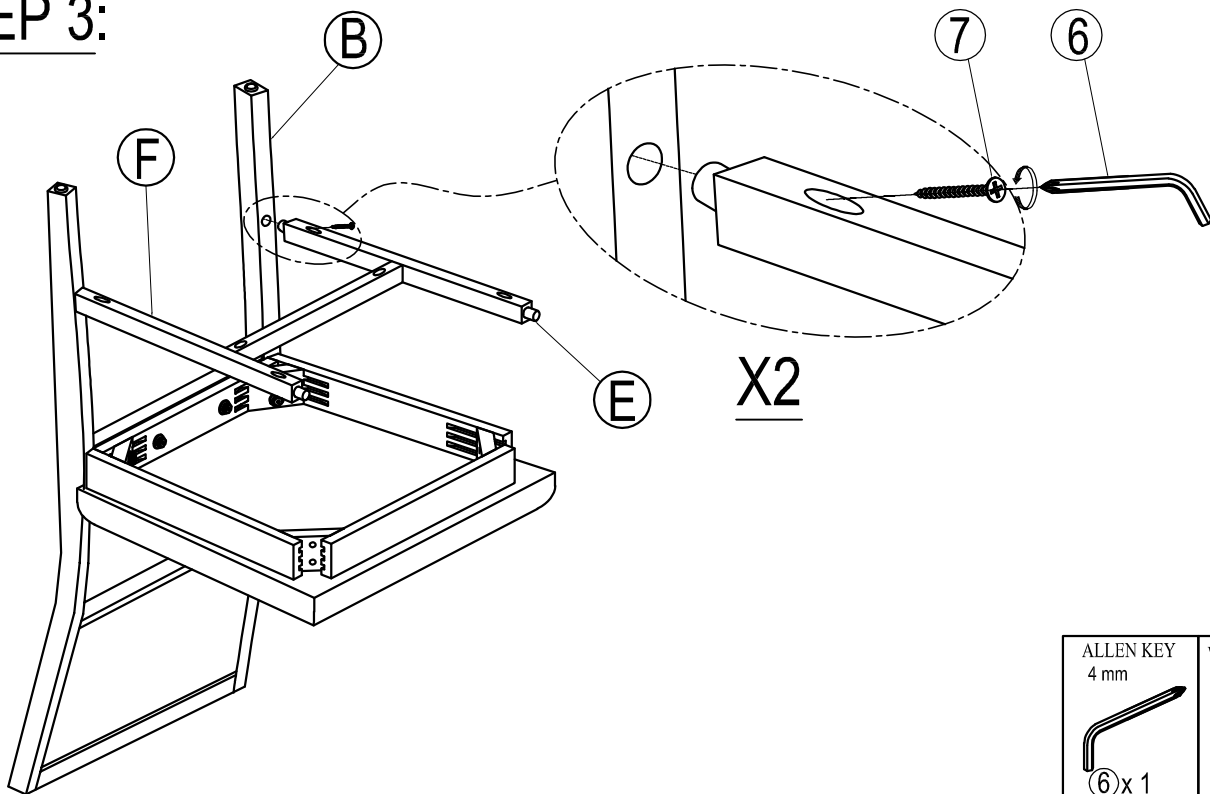

ALLEN KEY 4 mm	WOOD SCREWS Ø4 x 38mm
⑥ x 1	⑦ x 2

 STEP 4:

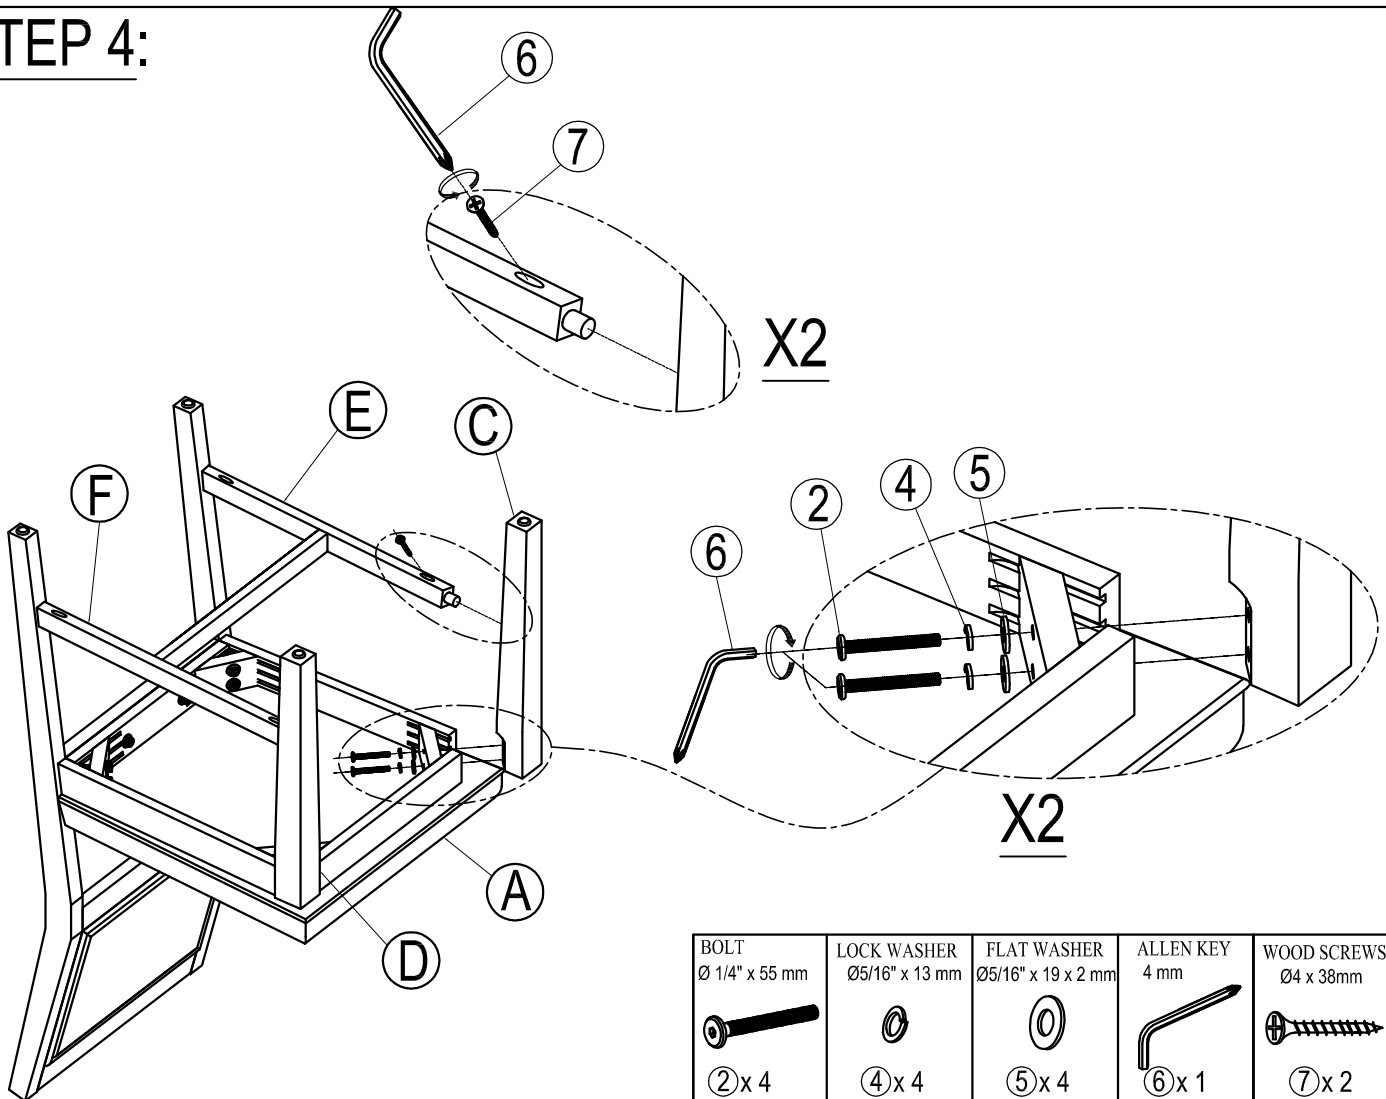

BOLT Ø 1/4" x 55 mm	LOCK WASHER Ø5/16" x 13 mm	FLAT WASHER Ø5/16" x 19 x 2 mm	ALLEN KEY 4 mm	WOOD SCREWS Ø4 x 38mm
② x 4	④ x 4	⑤ x 4	⑥ x 1	⑦ x 2

ASSEMBLY INSTRUCTION

ITEM NO.N715P293471

COMPLETE

