 


Instruction Manual

DC Rechargeable Circulation Fan

Model No: 5303

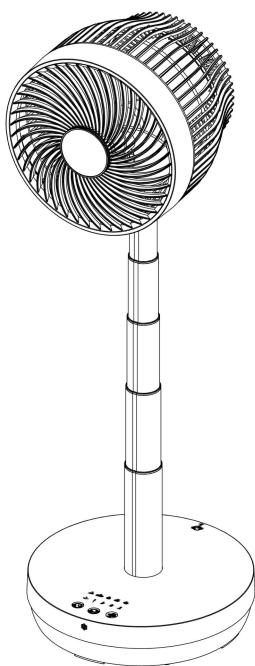

Please read this manual carefully before operating this product.
Keep this manual for further reference.

Please charge the electric fan before the first use.

Part 1 IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be obeyed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

WARNING: To reduce the risk of fire, electric shock, or personal injuries:

1. This fan is for household use only.
2. Before first use, check whether your voltage corresponds to the product nameplate requirements.
3. For safety reasons, please check the status of the USB line and your adapter before use.
4. When not in use, be sure to turn off the fan and unplug it from the power socket.
5. Be careful when using this equipment near children.
6. Do not run the USB line under carpets and, do not cover the USB line with throw rugs. Do not put the USB line under furniture or appliances. Arrange the USB line away from traffic areas so that people will not be tripped over by it.
7. Do not operate any fan with the damaged USB line or adapter. Discard the fan or return it to an authorized service facility for examination and repair.
9. Use the fan in well-ventilated areas. Place the fan at least 8 inches from any walls to ensure proper airflow during use. The fan cannot be located directly under or close to the curtain.
10. Do not obstruct the airflow with any objects or place anything in the opening of the fan.
11. Do not use the fan in areas where curtains may be sucked in.
12. Only place the fan on a hard, flat, dry floor.
13. Do not use the product in extreme temperatures, humidity, or dusty environments.
14. Do not put heavy objects on the fan.
15. Do not place the fan below the power outlet that will suck the

USB line inside to cause damage.

16. When the fan is oscillating, do not touch the fan manually to avoid damage.

17. Be sure to turn off the power supply before unplugging the USB line and adapter from the power outlet to avoid a short circuit, fire, or electric shock.

18. Do not twist or pull the USB line out.

19. In order to avoid the danger of electric shock, do not unplug the fan when your hands are wet.

20. Children under 8 years old should not operate the fan.

21. This appliance is not suitable for people (including children) with reduced physical/sensory/mental abilities or people who lack experience and knowledge. Unless the above-mentioned people are supervised or instructed by a person who is responsible for their safety.

22. Children should be supervised to ensure that they do not play with the appliance.

23. Ensure that the fan is switched off and unplugged from the power supply before removing the guard.

24. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.

25. Please unplug or disconnect the appliance from the power supply and switched off the fan before the repair work is carried out.

SAVE THESE INSTRUCTIONS


Part 2 Brief introduction

This tower fan is equipped with multiple functions, such as 10 speeds, 70-degree oscillation, 7.5-hour timer, remote control. With the above functions, our DC rechargeable circulation fan can provide you a cool, healthy, and comfortable lifestyle.

Part 3 Specification

MODEL NO.	POWER SUPPLY	RATED POWER	CLASS
5303	120V, 60Hz	12W	II

 
Part 4 Structure and parts

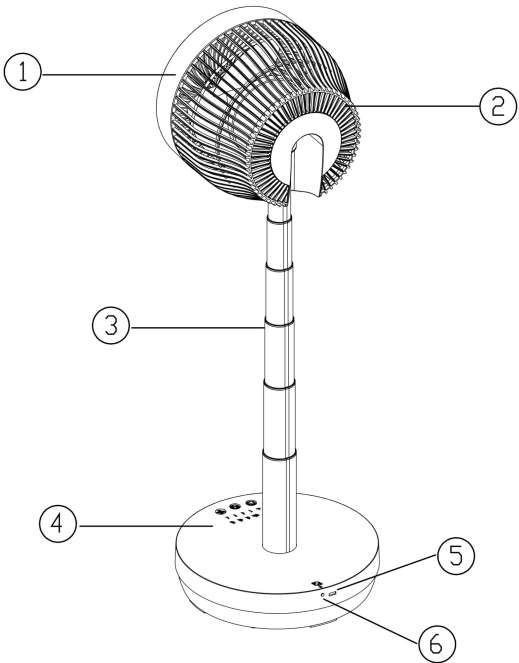

Parts list	
Description	Quantity
Remote control	1
Instruction Manual	1
USB line	1


1. Front grill
2. Rear grill
3. Foldable tube
4. Control panel
5. USB interface
6. Power switch

 
Part 5 Operating Instruction and Functions

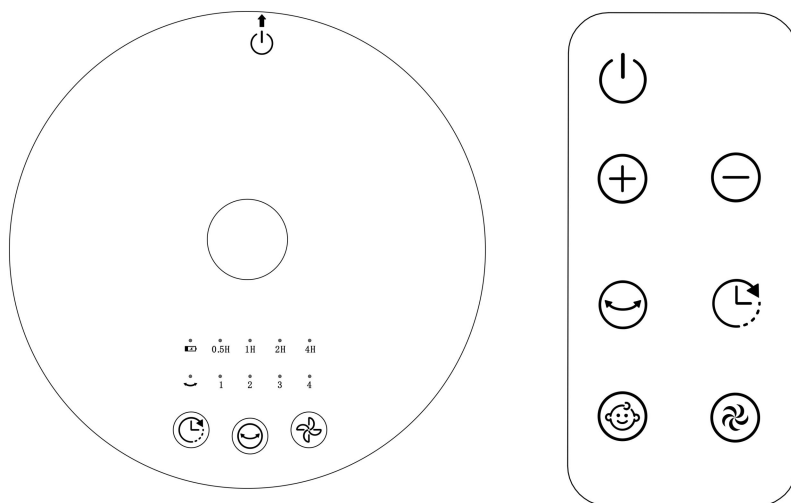

1. Recharge


Connect USB-C to the USB interface and USB-A to a 5V 2A adapter.

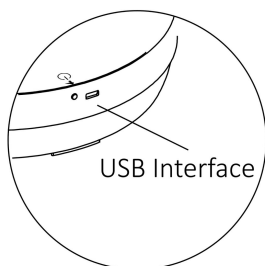


And plug in the adapter. Then the light  will twinkle. The light has two colors, if the green light twinkles, it means the battery level is from 20% to 80%. If the red light twinkles, it means the balance battery level is below 20%. When the green light stop twinkling, it means the battery level is above 80%.




2. ON/OFF


Press the power switch at the rear of the base (refer to the figure below)

or press the  button on the remote control to turn the fan ON/OFF. Press it once, the fan will start operating. Press it again to stop the fan.

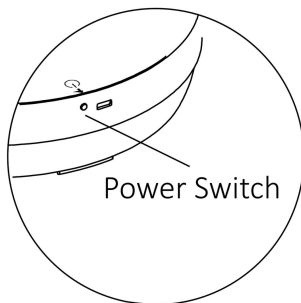


When you turn on the fan without charging, the light  will keep being green if the battery level is from 20% to 100%, and the light  will keep being red if the battery level is lower than 20%. If you don't operate the fan for more than 4 minutes, the light  will go off.






3. Oscillation



Press the  button on the control panel or the remote control, the fan will oscillate from the left to the right automatically.

4. Timer

Press the  button on the control panel or remote control, and then press  to choose the duration of time. The timer is 7.5 hours at most. To cancel the setting, press the  button again to set it as 00 Hr.

5. Wind Speed


Press  button on the control panel or press  or  button on the remote control to set the wind speed ranging from 1-10.

Press  button on the remote control, the fan will run at 1st speed setting. Press  button on the remote control, the fan will run at 10th speed setting.

6. Height Adjustment

The height of the fan can be adjusted by elongating or shortening the foldable tube. The height can be adjusted from 28cm to 68cm.

Please refer to the figure below:

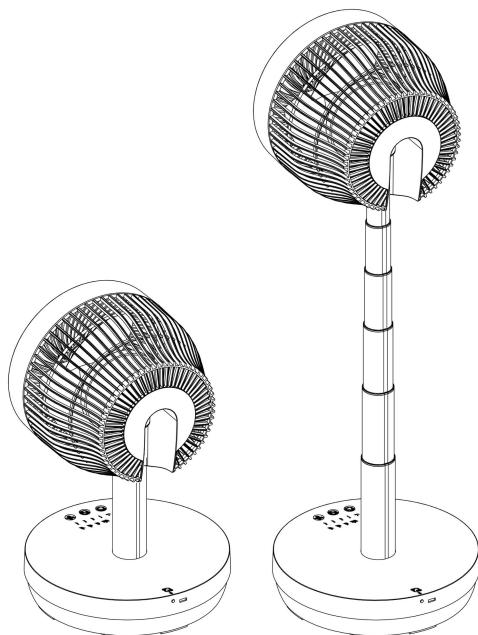

Part 7 Maintenance and Storage

1. Always remove the USB line from the socket outlet and switch off the fan before cleaning it.

2. Clean the external surfaces of the fan with a soft damp cloth (not a dripping wet cloth).

WARNING:

Do not immerse the fan into the water.

Do not use any cleaning chemicals such as detergent or abrasive.

Do not allow the interior get wet as this could cause dangerous consequences.

3. When the unit is not in use, make sure that it is unplugged from the wall socket and in the switch-off position. To store the fan, you may pack it in the original carton and store it in a cool and dry place.

4. In case of malfunction or doubt, do not try to repair the fan by yourself; otherwise it may result in a fire hazard or electric shock.

5. Since the fan is equipped with rechargeable battery, to protect the battery, pls recharge the fan once a month during storage.

BEFORE CALLING FOR SERVICE

Before contacting professional service, please review the trouble-shooting list that includes common occurrences that are not the result of a defect in workmanship or materials.

Problem	Possible Cause	Solution
The fan is unsteady.	The fan is on a soft surface.	Place the fan on a flat, steady, stable surface.
The fan can't be charged by computer.	Some brand of computers have built-in program to prevent the fan from charging.	It can't be solved.
The fan doesn't work.	1. The battery level of the fan is too low.	1. Charge the fan.
	2. The build-in program to protect the fan.	2. Wait a moment, and recharge the fan until the it is reach a full charge, then turn on the fan.
	3. The USB line is broken.	3. Replace with a new USB line.
	4. The adapter is not suitable.	4. USE a 5V 2A adapter instead.

Thank you for purchasing this product! If you have any questions about the product, such as missing parts, damaged products, product assembling, and operation, please contact us via **Amazon Message** or customer service number: **213-4467172 or 661-4358826.**

IMPORTANT

Please call our customer service department for any consulting:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY SERVICE.

AVIS

Veuillez appeler le service à la clientèle pour toutes questions au:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

IMPORTANTE

Sólo hay que llamar nuestro departamento de servicio al cliente en caso de tener preguntas o inquietudes:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO GARANTÍA.

Address: ROWAN ELECTRIC APPLIANCE LLC

28407 Ascent Way, Santa Clarita, CA 91350

Phone: 213-4467172 or 661-4358826

