

DB

Revised text

4. Approximate location of tipped on label - glued in four corners. 3. Label prints CMYK, full bleed.

2. User Guide prints CMYK, full bleed - both sides.

1. User Guide folds to 7.5"x6".

N/A

TING DIE#	BOXES PER TIER	BOXES PER PALLET	PART NET	WEIGHT		
N/A	N/A	N/A	N//	N/A		
SCALE	CREATE DATE	PREPARED BY	APPROV	'ED BY		
70%	10/18/2023	DMH	DB			
PART D	ESCRIPTION	PART NUMBER	REV.	PAGE		
USER GU	IDE & LABEL	X00115444	С	1 of 3		

# YOUR FAUCET, YOUR WAY

Choose from Touch<sub>2</sub>0° with Touchless<sup>™</sup> or Touch<sub>2</sub>0° only.

Touch<sub>2</sub>O<sup>®</sup> and Touchless<sup>™</sup> Technology use capacitive sensing technology, like your touch smartphone, to recognize human presence within 4 inches of the surface.

### SCAN TO VIEW VIDEO TUTORIALS

How to Use

Installation

Troubleshooting

#### FIND VIDEO TUTORIALS AT:

https://www.youtube.com/@deltafaucet



### **1** TOUCH<sub>2</sub>O<sup>®</sup> WITH TOUCHLESS<sup>™</sup> TECHNOLOGY



• Turn the faucet handle to the on position

- Place your hand within 4 inches of the faucet to turn water on and off
- Touchless Technology is most sensitive under the arc of the spout
- Faucet senses humans, not objects, everywhere but the pull-down wand

## **2** TOUCH<sub>2</sub>0° TECHNOLOGY



• Turn the faucet handle to the on position

· Tap anywhere on the spout, base or handle

• Tap with wrist, forearm or finger to turn the faucet on and off

Recommend installing accessories such as soap dispensers and beverage faucets at least five inches from the faucet





MODE	LED INDICATION	BEST FOR*
High Sensitivity	🔆 5 Blue Flashes	Stainless Steel Sinks
		Granite Countertops
Low Sensitivity	🔆 4 Purple Flashes	Porcelain or Acrylic Sinks
		Quartz, Formica® (Laminate), or Corian® Countertops
Touchless Off	🔆 3 Red Flashes	Touch <sub>2</sub> O <sup>®</sup> or manual only operation

\*Your sink or counter material may affect the faucet's touchless sensing ability. Please use the chart above to cycle through the modes so your faucet is in the right sensitivity setting to work best in your kitchen.

COLOR #1	COLOR #2	COLOR #3	COLOR #4	COLOR #5	COLOR #6	COATING	PRINTING	PAGE
CYAN	MAGENTA	YELLOW	BLACK	_	_	VARNISH	_	2 of 3



# USER GUIDE



## **CHANGING MODES**



### CURRENT MODE:

HIGH SENSITIVITY I TOUCH<sub>2</sub>O\* WITH TOUCHLESS\* TECHNOLOGY

### **TO CHANGE MODES:**

- 1. Turn the faucet handle to the off position
- 2. Grab the faucet base and hold for 6 seconds
- 3. LED indicator will flash to signal what mode the faucet is in (See chart below)
- 4. Turn the faucet handle to the on position

Faucet will turn on and off using the handle regardless of mode or connection to power

### PLACE THIS STICKER ON THE INSIDE OF YOUR CABINET FOR REFERENCE.



#### TO CHANGE FAUCET MODES:

1. Turn the faucet handle to the off position

2. Grab the faucet base and hold for 6 seconds

3. LED indicator will flash to signal what mode the faucet is in (See chart below)

4. Turn the faucet handle to the on position

ŧ.	1 ui ii	une	Taucer	nanule	to th	e on	position

MODE	LED INDICATION
High Sensitivity	5 Blue Flashes
Low Sensitivity	🔆 4 Purple Flashes
Touchless Off	🔆 3 Red Flashes



FIN https://ww

					-			
COLOR #1 CYAN	COLOR #2 MAGENTA	COLOR #3 YELLOW	COLOR #4 <b>BLACK</b>	COLOR #5	COLOR #6	COATING VARNISH	PRINTING	PAGE <b>3 of 3</b>
844.923.5368 115444 10/23								
ND VIDEO TUTORIALS AT ww.youtube.com/@del								