

## CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum

 
Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening



## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Leg frame		2X
B	Top		1X
C	Font & Back panel		2X
D	Side panel		3X
E	Bottom panel		2X
F	Storage lid		2X
H1	Screw -1	 M6X35	12X
H2	Screw -2	 M6X45	4X
H3	Screw-3	 M7X60	4X
H4	Allen key	 4mm	2X

Model# PAT7035

Product Dimensions:48" W x 20" D x 29.9" H




## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 40 minutes.


Tools Required for Assembly (included): Allen Key

1

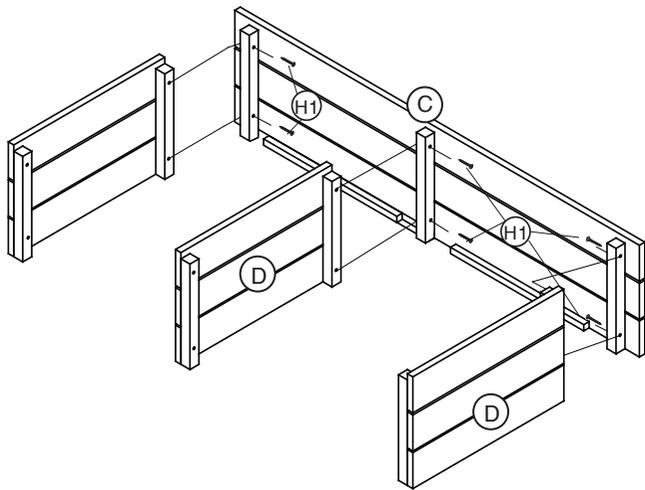


Step 1  
Attached (D) to (C), Using (H1)  
tighten by (H4)

2

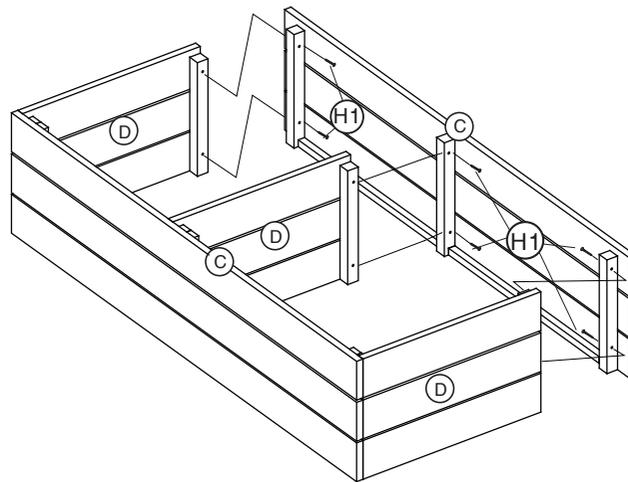

Step 2  
Attached (D) to (C), Using (H1)  
tighten by (H4)

3

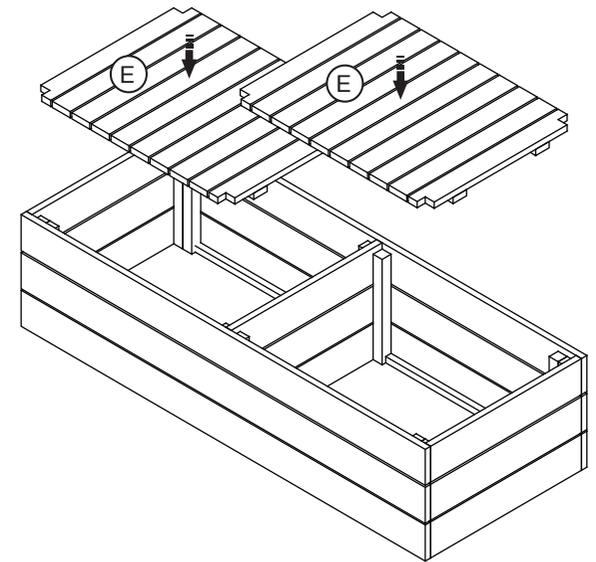

Step 3  
Pull down the arrow


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 40 minutes.

Tools Required for Assembly (included): Allen Key


4

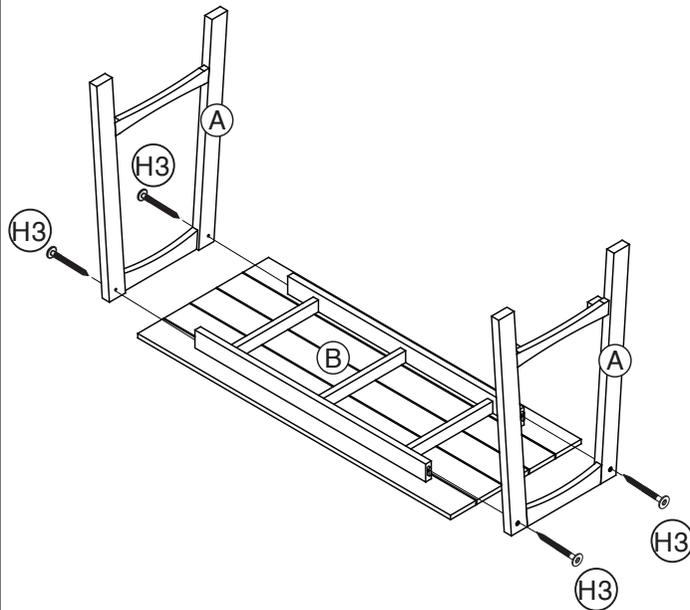

Step 4

Attached (A) to (B), Using (H3) tighten by (H4).


5

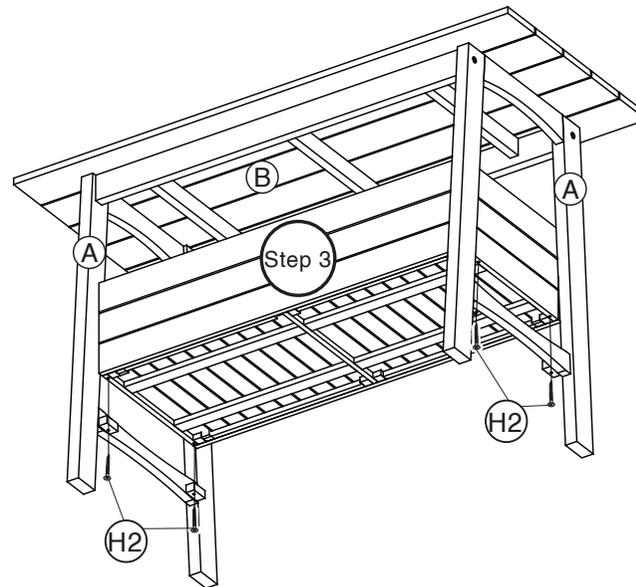

Step 5

Attached (A) to (Step3), Using (H2) tighten by (H4).

6

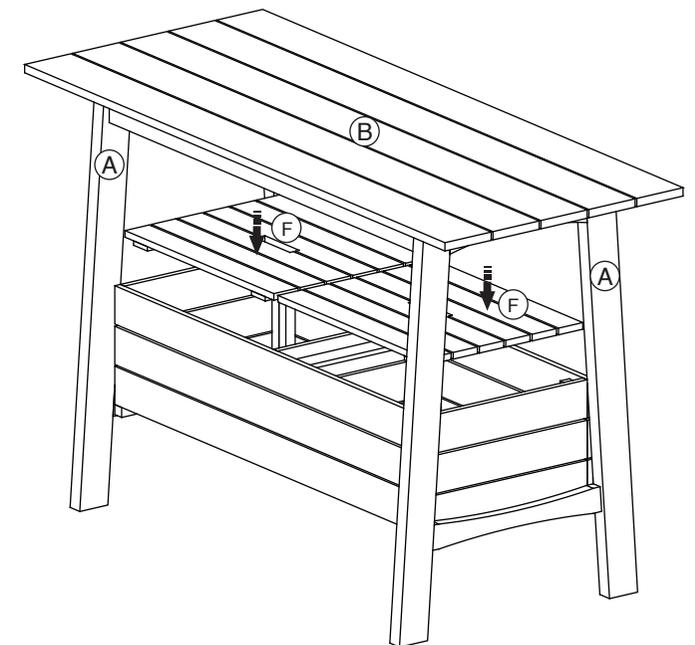

Step 6

Pull down the arrow