

# KODAK Large Inflatable Screen

For Projecting Movies, Games, and More



## User Manual

112"H | 145"W | 64"D (284.48 cm | 368.3 cm | 162.56 cm)

Please read all directions before using the product and retain this guide for reference.

# CONTENTS

1	INTRODUCTION	3
2	PARTS	3
3	SAFETY PRECAUTIONS	4
4	SETUP	4-5
5	DEFLATION AND STORAGE	5
6	CARE AND MAINTENANCE	5-6
	A. SCREEN MAINTENANCE	5
	B. USING THE REPAIR PATCHES	6
	C. AIR PUMP MAINTENANCE	6
7	CUSTOMER SERVICE	6
8	WARRANTY	7

## 1. INTRODUCTION

Thank you for purchasing the KODAK Large Inflatable Screen. This User Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

Please read all directions before using the product and retain this guide for reference. This product is intended for household use only.

This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

## 2. PARTS

A. KODAK Large Inflatable Screen

B. Air Pump

 
 
 
 
 
C. Carrying Case

D. Air Pump Stakes (2)

E. Screen Stakes (8)

F. Repair Patches (4)

G. Rope (4)

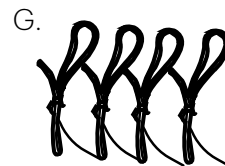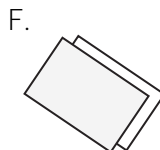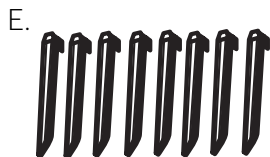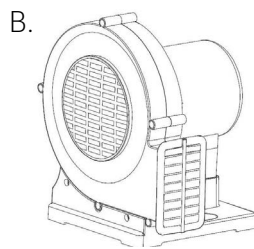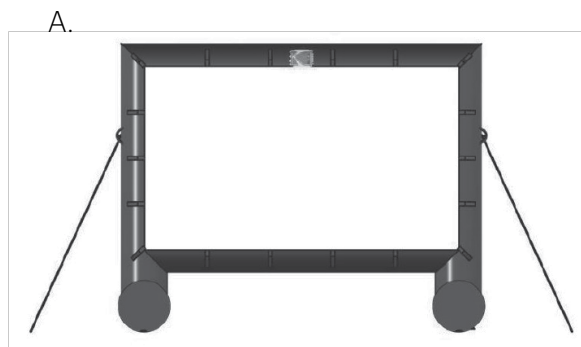

### 3. SAFETY PRECAUTIONS

- This product should only be installed by an adult. Keep all electrical parts away from children.
- Keep all electrical lines, radios, speakers and other electrical devices away from the inflatable screen and the air pump or risk serious electric shock.
- Do not place the screen near or under overhead electrical lines or risk serious electric shock.
- Do not immerse the screen or air pump in water.
- The air pump is a high volume device, and is capable of moving a lot of air very quickly. When using the air pump, keep in mind the following:
  - Place the air pump in an area where it will not suck in dirt or leaves.
  - Keep away from water.
  - Keep away from high-traffic areas.
  - Keep away from children.
- Only use the provided air pump for inflation
- The air pump is not a toy. It should only be used under the direct supervision of a competent adult.
- This product is intended for domestic and outdoor use only.
- When in use, adult supervision is required.
- Keep all parts away from open flames and other heat sources.
- Do not attach or leave any items on/inside the product.
- Do not jump off of or onto the product.
- Do not use this product in public areas or as a rental.
- Do not use in windy conditions.
- Do not leave the product out in the rain.
- Do not open or try to service the air pump. If the air pump needs servicing, take it to a qualified professional.
- Clearly mark the path of the power cord to avoid tripping and/or damage by yard equipment such as lawn mowers, etc.
- Do not leave air pump unattended.
- Do not cover the air intakes when the air pump is being used and do not insert small objects into any part of the air pump.
- We do not recommend using extension cords with this product.
- Disconnect the air pump from the power source when moving the screen.
- To reduce the risk of fire or electric shock, do not use the air pump with any solid-state speed control device.
- Securely stake the air pump and screen into the ground before use.

### 4. SETUP

1. Remove the screen and all other parts from the box, making sure the parts in the box match those listed in the Parts section of this manual.
2. Connect the white screen to the inflatable frame by connecting the attached buckles.
3. Unroll and unfold the screen body in the center of the area where you would like to use it.

4. Attach the fabric tube to the air pump, ensuring the tube is not twisted.
5. Wrap the drawstring around the tube and the end of the air pump, then tie it securely in place.



6. Plug in the air pump, then turn on the power.
7. Once the screen has inflated, connect each of the four (4) included ropes to either side.
8. Secure the screen in place by driving the included stakes through each of the loops, located at the base of the screen.
9. Secure the air pump to the ground using the included stakes.

## 5. DEFLATION AND STORAGE

1. Turn off the air pump and unplug it from the outlet
2. Remove all stakes in the screen and air pump.
3. Untie the drawstring from the intake tube and allow the screen to fully deflate.
4. Remove the white screen by undoing the attached buckles.
5. Slowly roll the screen, pushing the air out as you do so.
6. Store inside the included carrying case.

## 6. CARE AND MAINTENANCE


Carefully read and follow these instructions to maintain the integrity of your screen and ensure it remains in good condition.

### 6A. SCREEN MAINTENANCE

- As an outdoor product, the screen may be subject to wear and tear. Always inspect for signs of fabric damage. Weak or torn surfaces should be repaired immediately.
- To clean, wipe the screen with a dry cloth, or a cloth dampened with a neutral, sanitizing solution.
- Never store the screen while it is wet. Allow it to dry before rolling it up, or risk the growth of mildew or other bacteria.

## 6B. USING THE REPAIR PATCHES

1. Deflate the screen. Then clean the damaged area, allowing it to dry thoroughly.
2. Cut out a portion of the patch to the desired size, rounding the corners as illustrated.

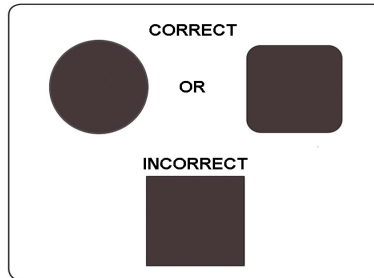

3. Remove the adhesive backing from the patch, then position the patch over the damaged area.
4. Smooth out any bubbles so that the patch lays flat.
5. Allow the patch to sit for at least 30 minutes before inflating the screen.

## 6C. AIR PUMP MAINTENANCE

- Always unplug the air pump before performing maintenance.
- Periodically examine the air pump for potentially unsafe conditions such as a damaged cord, plug, housing, or parts. If damage is found, do not use the product until it has been properly repaired by a qualified professional.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- The air pump does not require any lubrication and has no user serviceable parts. Do not attempt to service the air pump.
- Clean with a damp cloth. Do not immerse the air pump in water.
- Regularly check the intake and output openings and keep free of dirt, leaves, etc.
- When not in use, store the air pump indoors in a dry place.
- Store the air pump upright on a stable surface.
- Loosely coil the cord and place it beside the air pump.

## 7. CUSTOMER SERVICE

Should you experience any problems with your product, please contact us before returning the item to the place of purchase. We're here to help!

U.S. Support: [kodak@camarketing.com](mailto:kodak@camarketing.com), 844-516-1539

International Support: [kodakintl@camarketing.com](mailto:kodakintl@camarketing.com), 844-516-1540

## 8. WARRANTY

### LIMITED WARRANTY ON KODAK LARGE INFLATABLE SCREEN

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

WE WARRANT THAT DURING THE WARRANTY PERIOD, THE PRODUCT WILL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP.

### LIMITATION OF LIABILITY

TO THE EXTENT NOT PROHIBITED BY LAW, THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. EXCEPT FOR THE EXPRESS WARRANTIES CONTAINED IN THIS LIMITED WARRANTY STATEMENT AND TO THE EXTENT NOT PROHIBITED BY LAW, WE DISCLAIM ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, STATUTORY OR OTHERWISE, INCLUDING WITHOUT LIMITATION, THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SOME STATES DO NOT ALLOW DISCLAIMERS OF IMPLIED WARRANTIES, SO THIS DISCLAIMER MAY NOT APPLY TO YOU. TO THE EXTENT SUCH WARRANTIES CANNOT BE DISCLAIMED UNDER THE LAWS OF YOUR JURISDICTION, WE LIMIT THE DURATION AND REMEDIES OF SUCH WARRANTIES TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY.

OUR RESPONSIBILITY FOR DEFECTIVE GOODS IS LIMITED TO REPAIR, REPLACEMENT OR REFUND AS DESCRIBED BELOW IN THIS WARRANTY STATEMENT.

WHO MAY USE THIS WARRANTY? C&A Marketing, Inc. located at 114 Tived Lane East, Edison, NJ ("we") extend this limited warranty only to the consumer who originally purchased the product ("you"). It does not extend to any subsequent owner or other transferee of the product.

WHAT DOES THIS WARRANTY COVER? This limited warranty covers defects in materials and workmanship of the KODAK large inflatable screen (the "product") for the Warranty Period as defined below.

WHAT DOES THIS WARRANTY NOT COVER? This limited warranty does not cover any damage due to: (a) transportation; (b) storage; (c) improper use; (d) failure to follow the product instructions or to perform any preventive maintenance; (e) modifications; (f) unauthorized repair; (g) normal wear and tear; or (h) external causes such as accidents, abuse, or other actions or events beyond our reasonable control.

WHAT IS THE PERIOD OF COVERAGE? This limited warranty starts on the date of your purchase and lasts for one year (the "Warranty Period"). The Warranty Period is not extended if we repair or replace the product. We may change the availability of this limited warranty at our discretion, but any changes will not be retroactive.

WHAT ARE YOUR REMEDIES UNDER THIS WARRANTY? With respect to any defective product during the Warranty Period, we will, at our sole discretion, either: (a) repair or replace such product (or the defective part) free of charge or (b) refund the purchase price of such product if an exchange unit cannot be provided.

HOW DO YOU OBTAIN WARRANTY SERVICE? To obtain warranty service, you must contact us at 844-516-1539 or by email at [kodak@camarketing.com](mailto:kodak@camarketing.com) during the Warranty Period to obtain a Defective Merchandise Authorization ("DMA") number. No warranty service will be provided without a DMA number and return shipping costs to our facilities shall be assumed by you, the purchaser. Shipping costs of the replacement unit to you shall be assumed by us.

## **KODAKPHOTOPLUS.COM**

The Kodak trademark, logo and trade dress are used under license from Eastman Kodak Company.

All other products, brand names, company names and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement or approval.

Distributed by C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837 USA, C&A Marketing UK LTD, 167 Hermitage Road, Crusader Industrial Estate, London N4 1LZ, UK  
©2019. C&A IP Holdings, LLC. All Rights Reserved. Made in China.

