 
 


PARTS

 
A 1pc



B 1pc




C 2pcs




D 4pcs



 
E 2pcs




F 2pcs

 


G 2pcs

 


H 2pcs

 


J 1pc

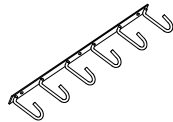 


K 1pc

 


L 4pcs

 


M 4pcs

 

N 4pcs

 


P 4pcs

 

Q 8pcs



 R 1pc




S 1pc



T 2pcs




 ①




35pcs+1pc

 ②



8pcs+1pc

 ③



4pcs+1pc

④



 
 
 
 
4pcs+1pc

M6x13 mm

M6x20 mm


M6x30 mm

M6

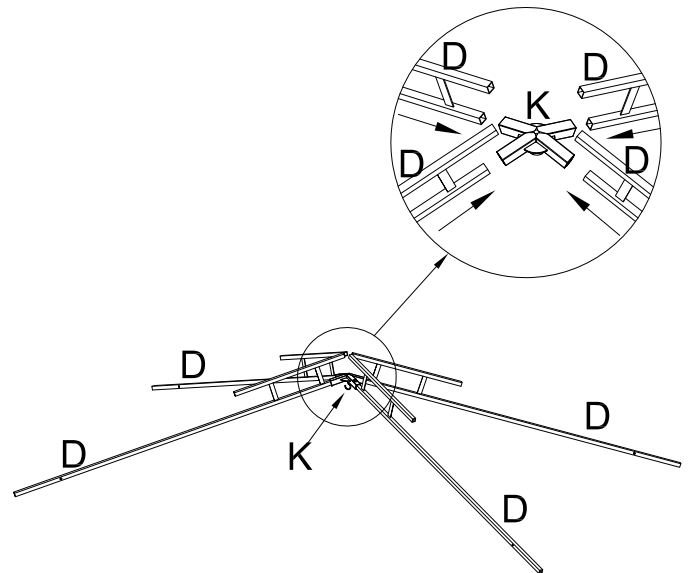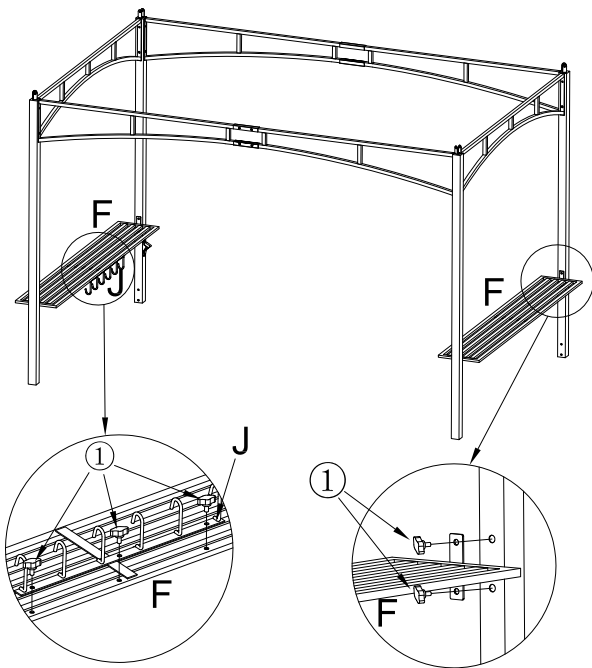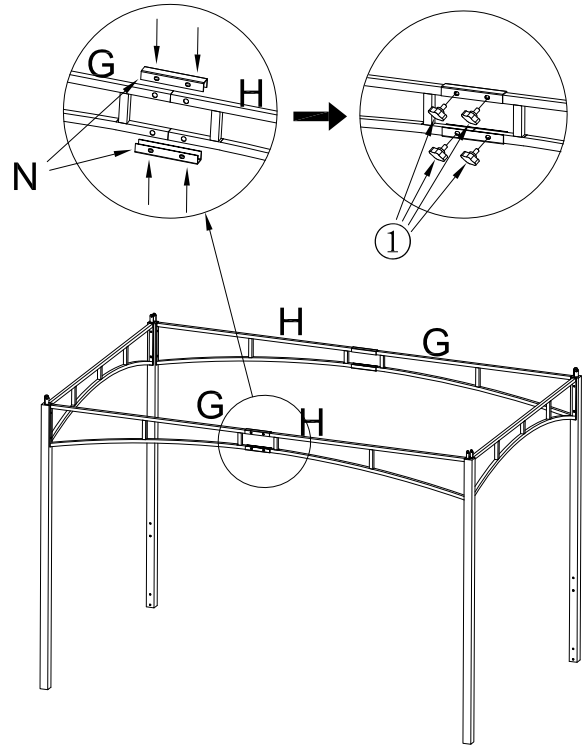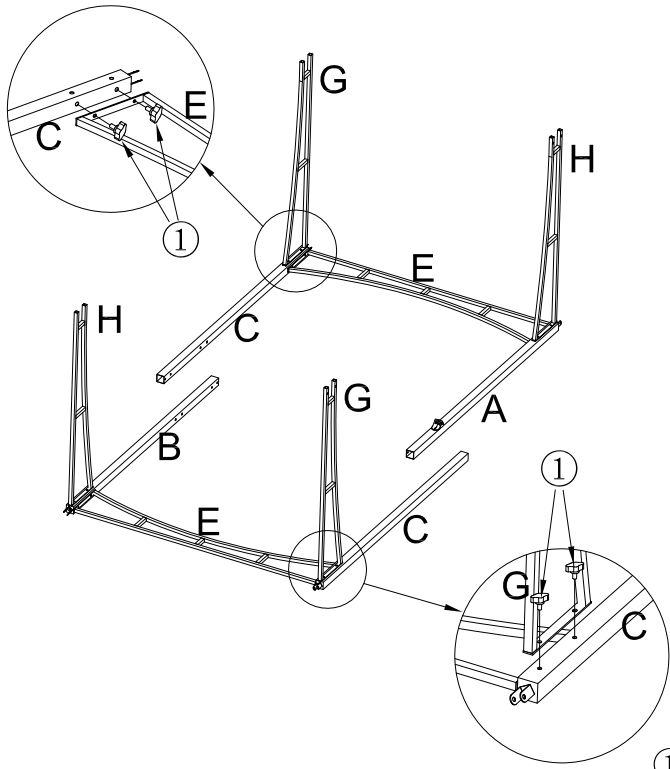


③

 ④

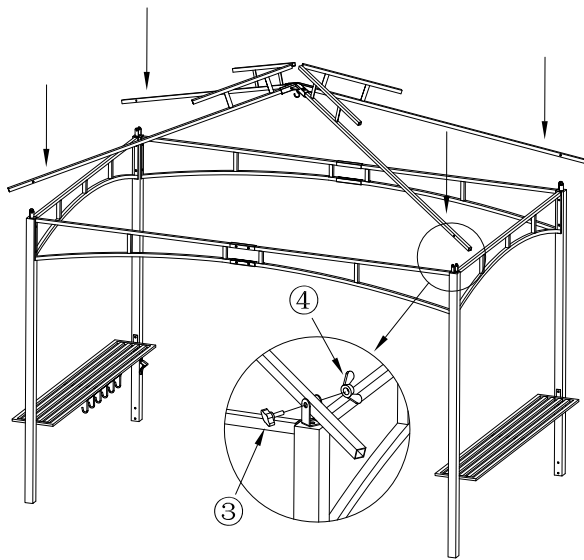


⑤

 Press the button and push the extension tube (M) up to the end

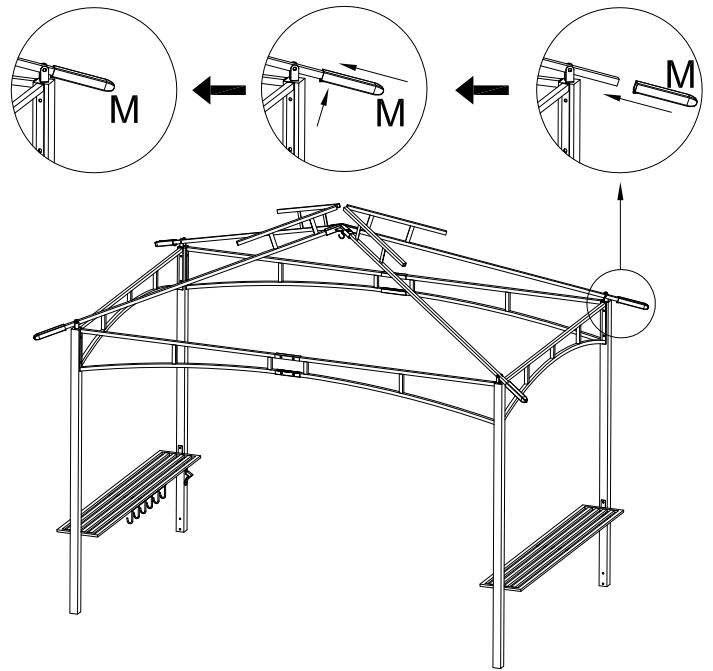


⑥

 
Pull out the extension tube (M) outwards to adjust the ceiling (R)

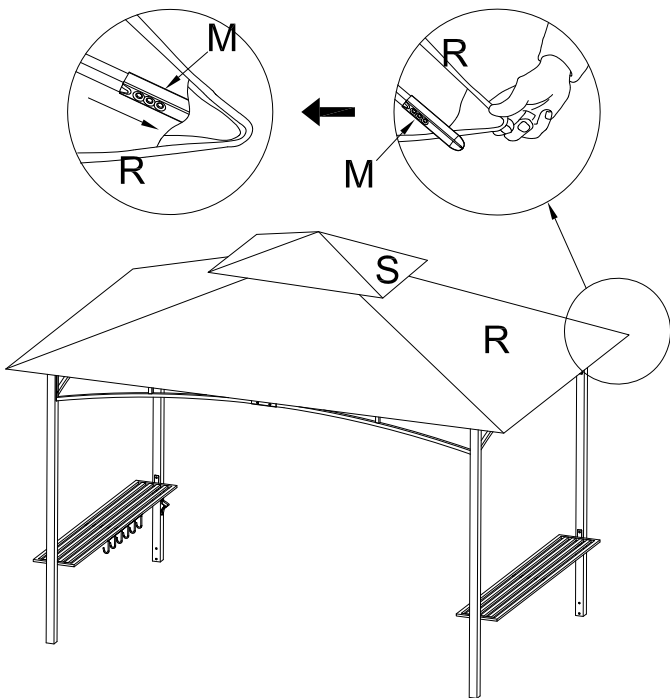

⑦


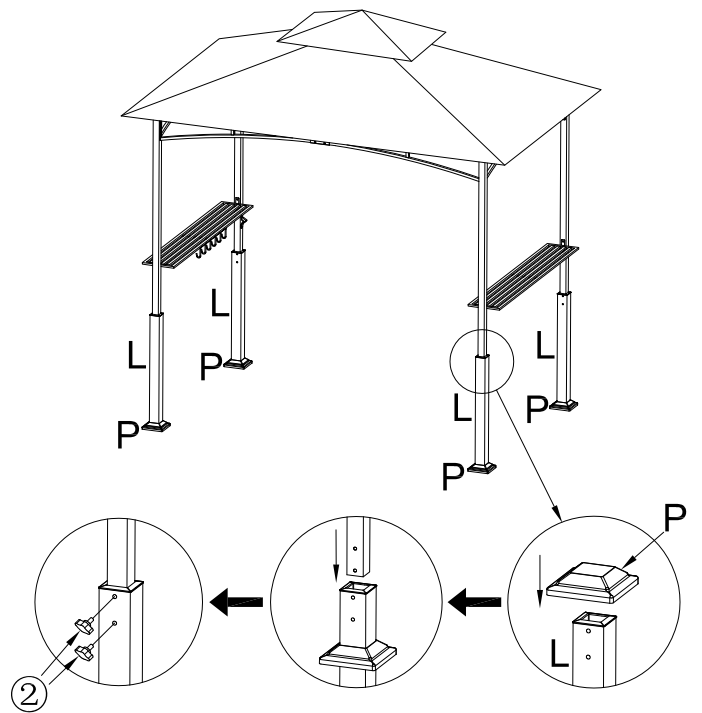 


⑧

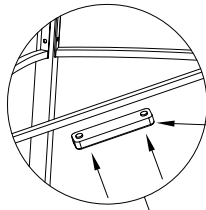 

LED ceiling lamp needs three AAA batteries

  T

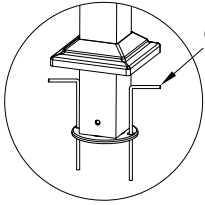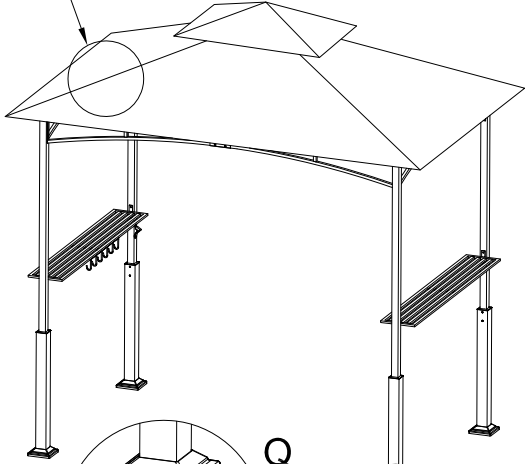

Q

9