 


TV cabinet

AssemblyInstructions -Please keep for future reference

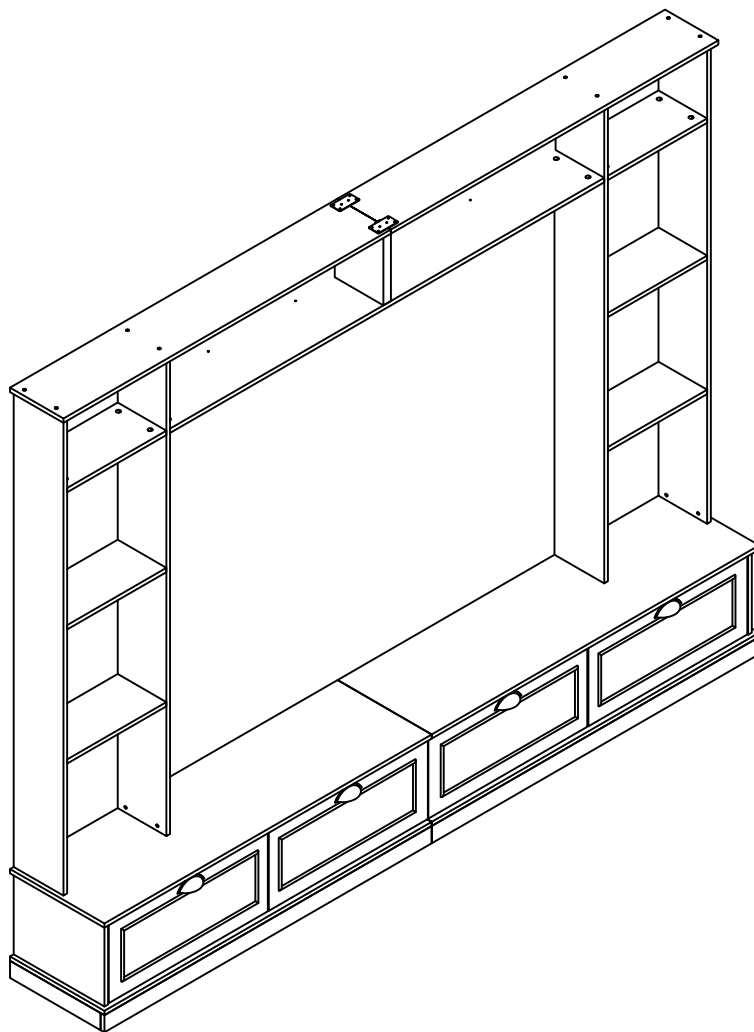

Dimensions

Width-103.93inch

Depth- 14.96inch

Height- 81.1inch

Important-Please read these instructions fully before starting assembly

 


Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

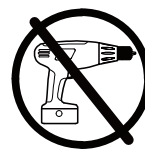

- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

 
- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning – please follow these instructions

 
 
 
 
 
 

 
 
 
 




To help prevent product toppling over please follow the below steps:-

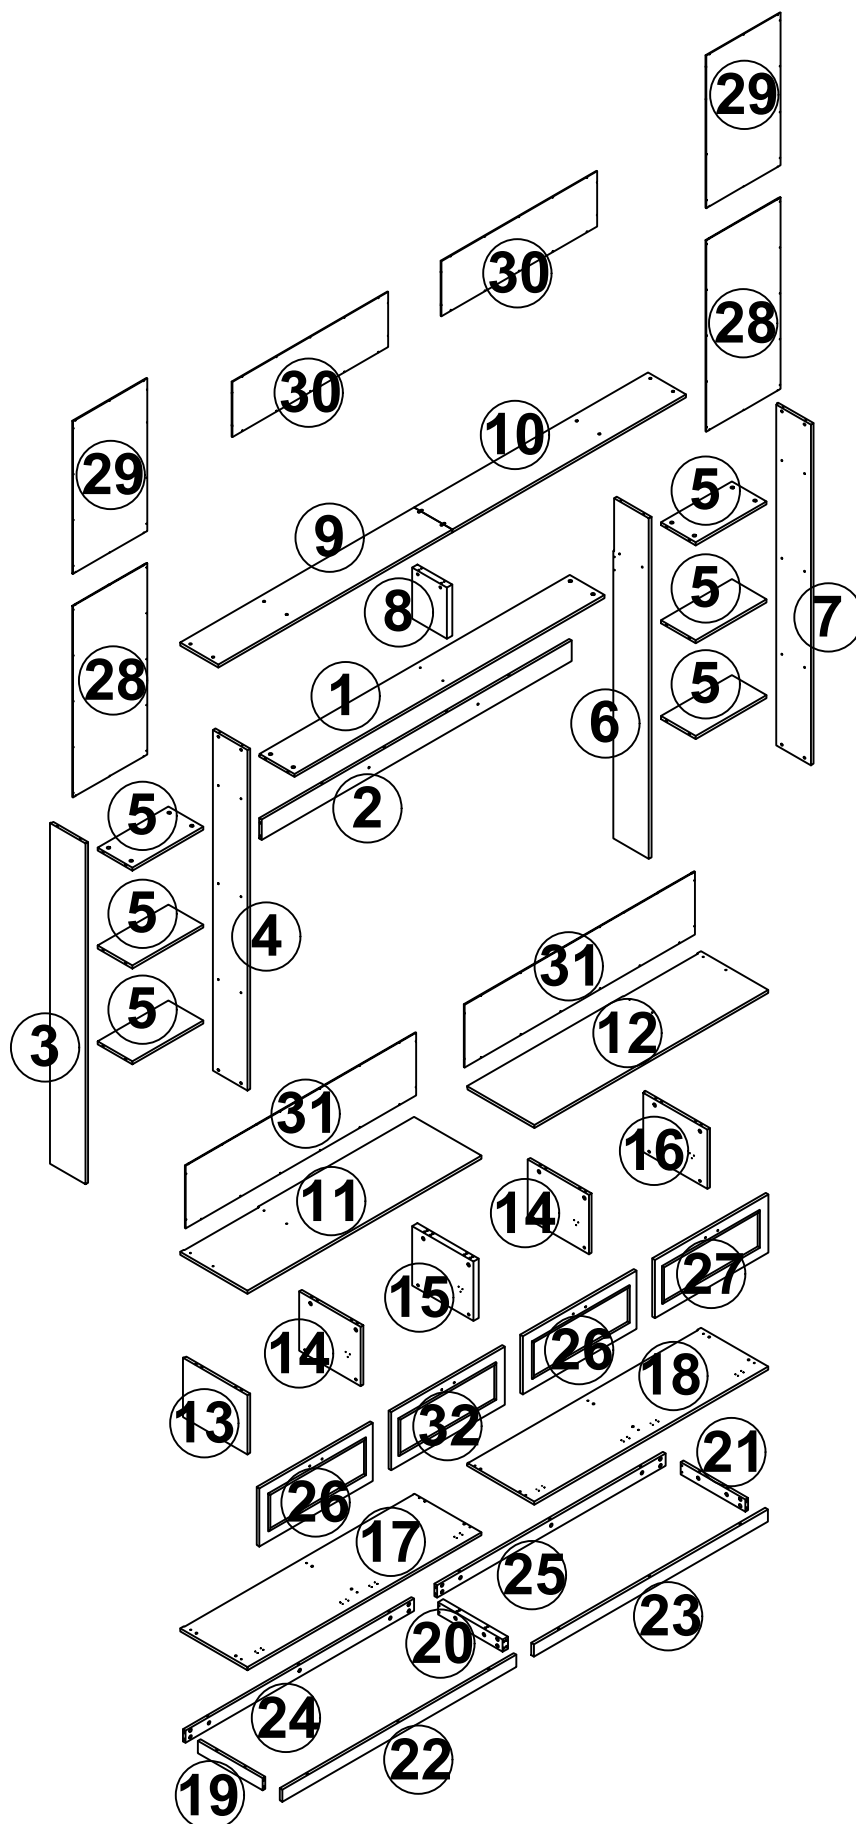 Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


 
 
 
 
 
 
 

 

 


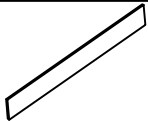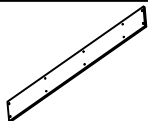




There are 2 boxes of this product





     
 
 


 

 
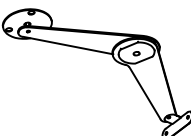 
 

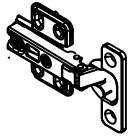 
 

Box 1 : N721P170470

 1750*200*15 ① x 1	 1750*100*15 ② x 1	 1665*200*15 ③ x 1	 1665*200*15 ④ x 1
 400*196*15 ⑤ x 6	 1665*200*15 ⑥ x 1	 1665*200*15 ⑦ x 1	 346*290*15 ⑧ x 2
 365*60*15 ⑨ x 1	 365*60*30 ⑩ x 1	 365*60*15 ⑪ x 1	 936*417*3 ⑫ x 2
 745*417*3 ⑬ x 2	 881*269*3 ⑭ x 2	 1299*307*3 ⑮ x 2	

Box 2 : N721P170490

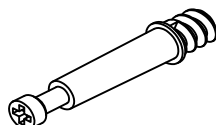 248*196*30 ⑯ x 1	 1320*215*15 ⑰ x 1	 1320*215*15 ⑱ x 1	 1320*380*15 ⑲ x 1
 1320*380*15 ⑳ x 1	 365*290*15 ㉑ x 1	 346*290*30 ㉒ x 1	 365*290*15 ㉓ x 1
 1320*380*15 ㉔ x 1	 1320*380*15 ㉕ x 1	 1320*60*15 ㉖ x 1	 1320*60*15 ㉗ x 1
 1290*60*15 ㉘ x 1	 1290*60*15 ㉙ x 1	 641*284*20 ㉚ x 2	 641*284*20 ㉛ x 1
 641*284*20 ㉜ x 1			

Box 2 : N721P170490

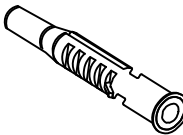			
Ø8x30mm A x 24+2	Ø7x35mm B x 86+2	Ø15x12mm C x 86+2	Ø4x12mm D x 8+1
 			
Ø16mm & Ø18mm E x 2	Ø2.5x10mm Fx 102+3	Ø3x12mm G x 20+2	H x 4
			
Ø10*51mm I x 2	Ø4x50mm J x 32+2	80x40x2 K x 2	Lx 4
			
32x12x4mm Mx 18+1	Ø3.5x12mm N x 60+3	O x 8	Ø5x50mm Px 2
			
Ø20 Qx 32+2			

 
Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

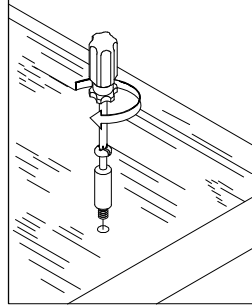

Step 2

Push the male camlock into the entry hole.

 2

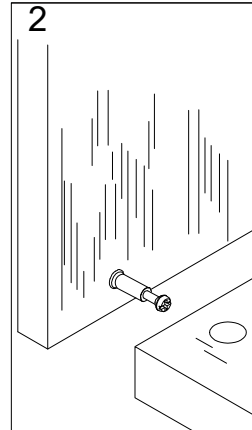


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

 3

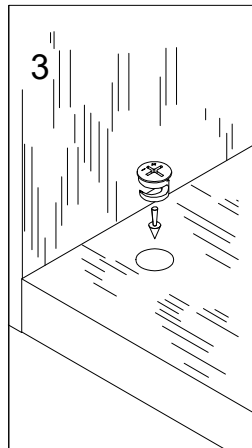


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

 
4

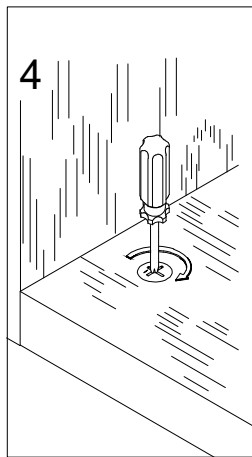

 
Step 1

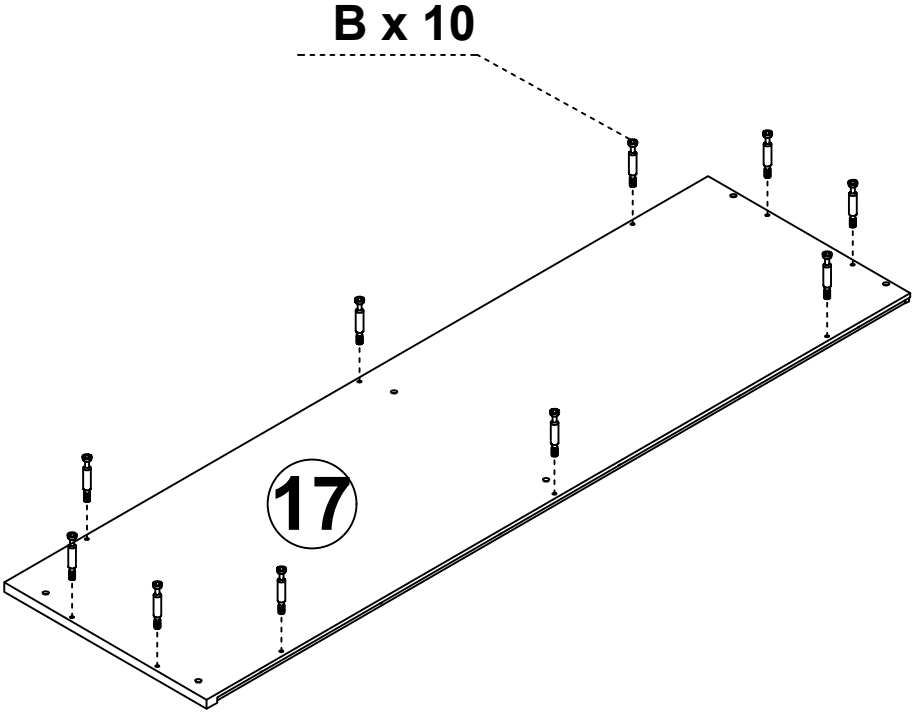

 
Step 2

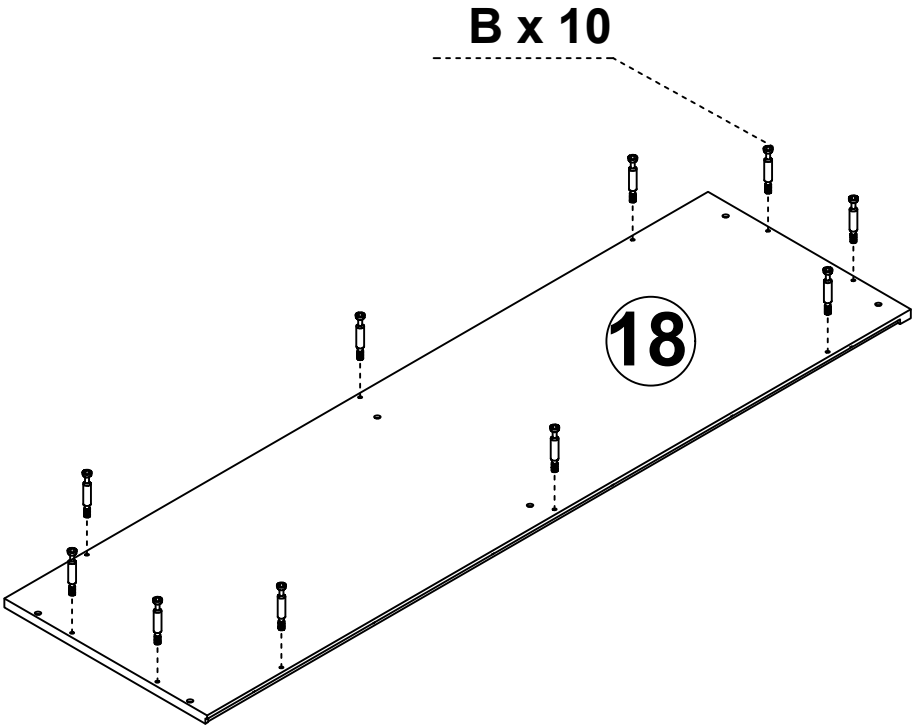

 
Step 3

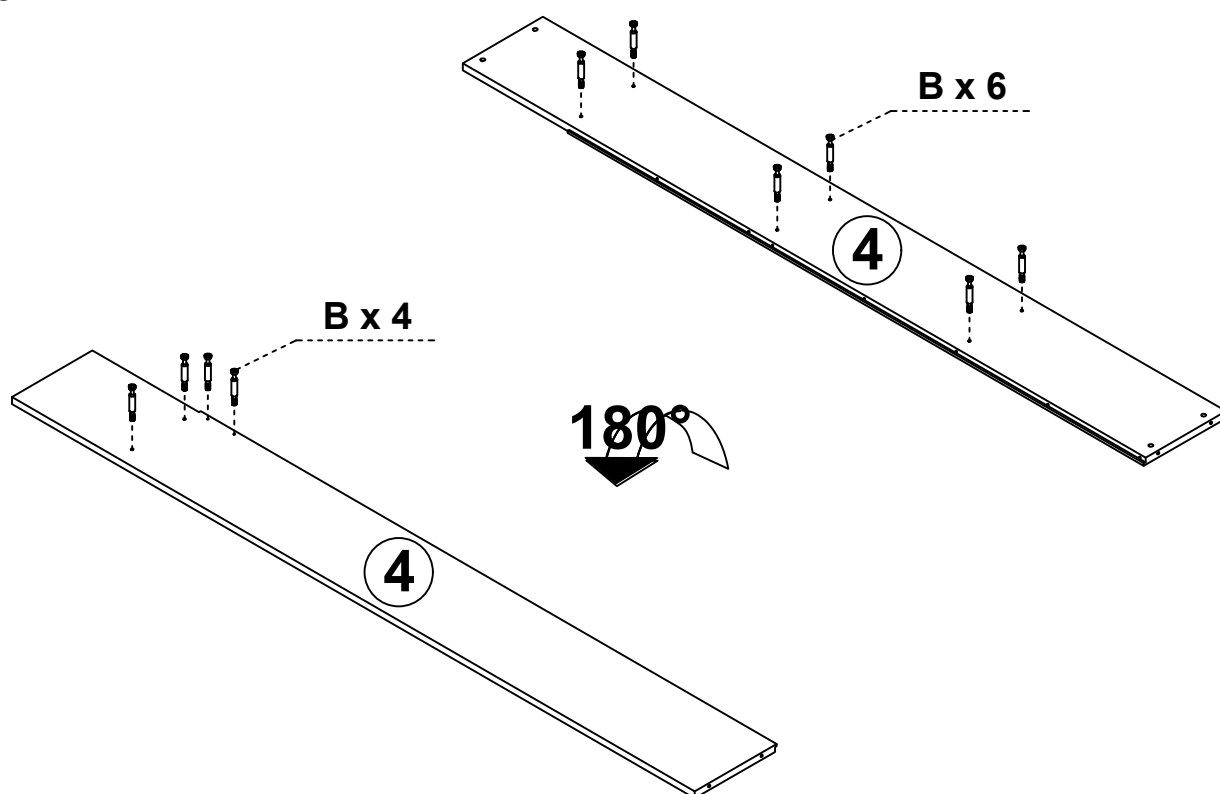

 
Step 4

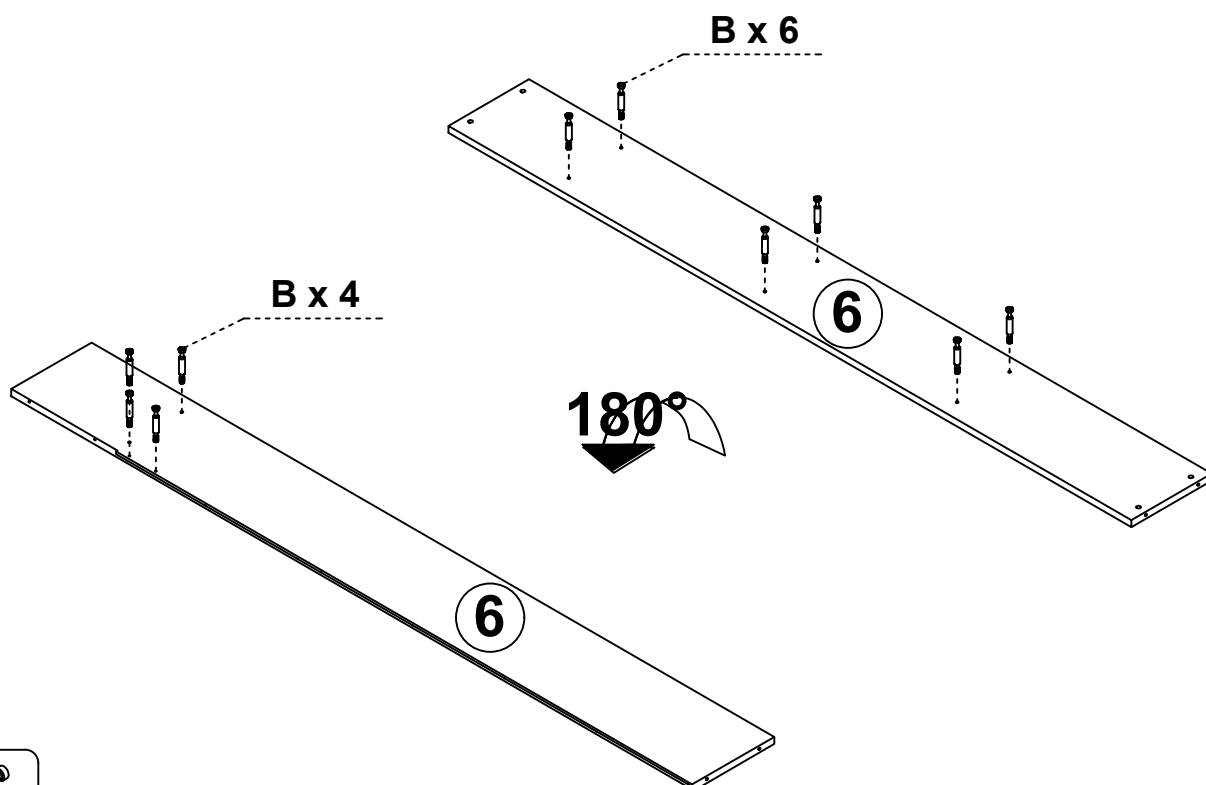

 
Step 5

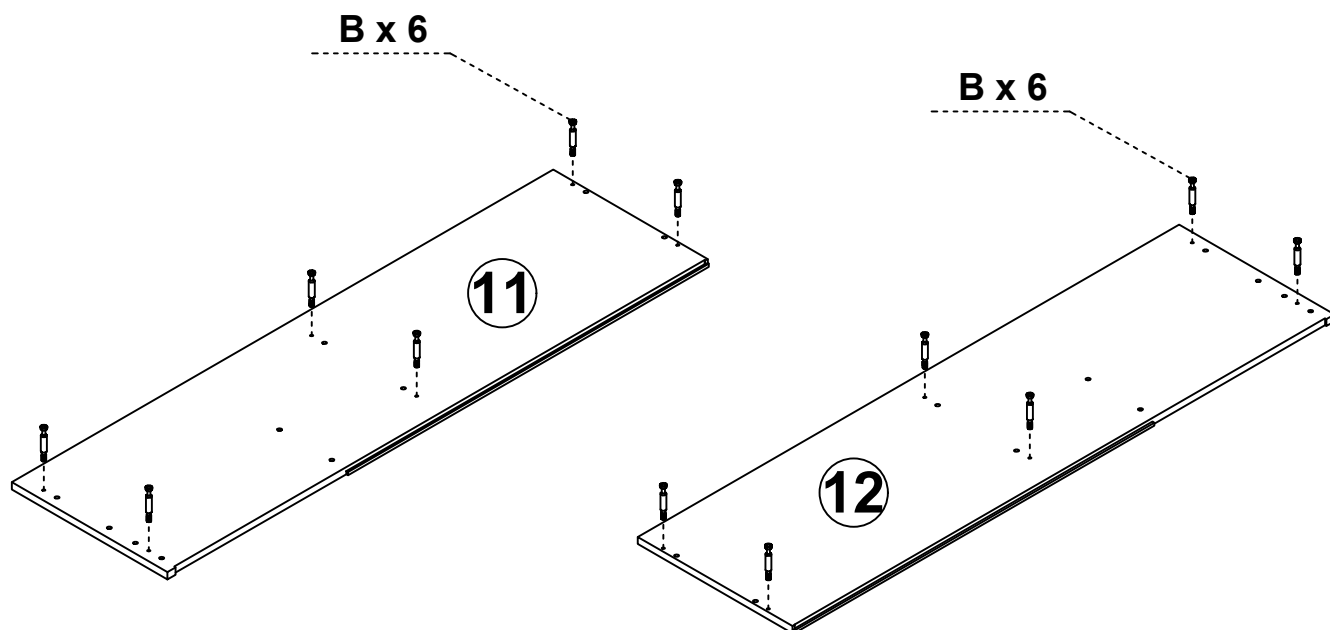

 
Step 6

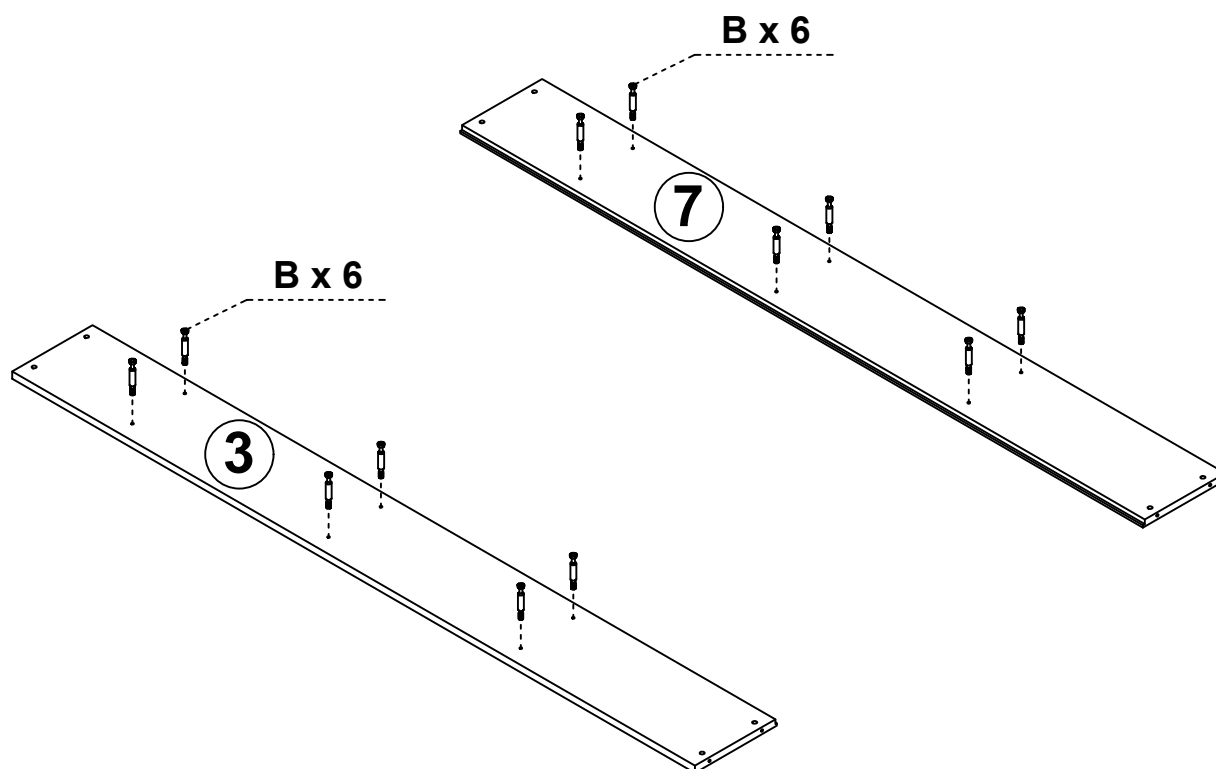


 
Step 7

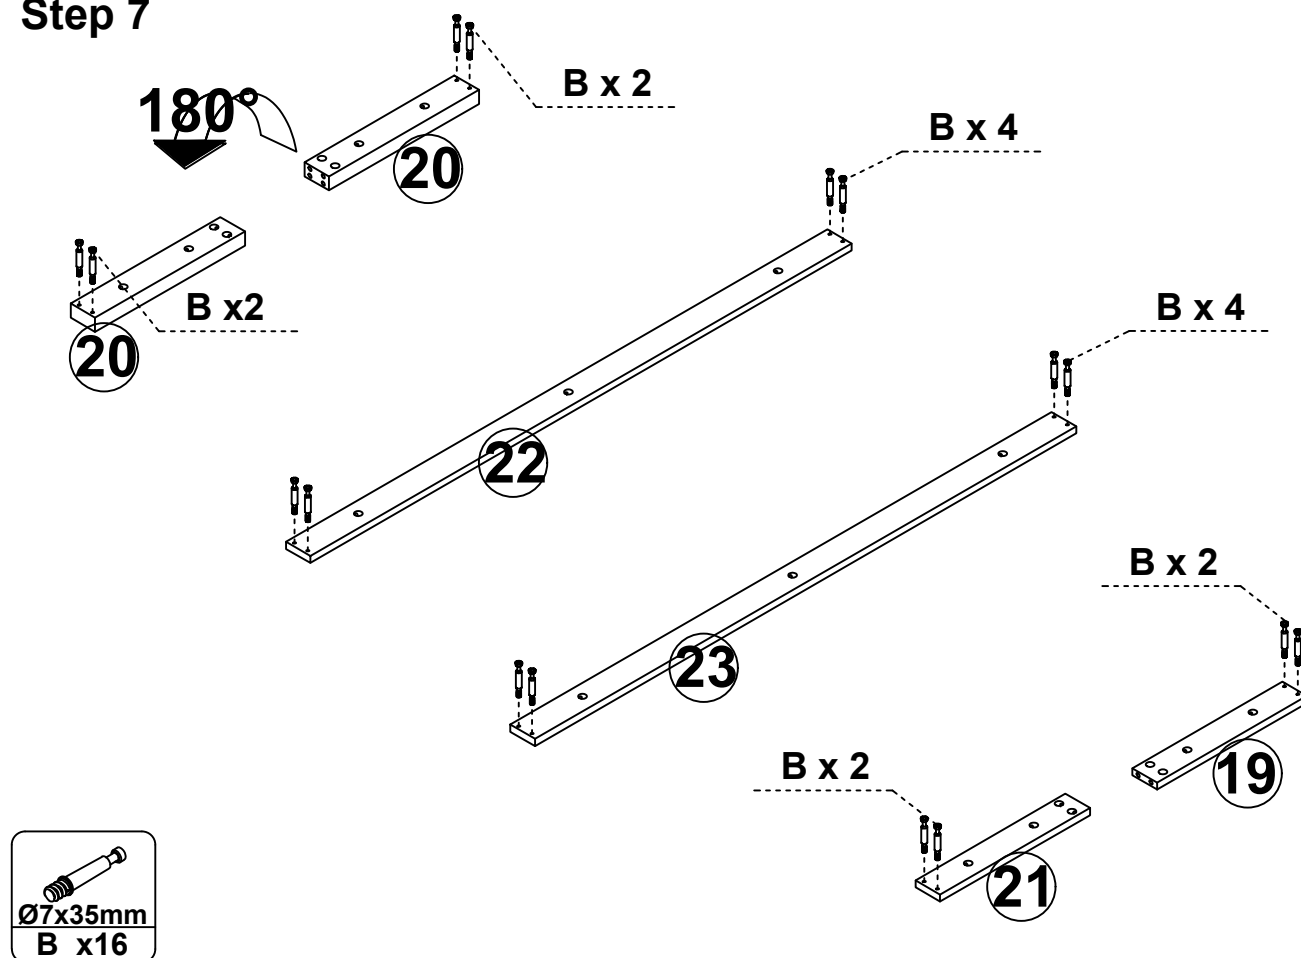

 
Step 8

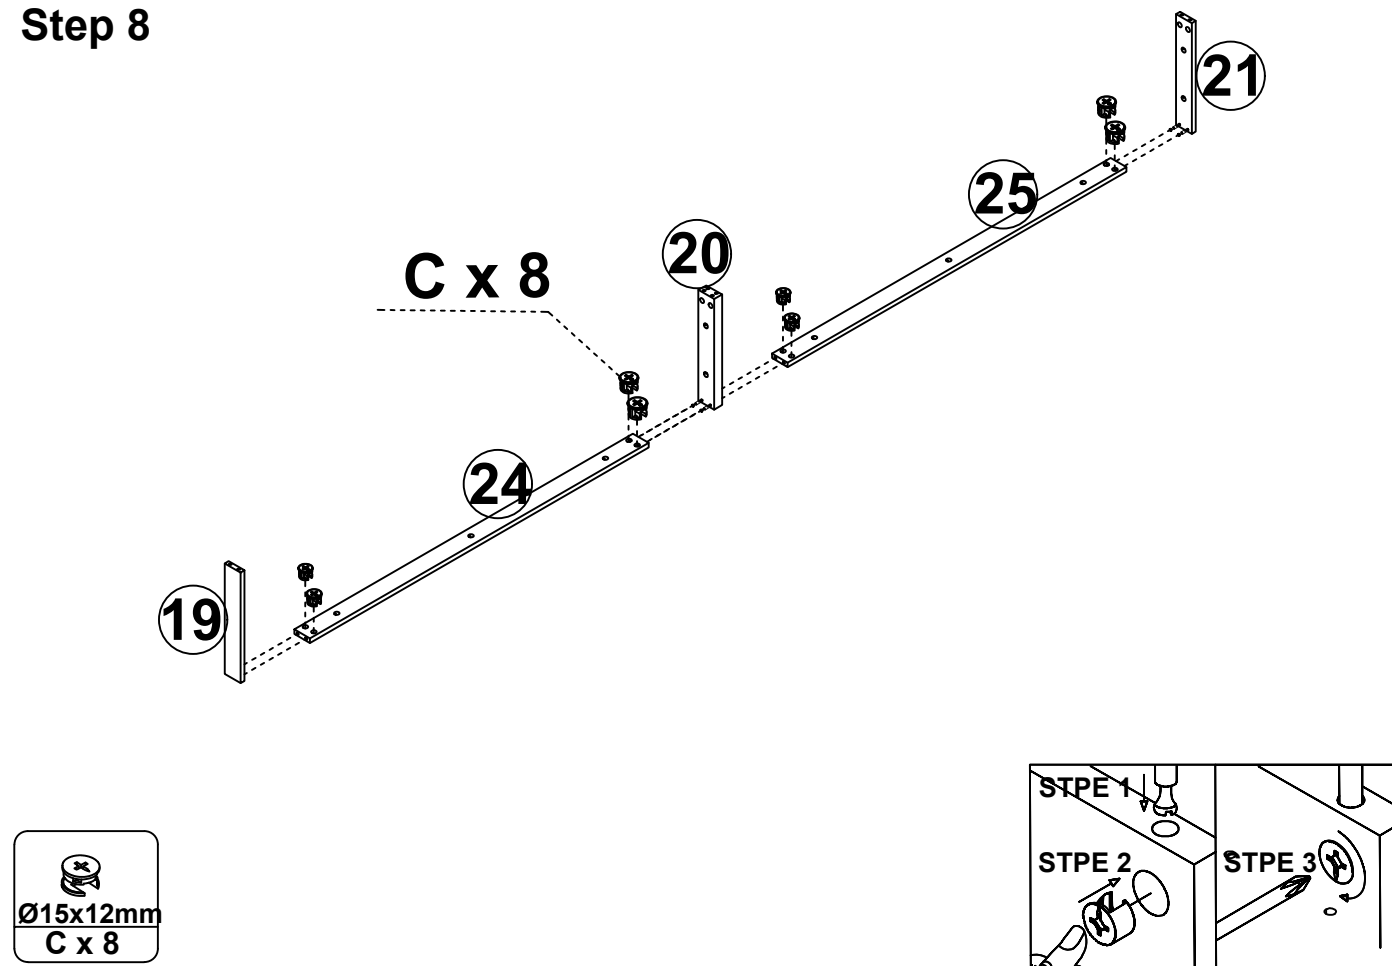

 
 
Step 9

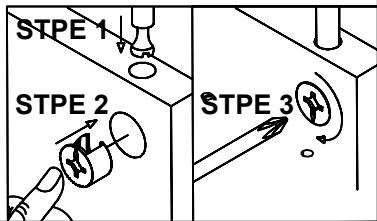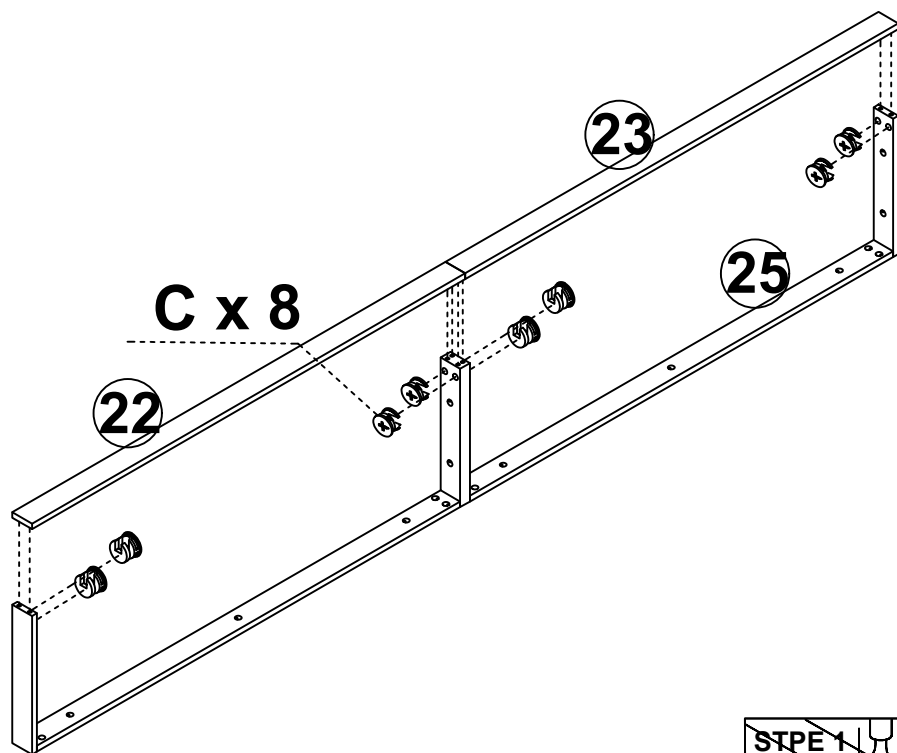

 
Step 10

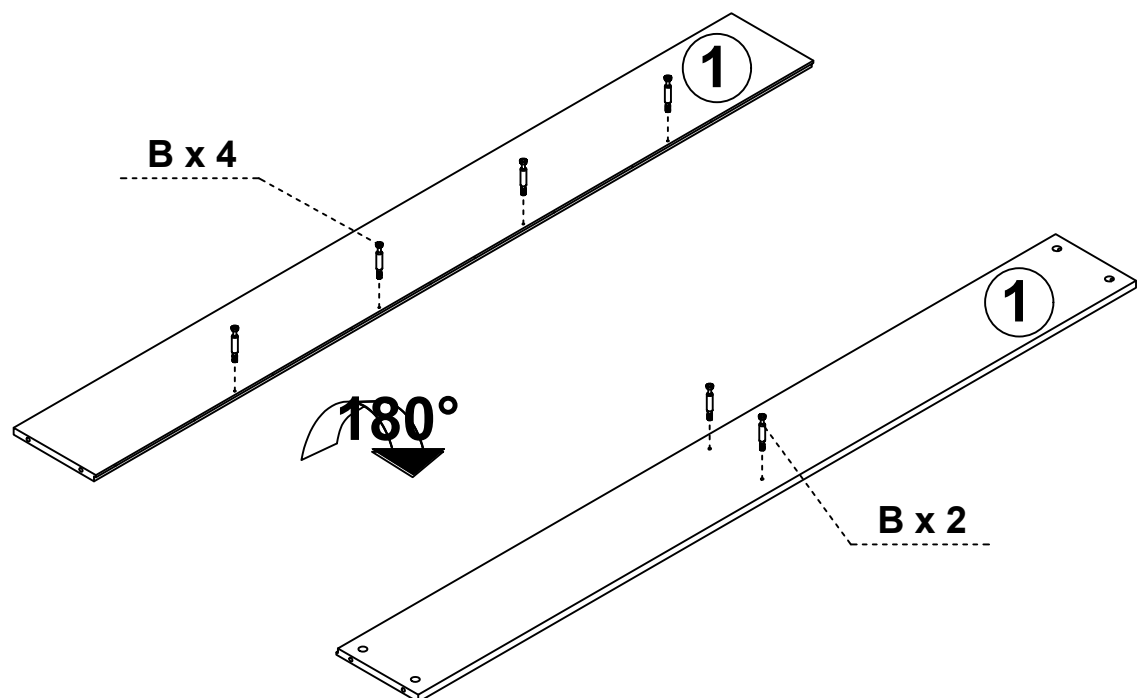

  Step 11

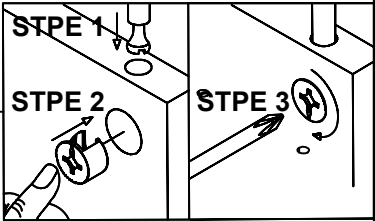
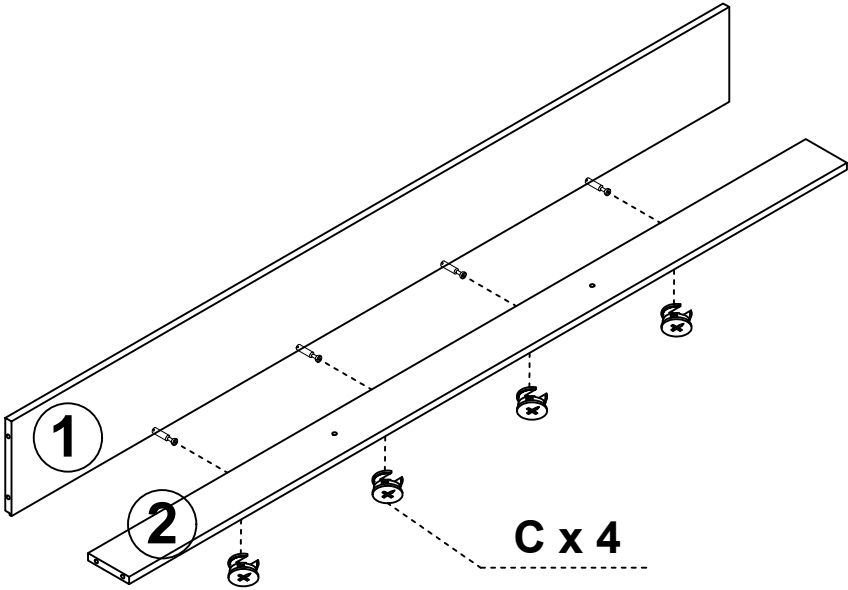


 Step 12

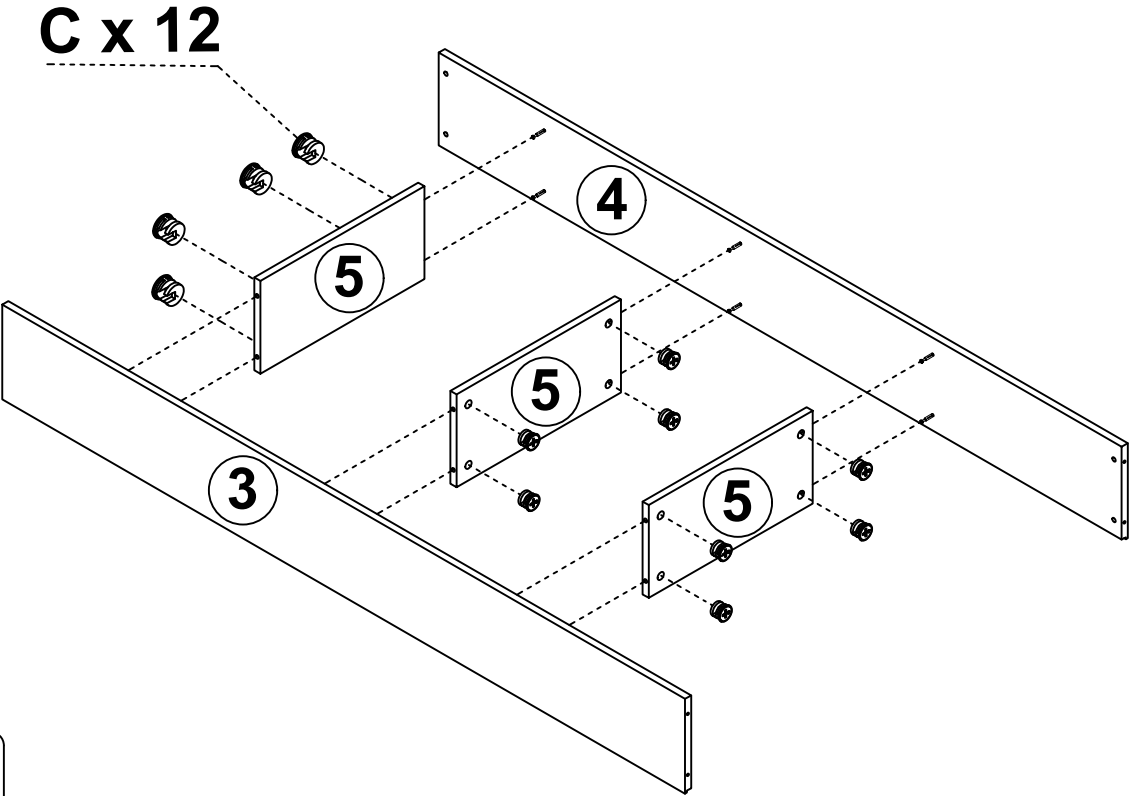


Step 13

  C x 12

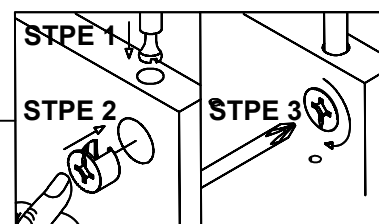
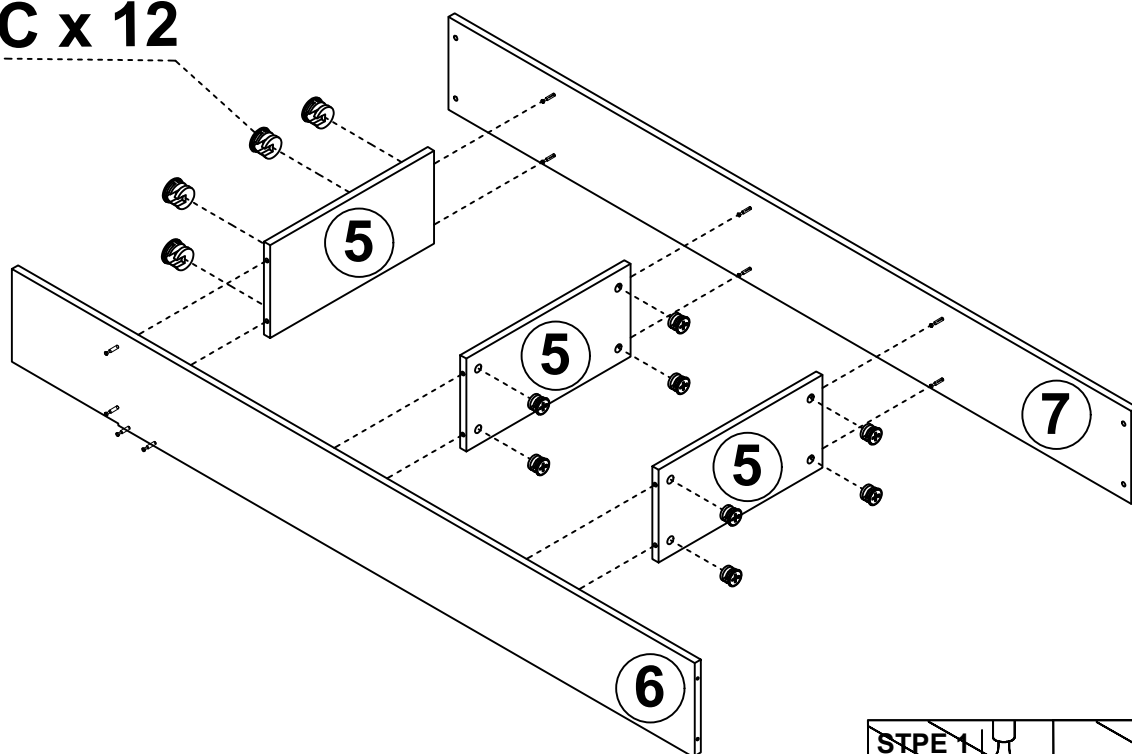


Step 14

 C x 6




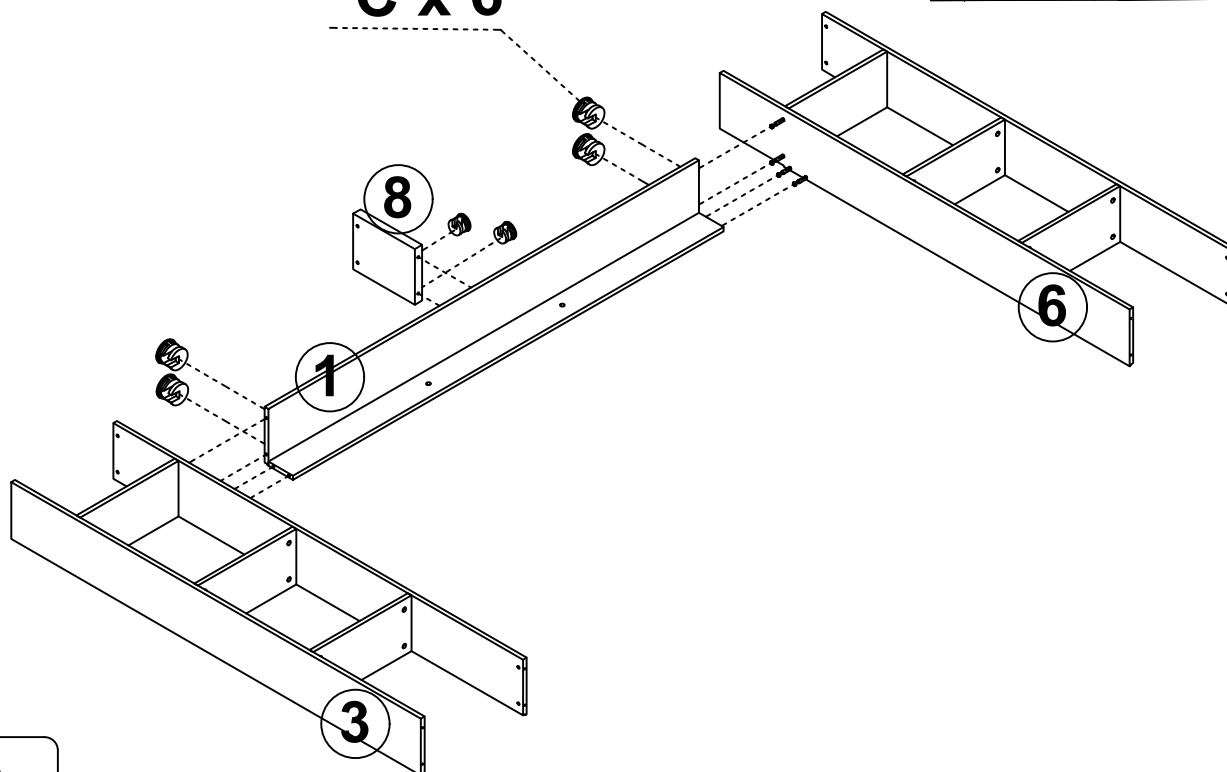


  Step 15

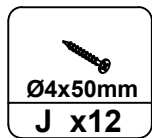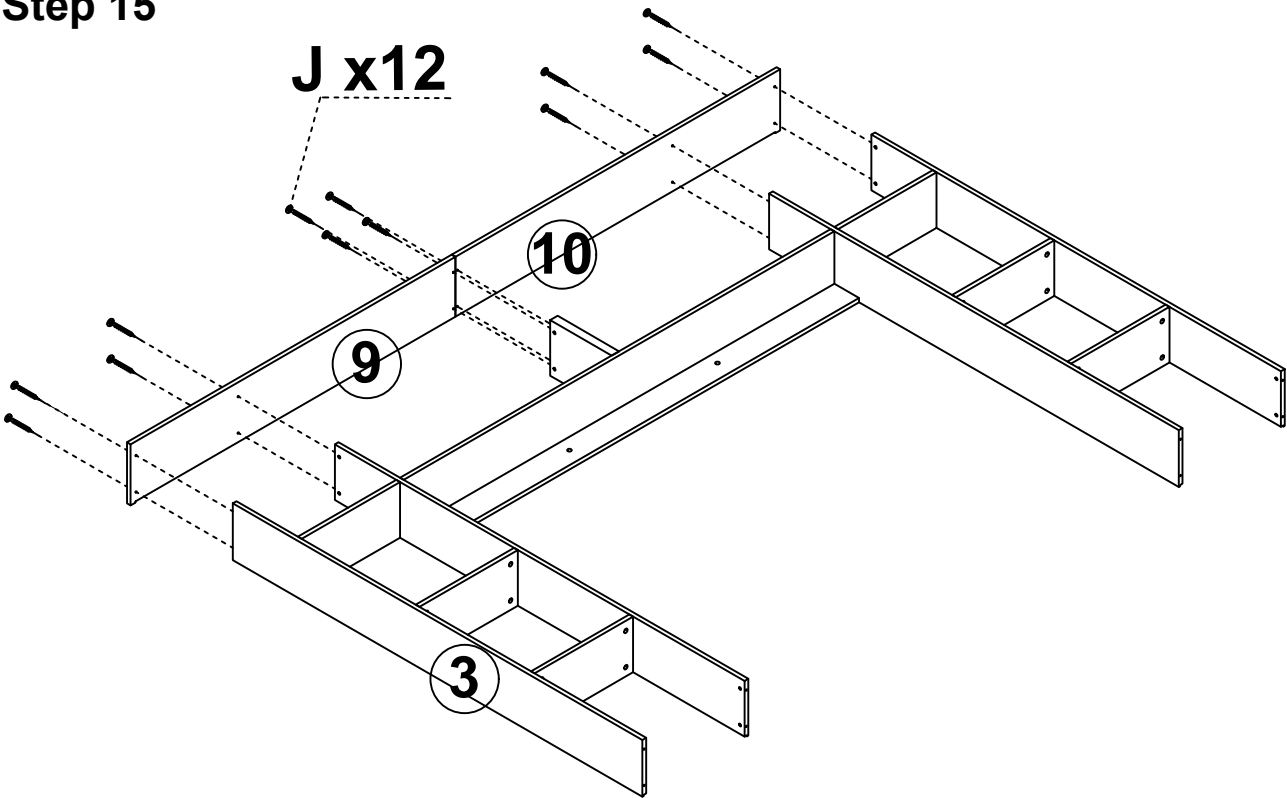


Step 16

    
x2

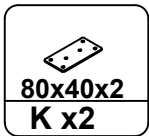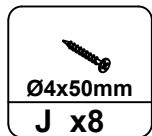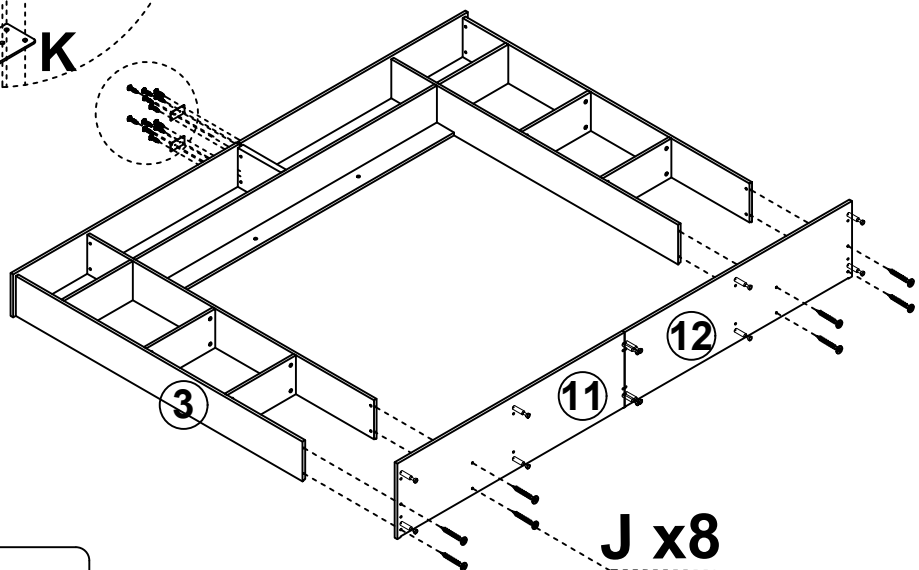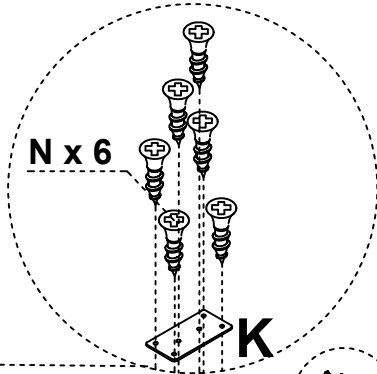


 
Step 17

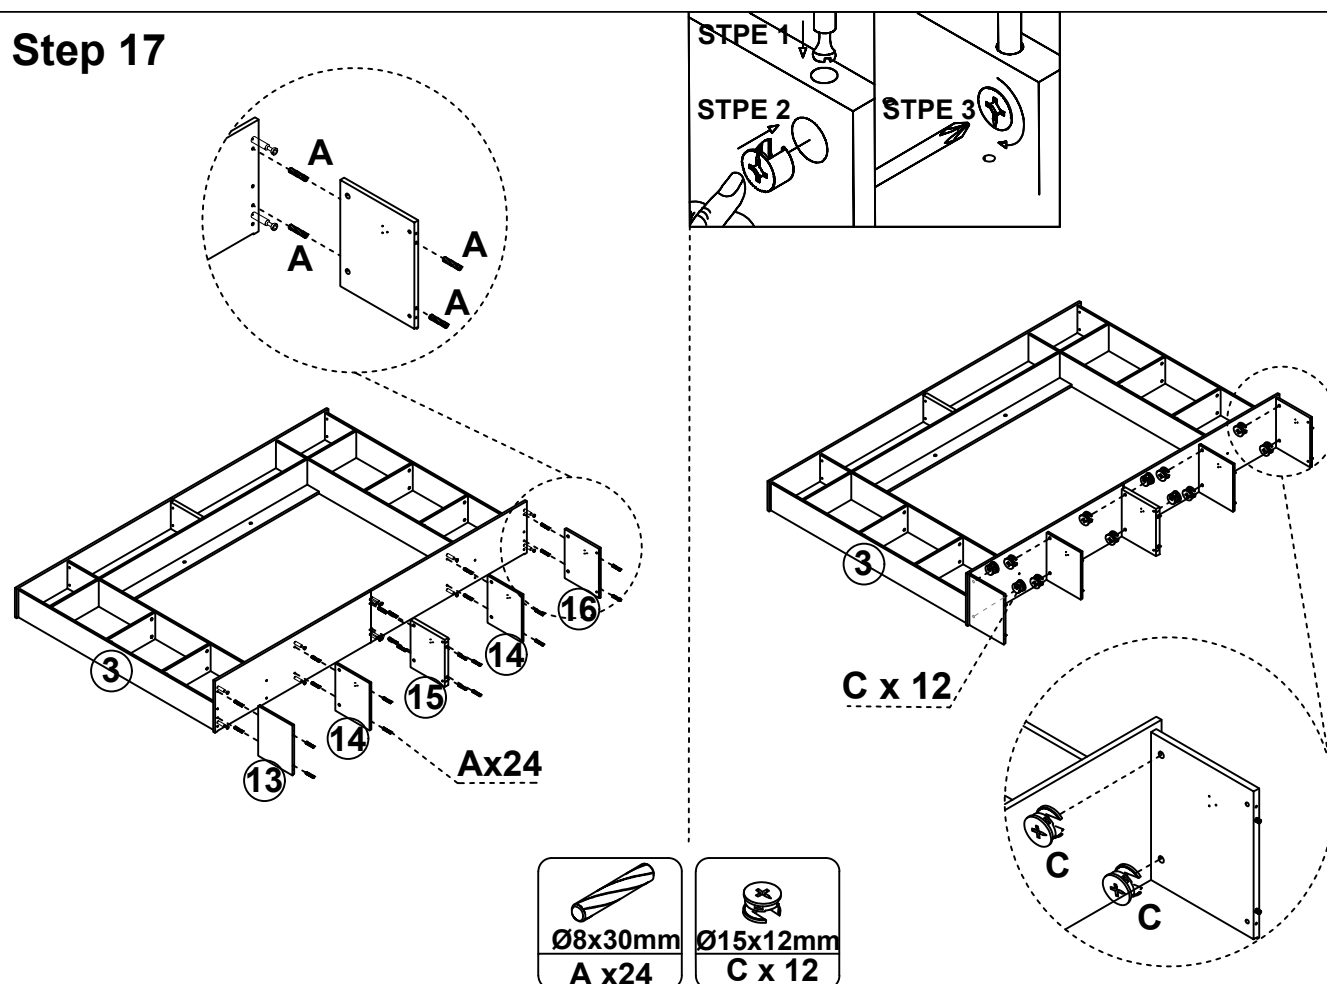

 
Step 18

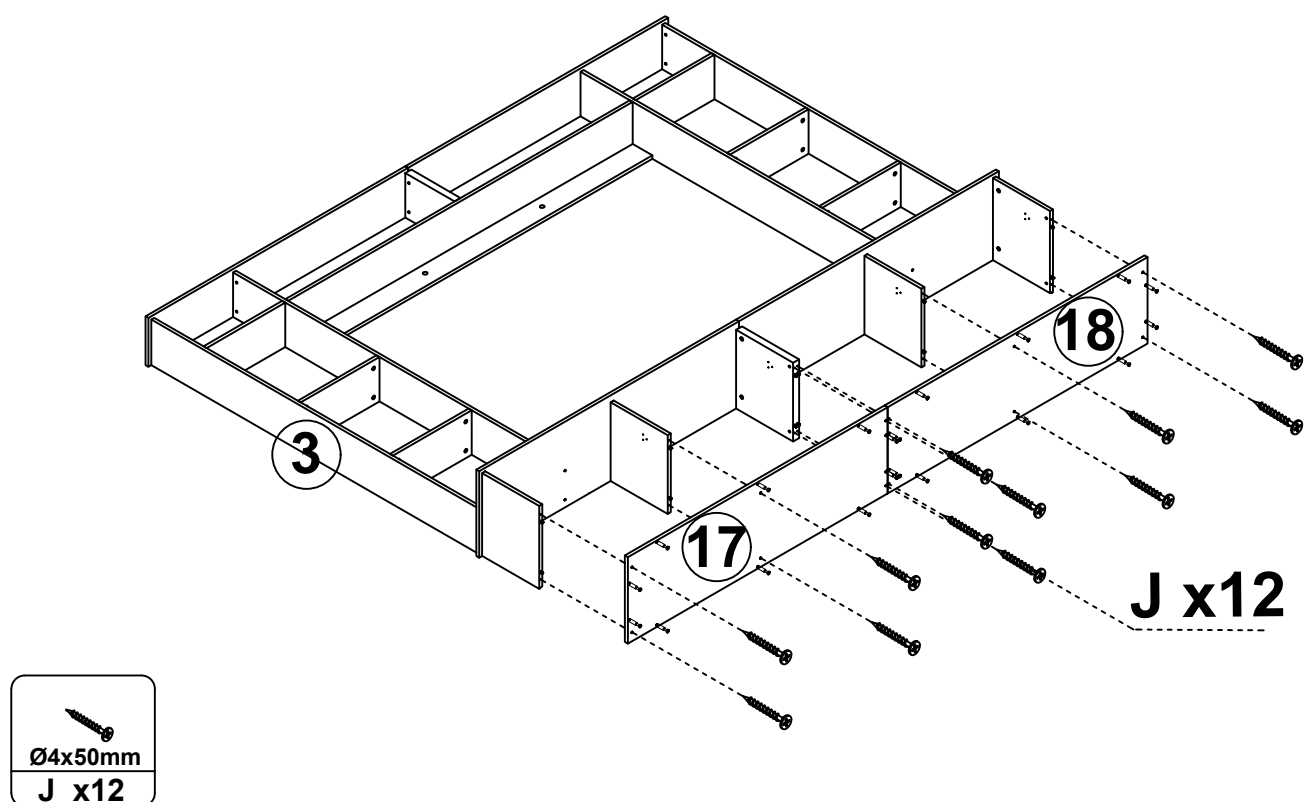

  Step 19

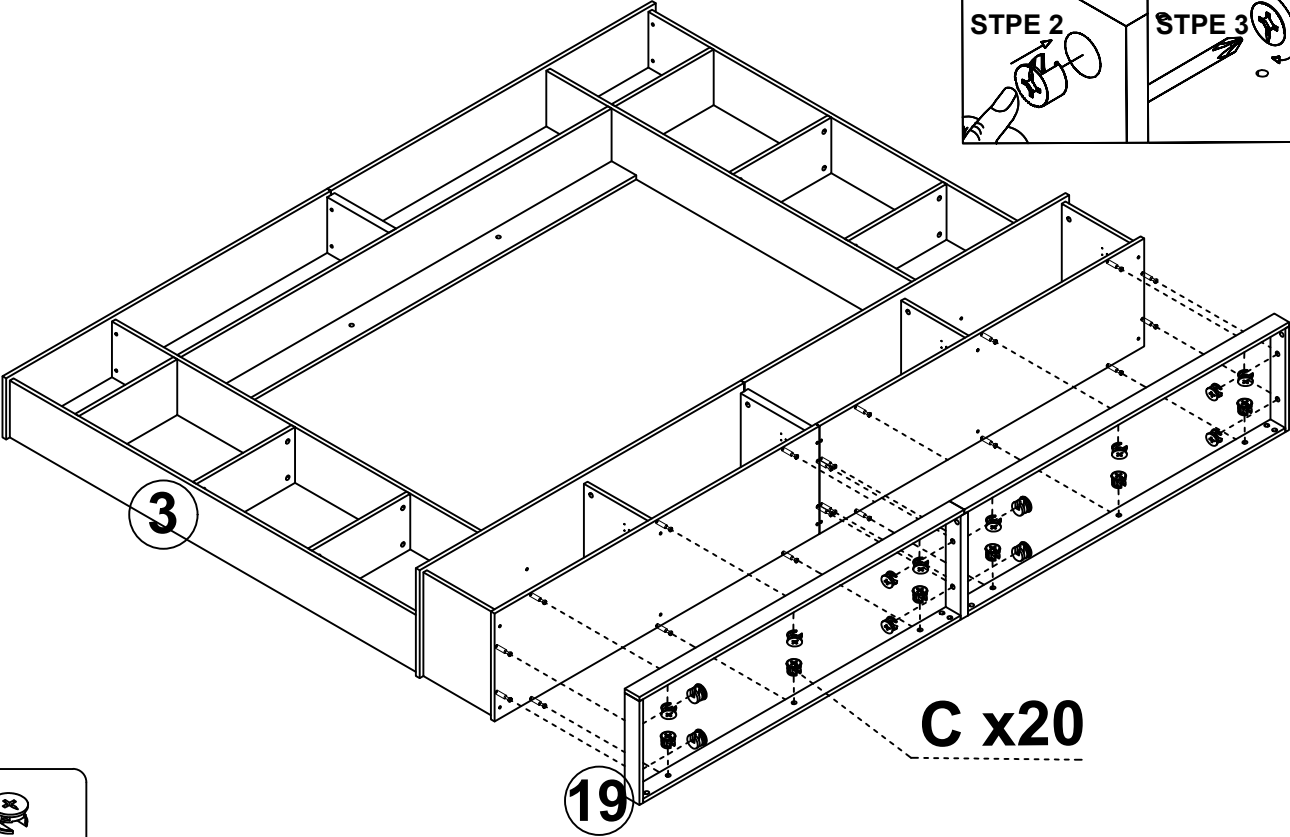
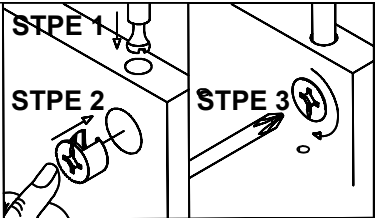


 Step 20

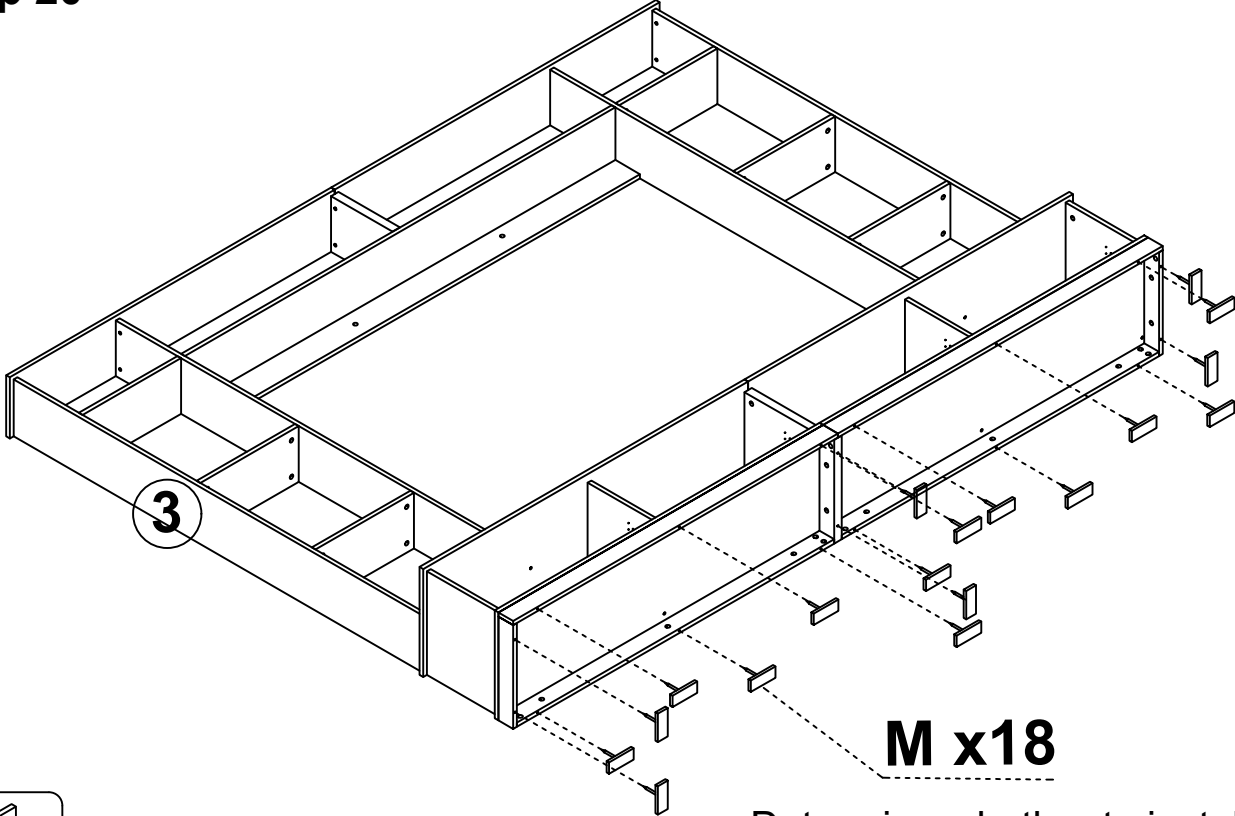


Determine whether to install foot nails based on the ground conditions

  Step 21

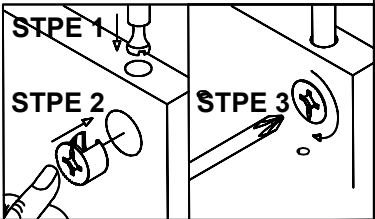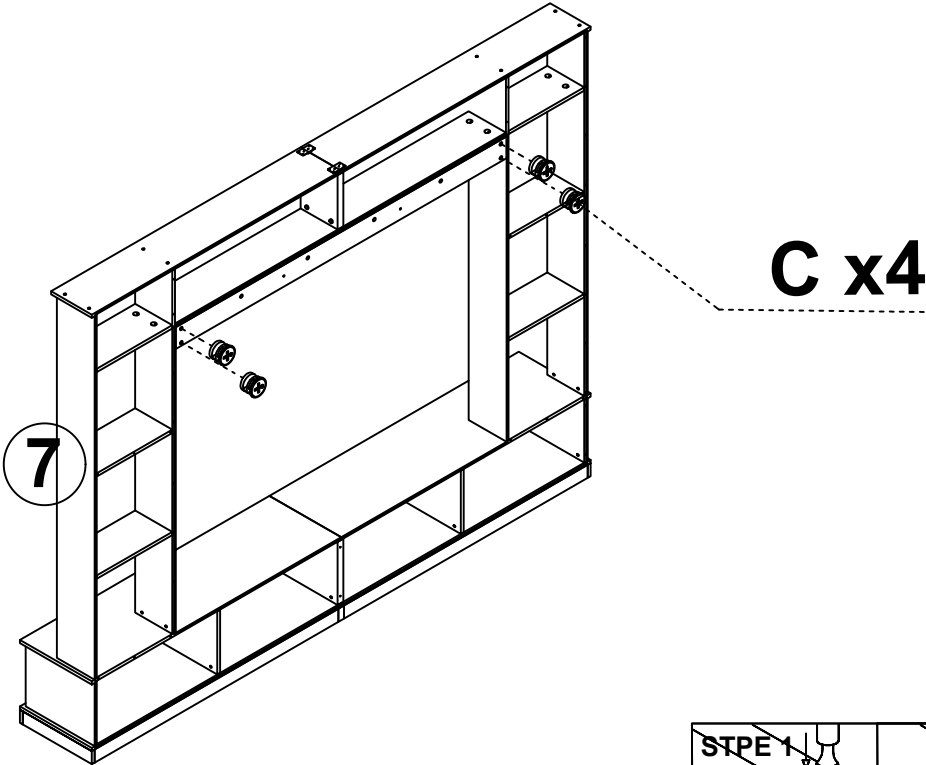


Step 22



 
Install the plates in order from low to high, locking the outer screws first

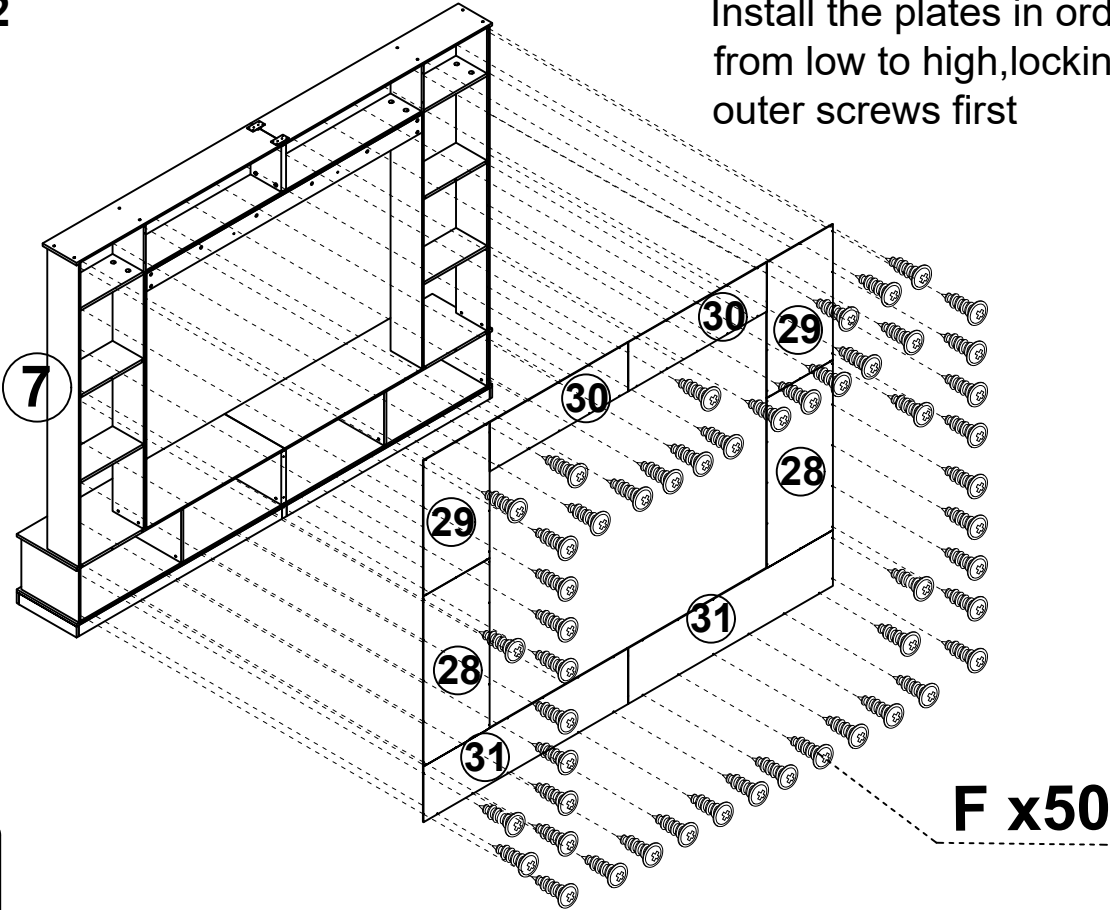


 
Step 23

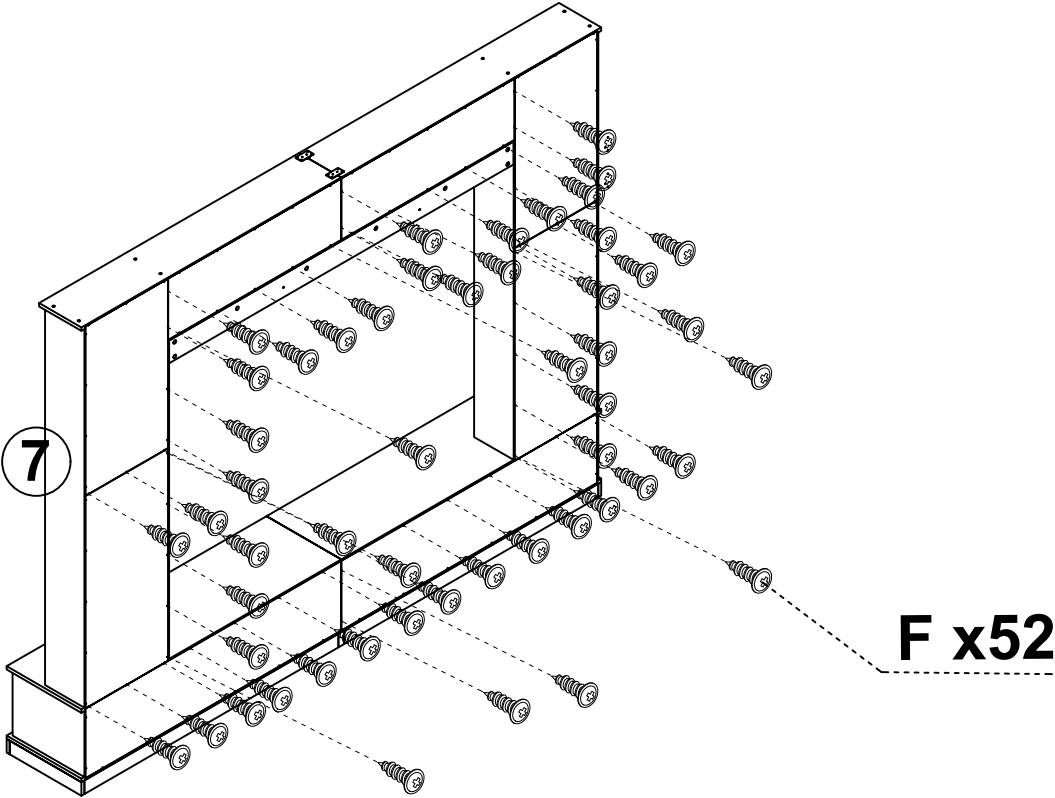

   
Step 24

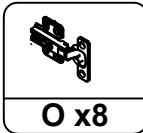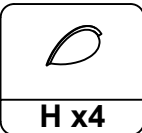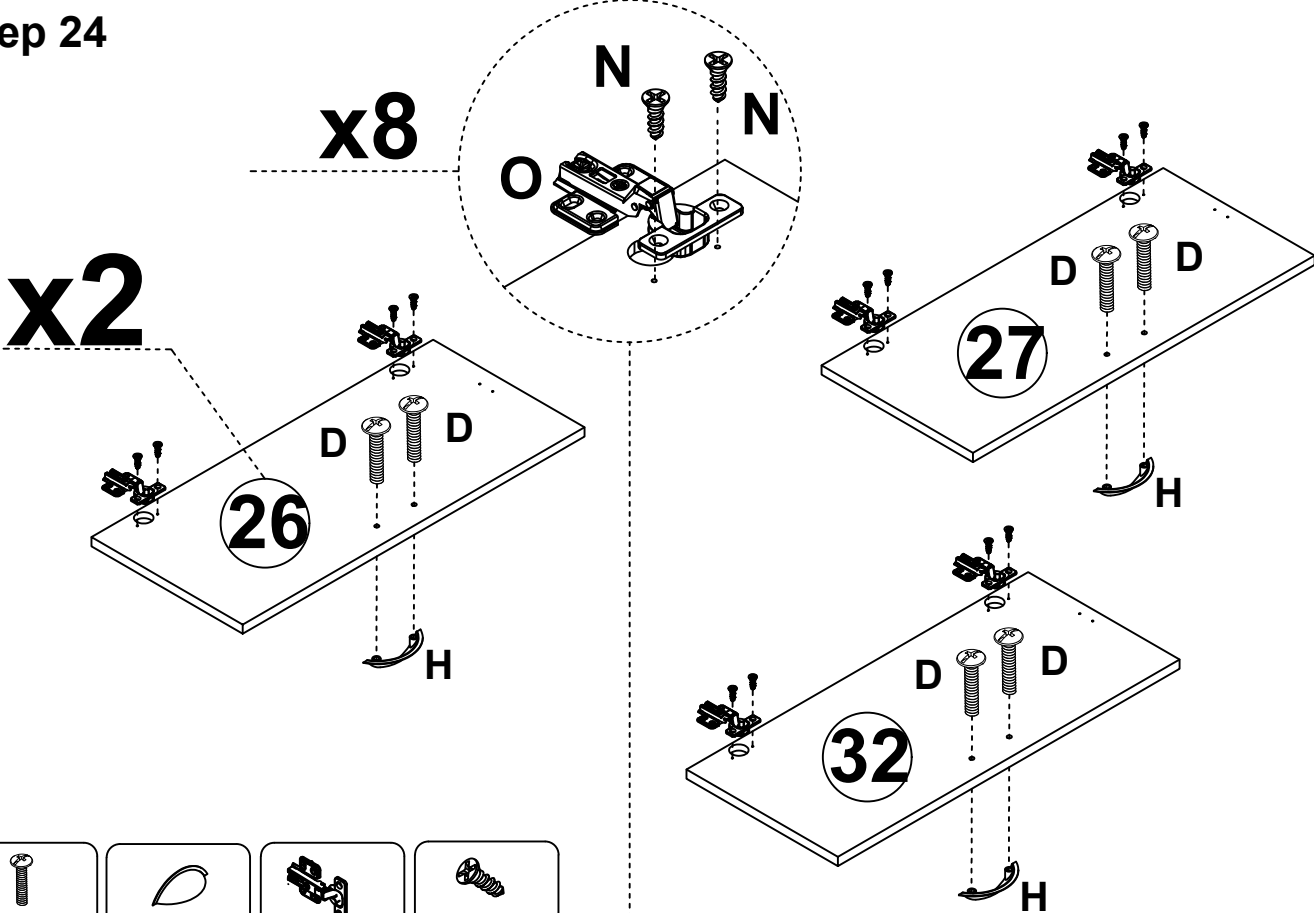

  Step 25


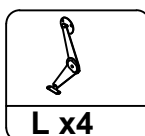
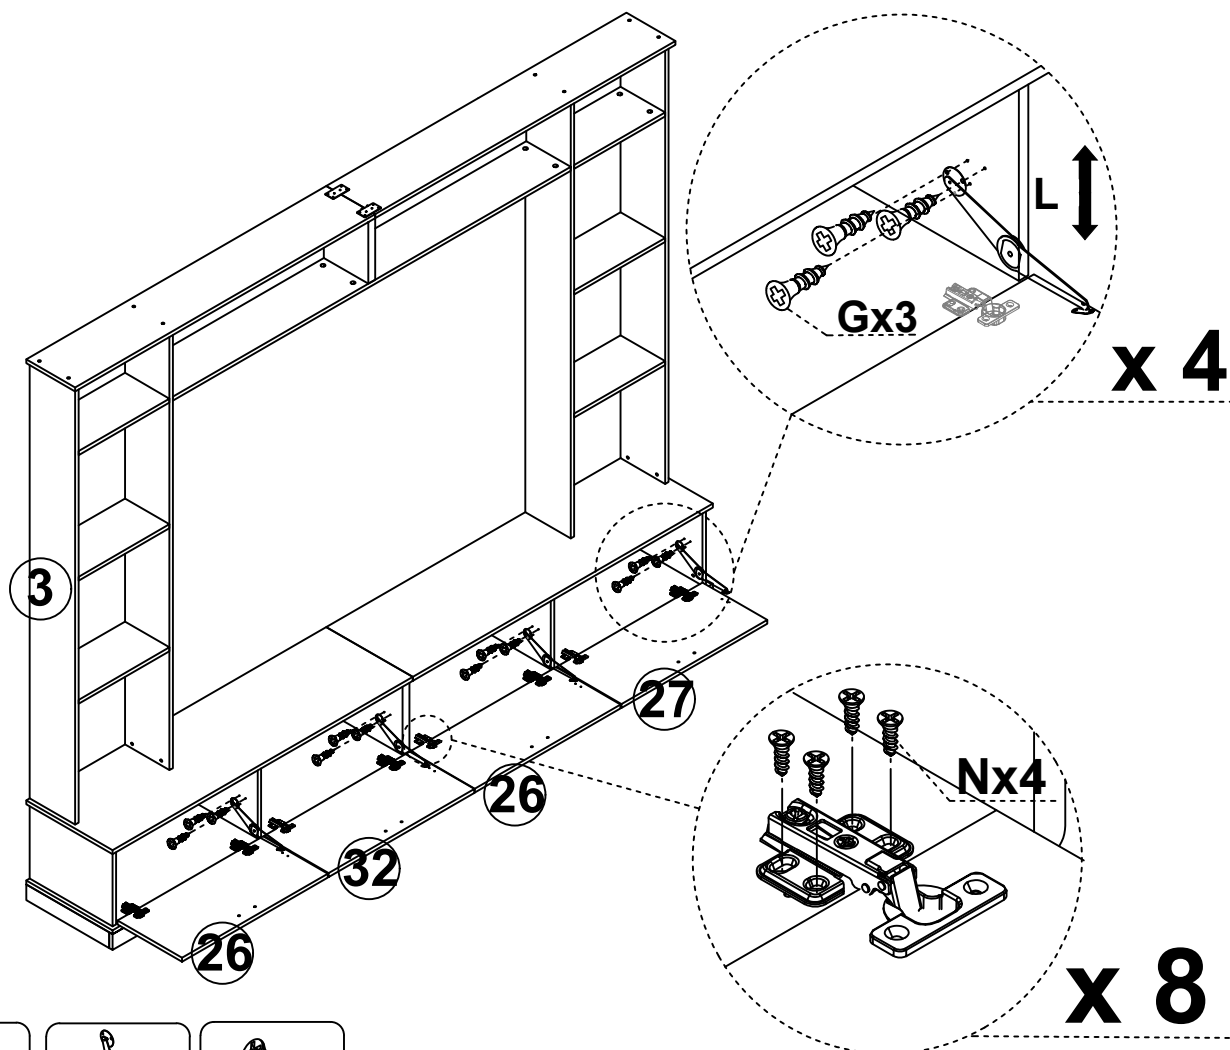


 When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect:

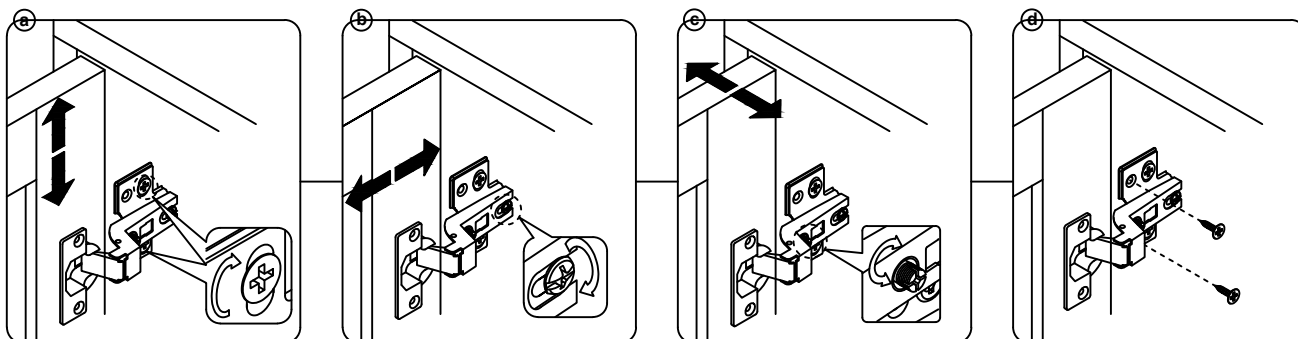

1. To adjust the doors up and down, please refer to step (a)
2. To adjust the distance between the doors and side panels, please refer to step(b)
3. To adjust the gap between two doors, please refer to step(c)
4. After the adjustment finished, please tight the screws, refer to step (d)

   
Step 26

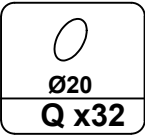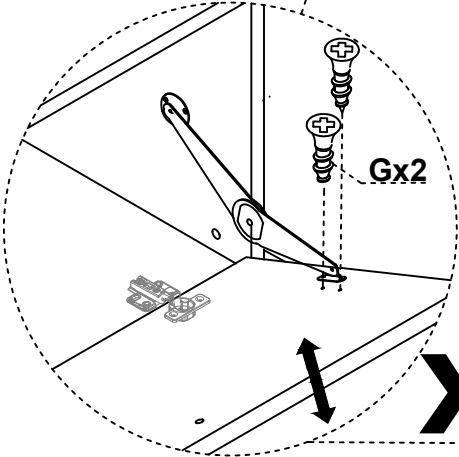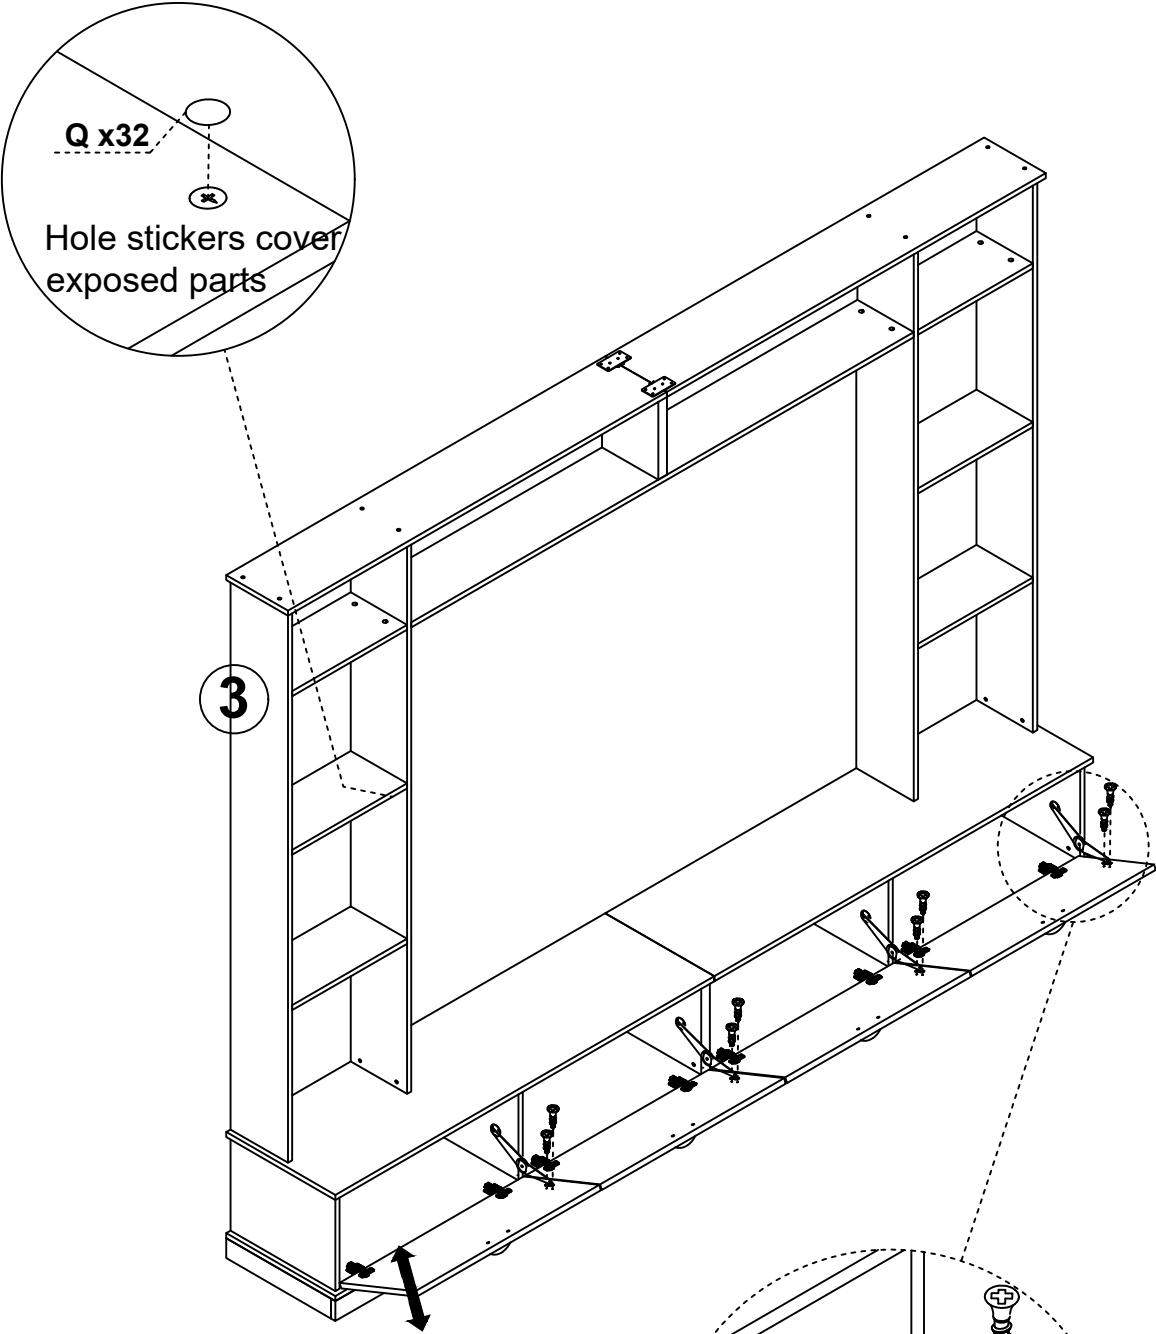


 
Step 27



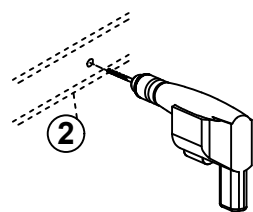

**Drilling Fixed Wall Hole with Percussion
Drill Through Plate Hole**

  step 1

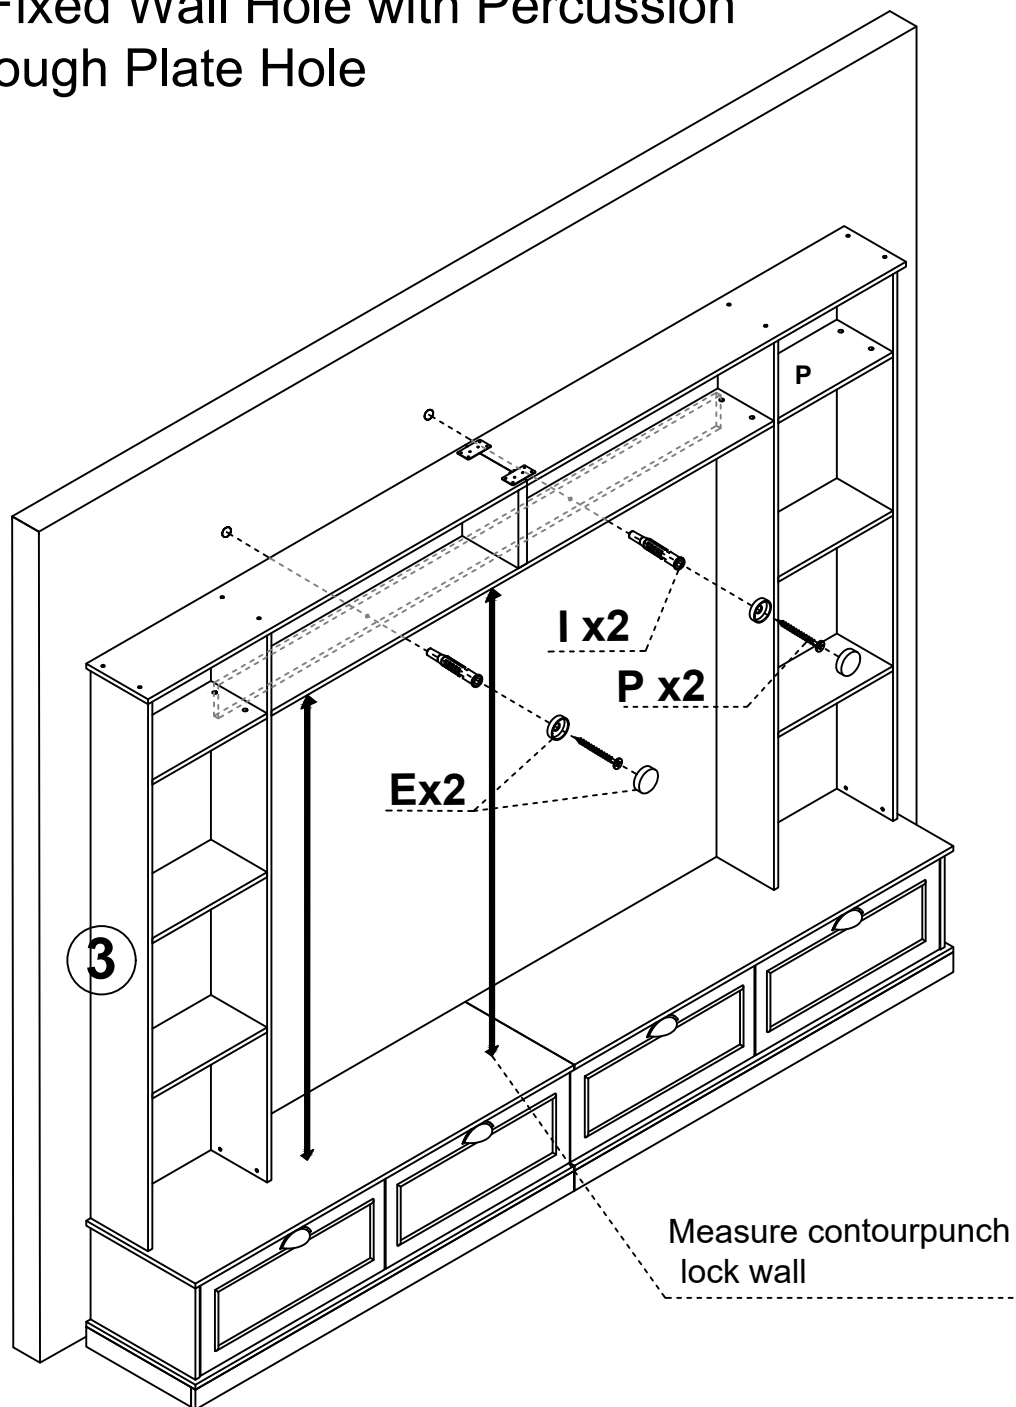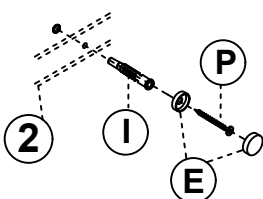

step 2



 Ø10x51 I x 2	 Ø5x50mm P x 2	 Ø16 E x 2	 Ø18
--	---	---	--

Step 28

