

OWNER'S MANUAL

10FT SCREEN HOUSE

Model No.: ST010K / ST010G



Read these instructions carefully and retain them for future use.

Customer Service





service@werph.com

www.werph.com

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS SCREEN HOUSE FABRIC

This screen house is made of flame-resistant fabric which meets CPAI-84 specifications. IT IS NOT FIRE-PROOF. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the product fabric may render the flame-resistant properties ineffective. Do not keep fuel, or flammable items for replenishing the fuel, inside the screen house.

- The screen room opens with force. Be careful when opening and make sure to slowly loosen the belt away from your face, body and other objects.
- Do not assemble or use the screen house close to a bonfire, fireworks, etc. Flying sparks can create holes in the tent fabric.
- DO NOT recommend using when the wind force reaches level 6 (10.8-13.8 m/s). Otherwise the screen house will be blown down or get personal injuries.

When in use:

- Choose a flat, well-drained area with firm ground to pitch the screen house.
- Choose an area where there is no chance of avalanches, landslides, wind gusts or sudden flooding.
- · Secure with all stakes and guylines provided to prevent property damage or personal injury.
- Do not use the screen house in rainy days as it is not waterproof.

Please note:

- Do not leave your tent set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.
- DO not drag the product (including the handbag) on the ground, which will cause the cloth to wear and tear.
- When not in use, fold down the screen house and packed into the handbag.

A CALIFORNIA PROP 65 WARNING

This product may contain Polycyclic aromatichydrocarbons (PAHs) which is known to the state of California to cause cancer birth defects andother reproductive harm. For more information go to: www.P65Warnings.ca.gov.

Parts List

No.	Image	QTY
1		1
2	Werph	1
3	30	6
4	7	12
5		3

2

Assemble Instructions

1 The screen house will pop up automatically. Please make sure to slowly loosen the belt away from your face, body and other objects.





3

Assemble Instructions





Assemble Instructions



6



FOLD DOWN



Step1 Pull out the groud stakes, remove the windproof ropes.



FOLD DOWN

3

4

Fold the top panel of the screen house to the bottom of black gauze, and hold it down with your knee. At this time, the screen house will be separated into the right and left sections.



Pull them towards yourself, make the right section overlap the left section a little, and then hold them with your right hand.



5

6

Lift your knee, push inwards the position held down by your knee previously with your left hand, and hold it down with your right hand to complete the fold-down.

FOLD DOWN



Bind and hold the collapsed screen house in place with the band, and put in all accessories. Store them in the handbag.



Werph warrants to the original consumer-purchaser only that this product shall be free from defects in workmanship and materials after correct assembly and under normal and reasonable home use for the periods, normal residential use and recommended care for 1-Year Limited Warranty from the date of original retail purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Requests for expedited shipments of warranted parts will be at the consumer's / purchaser's expense. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown on the purchaser's receipt.

This warranty is valid for the original consumer / purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse or product misuse whether performed by a contractor, service company or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement, nor for incidental or consequential damage.

service@werph.com



6 1-470-589-8732

(V) Mon-Fri, 8:30 AM-5:30 PM, EST





6 1-470-589-8732

() Mon-Fri, 8:30 AM-5:30 PM, EST