




**ITEM#: 504-900-K1**

**IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY**

## **Lemoore Deep Seating Set**

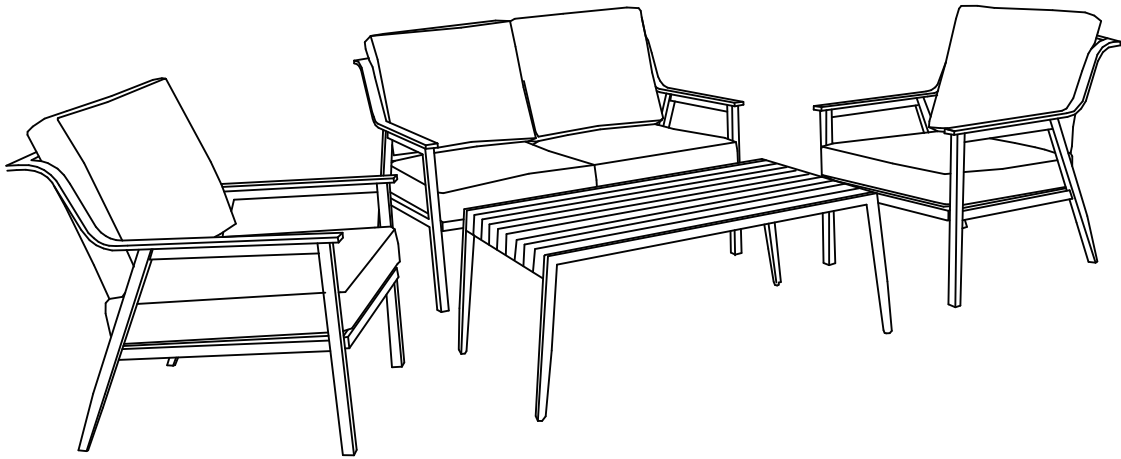

### **Customer Service**

**E-Mail : [customerservice@foremostgroups.com](mailto:customerservice@foremostgroups.com)**

**8:30a.m. – 5:00p.m. EST, M-F**

**Toll Free 1-855-390-5474**

**(Int.) 001-855-286-4931**

**Fax: (973) 428-8026**

**Website: [www.foremostgroups.com](http://www.foremostgroups.com)**

**906 Murray Road, East Hanover, NJ 07936, US**

## Assembly Instruction for the Club Chair






 
 
 




 
### WARNING!

- ☒ Chairs have a 250 lbs weight capacity.
- ☒ Hang cushion over chair frame to dry if it gets wet to prevent mold/mildew.

Please read instructions carefully and thoroughly before assembling. Check parts against the parts list to make sure you have all the parts needed for proper assembly. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly.

**Place the chair on a non-abrasive flat surface to prevent scratching.**

### PARTS LIST

PART	DESCRIPTION	PICTURE	QTY
A	Arm		4
B	Left Leg		2
C	Right Leg		2
D	Back Panel		2
E	Seat Panel		2
F	M6X45 Bolt		8
G	M6X25 Bolt		8
H	M6X15 Bolt		8
I	M6 Washer		24
J	M6 Lock Washer		24
K	Socket Wrench		1
L	Seat Cushion		2
M	Back Cushion		2

- 1 Attach the arm (A) to the left leg (B) with M6\*40 bolt (F), M6 lock washer (J) and M6 washers (I) using socket wrench (K). The same operation to the arm (A) and the right leg (C). See figure 1.

Fully tighten the bolts.

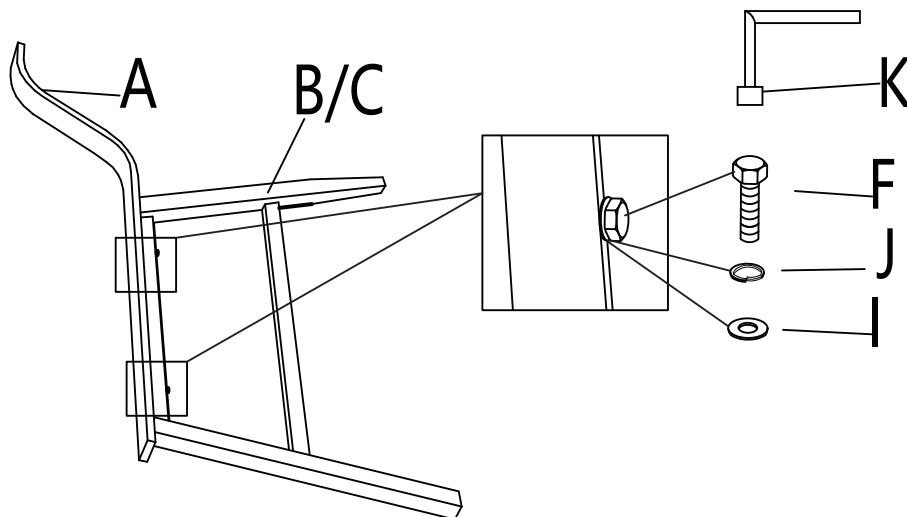


Figure 1

- 2 Attach the back panel (D) to the seat panel (E) with M6\*15 bolt (H), M6 lock washer (J) and M6 washers (I) using socket wrench (K). See figure 2.

Do not fully tighten the bolts until the end of step 3.

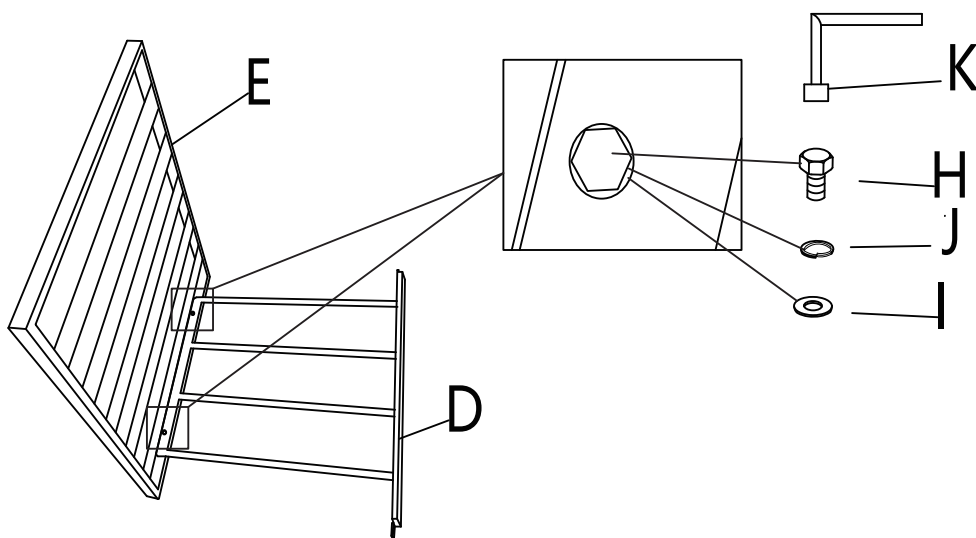


Figure 2

- 3 Align the arm and leg assembled in step 1 to the back panel and seat panel assembled in step 2. Secure the arm to the back panel with M6\*15 bolt (H) M6 lock washer (J) and M6 washers (I), then the leg to the seat panel with M6\*25 bolt (G), M6 lock washer (J) and M6 washers (I). See figure 3.

Fully tighten the bolts when the bolts are in place.

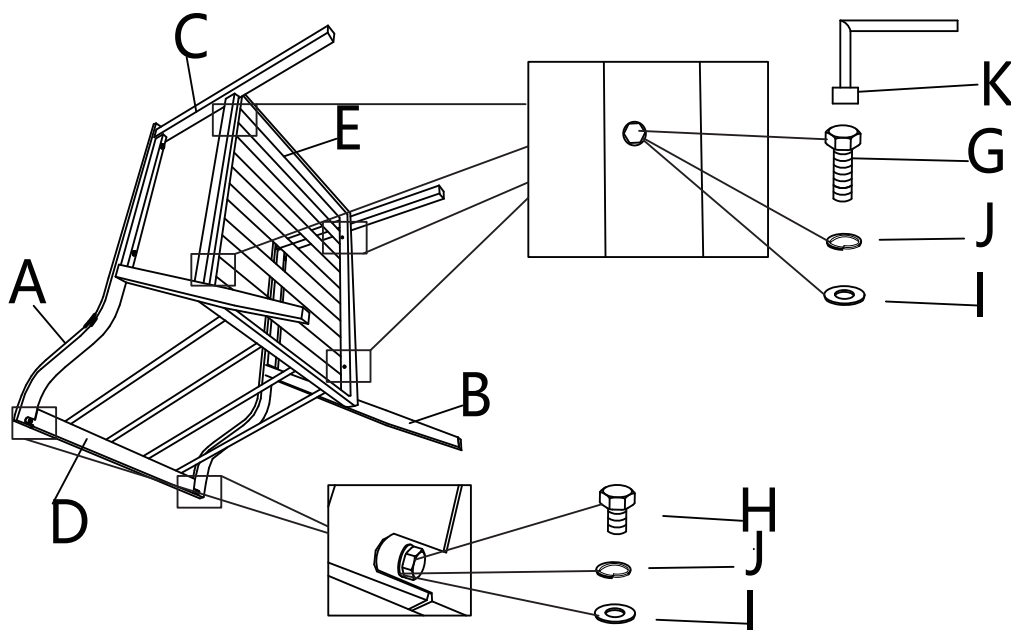


Figure 3

- 4 Turn the chair upright. Put the seat cushion (L) and the back cushion (M) on the chair. See figure 4.

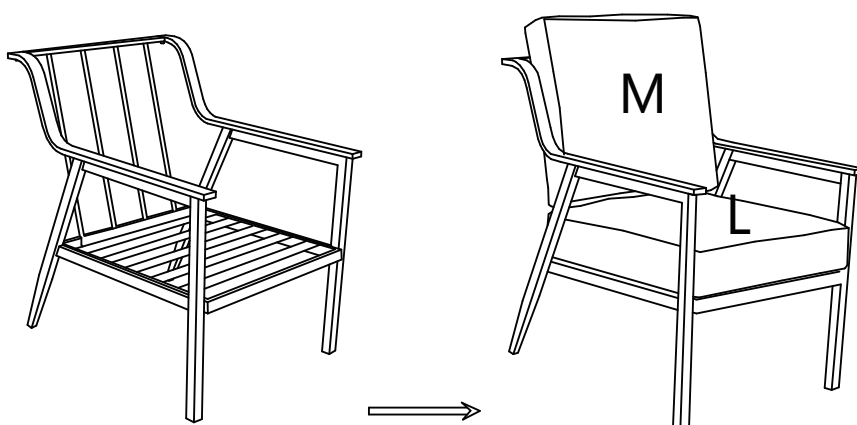


Figure 4

## Assembly Instruction for the Loveseat





 

 
 


 


### WARNING!

- ☒ Loveseat have a 500 lbs weight capacity.
- ☒ Hang cushion over chair frame to dry if it gets wet to prevent mold/mildew.

Please read instructions carefully and thoroughly before assembling. Check parts against the parts list to make sure you have all the parts needed for proper assembly. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly.

**Place the loveseat on a non - abrasive flat surface to prevent scratching.**

### PARTS LIST

PART	DESCRIPTION	PICTURE	QTY
A	Arm		2
B	Left Leg		1
C	Right Leg		1
D	Back Panel		1
E	Seat Panel		1
F	M6X45 Bolt		4
G	M6X25 Bolt		4
H	M6X15 Bolt		6
I	M6 Washer		14
J	M6 Lock Washer		14
K	Socket Wrench		1
L	Seat Cushion		2
M	Back Cushion		2

- 1 Attach the arm (A) to the left leg (B) with M6\*40 bolt (F), M6 lock washer (J) and M6 washers (I) using socket wrench (K). The same operation to the arm (A) and the right leg (C). See figure 1.

Fully tighten the bolts.

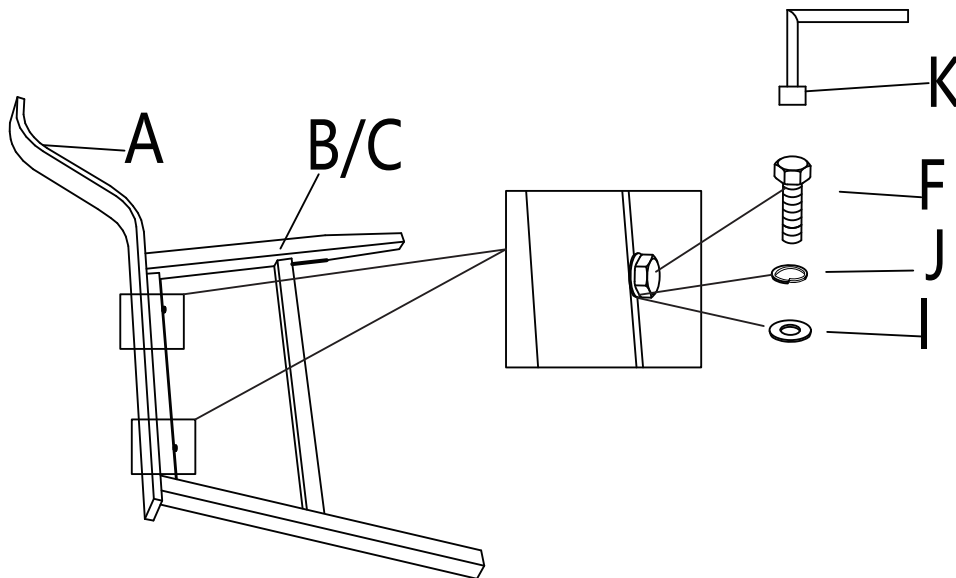


Figure 1

- 2 Attach the back panel (D) to the seat panel (E) with M6\*15 bolt (H), M6 lock washer (J) and M6 washers (I) using socket wrench (K). See figure 2.

Do not fully tighten the bolts until the end of step 3.


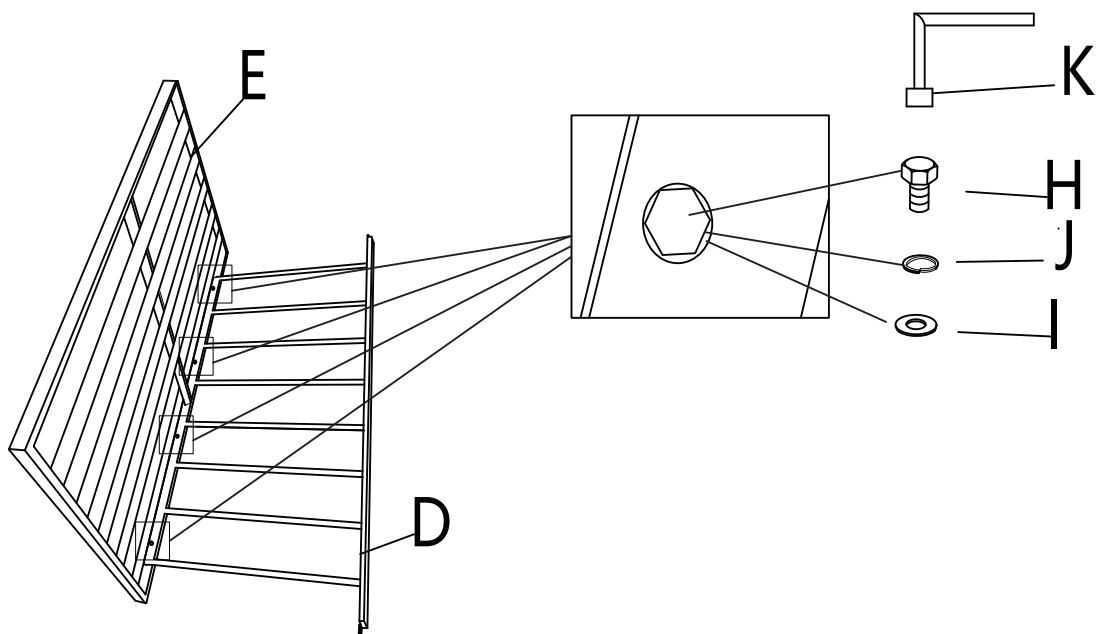


Figure 2

- 3 Align the arm and leg assembled in step 1 to the back panel and seat panel assembled in step 2. Secure the arm to the back panel with M6\*15 bolt (H) M6 lock washer (J) and M6 washers (I), then the leg to the seat panel with M6\*25 bolt (G), M6 lock washer (J) and M6 washers (I). See figure 3.

Fully tighten the bolts when the bolts are in place.

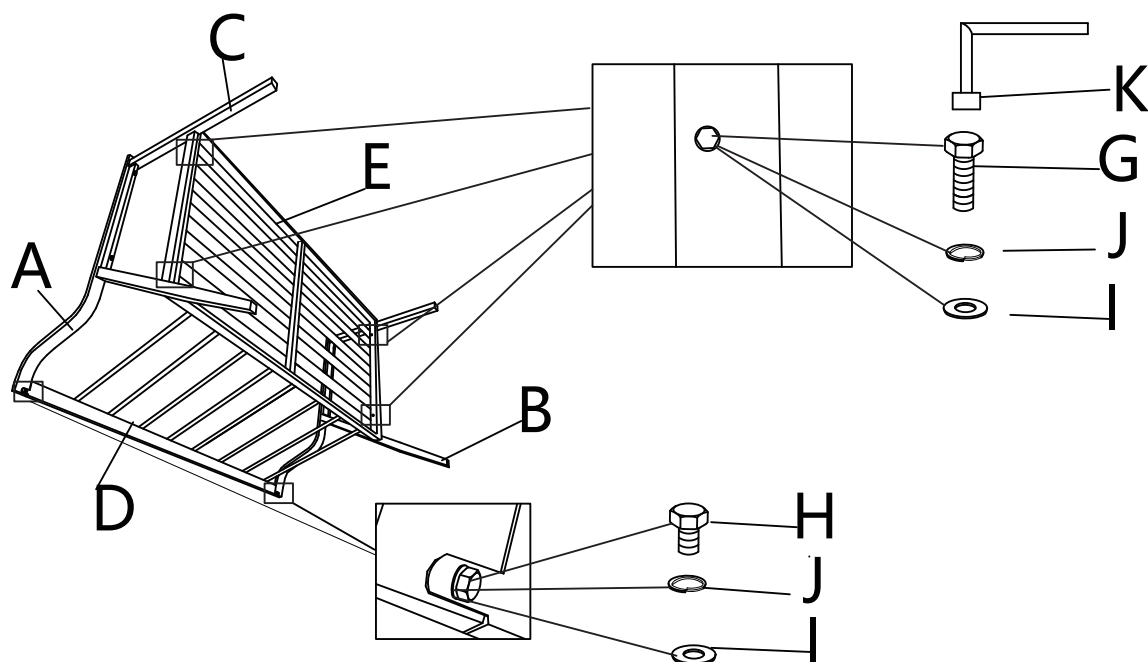

- 4 Turn the chair upright. Put the seat cushion (L) and the back cushion (M) on the chair. See figure 4.

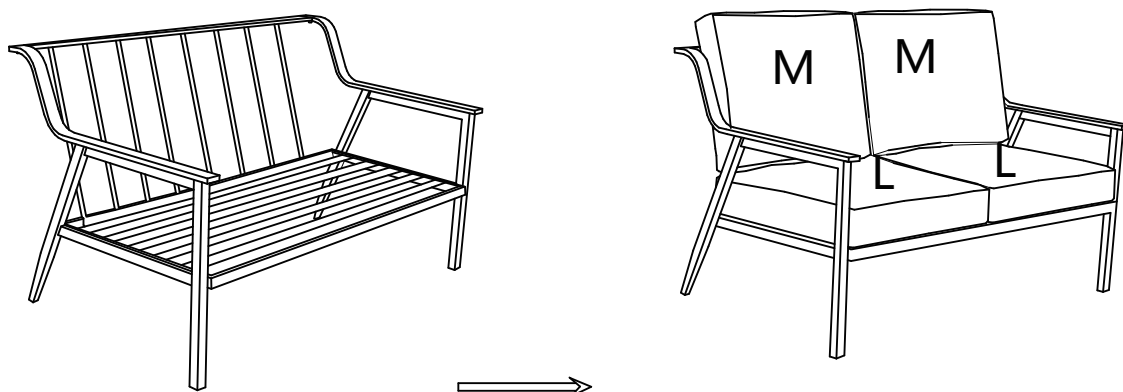


Figure 4

## CARE & MAINTENANCE

Clean furniture frame with wet towel using mild soap and water solution. Dry completely with soft towel. Clean cushions and sling seat material with a mild solution of soap and water and hang cushions to drip dry completely. Store them in a clean dry area of your home. Do not machine wash or dry. Do not use bleach or strong solvents to clean any of your patio furniture. It will harm both fabrics and metal finishes. Caution should be used when using oils, lotions and other chemicals such as chlorine or repeated exposure to extreme weather conditions (including heat), which may cause permanent discoloration to the fabric. To maintain and protect the furniture, always cover it with an outdoor furniture cover or store in a safe area when not in use for long periods of time.

## LIMITED WARRANTY

### GENERAL RESIDENTIAL WARRANTY

We warrant all our residential use furniture frames for two (2) years for aluminum and one (1) year for steel from the date of the original purchase by the residential owner. The warranty applies only to the original purchaser. If your frame fails structurally during normal usage we will repair, refinish or replace the frame at manufacturer's discretion (with same or similar product if discontinued) without charge. Damage as a result of dropping, breaking or misuse for the intended use of a cast part other than a weld is not covered under this warranty. Due to the unique nature of hand-applied finishes the color of a replacement item (s) may not match exactly.

### FRAMES

Frames are warranted to be free from defects in materials and workmanship for a period of 2 years for Aluminum and one (1) year for steel. Damage to frames or welds due to improper assembly or exposure to water and sub-freezing temperatures is not covered. Breakage that is a result of the product being misused, dropped, acts of nature, acts of war, and vandalism are not covered.

### FINISH

The finish is warranted against peeling, cracking, or blistering for a period of one (1) year provided the product has not been scratched or abraded. Scratches and chips resulting from normal wear and tear are not covered. Fading resulting from exposure to elements is not covered. Stains as a result of chemical spills and certain food items are not covered.

### CUSHIONS AND FABRICS (IF APPLICABLE)

Cushions and fabrics are warranted for a period of one (1) year from original date of purchase, against seams separating or tearing. Fading or discoloration resulting from exposure to the elements, chemicals, or from spills is not covered.

### TERRAFAB\* (IF APPLICABLE)

TerraFab dining and occasional table tops are warranted for a period of one (1) year from original date of purchase against fading, discoloration, peeling or cracking. Scratches and chips resulting from normal wear and tear are not covered.

\*TerraFab material is a proprietary blend of stone powder, inert minerals and brine with a curing process that simulates natural materials (ie: stone, wood, wicker etc.).

### WICKER (IF APPLICABLE)

All weather wickers are warranted for a period of one (1) years from original date of purchase against breaking, tearing or fading. Fading or discoloration resulting from chemicals or spills is not covered.

### FIRE PITS

Fire pits are warranted for a period of one (1) year from original date of purchase, against defects in material and/ or workmanship. Rust is not covered on steel parts.

### SHIPPING AND HANDLING

The manufacturer will pay shipping and handling charges within continental North America on warranty claims for a period of one (1) year from the original date of purchase. Shipping and handling charges after one (1) year are the consumer's responsibility. Shipments outside continental North America are not covered at any time or for any reason.



**WARRANTY EXCLUSIONS**

Failure caused by unreasonable or abusive use. Furniture that were clearance items, display models or items purchased in an "as is" condition, freight damage, furniture damaged by acts of nature, vandalism, fire, abuse, lack of proper care and maintenance, or improper assembly; straps and fabric against normal fading or discoloration from exposure to elements, oils, spills, fluids or chemicals; table top against breakage; hardware against corrosion or rusting; buckling or splitting of tubing resulting from exposure to water and freezing temperatures; glass table tops, purchased or replacement parts; plastics. Also excluded: loss of use of time and/or inconvenience, money, travel, packaging or any other consequential or incidental damages. In no event shall Foremost Groups Inc. responsibility exceed the value of the replacement product.

Warranty is to the original purchaser when items are purchased from one of our authorized retailers and is not transferable. Displays and/or Floor Models sold "AS IS" are not covered. All warranty claims must be submitted with a dated register receipt within the warranty period. Should replacement of the warranted item be unavailable, Foremost Groups Inc. reserves the right to substitute items of our choice similar in style, color and quality. For quality control purposes and verification, we reserve the right to request photographs of the damaged item (s). The terms of this warranty are subject to change without notice.

To obtain warranty service please contact Foremost Groups Customer Relations Department toll free number at

1-800-443-1410 (USA) between the hours of 8:30 am and 5:00 pm EST, Monday thru Friday or fax your request to (973) 428-8026 or email us at [customerservice@foremostgroups.com](mailto:customerservice@foremostgroups.com).