

# Maintenance Schedule

- Before each use, always check for any worn, loose or damaged parts on the MoJack 750XT. If any damaged parts are present, do not use the MoJack 750XT and contact MoJack at 1-877-575-3173.
- Clean and oil the screw thread after every 50 uses or at least once a year using light machine oil.
- Place lithium grease between the Crank Handle Base and the brass bearing after every 50 uses or once a year. Without weight on carrier, lift the Crank Handle to create a small gap between the brass bearing and the Crank Handle Base. Use a small brush to apply the lithium grease between the two surfaces.
- Place lithium grease on or around Screw Thread Bottom, Roll Pin and Screw Thread Bottom Washer after every 50 uses or at least once a year.
- Spray grease or lube in Locking Pin holes and shaft after every 50 uses or at least once a year.
- (Optional) Check for Carrier Locking Pin operation. Turn top Crank Handle to raise the Lift Arm to the first Safety Hole and listen for click as pin pops into hole. After a click is heard, reverse direction of Crank Handle rotation without pulling on the Carrier Locking Pin ring. Pin should hold Carriage at height. **Do not force the handle past the lock point, as this may damage the Screw Thread.** If Carrier Locking Pin does not hold Lift Arm height, do not use the MoJack 750XT and contact MoJack at 1-877-575-3173. After checking Carrier Locking Pin operation, proceed to lower by pulling out on the Carrier Locking Pin ring.

