


Parts Breakdown

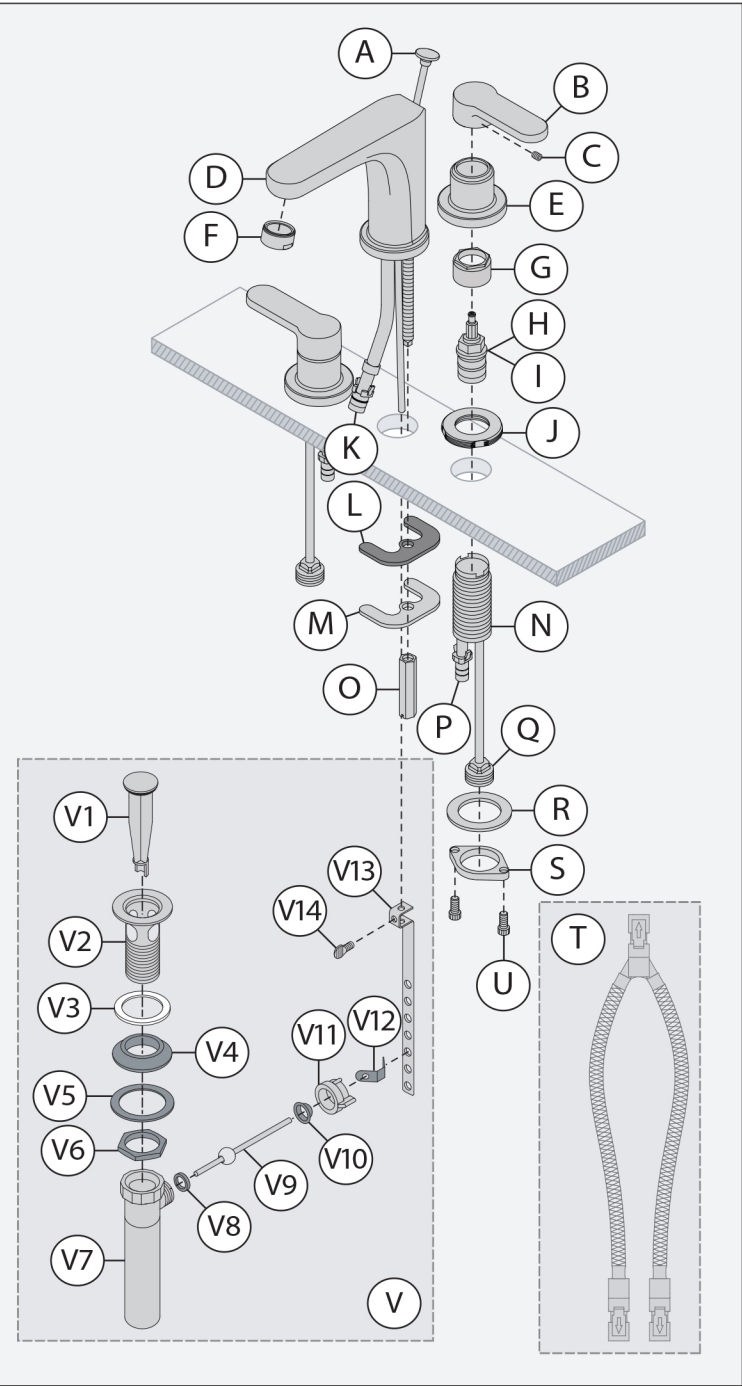

 If replacing an older faucet ensure water supply is turned OFF before removing, then turn faucet control valve ON to relieve water pressure.

Replacement Parts		
Item	Description	Part Number
A	Lift Rod	RL-286*
B C	Handle Set Screw	RL-287*
F	Aerator Kit (2.2) Aerator Kit (1.5) Aerator Kit (1.0) Laminar Flow Kit (2.2) Laminar Flow Kit (1.5) Laminar Flow Kit (1.0) Laminar Flow Kit (0.5)	LN-15* FLR-110-1.5* FLR-110-1.0* RL-019-2.2* RL-019-1.5* RL-019-1.0* RL-019*
H	Hot Cartridge	RL-075
I	Cold Cartridge	RL-076
L M O	Mounting Hardware, Spout	RL-123
R S U	Mounting Hardware, Valve Body	RL-211
V	50/50 Pop-Up Drain Assembly	RL-223*

***Note:** Append -STN to part number for Satin Nickel finish.

Tools Required	
Adjustable Wrench	
Allen Wrench (3/32")	
Plumber Putty	
Plumber Tape	