


Pos.	Description		Measurement	Quantity	Item
1	Front part		42.5 × 30.75 × 1.25 in. (1080 × 785 × 35 mm)	1	39563-30
2	Back wall		42.5 × 27.25 × 1.25 in. (1080 × 695 × 35 mm)	1	39563-31
3	Left side panel		1 × 27 × 24.75 in. (30 × 690 × 630 mm)	1	39563-20
4	Right side panel		1 × 27 × 24.75 in. (30 × 690 × 630 mm)	1	39563-21
5	Side floor plates, large		25.5 × 0.75 × 16.25 in. (650 × 20 × 415 mm)	2	39563-10
6	Center floor plate, small		25.5 × 0.75 × 8 in. (650 × 20 × 205 mm)	1	39563-11
7	Roof incl. hinges		45.5 × 1.75 × 31 in. (1160 × 50 × 790 mm)	1	39563-40

Pos.	Description		Size	Quantity	Item
A	Thread screw with nut		0.236 × 2.362 in. (M6 × 60 mm)	12+1	39563-60
B	Countersunk screw		ø 0.137 × 1.181 in. (ø 3.5 × 30 mm)	5+1	
C	Lenshead screw		ø 0.157 × 0.629 in. (ø 4 × 16 mm)	16+1	
D	Checkstrap, left/right	plus 8 screws C for each	11 in. (28 cm)	1/1	

Other parts already assembled (spare parts separately available)


Description	Size	Quantity	Item
Hinge for roof	2.75 in. (7.6 cm)	2	39563-60

EN Screw the front part (1) and the back wall (2) together with the side panels (3/4).

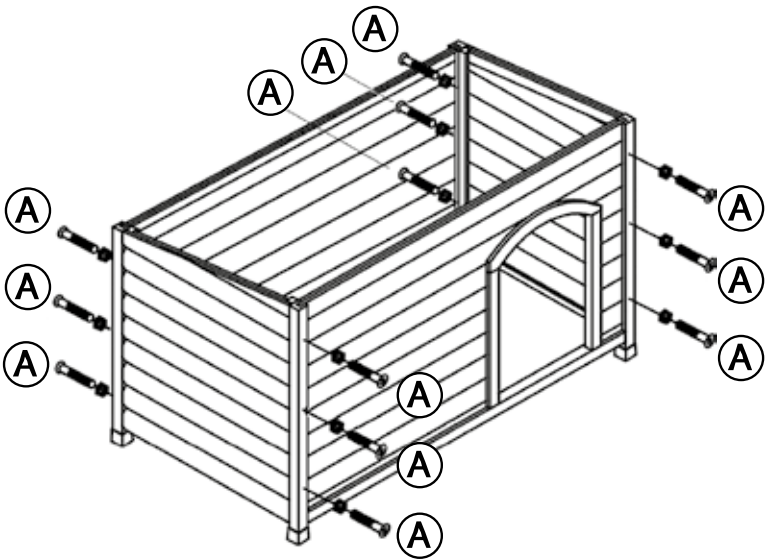


1.

EN Now insert the floor plates (5/6).

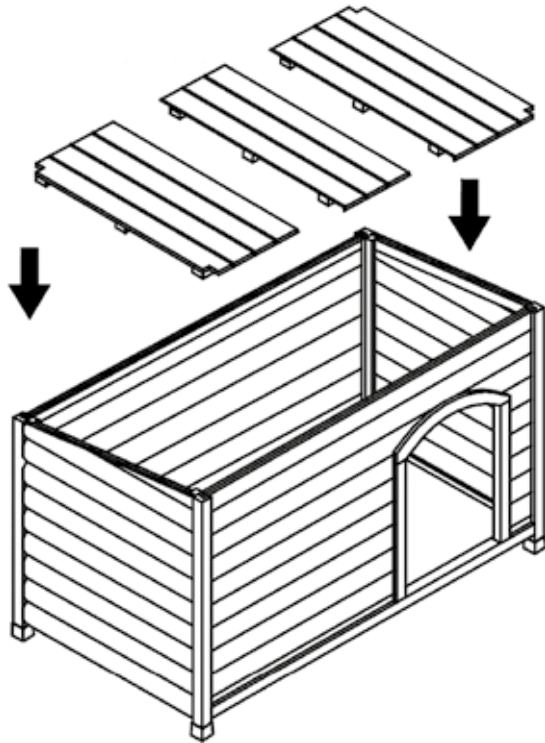


2.

EN Install the roof (7) with the enclosed screws (B). Screw the check straps (D) to the inner sides of the roof and the side panels.

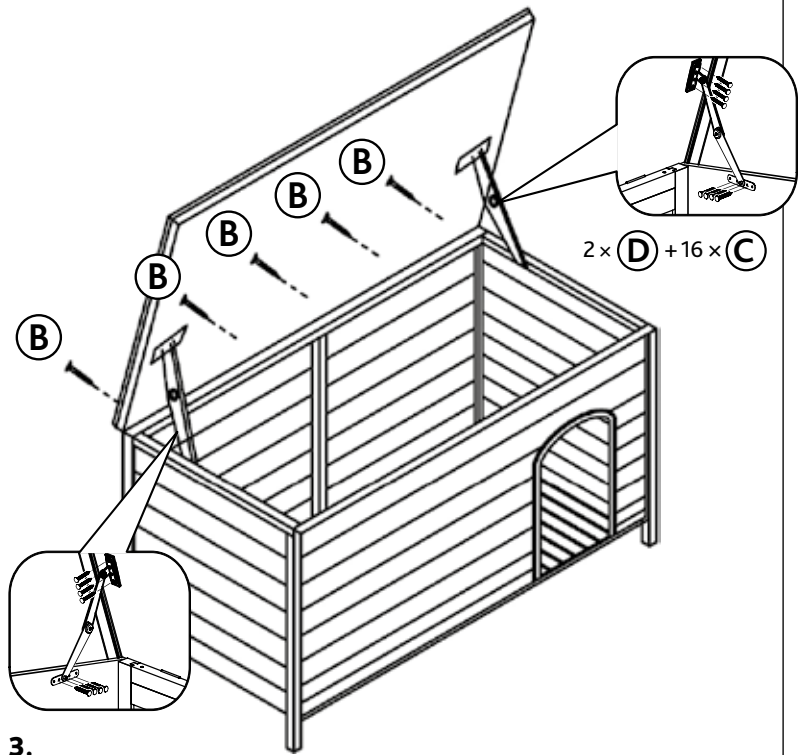

3.

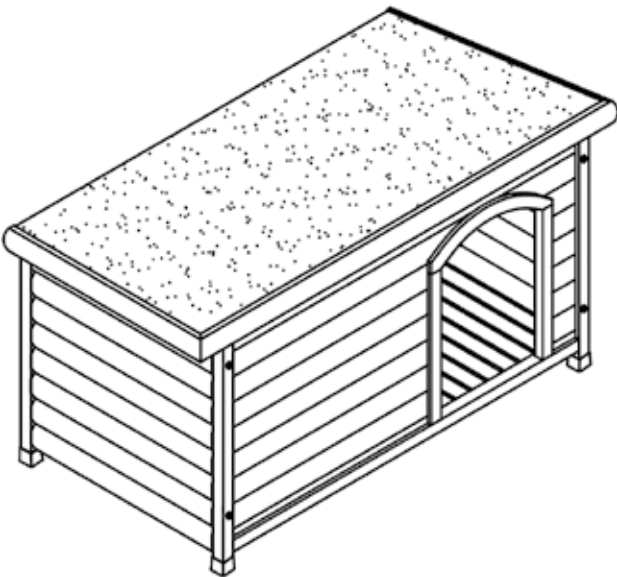

4.