





Sideboard

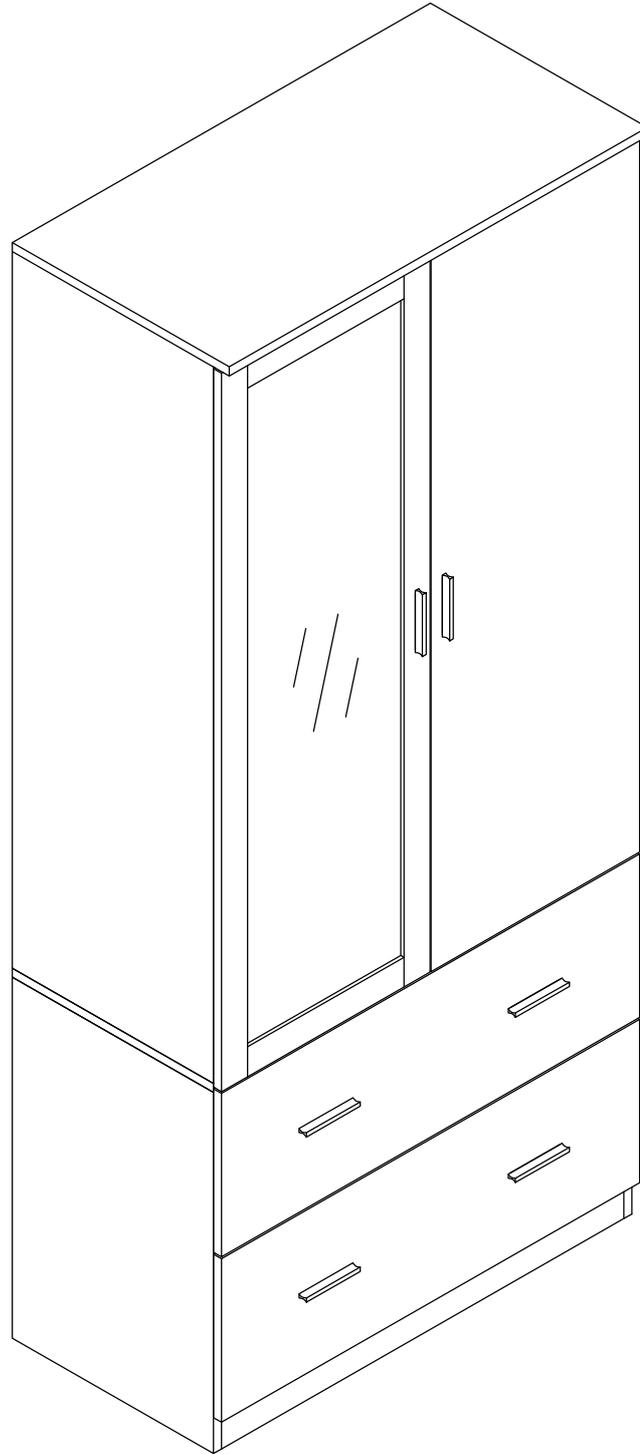

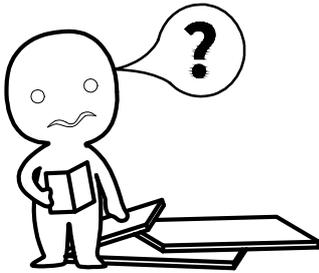


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

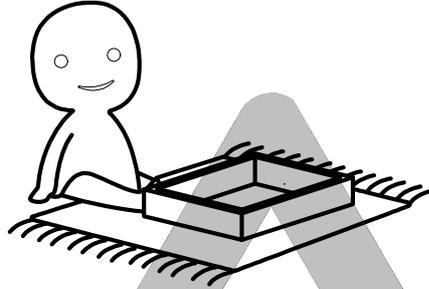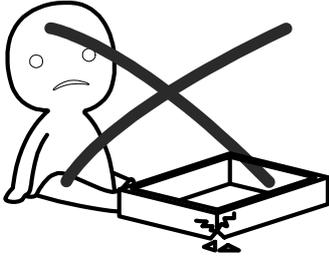




AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

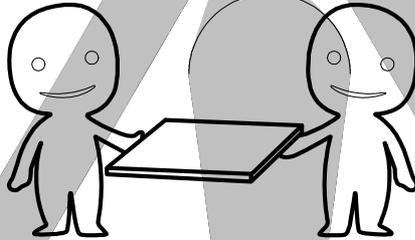

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

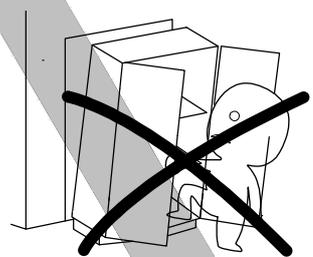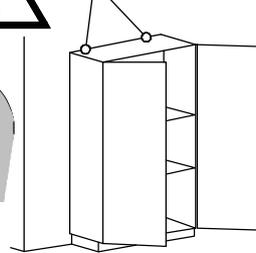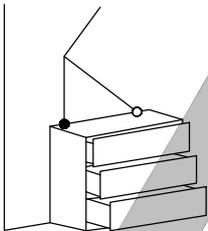

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

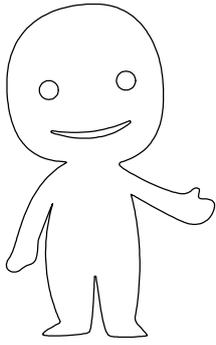

Please prepare the following tools

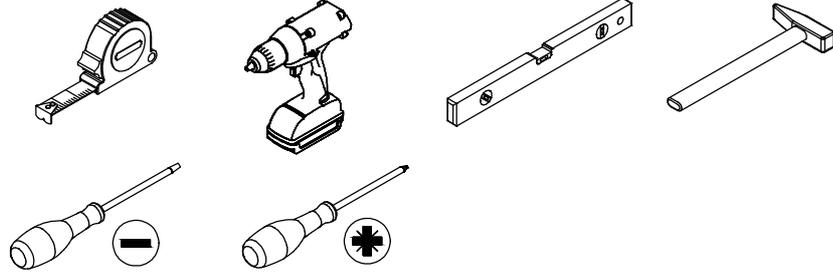

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A×42



∅6×35mm

B×2



C×28



∅3×12mm

D×36




∅8×30mm

E×42




∅15×10mm

F×2

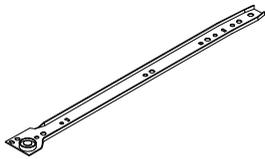

G×2

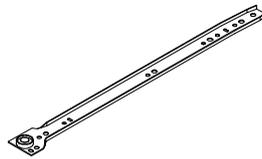

H×4



 
∅4×35mm

J×36



∅4×14mm

K×6



L×12




∅4×16mm

M×8




∅6×30mm


N×2

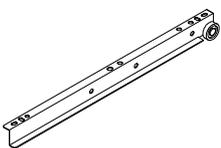


P×2

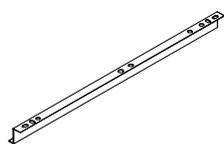

Q×1

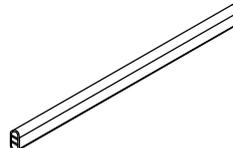

R×1

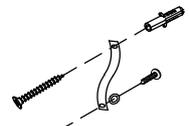

S×10



φ4×30mm

T×6




U×26




φ2×20mm

①

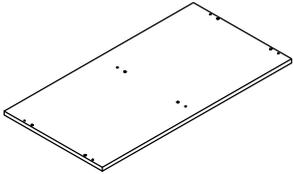


1PC

②

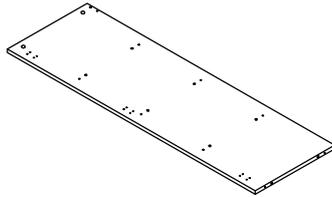


1PC

③

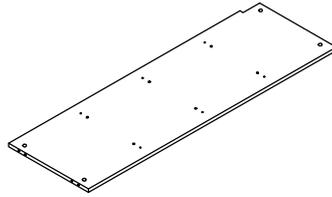


1PC

④

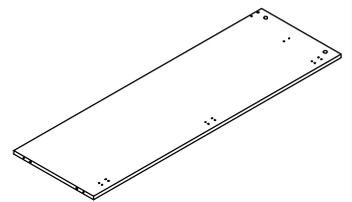


1PC

⑤

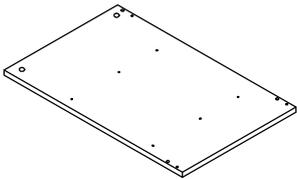

1PC

⑥

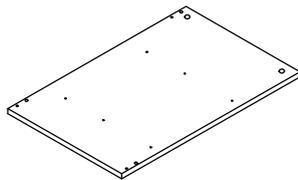

1PC

⑦




1PC

⑧




1PC

⑨

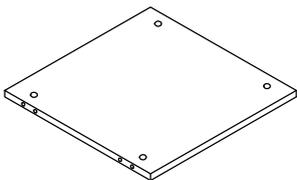


3PCS

⑩

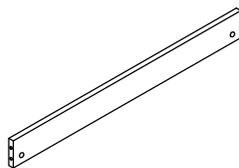


2PCS

⑪

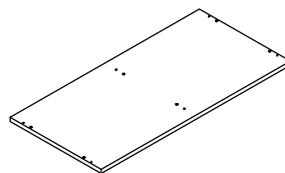


1PC

⑫

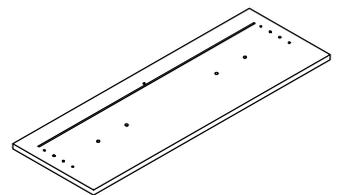


2PCS

⑬

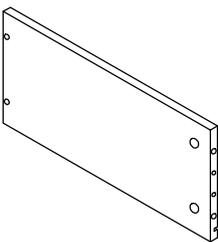


2PCS

⑭

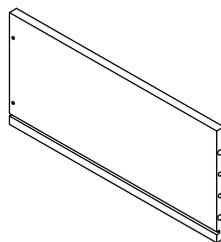


2PCS

⑮



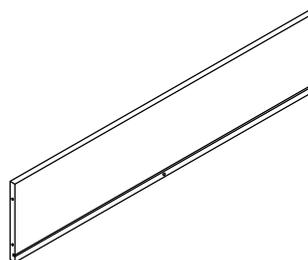



2PCS

⑯

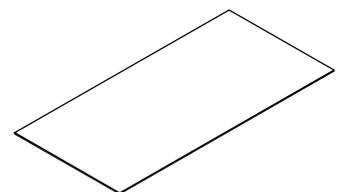


2PCS
 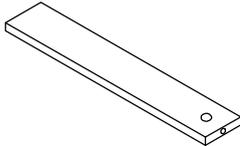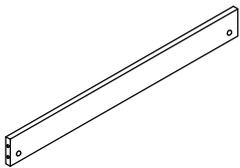
<p>①7</p>  <p>2PCS</p>	<p>①8</p>  <p>2PCS</p>	<p>①9</p>  <p>2PCS</p>	<p>②0</p>  <p>1PC</p>
<p>②1</p>  <p>1PC</p>	<p>②2</p>  <p>2PCS</p>		


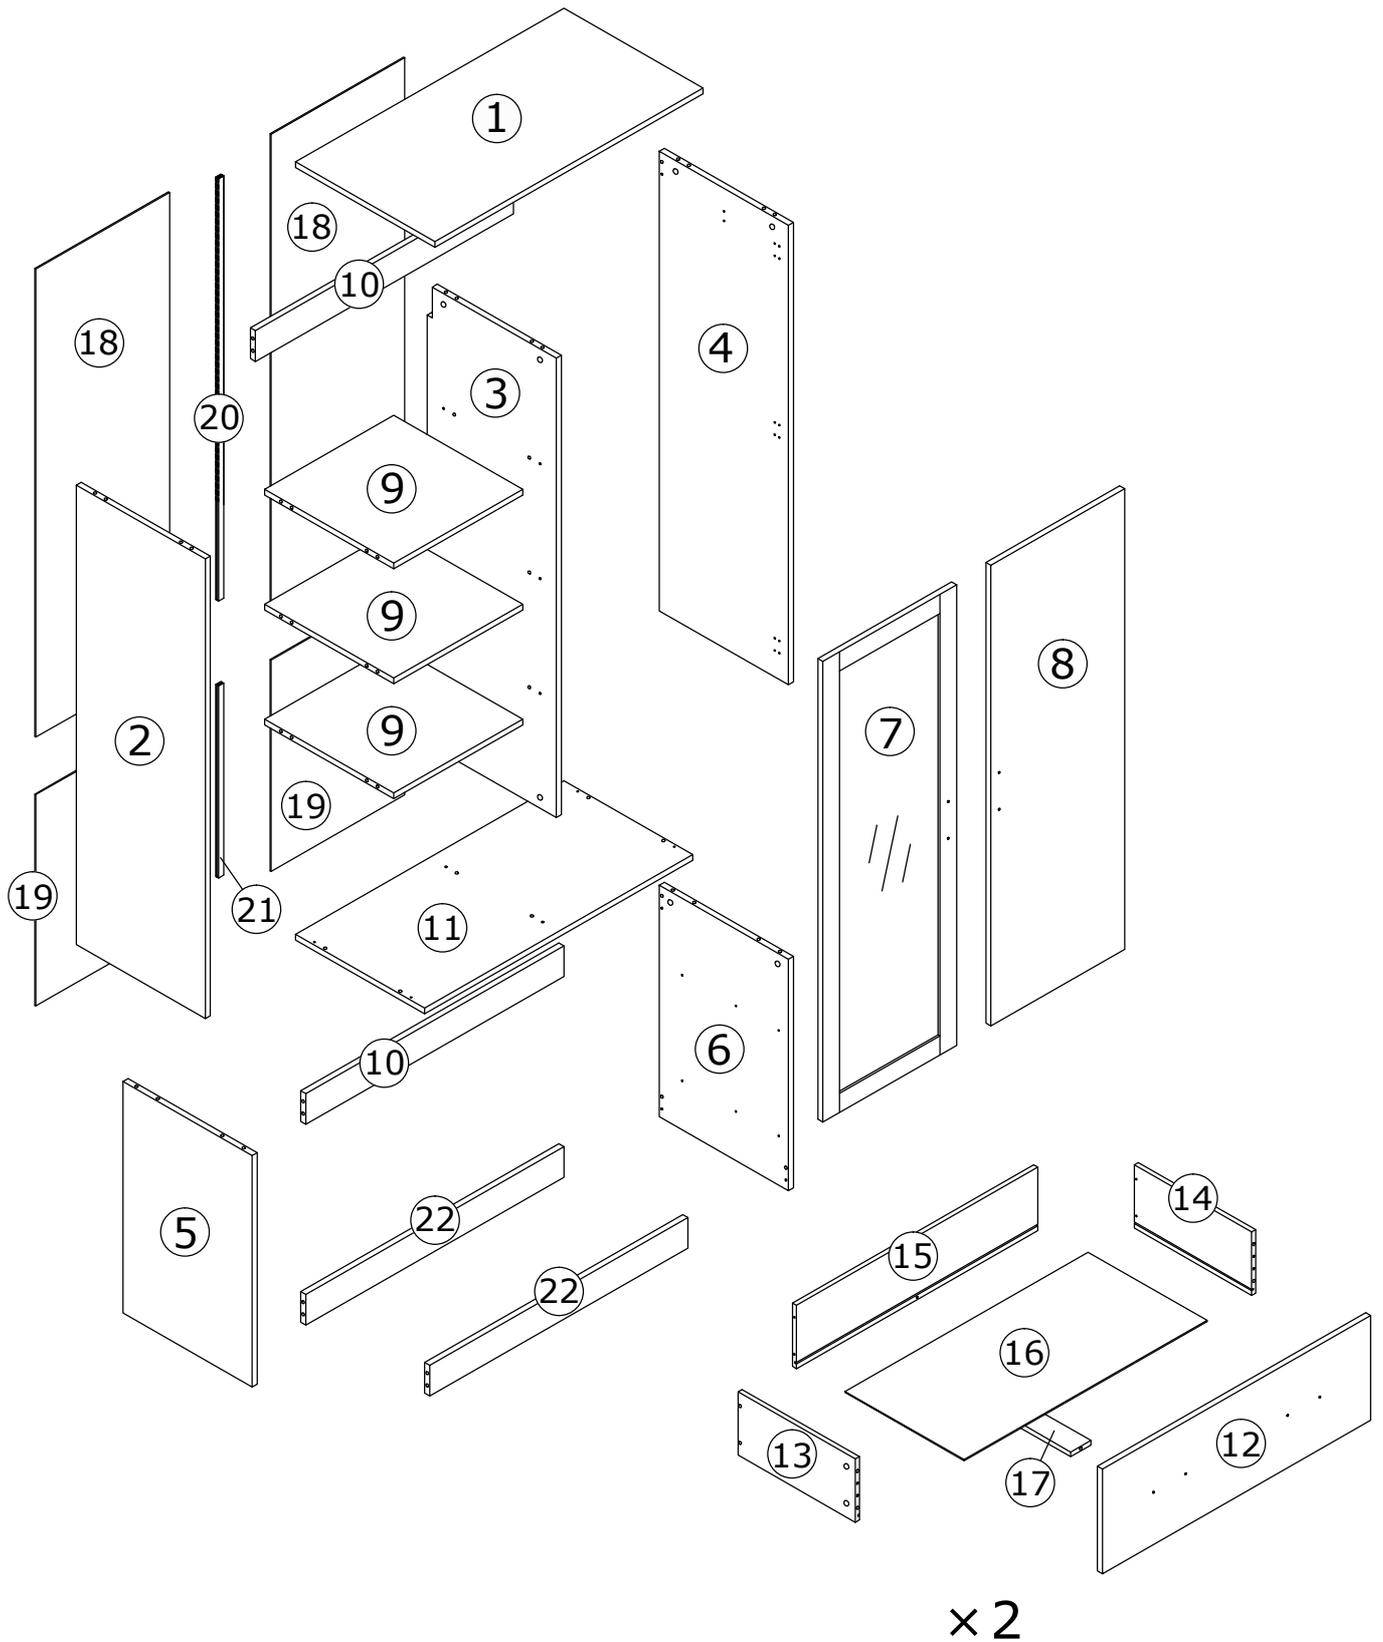


1

 A×6
ø6×35mm



Insert quickfit screw A into panel 1. Please note don't use an electric screwdriver or use force to rotate, may cause crack.

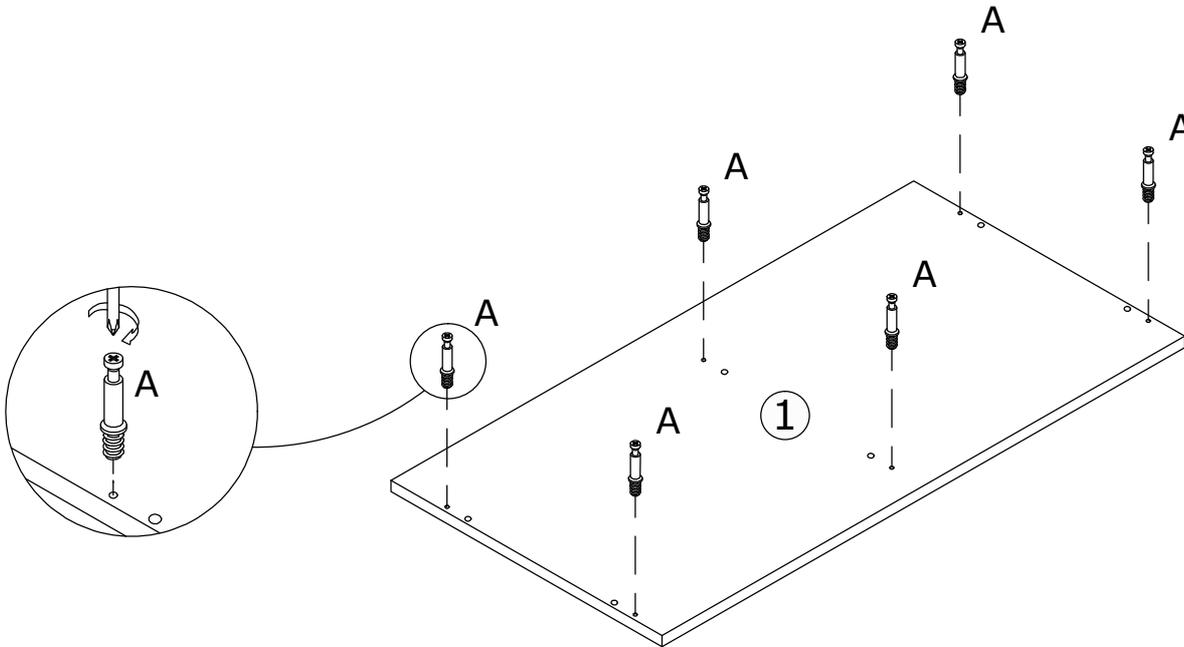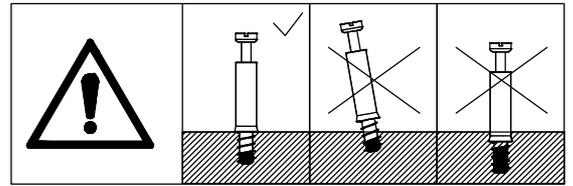


2


A×8
ø6×35mm

B×1

 
C×2
ø3×12mm




Insert quickfit screw A into panel 2 and 4. Fix part B to panel 4 using screw C.

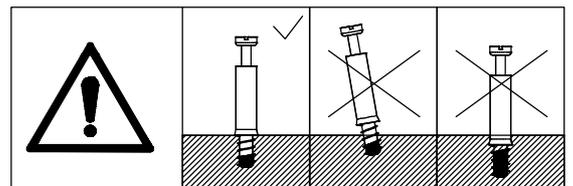

Please pay attention to the holes where the accessories are inserted.


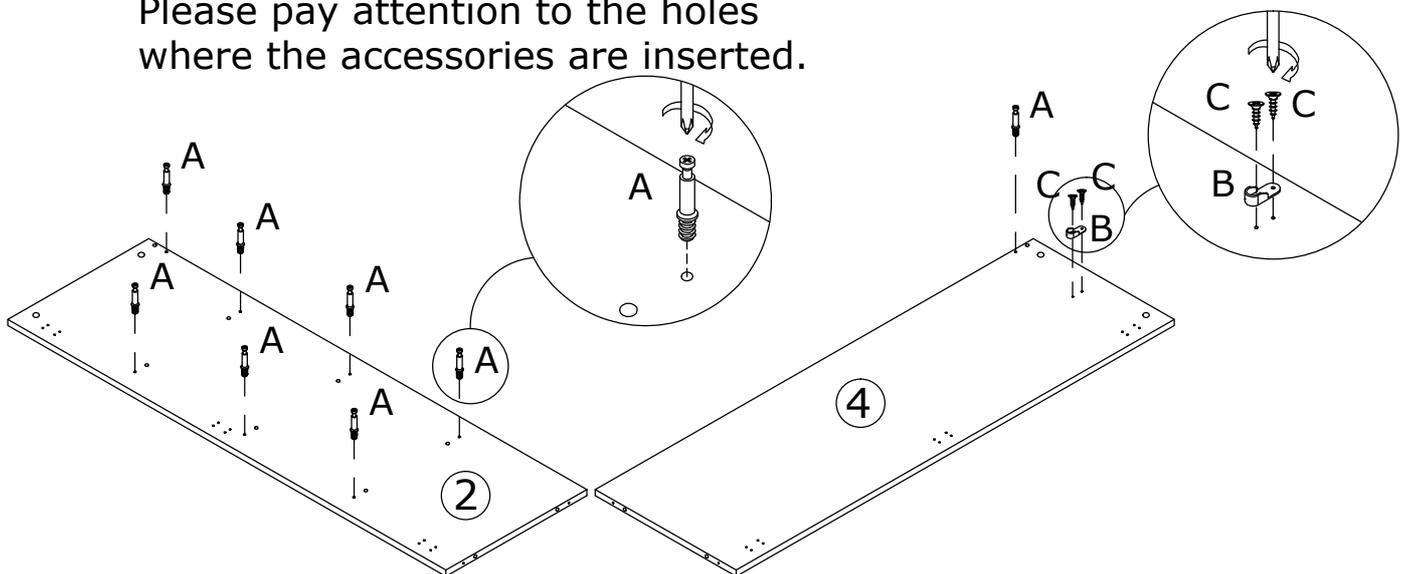


3

 A×6  ø6×35mm	B×1 	C×2  ø3×12mm	
---	--	---	---

Insert quickfit screw A into panel 3.
Fix part B to panel 3 using screw C.



Please pay attention to the holes
where the accessories are inserted.

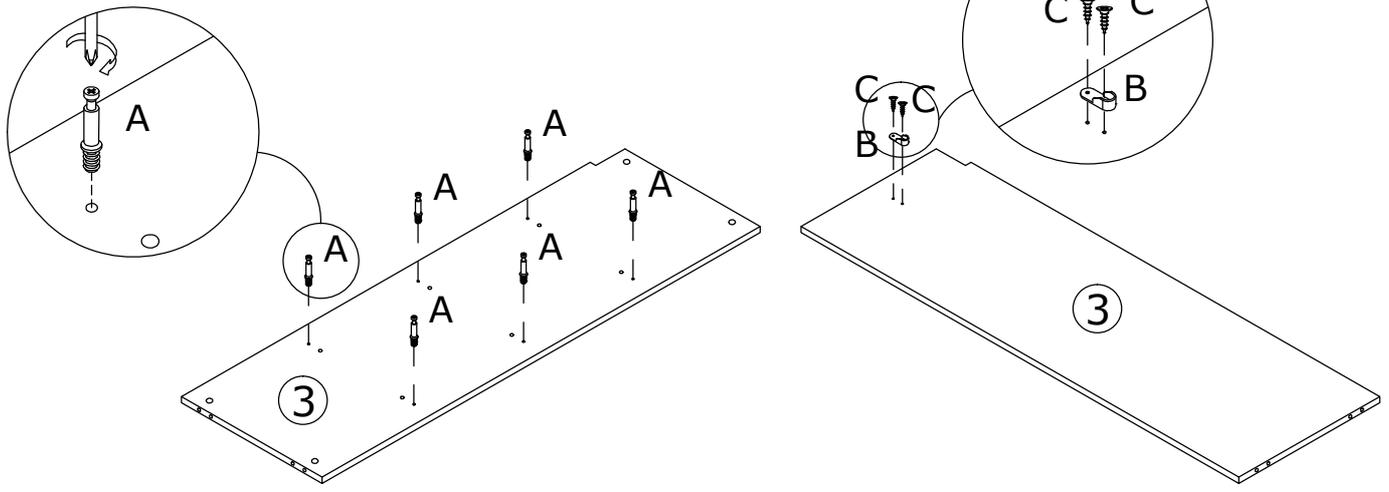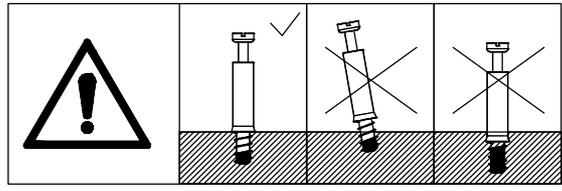

4

D×6  ø8×30mm	
---	--


Attach 3 panel 9 to panel 2 using
wooden dowel D, as shown.

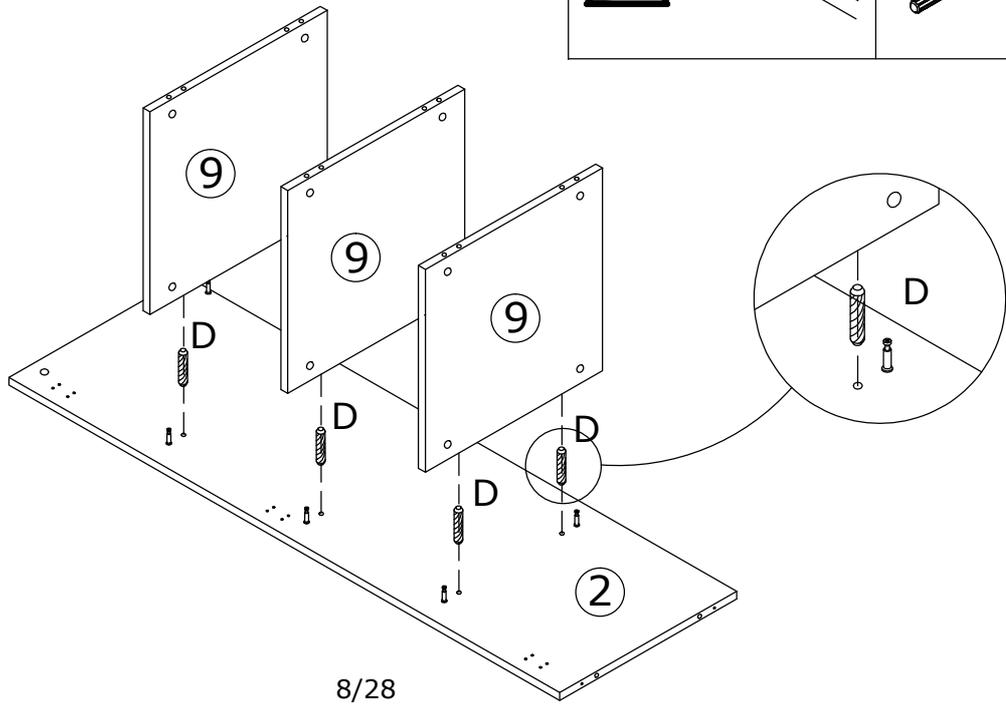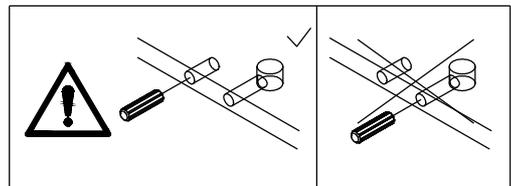



5

E×6

 φ15×10mm



Turn cam locks E clockwise to tighten as shown.

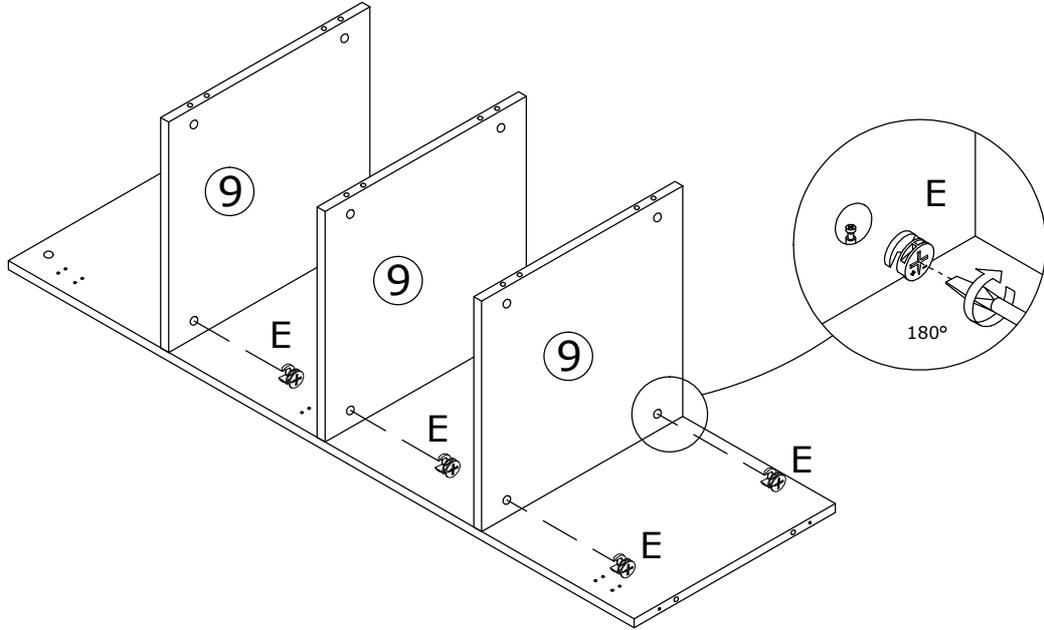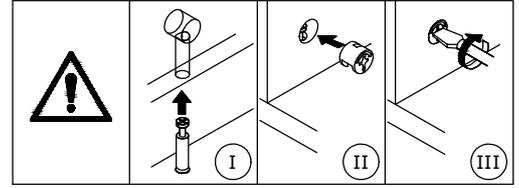



6

D×6


φ8×30mm

E×6

 φ15×10mm

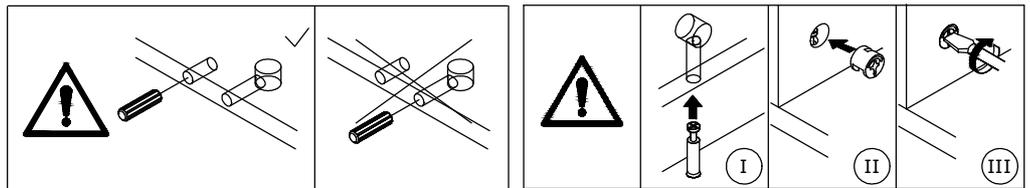



Cover panel 3 to panel 9 using wooden dowel D and lock with cam locks E as shown.

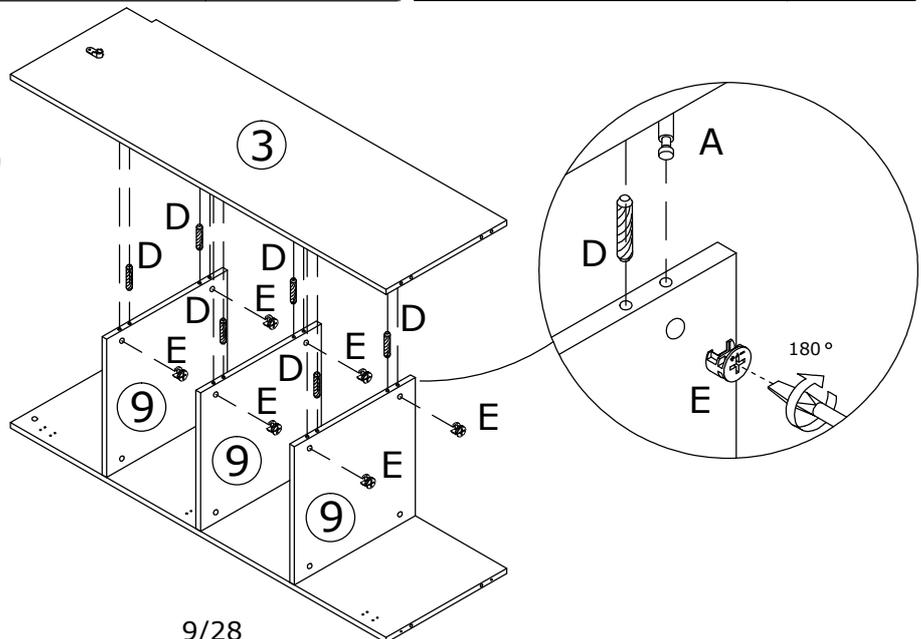


7

D×2
φ8×30mm

 E×2
φ15×10mm

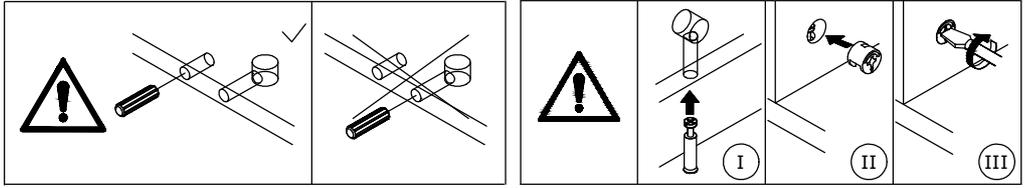



Connect panel 4 and panel 2 with panel 10 using wooden dowel D, lock with cam locks E as shown.

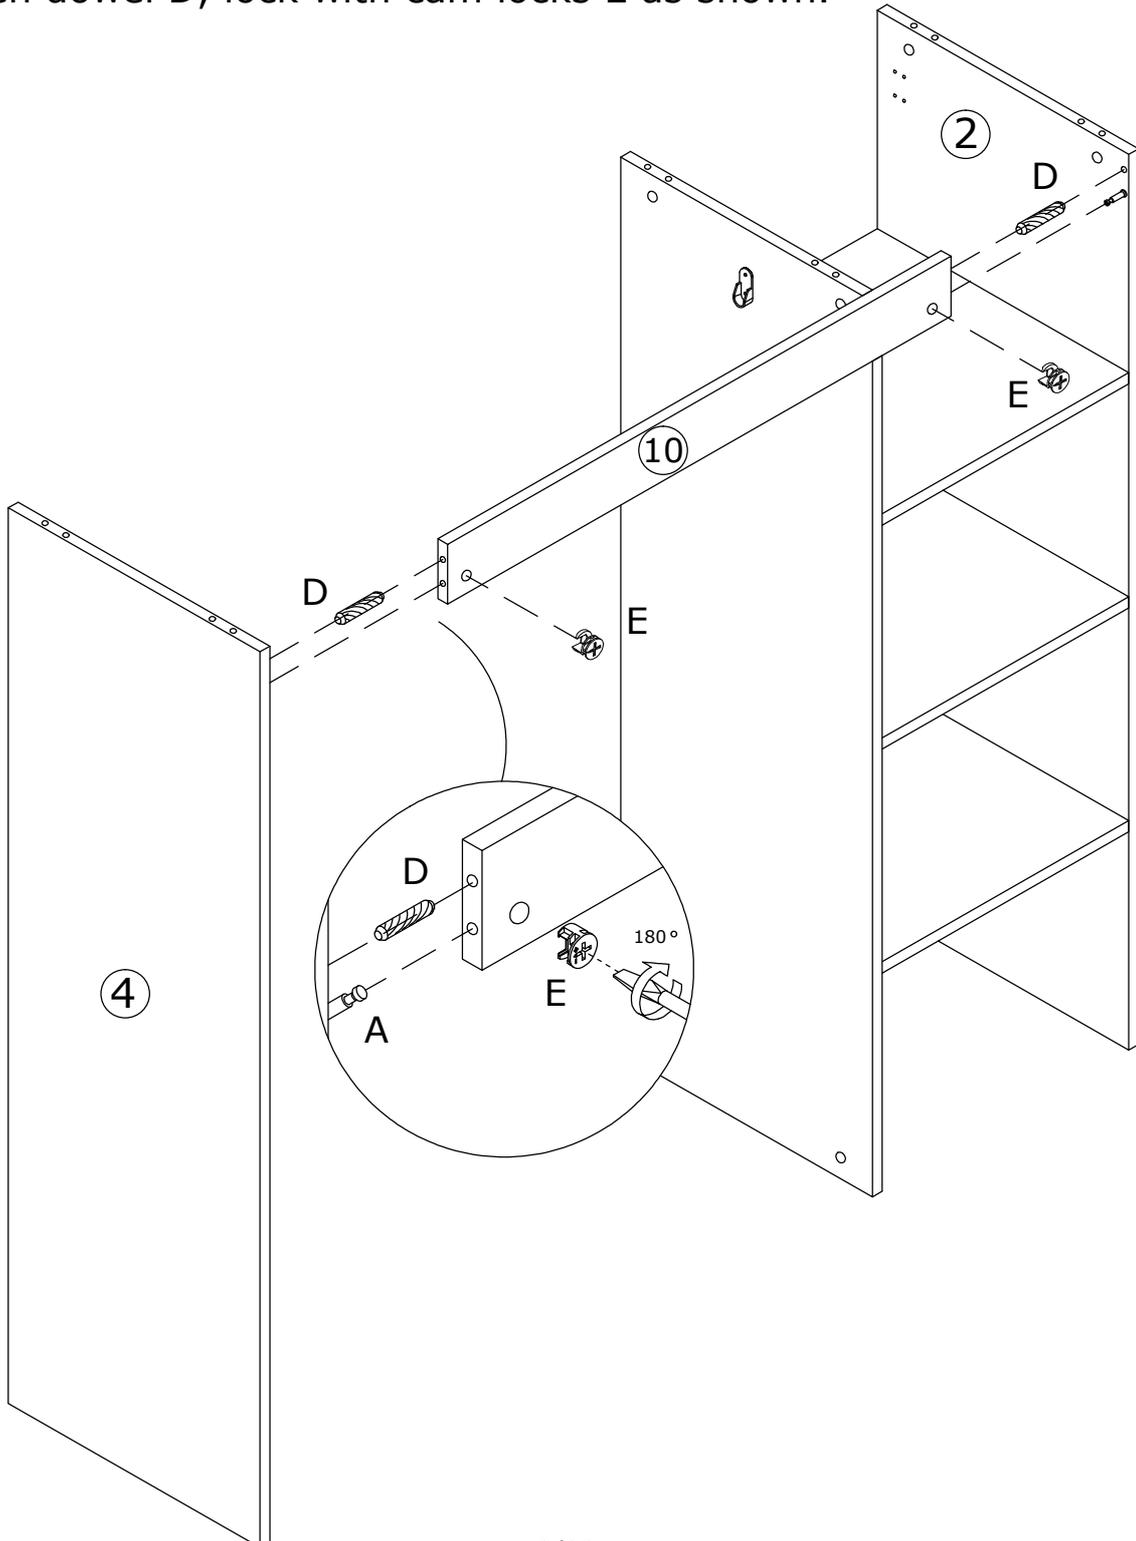


8

Dx6
ø8x30mm

 Ex6
ø15x10mm

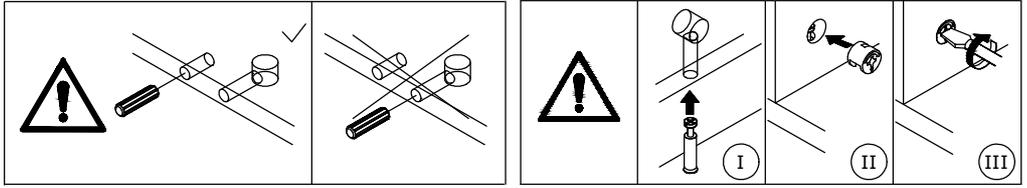


Cover panel 1 to assembled component using wooden dowel D, lock with cam locks E as shown.


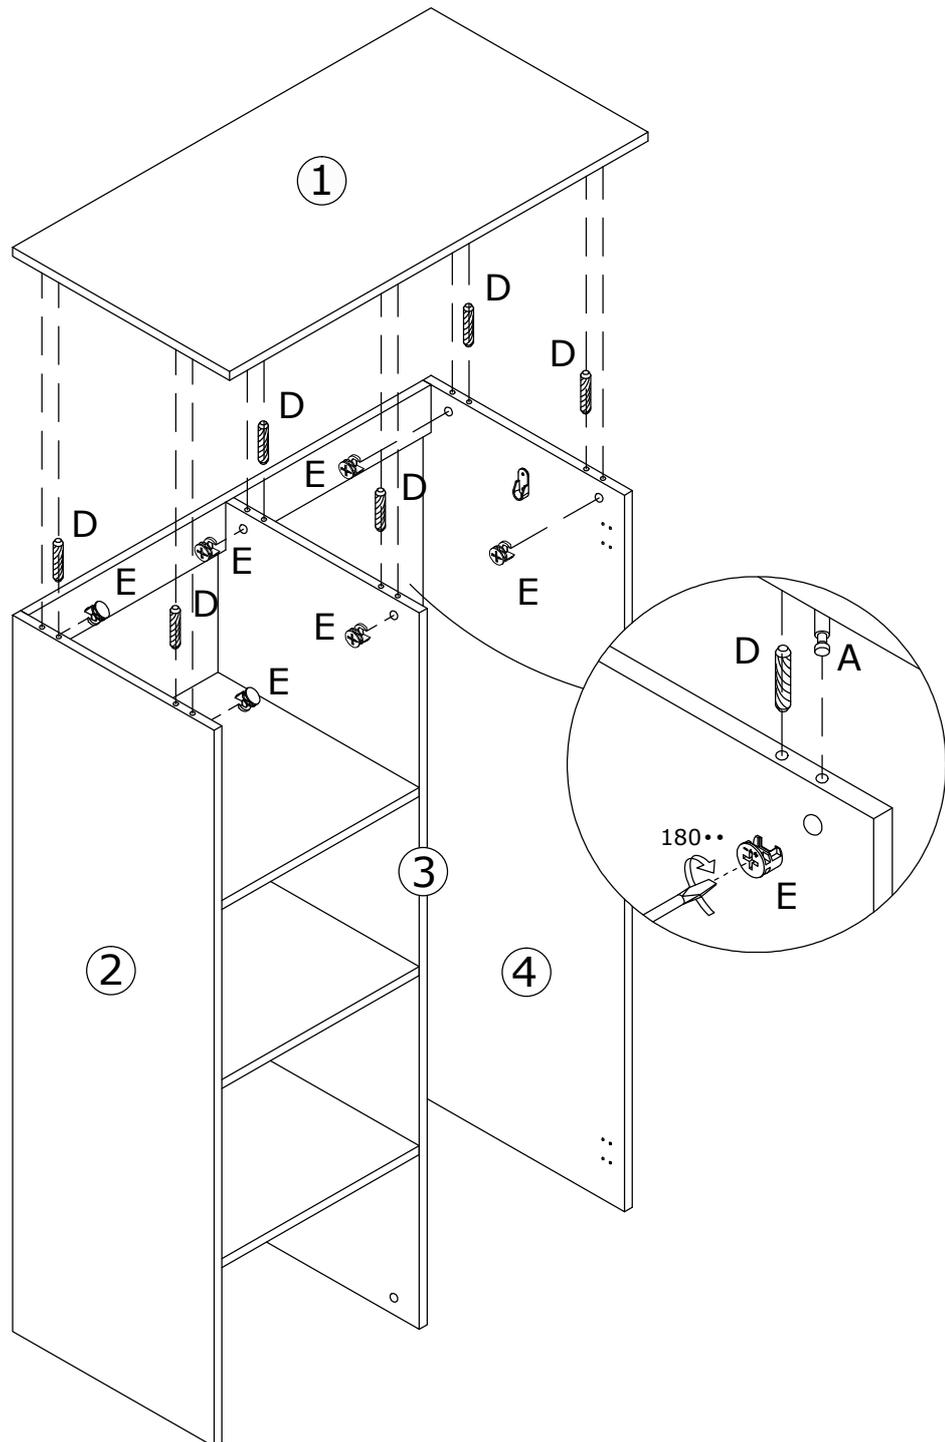


9

 A×12
φ6×35mm




Insert quickfit screw A into panel 5,6,and 11. Please note don't use an electric screwdriver or use force to rotate, may cause crack.

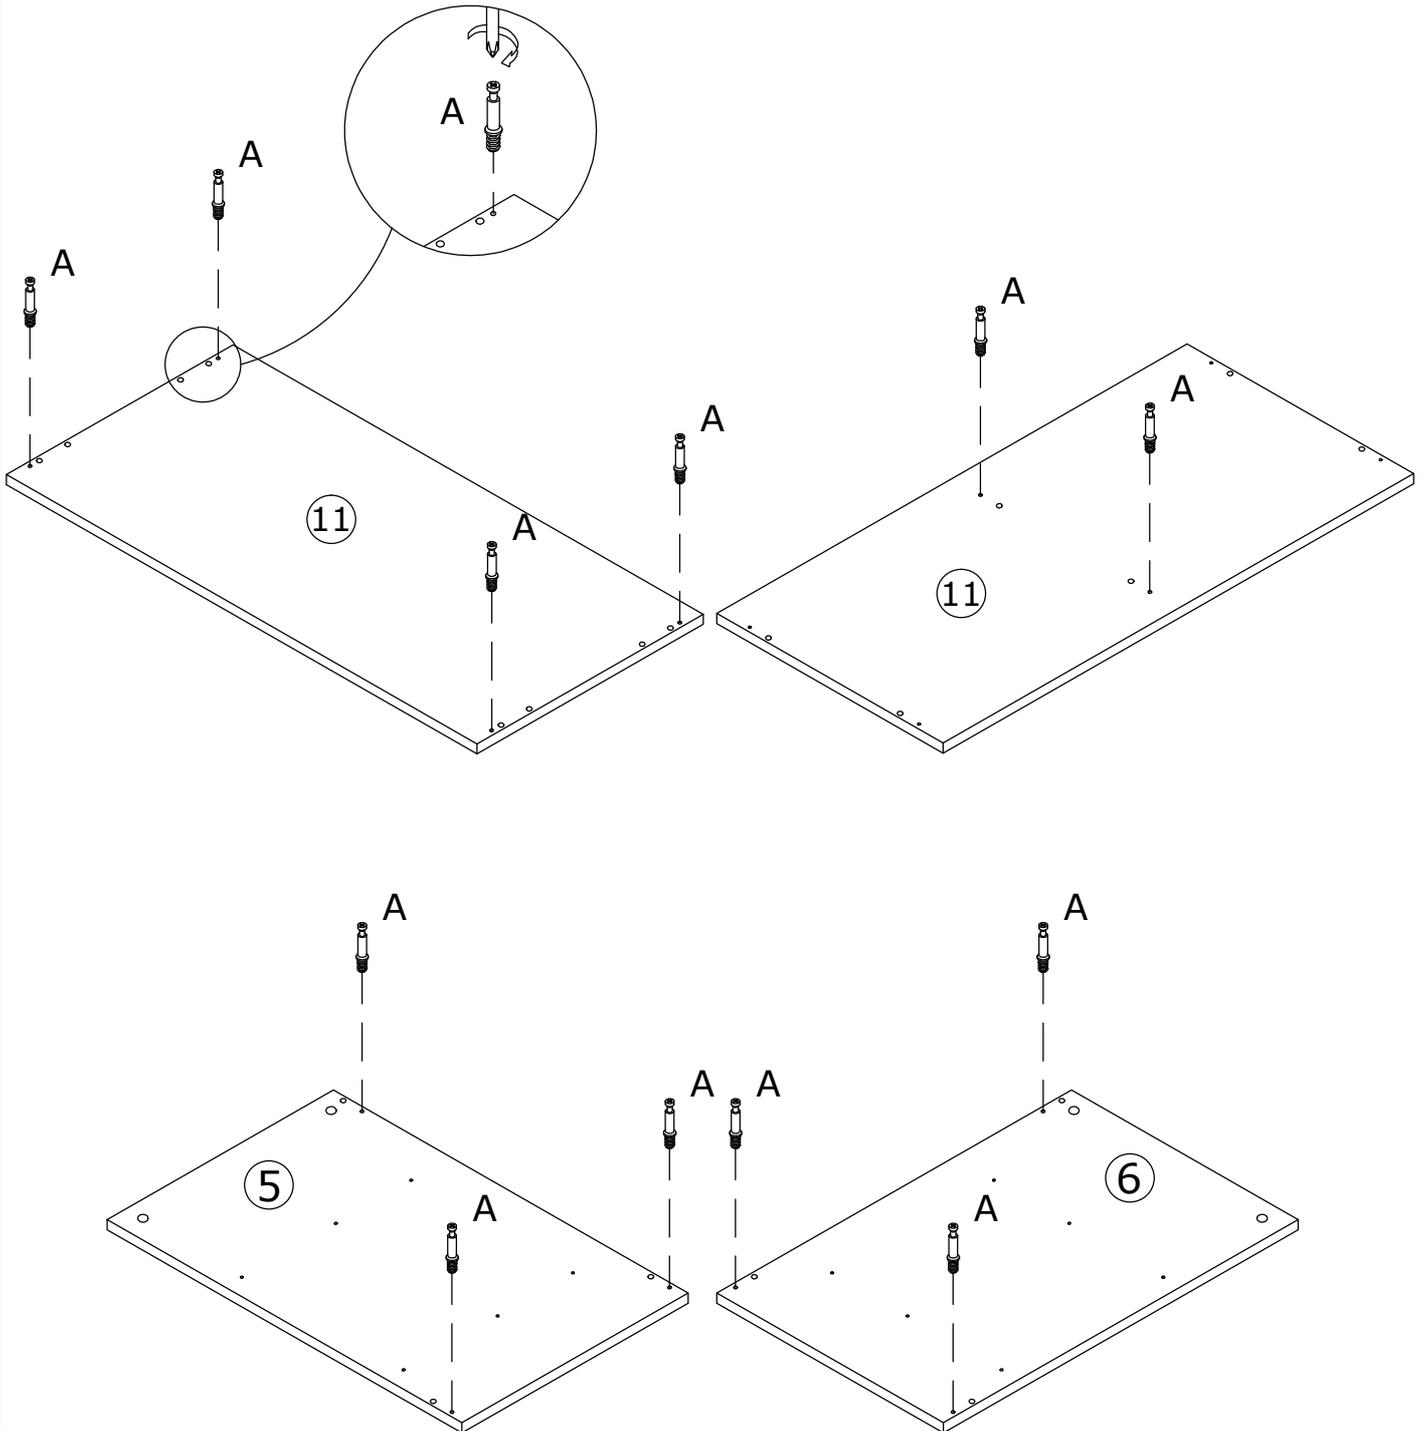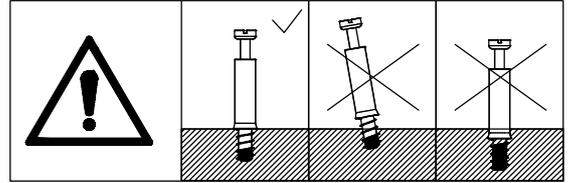


10


Cx12  ø3x12mm	Fx2 	Gx2 	
--	--	--	---

Fix slide rail F and G to the corresponding position of panel 5 and 6 using screw C.

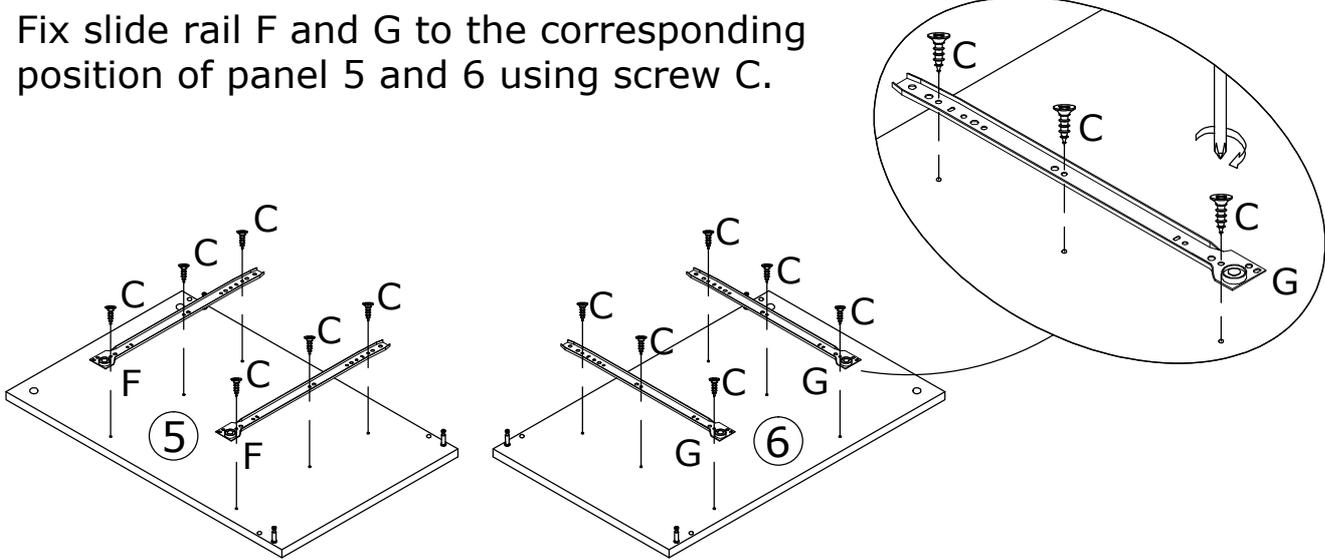


11

 Dx6  ø8x30mm	Ex6  ø15x10mm	
--	---	--


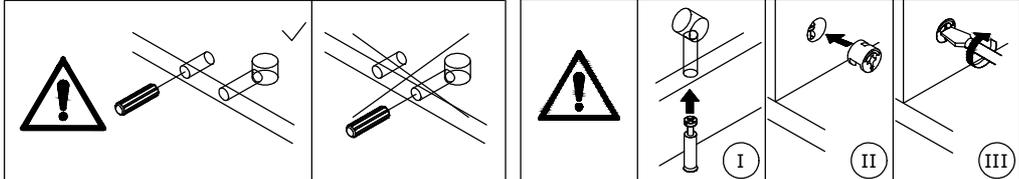


Insert wooden dowel D into panel 5 and 6, then connect panel 5 and 6 with panel 10 and 22. Turn cam locks E clockwise to tighten as shown.

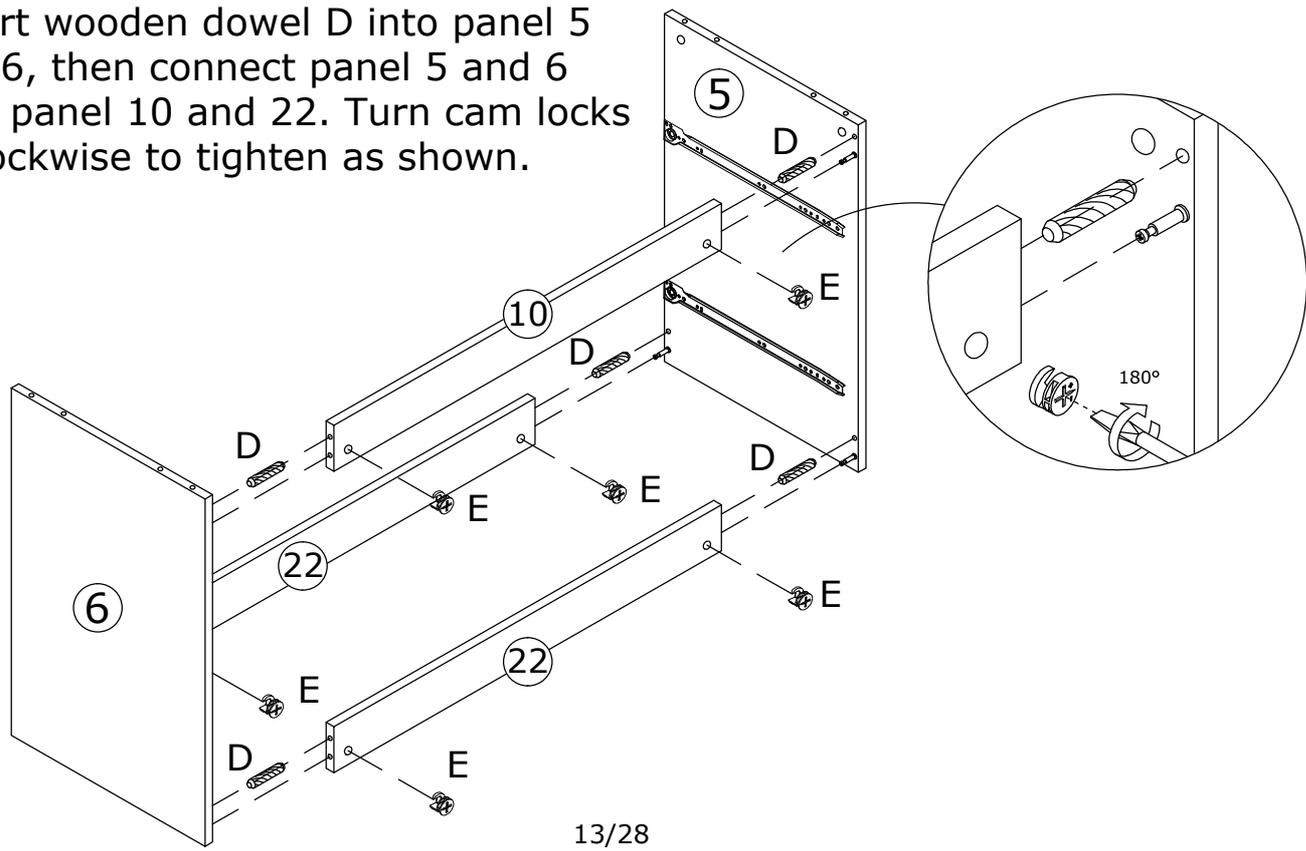


12

Dx6  ø8x30mm	Ex2  ø15x10mm
---	--

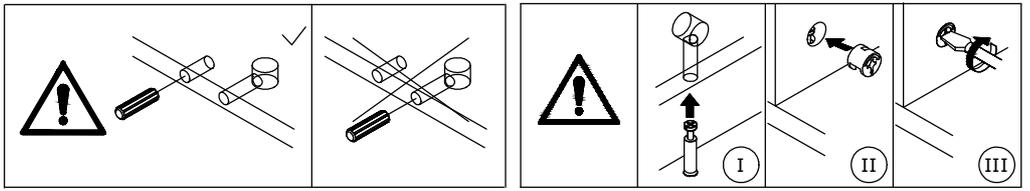 


Cover panel 11 to panel 2,3,4 using wooden dowel D and lock with cam locks E as shown.


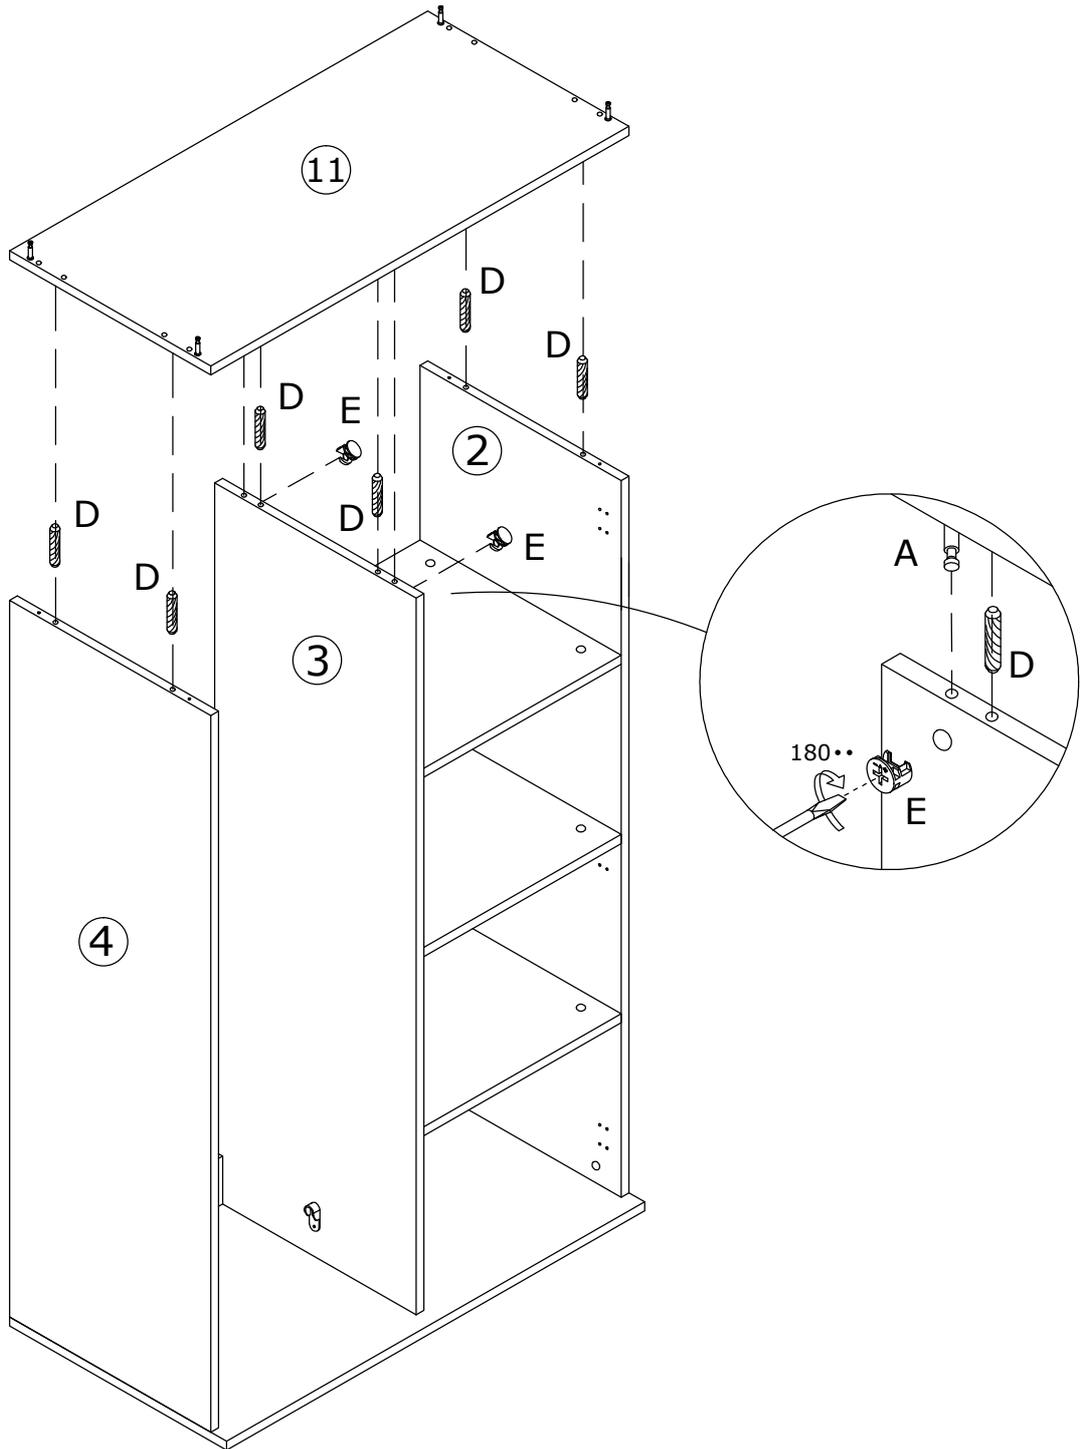


13

 H×4
φ4×35mm





Fix panel 11 using screw H.

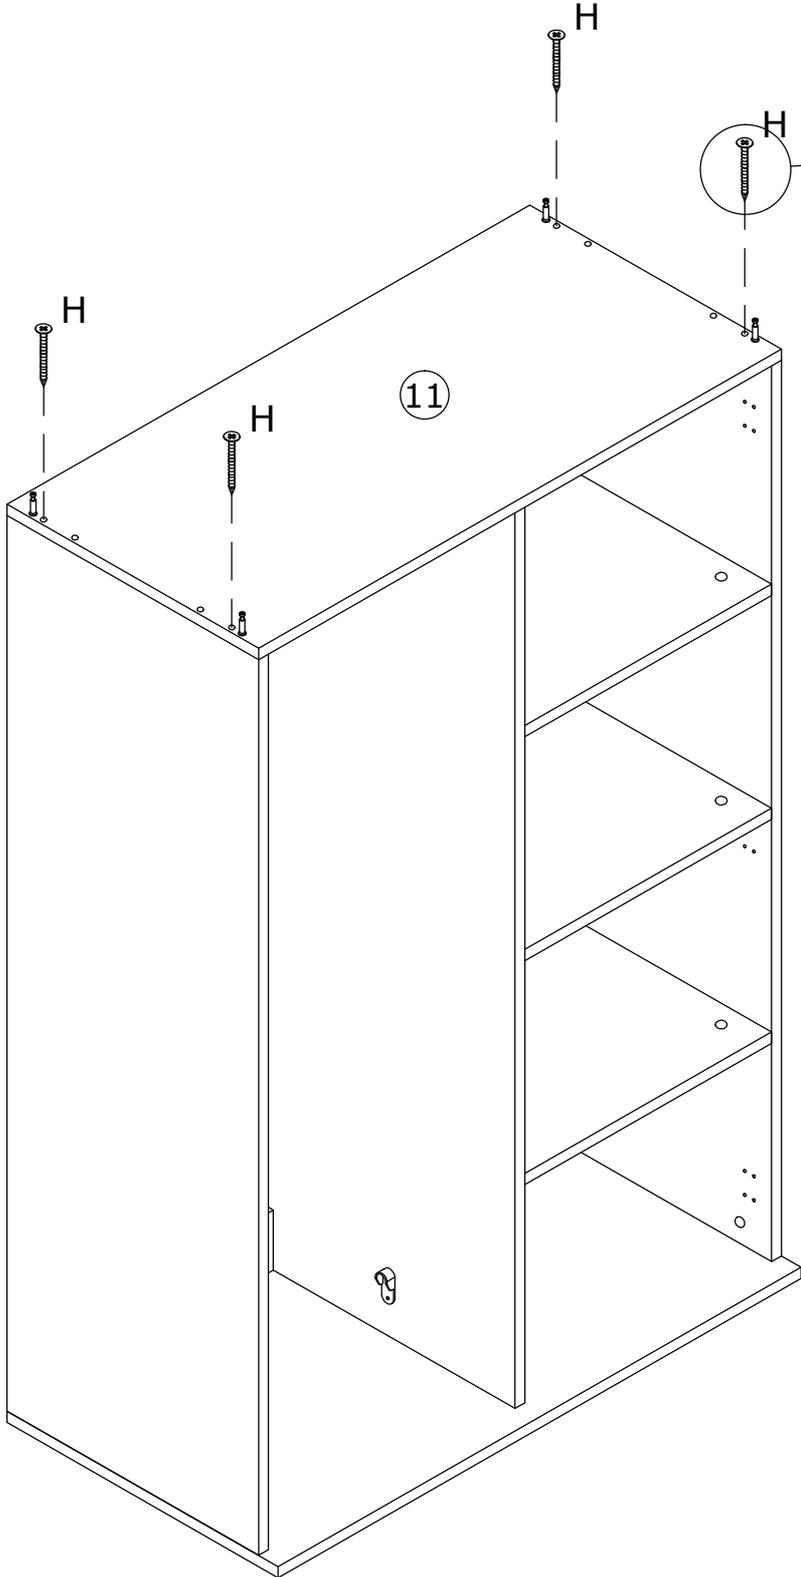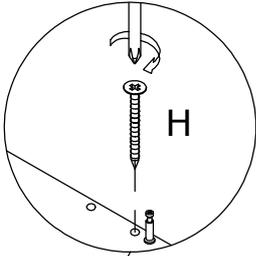


14

Dx4
ø8x30mm

Ex4
ø15x10mm

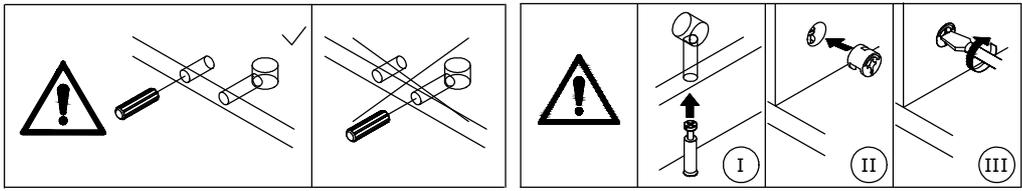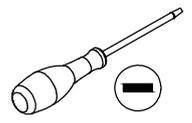


Connect 2 assembled components using wooden dowel D and lock with cam locks E as shown.



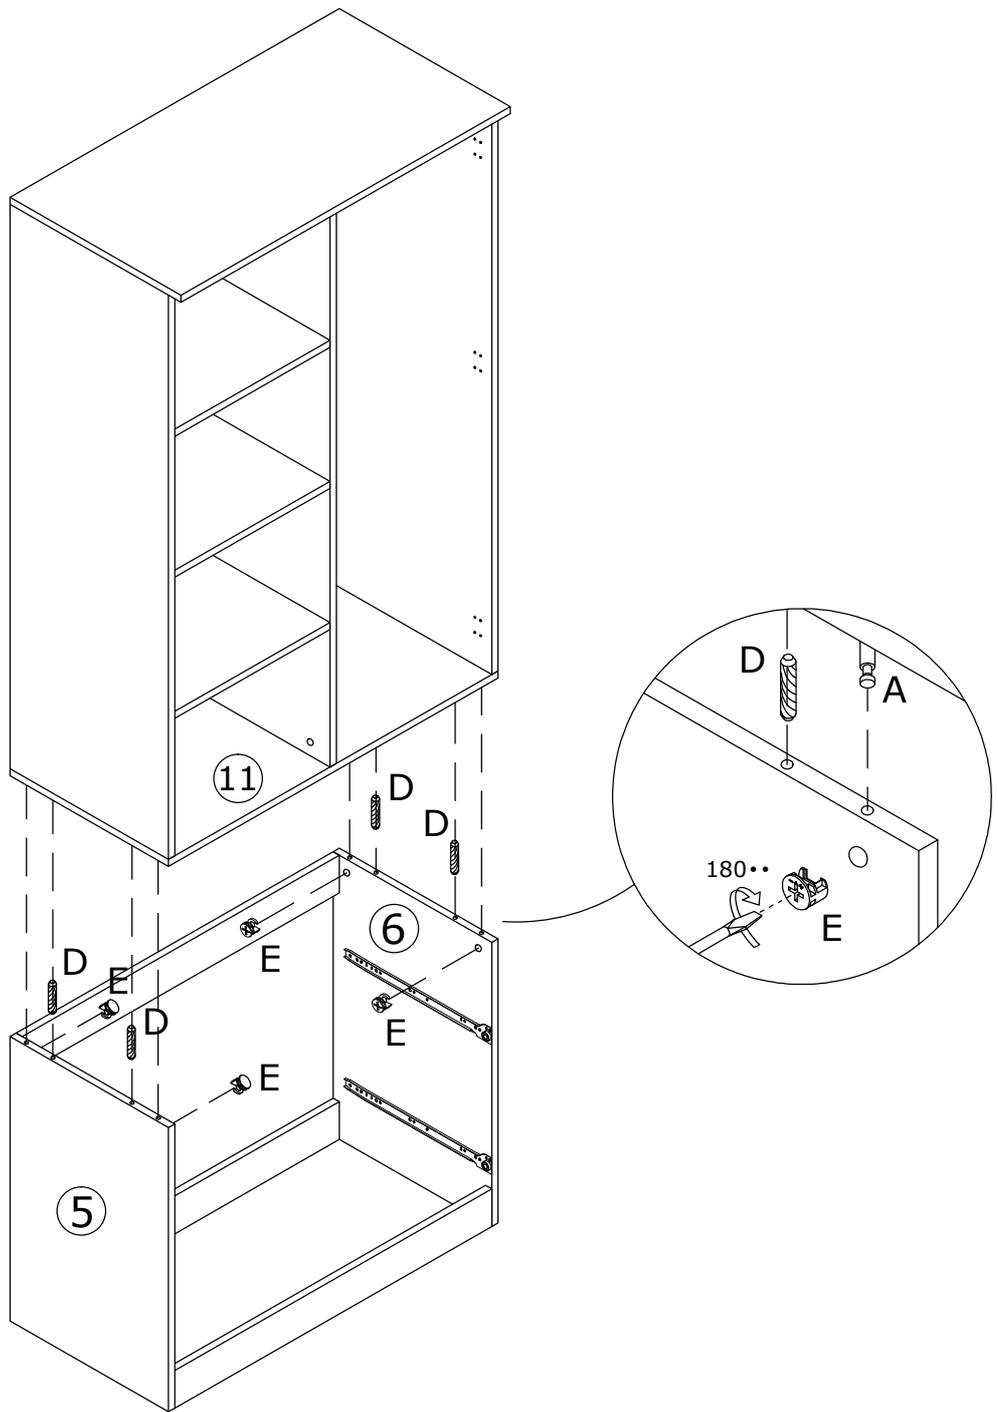


15

Connect 2 panel 18 with panel 20, 2 panel 19 with panel 21.

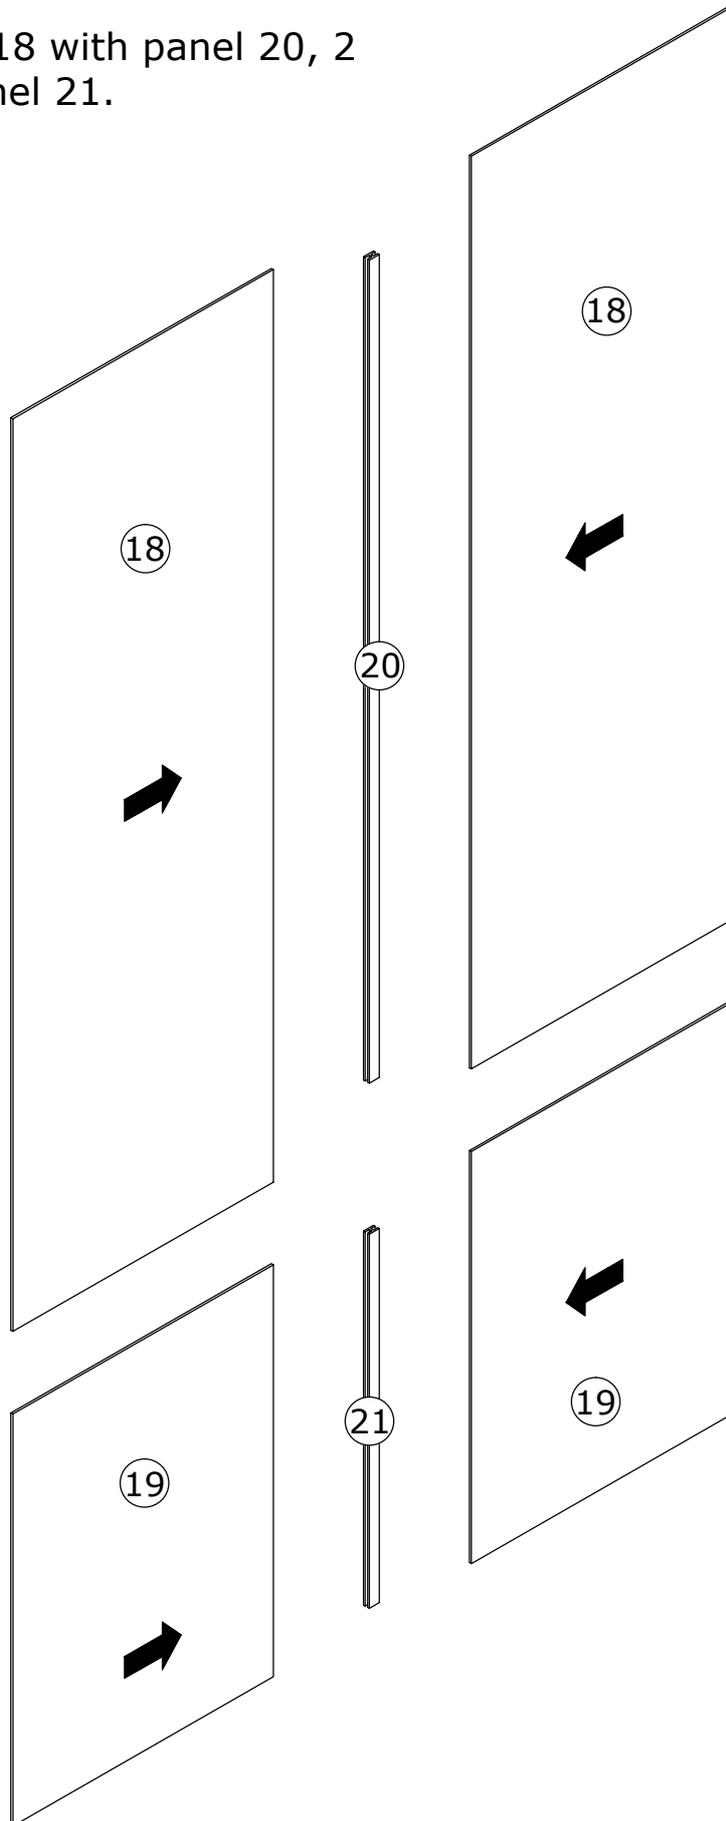


16

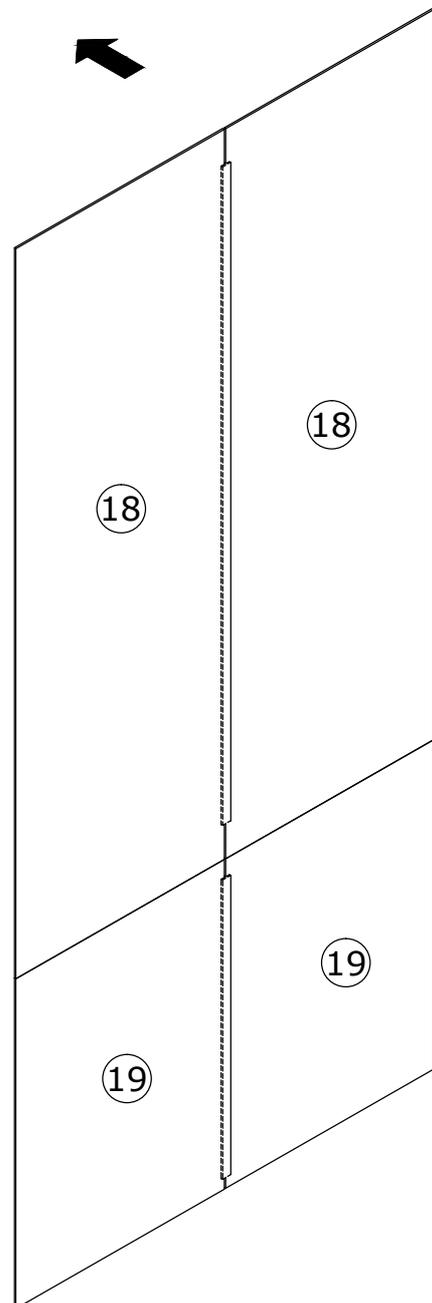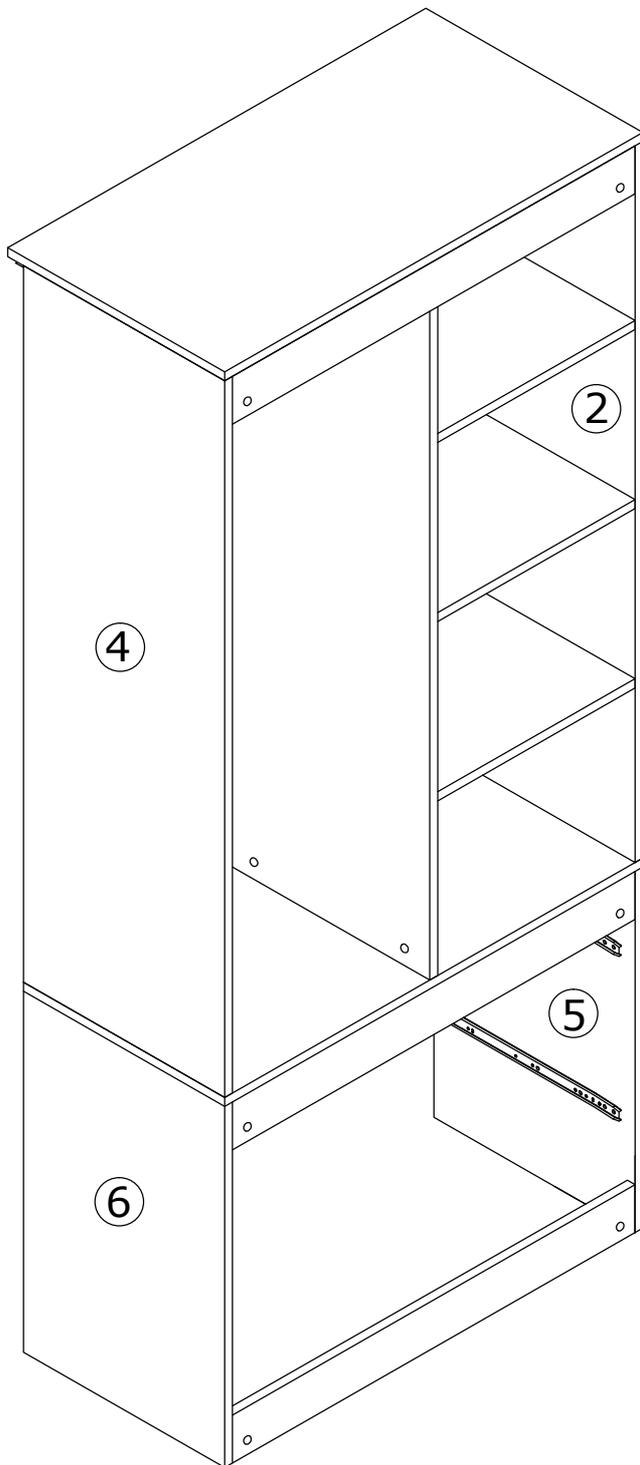 


17

 U x 26
Ø 2 x 20mm



Fix the back panels using screw U as shown.

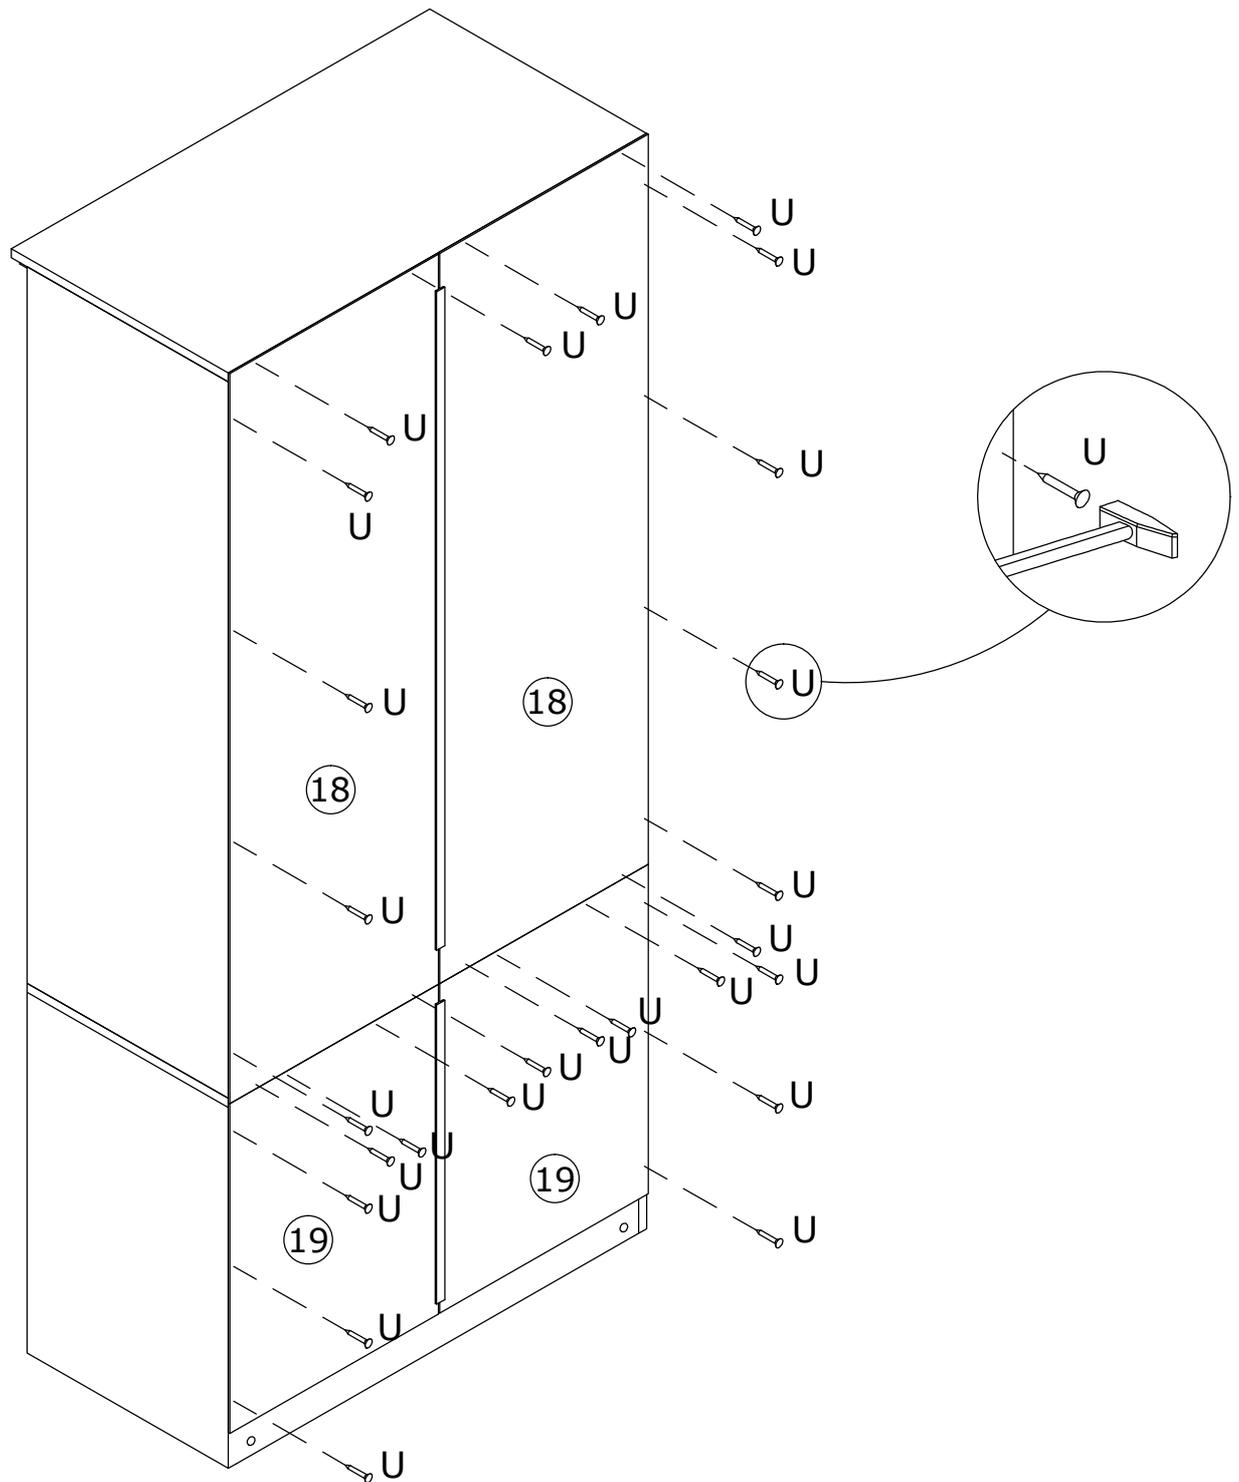


18

J×12
φ4×12mm


K×2

L×4
φ4×16mm

T×6

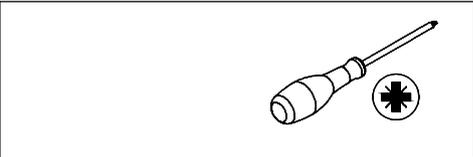


Fix hinge T to panel 7 and 8 using screw J.
And fix handle K with screw L as shown.

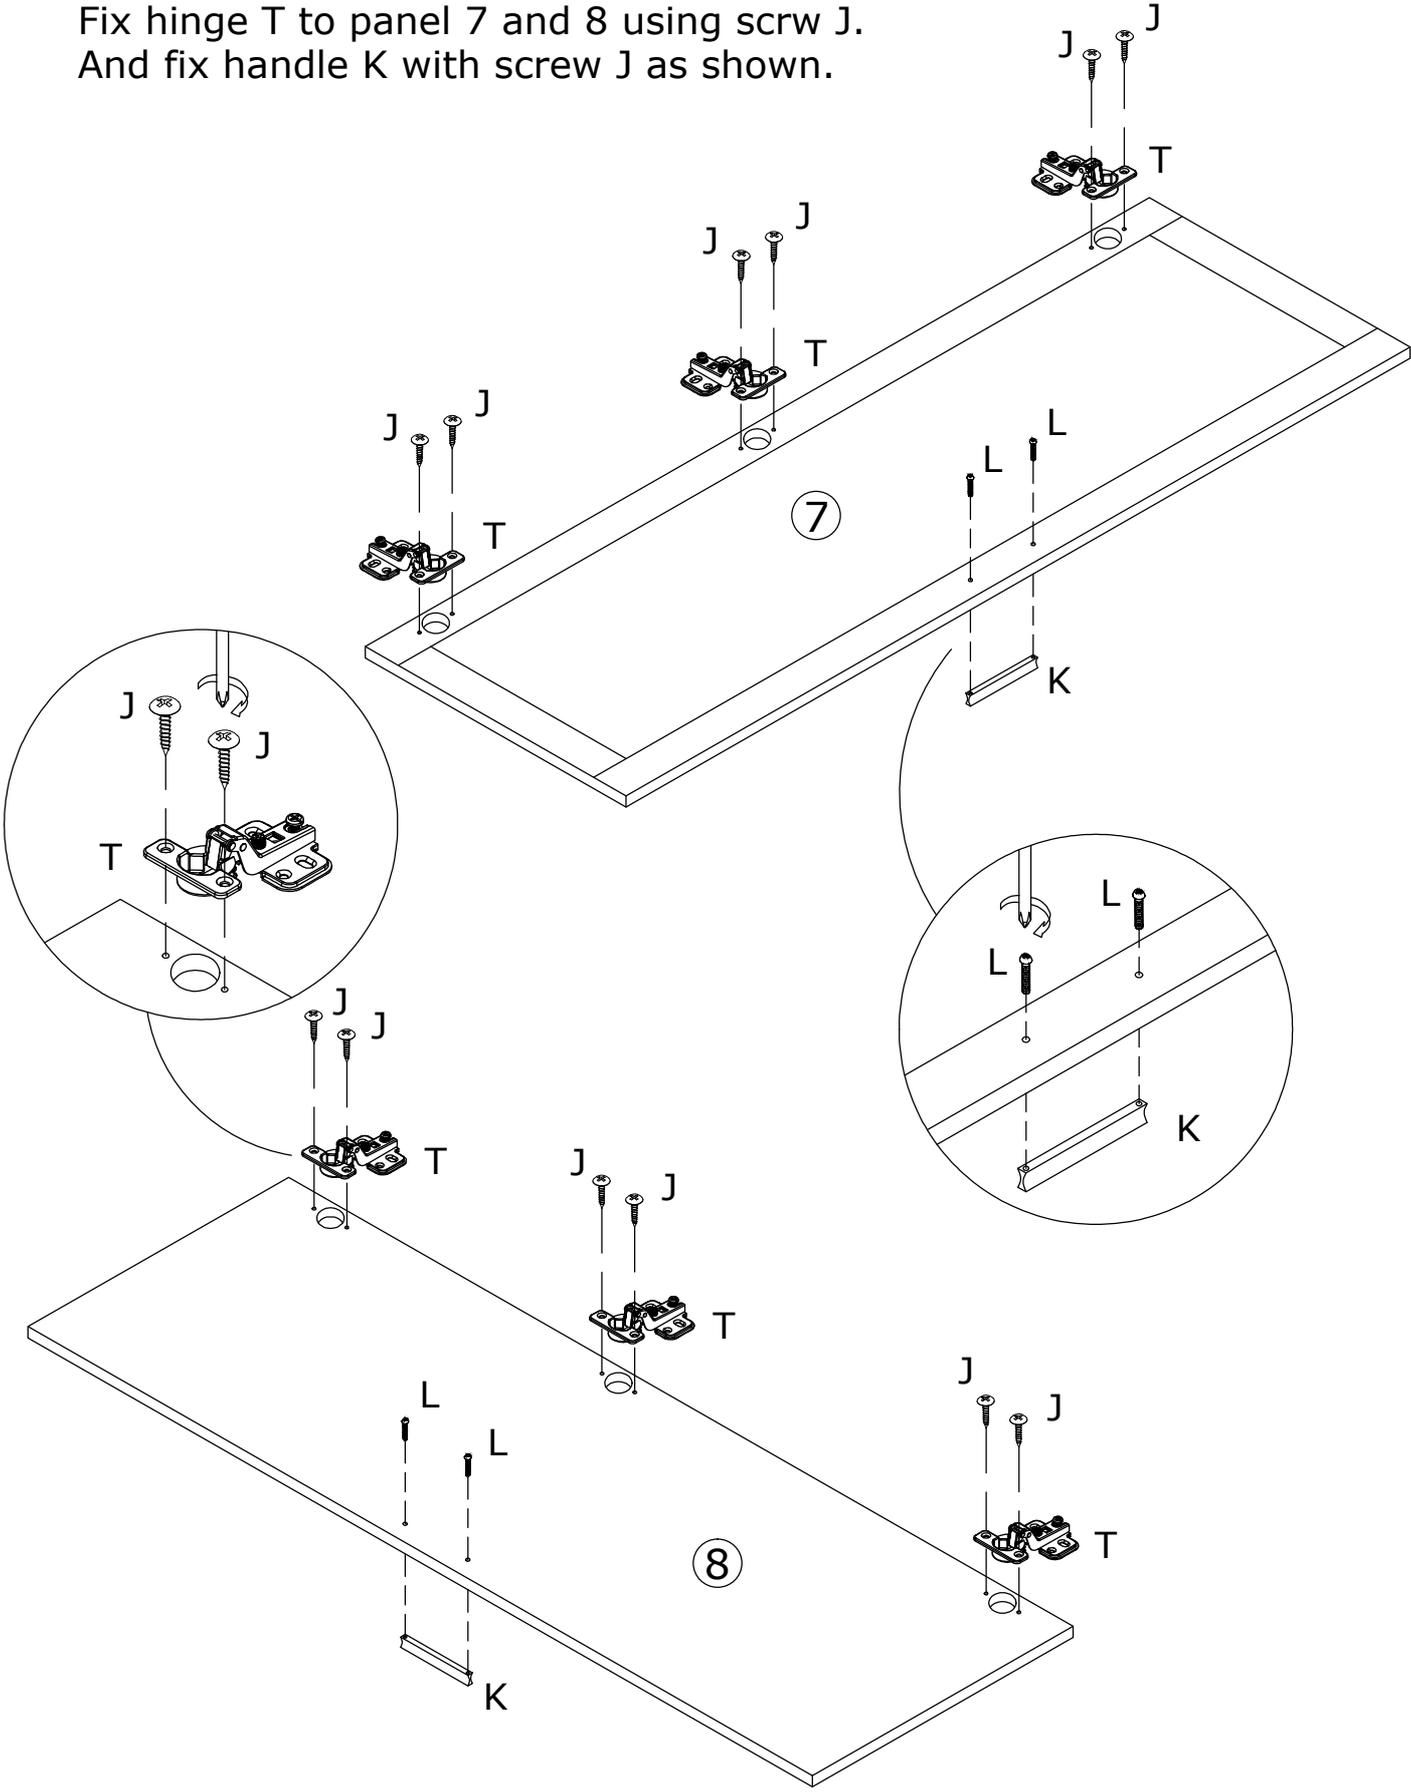


19

 J×24
φ4×12mm




Fix panel 7 and 8 using screw J as shown.


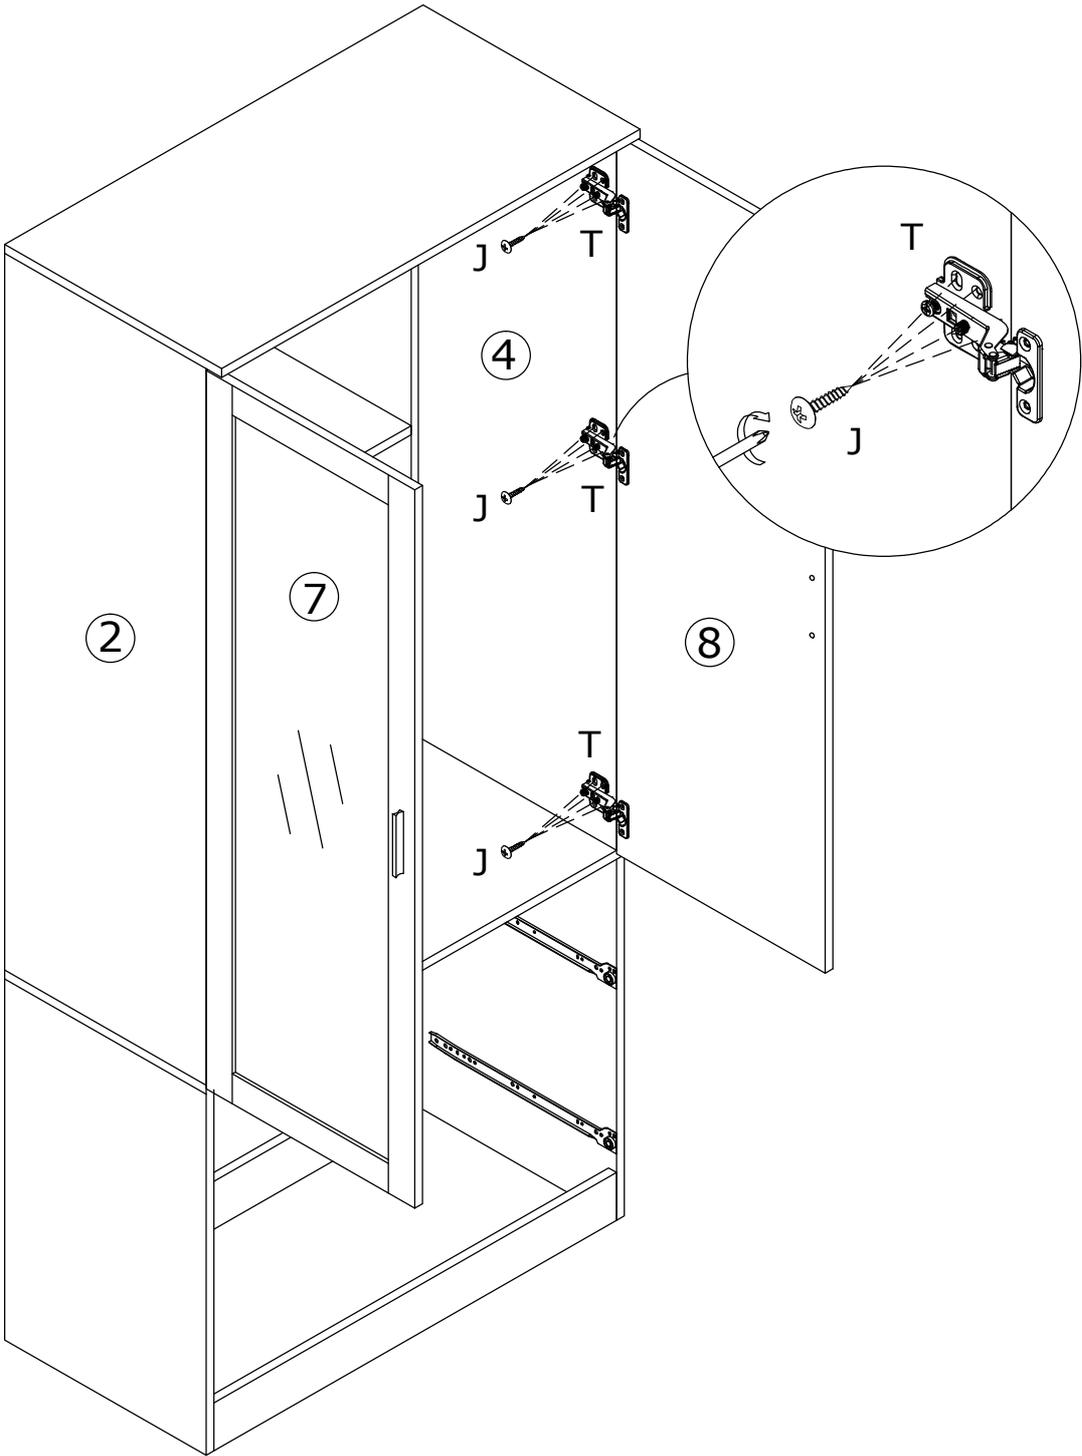


20

 A×10
φ6×35mm





Insert quickfit screw A into panel 12.
Please note don't use an electric
screwdriver or use force to rotate,
may cause crack.

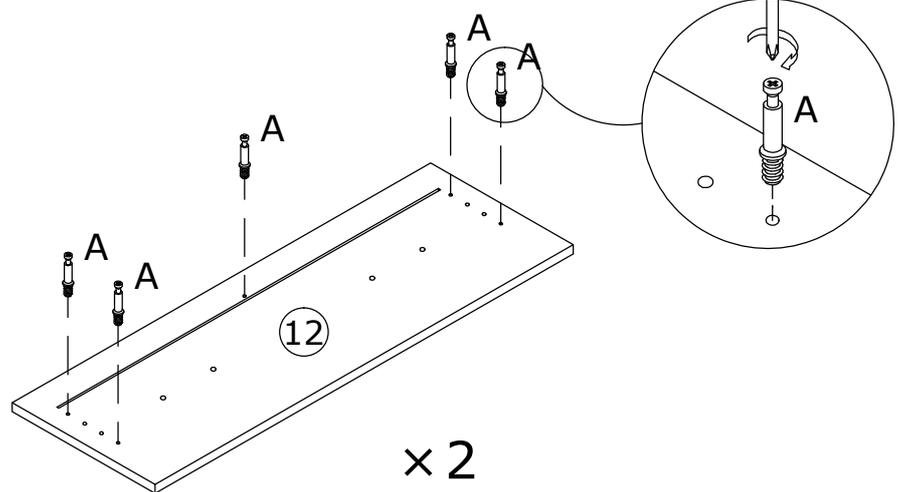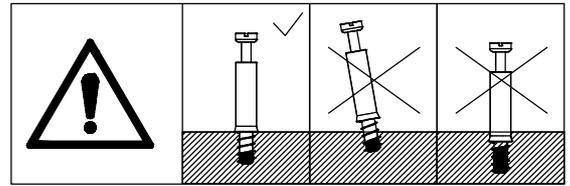


21

E×10
φ15×10mm

 M×8
φ6×30mm

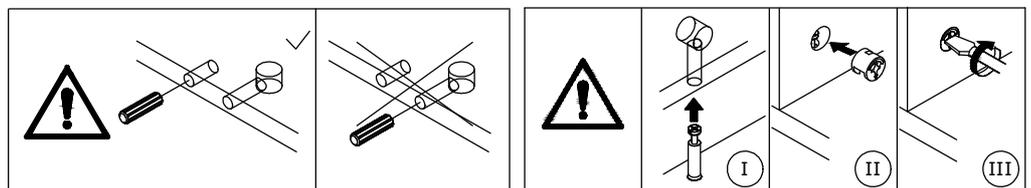


Attach panel 13,14,17 to panel 12 using
wooden dowel M and lock with cam locks
E as shown.

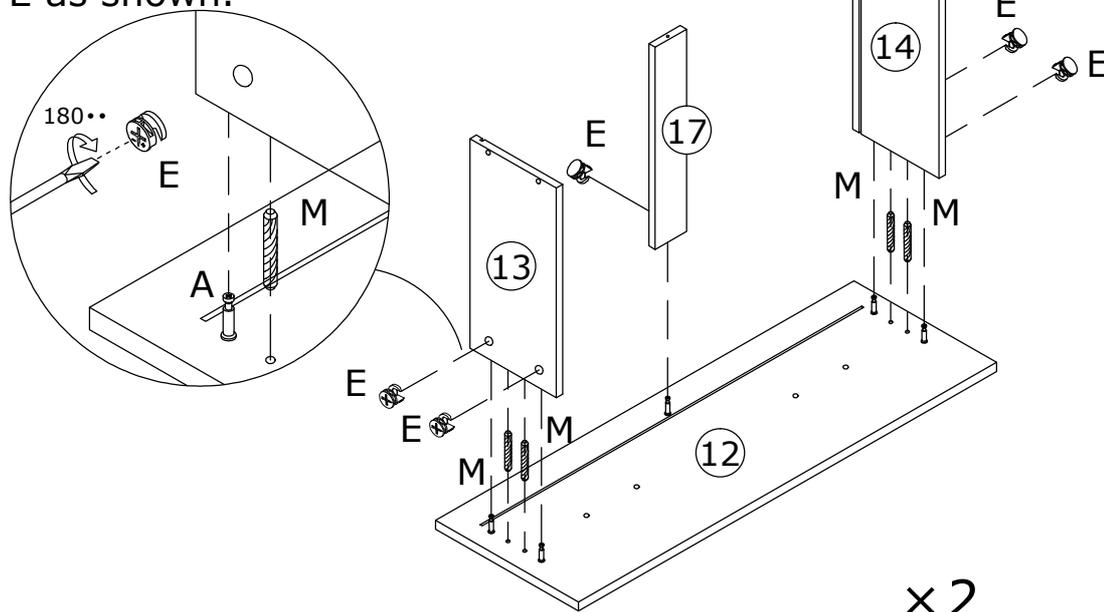

×2

22


Slide panel 16 with available slots as shown.

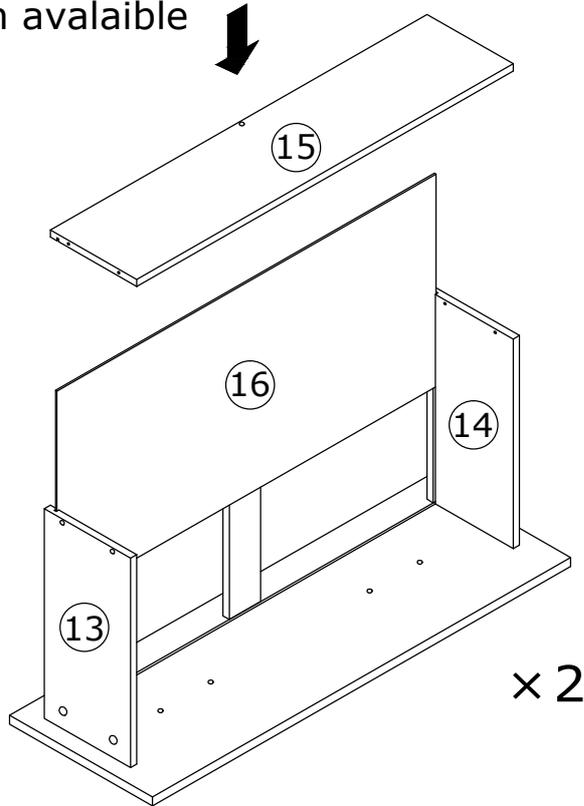

23




Fix panel 15 with screw S.

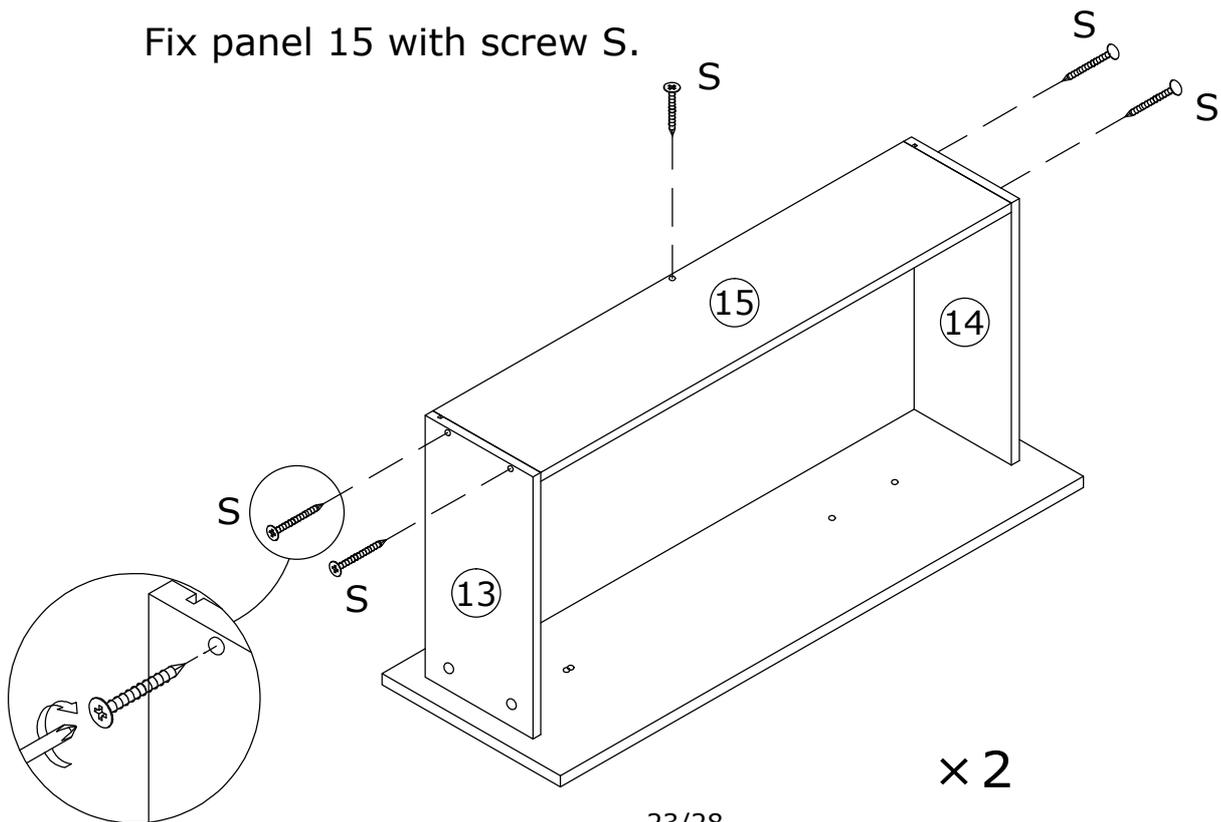


24




Fix handle K with screw L as shown.

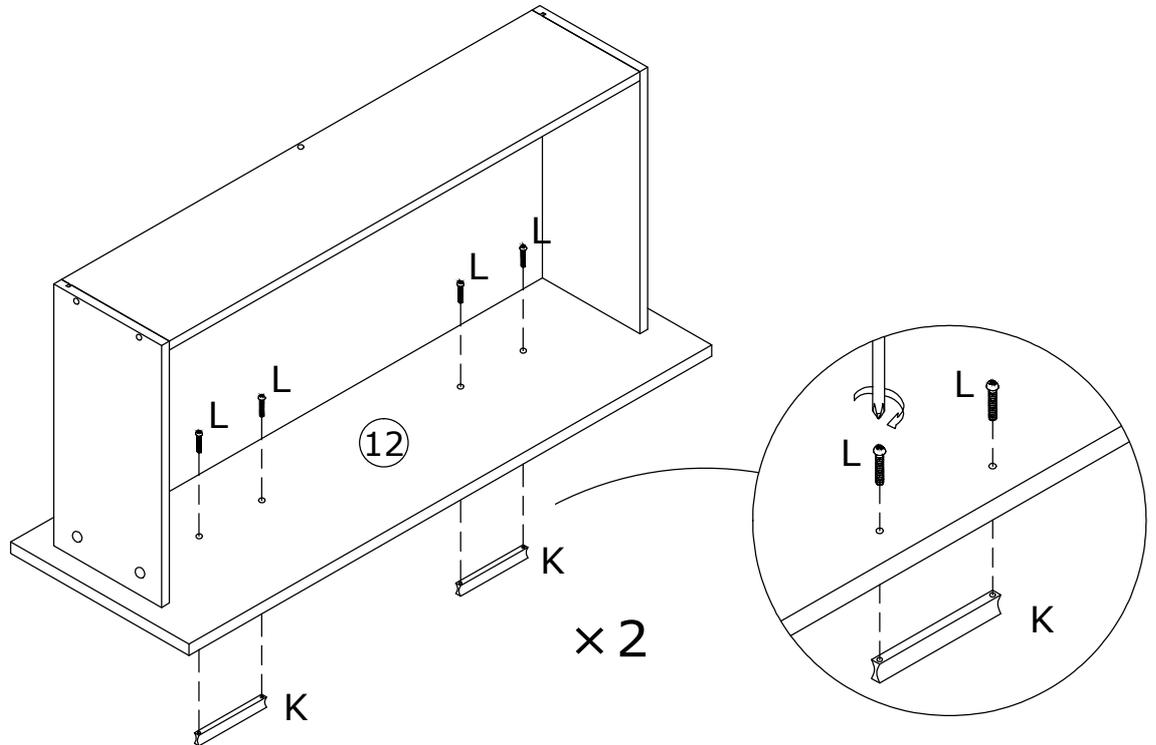




25

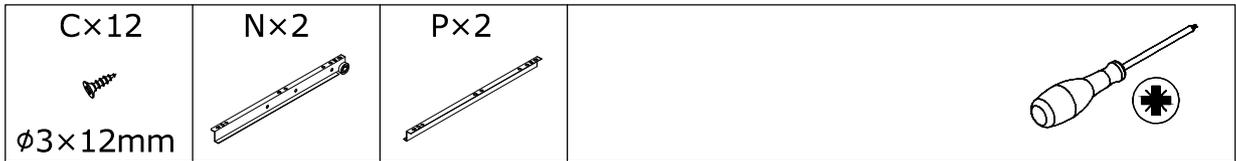




Lock slide rail N and P to panel 13 and 14 using screw C as shown.

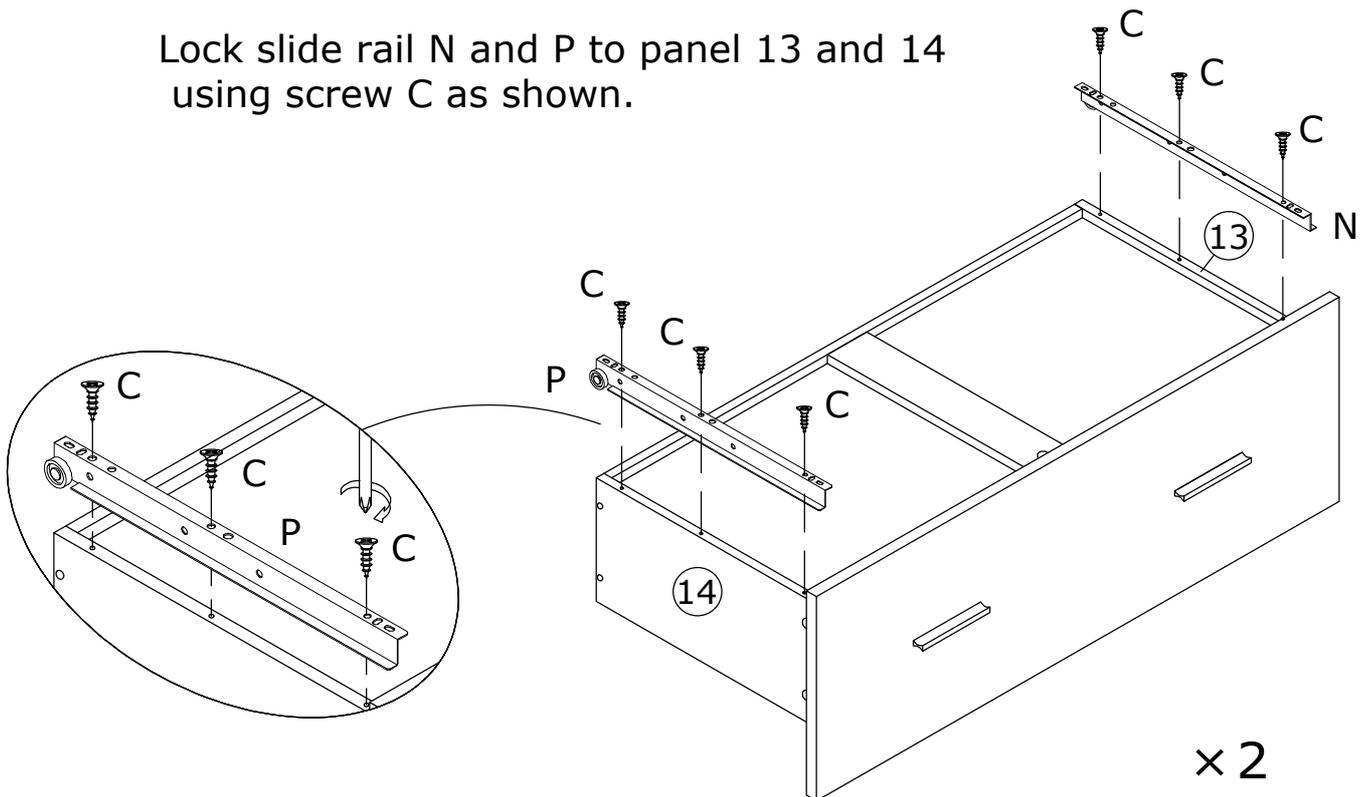






26

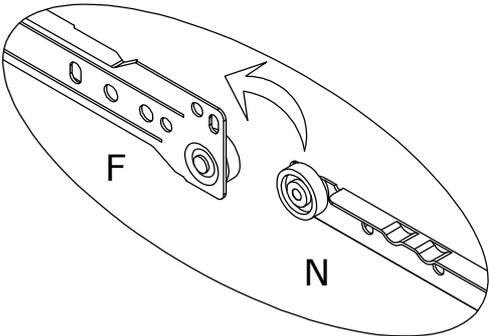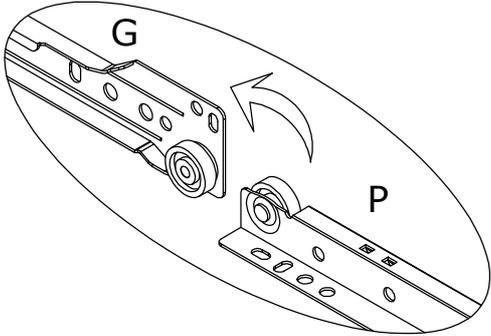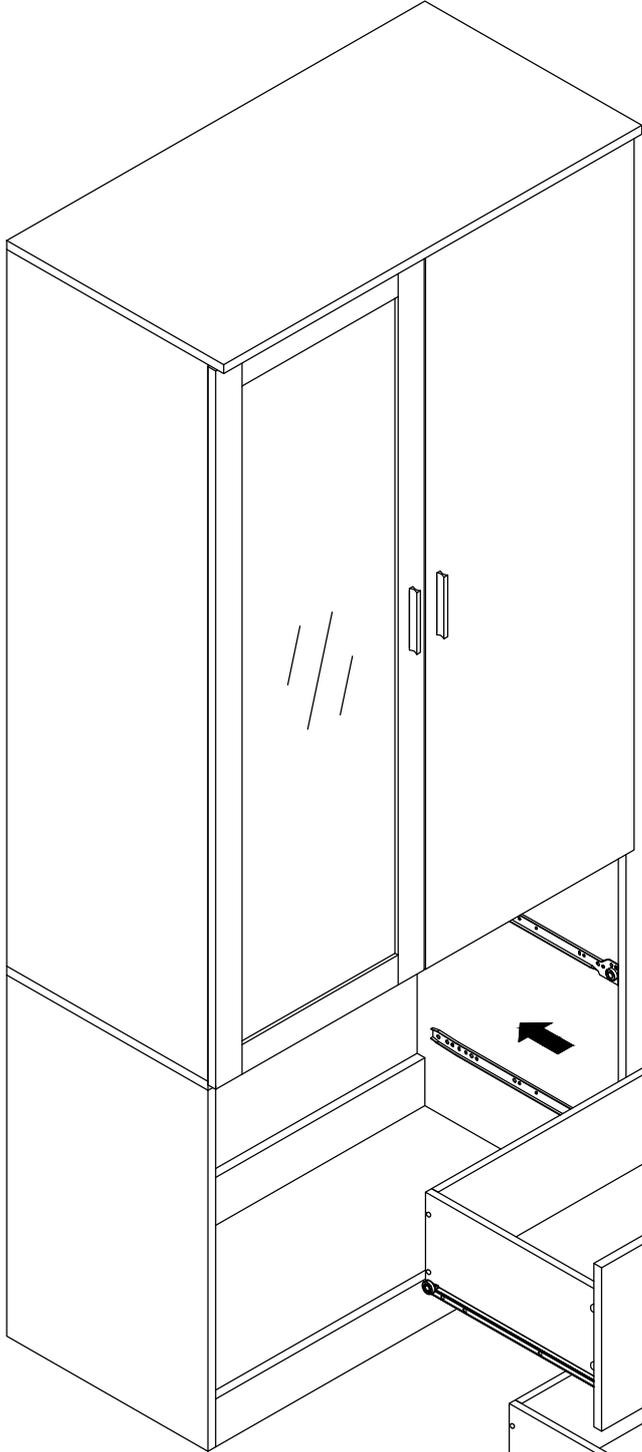

27


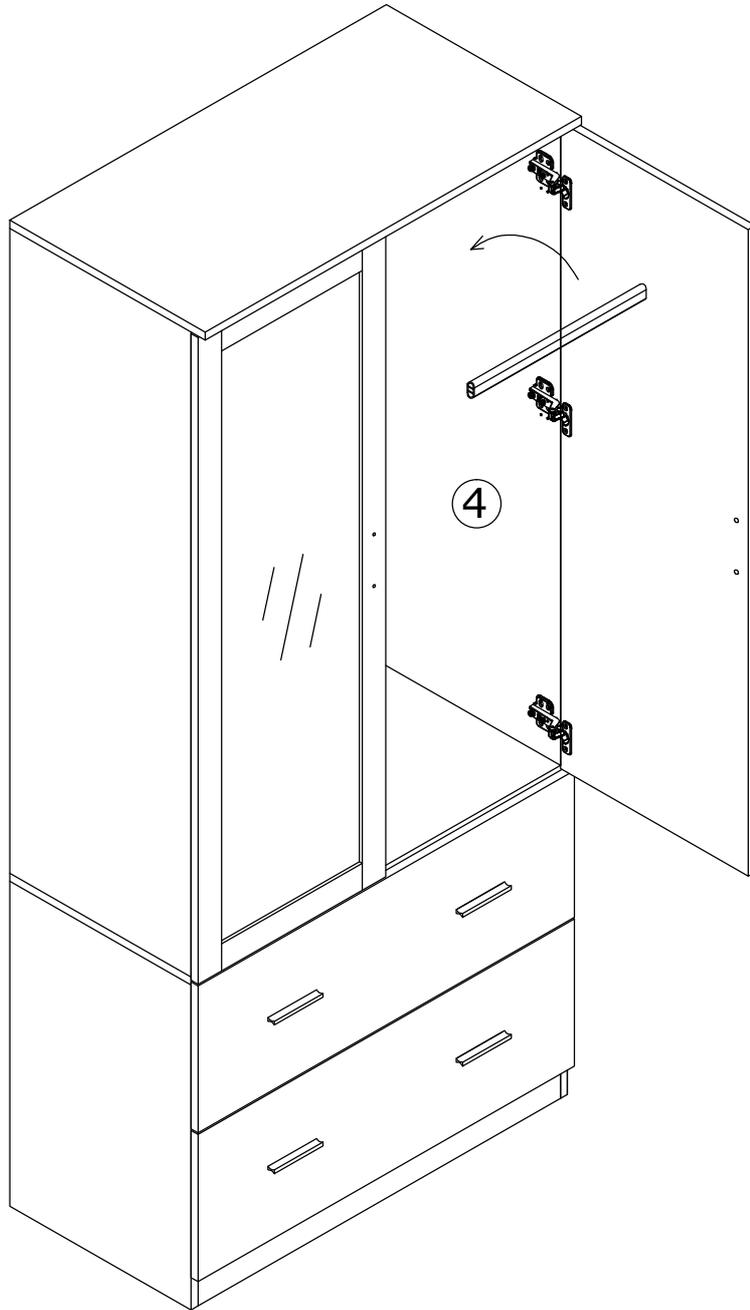
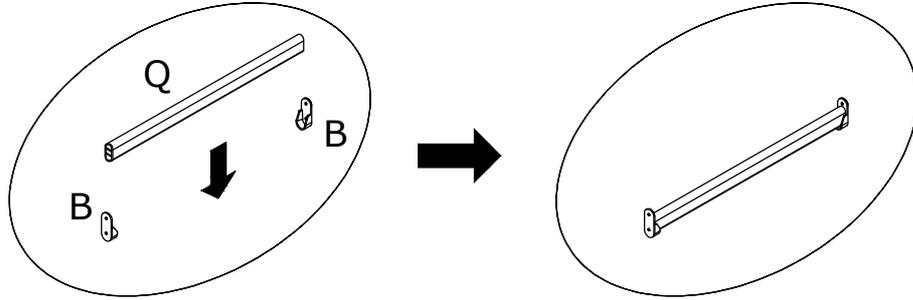
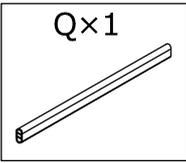


Adjust the length of hinges to avoid a gap between doors.

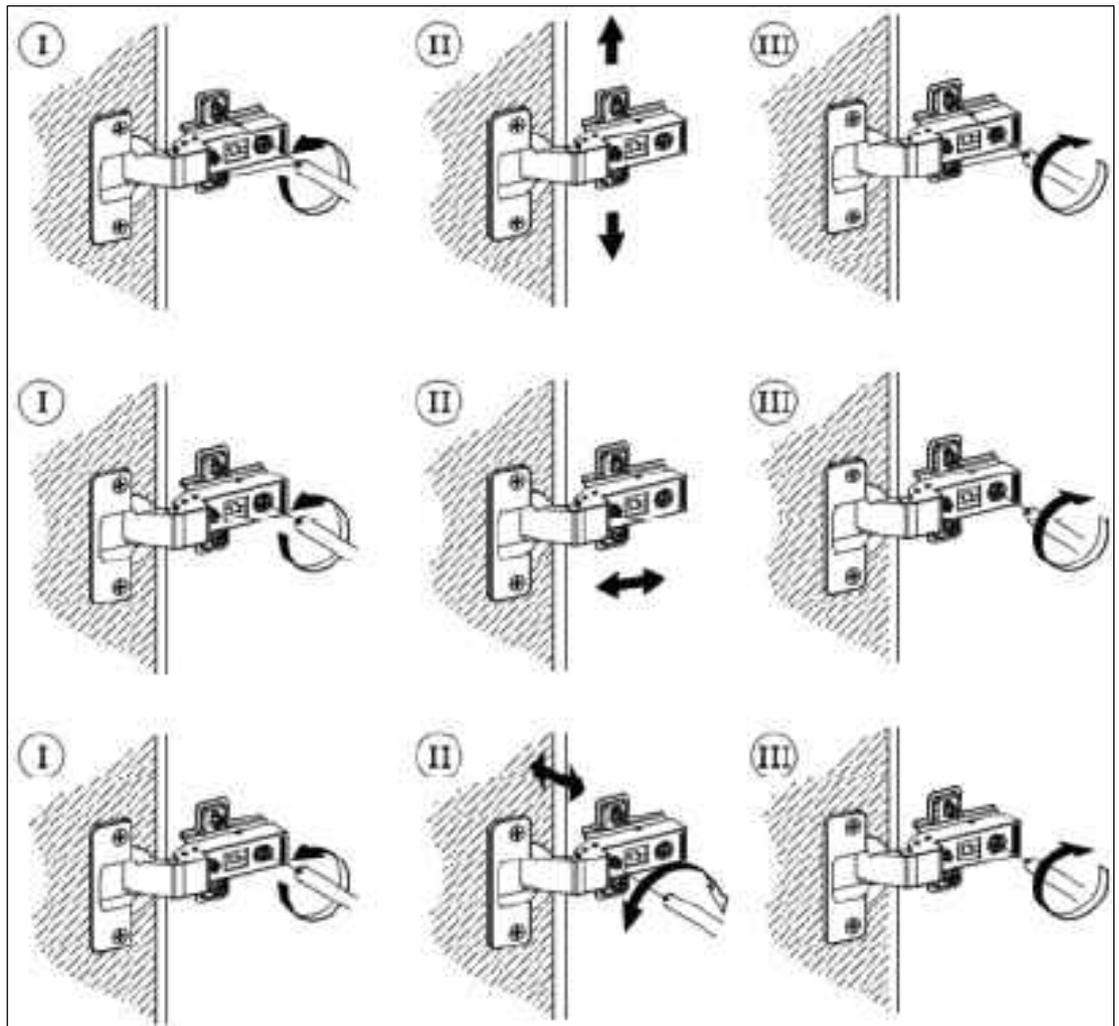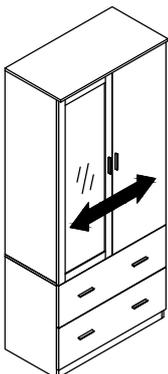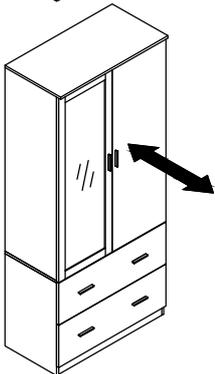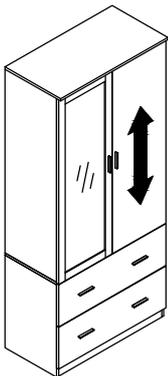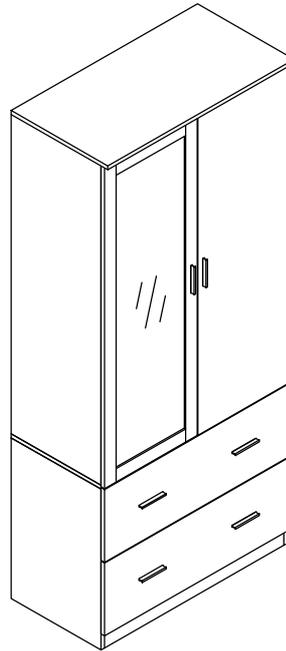

29

 R×1

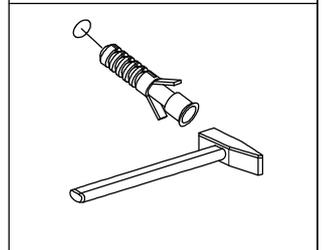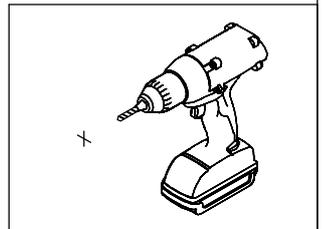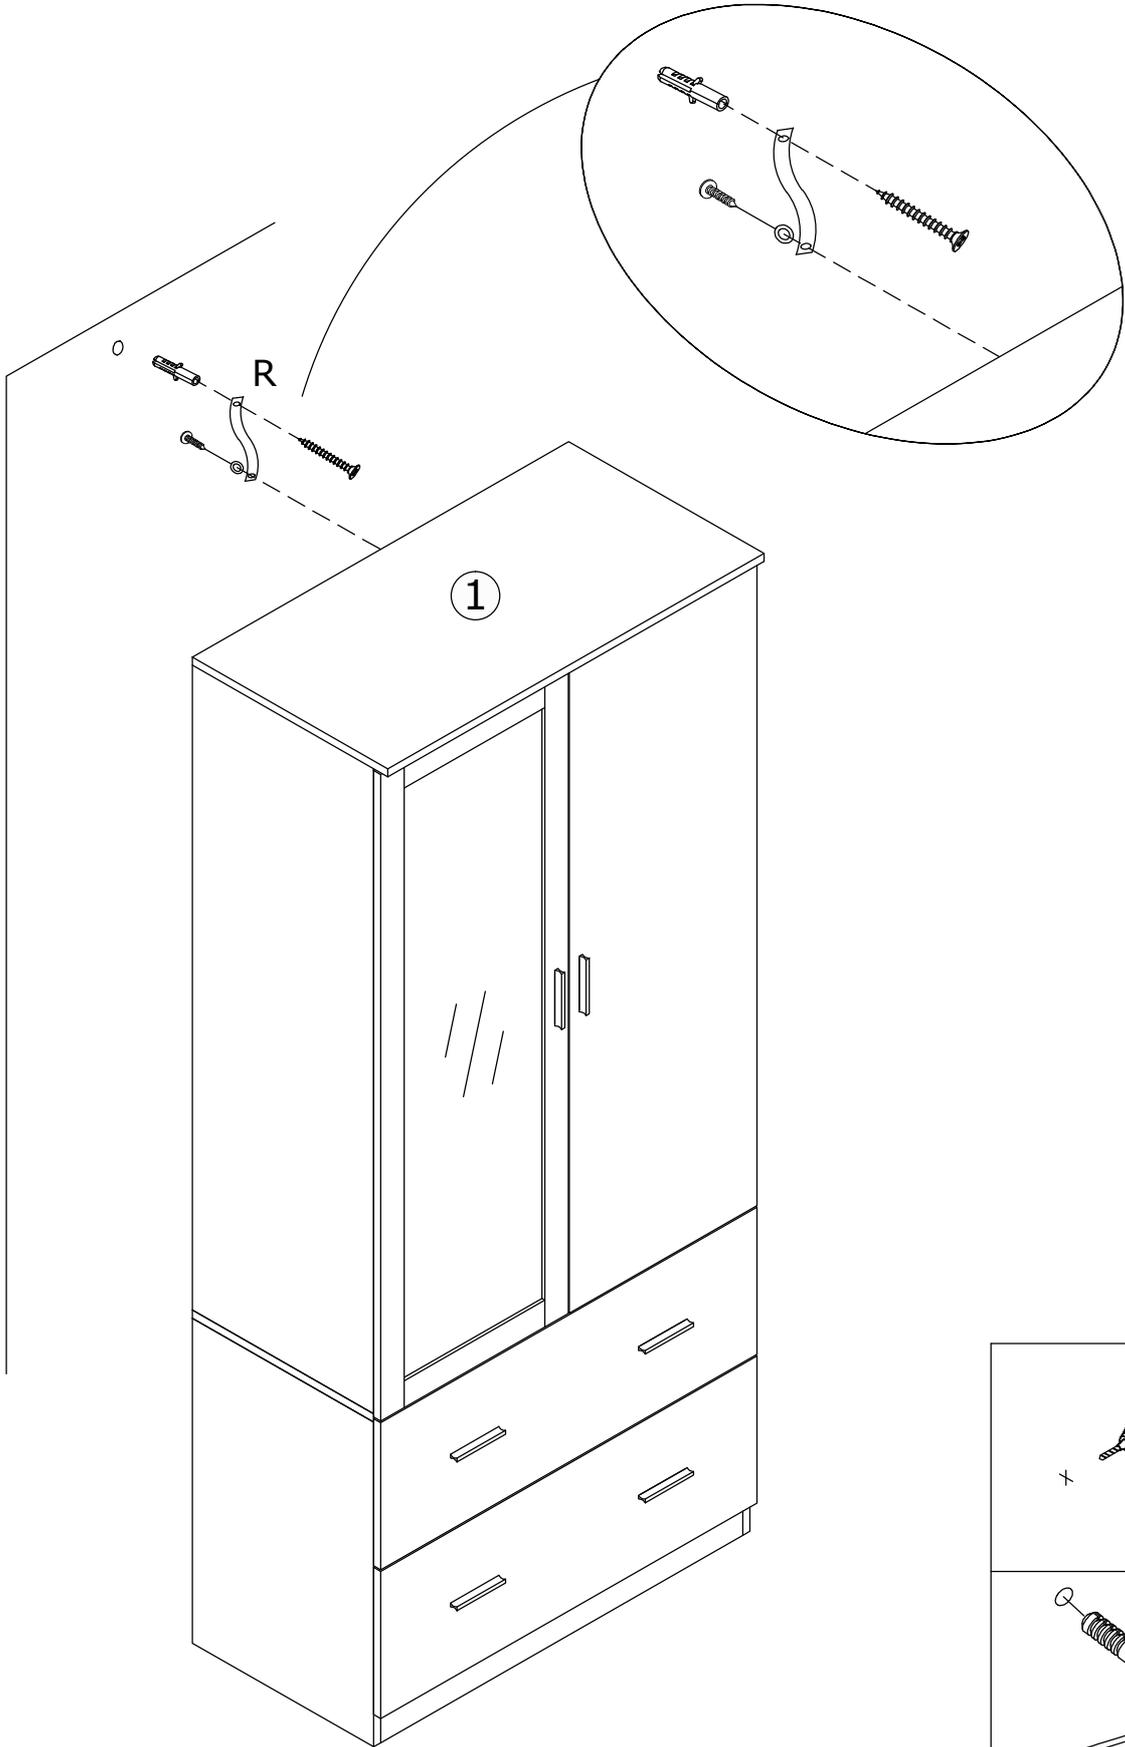

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.