
Hulife Home Laundry Rack Explore Manual

- Please read before assembling the components and using the product
- No not put fingers into the opening of the pipe
- Keep your children away from the laundry rack when assembling, using and storing it.




Components

- 1. Square pipe 1ea
- 2. Candle type Pipes 2ea
- 3. Straight pipes 2ea
- 4. T-type connectors 6ea
- Side wings 2ea
- 6. Wheels 6ea
- 7. Rack Legs 2ea
- 8. Caps 2ea
- 9. Rack wing shelfs 6ea

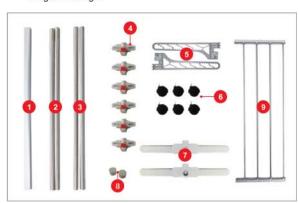

Rack Leg Assembly

- Connect the wheels to each leg.
 Connect the square pipe to legs.
 Push the square pipe to both legs until you hear a 'click'.

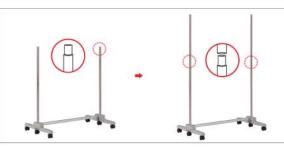

Rack Wing Shelf SET Assembly

- Connect Candle pipes to the legs.
 Connect Straight pipes to Candle pipes .



Rack pillars & Wings Assembly

- On the T-type connector, the part with the red switch and the 'top' lettering faces the front.
 Push the wings in the direction of the arrow, to connect them to both sides of T-type connectors until you hear a 'click'.
- Place the wing horizontally and push it to the inside of the T-type connector to lock it.



Rack pillars Assembly

- Ensure the 'top' lettering and the red switch points upward (Unlock) properly on the T-type connector before connecting to the pillars.

 2. Push the wings downward to connect them to the

- Adjust the height using the T-type connector.
 Push the red switch downwards to lock the position and repeat for other wings.



Side Wings Assembly

1. As shown in the picture, fix the side wings to each



STEP8 Cap Assembly

1. Put a cap on the top.



Completion Laundry Rack Assembling Complete

Refer to the steps

Imported & Distributed by: Mungsube Enterprise Inc. 19 Spielman Rd, Fairfield, NJ 07004 § 1-888-702-0009 🖂 cs@hulife-home.com 🌐 www.hulife-home.com 🕜 hulifehome