Instruction Manual

2-Seat Patio Glider



- 1. Please find the assembly guidelines on Page 2-5.
- 2. Scan the QR code below to watch the assembly video on YouTube.



3. You can scan the QR code of our official website and leave a message to register for the 2-year warranty.




4. There may be cracks or scratches due to violent impacts during the shipping process. If you find any defective parts, please feel free to contact us through Amazon messages or any of the contact methods below.

We will respond within 8 hours and provide free replacement parts or other

We will respond within 8 hours and provide free replacement parts or other services you need.


Fortunecandy Inc.


- □ customerservice@fortune-candy.com

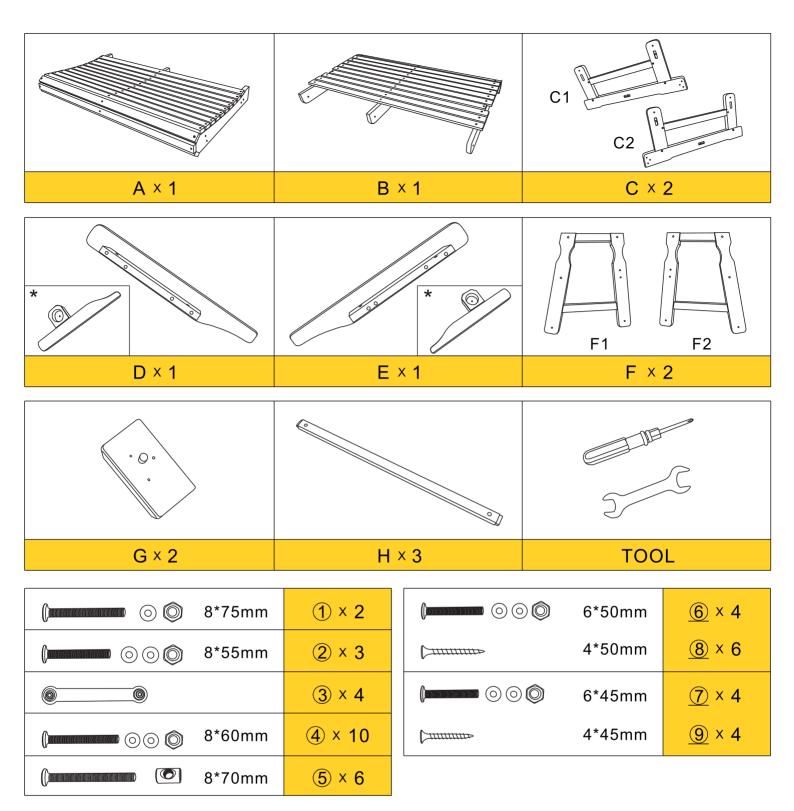


Precautions before Assembly


- 1. If any parts are missing or scratched or damaged, please contact the seller or Fortune Candy customer service for partial refund and replacement parts.
- 2. The smell of PU wood paint will be greatly reduced after 1-3 days.
- 3. Do not tighten all screws and nuts until last step. Fixing a single part too early may make other parts difficult to assemble. Do not overtighten it to avoid damaging the wood.
- * We provide excellent after-sales service, which is appreciated by many buyers. Your satisfaction is our main goal.

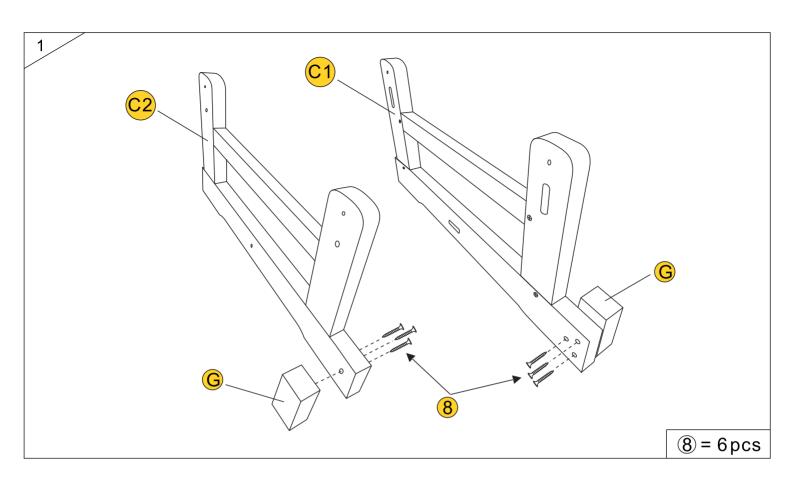

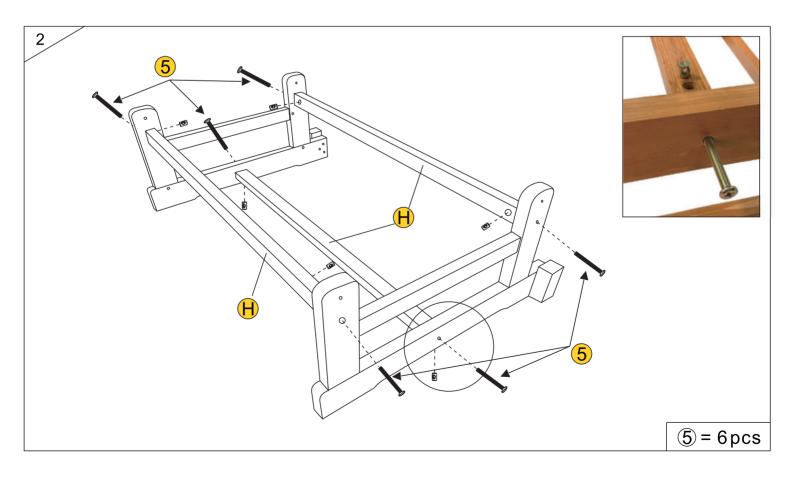


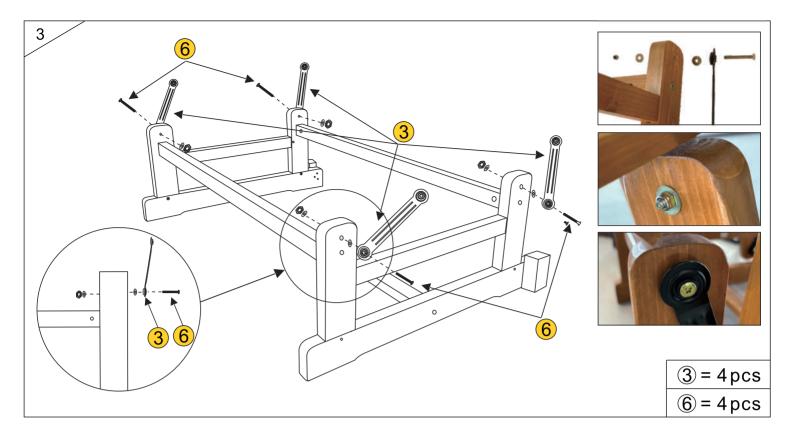

3. Note: Please pay attention to distinguish the placement direction of Part 3, and place a screw washer between Part 3 and the wooden part. If the direction of Part 3 is reversed, the chair will be stuck and cannot glide.

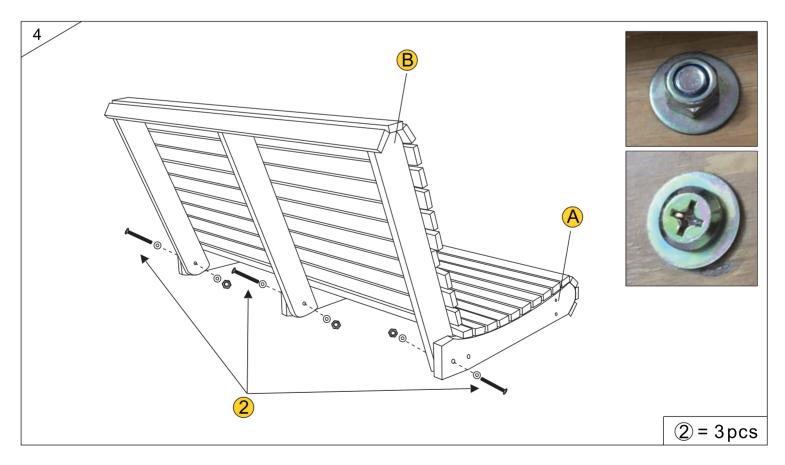

4. Note: Part B can be moved back and forth in a small amount to make the screw pass through the hole smoothly. Please make sure the washers are assembled in the correct positions.

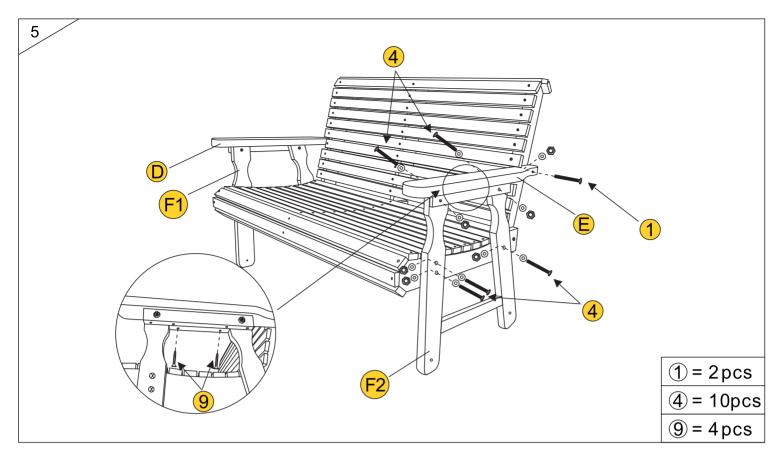

5. Note: Please use the tools to tighten all the screws and washers to make the chair stable and have the maximum load - bearing capacity.



6. Note: Please pay attention to the placement of the screw washers.

FAQs for This Product:

Q: How to maintain this product?

A: Please check the nuts regularly for looseness and tighten them. This product is weather-resistant and suitable for outdoor use, but we suggest keeping it dry after rain, to make it last longer. If you hear metal grinding noise when using this glider, it is likely that the bearings of the black iron bars are lacking lubrication. You can try applying lubricant or contact us to send you a set of new iron bars for free.

Q: How to register for the warranty?

A: Please scan the QR code on the first page to go to our official website https://fortune-candy.com, and use the online chat tool to send your order number, then we will register your item for the warranty. You can also send an email to customerservice@fortune-candy.com.

Q: How to contact us to send replacement parts?

A: If you found any defects or scratches or missing parts, the easiest way is to tell us which part you need using Amazon messages. In this way we can find out which product you purchased and your address. Or you can send an email to customerservice@fortune-candy.com. Please tell us your order number, shipping address, and which part is needed. No matter which way you contact us, we will reply within 8 hours and give you a satisfactory solution.