

9' (2.75m) DOUBLE TOP PATIO UMBRELLA



PLEASE READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE

SAFETY WARNING

Patio umbrellas are designed to provide protection from the sun **NOT** the wind.

- **NEVER** open or operate this umbrella in wind conditions greater than **5mph (8kph)**.
- **NEVER** use the tilt function in any wind (even a light breeze).
- **NEVER** use excessive force on the crank handle to open or close the umbrella.
- **ALWAYS** close and secure the umbrella when not in use or during any strong wind event, especially gusting wind and rain.
- **ALWAYS** close the umbrella when unattended or not in use. If you are not sitting under it, the umbrella should be closed.
- **ALWAYS** use the Velcro straps to properly secure the canopy to the frame when the umbrella is closed.
- Umbrella bases are required (additional purchase) to secure this umbrella. **NEVER** open or operate a patio umbrella without a base. It is important to use a correctly weighted base; more weight is always better than less weight. This model requires a **MINIMUM** base weight of 31lb (14kg) if used through a table, or 70lb (32kg) if freestanding.

FAILURE TO CAREFULLY OBSERVE THESE SAFETY WARNINGS CAN RESULT IN CATASTROPHIC DAMAGE TO YOUR UMBRELLA, POTENTIAL PERSONAL INJURY AND OR PROPERTY DAMAGE.

IMPORTANT INFORMATION

If the umbrella is showing ANY signs of stress, or IF the umbrella begins to move around excessively even when properly weighted it indicates the wind is too strong and the umbrella must be closed and secured immediately.



CARE AND MAINTENANCE

- To help extend the life of the polyester fabric and reduce the effects of fading we strongly advise using a protective storage cover whenever the umbrella is not being used.
- During extended periods of bad weather (especially through winter months) your umbrella should be stored inside in a dry place.
- The polyester fabric has been treated to make it dirt and shower resistant (not waterproof), if your umbrella gets wet please allow it to fully dry before storing it away. The fabric can be cleaned with a soft brush then use a damp cloth and mild detergent to remove any stubborn stains.

BEFORE YOU START

- Check you have all the listed parts before you start assembling.
- In the event of missing or damaged parts, contact our customer support team via your Amazon account.
- Assemble on a soft surface such as a drop sheet or rug to avoid scratching.

 
WHAT'S IN THE BOX

Item	Part	Qty	Part Description
A		1	Umbrella Frame and Canopy
B		1	Lower Pole

ASSEMBLY INSTRUCTIONS


Step 1

Insert the lower pole into the stem of the umbrella frame. Press the spring clip in whilst aligning the two holes, release the spring clip once the two holes are aligned.

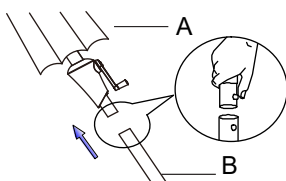

Step 2

 Stand and secure the umbrella in a suitable umbrella base (not included). Secure the umbrella pole firmly by tightening the locking nut as shown in the picture.

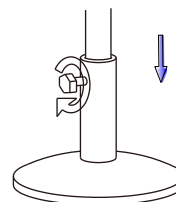


OPERATING INSTRUCTIONS

Step 1


To open the umbrella, unfasten the Velcro storage straps and gently pull out each of the umbrella ribs by hand, at the same time wind the crank handle gently in a clockwise direction.

 CAUTION: Take care not to wind the crank in a counter clockwise direction to open as damage may occur.

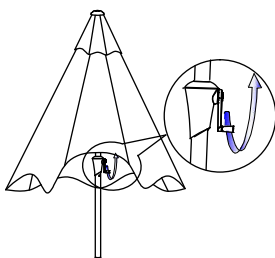

Step 2

 
Continue to wind the crank handle until the umbrella canopy is fully open and taut. Take care as overwinding may damage the umbrella. Once the canopy is fully open insert the support pin into the hole located just below the runner hub.

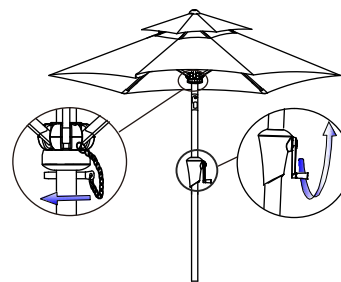

Step 3


To tilt the canopy push the tilt button with one hand gently allow the canopy to tilt with the other hand. Release the button to lock in the position.

 CAUTION: The tilt option should only be used on days with no wind, use of the tilt function even in a light breeze is not recommended.

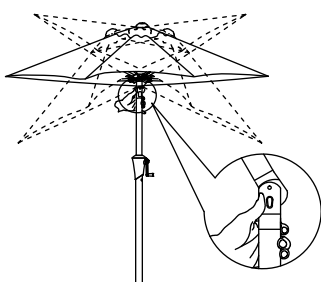


Step 4

 To close the umbrella, make sure the canopy is horizontal (**never close the umbrella in the tilted position**). Remove the support pin below the runner hub. Wind the crank handle in a counter clockwise direction until the canopy is fully closed.

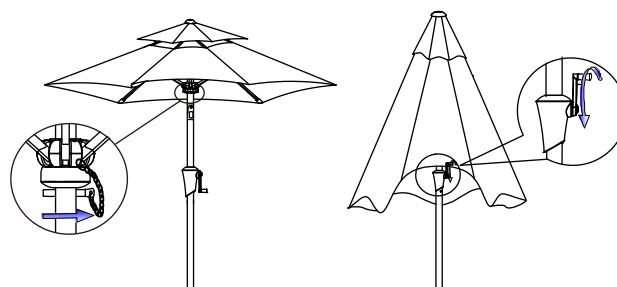

Step 5

 Use the Velcro storage straps to secure the umbrella when not in use.

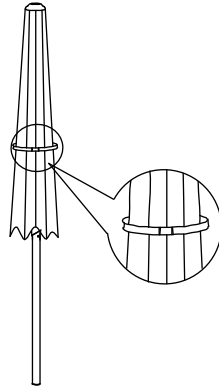

CUSTOMER SUPPORT

Please contact us via your Amazon account before leaving any negative review or feedback on Amazon.

Your complete satisfaction matters to us, so if our product hasn't met or exceeded your expectations, or if you are having problems with assembly, missing or damaged parts, before you do anything else please email our support team directly, let us know the full details of the issue (attaching clear pictures to your email will always help us to better understand exactly what's gone wrong).

We promise to respond to your email within 24 hours, and we guarantee that we will fix the problem to your complete satisfaction.