 


Model: AF005

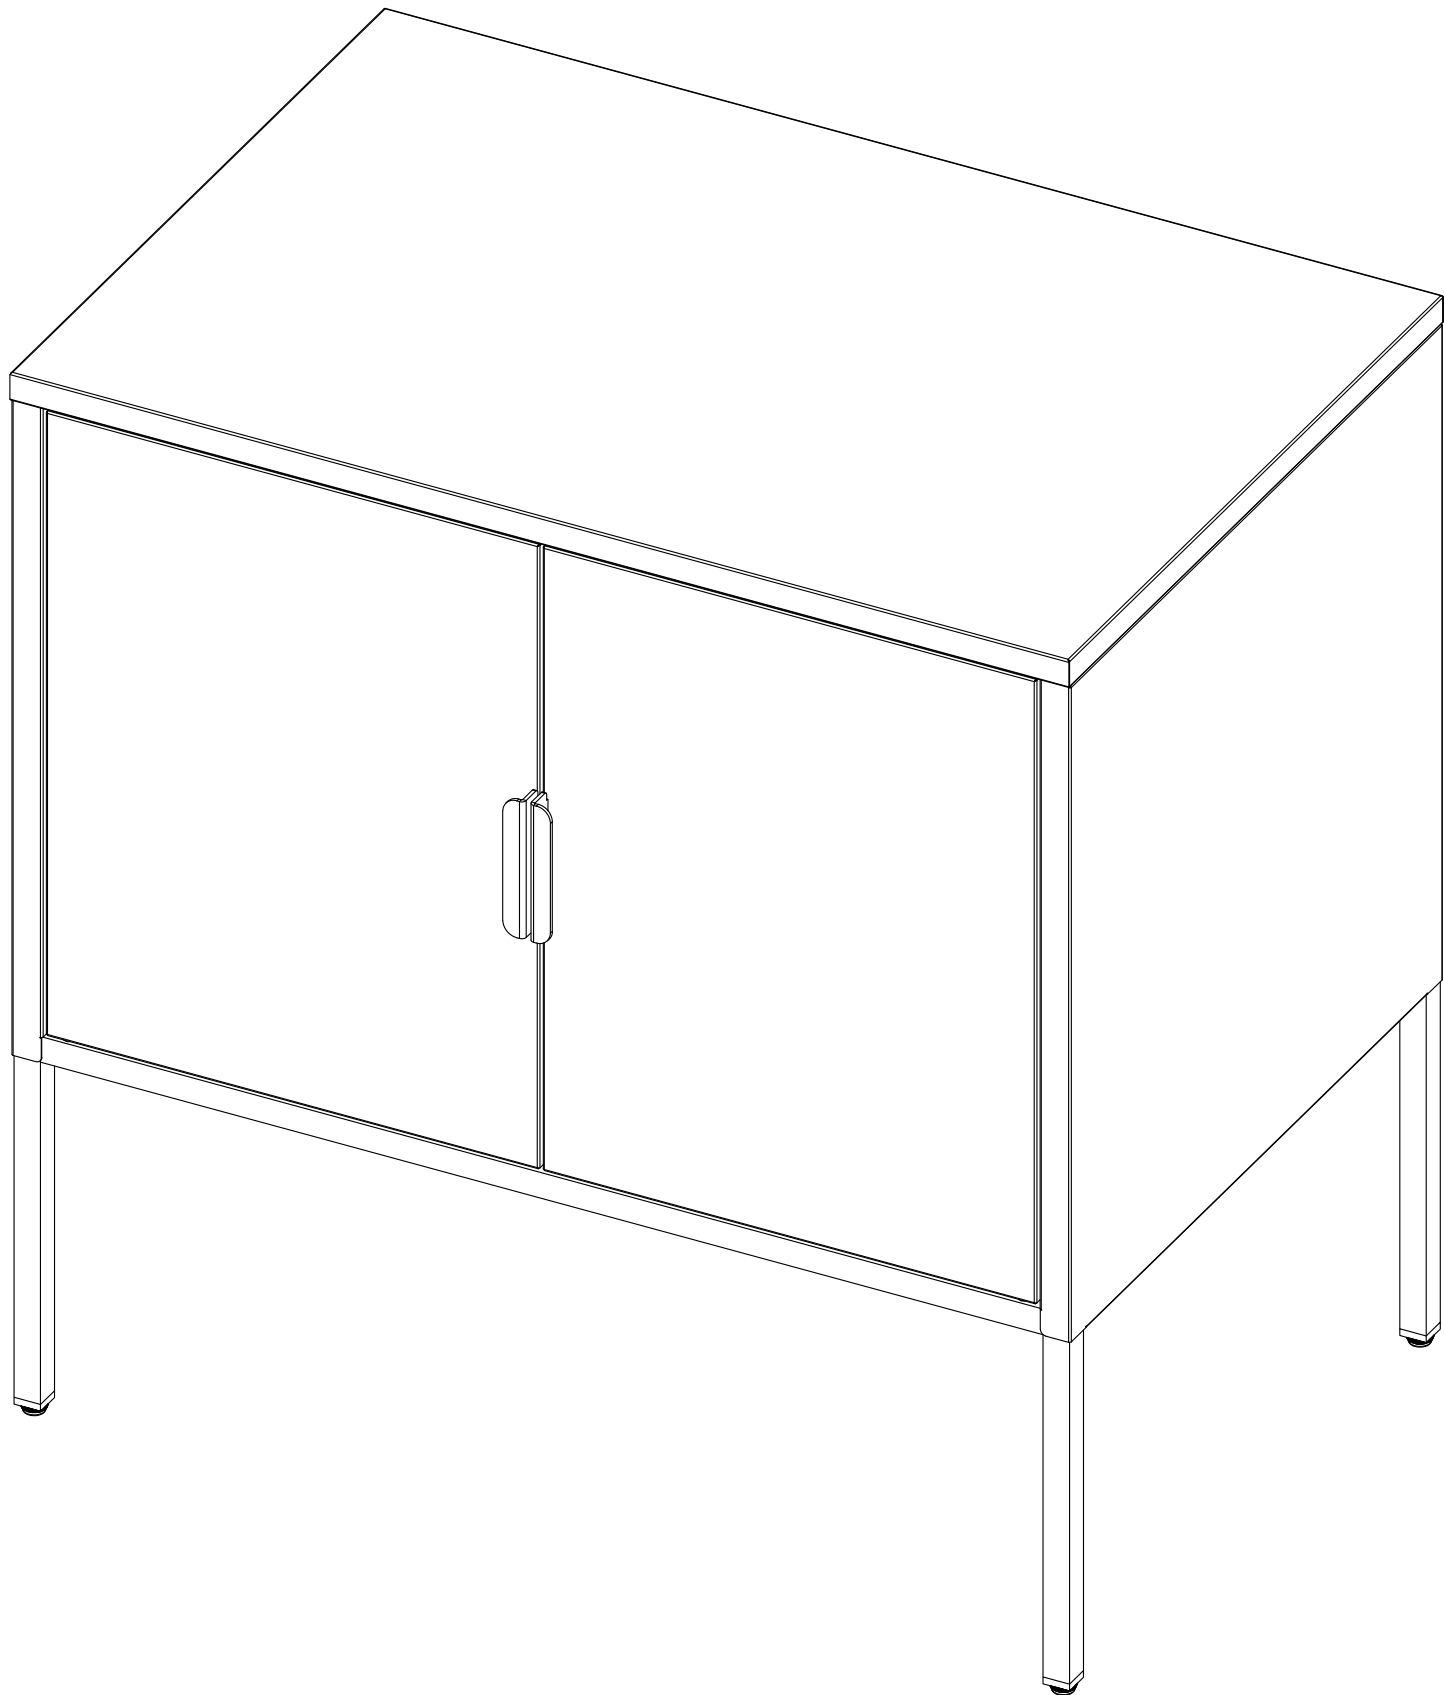

 
 
 
 


STOP!


Before beginning the assembly process,
ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

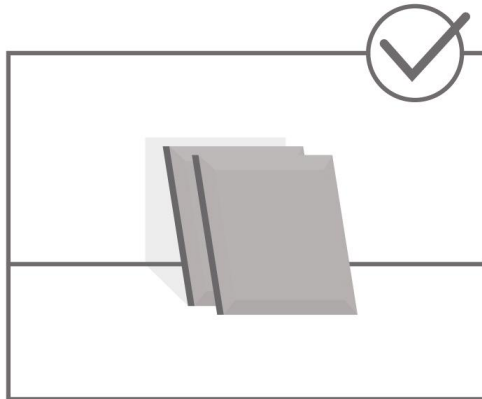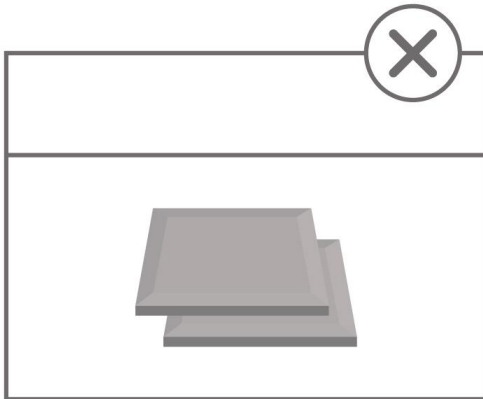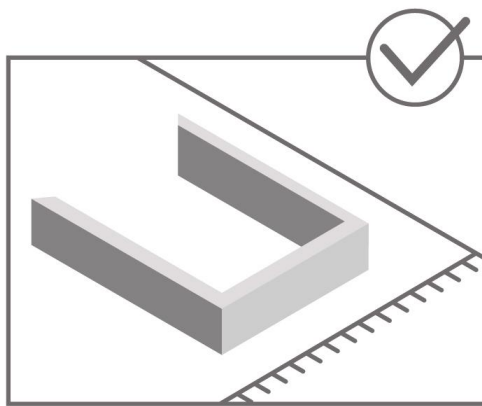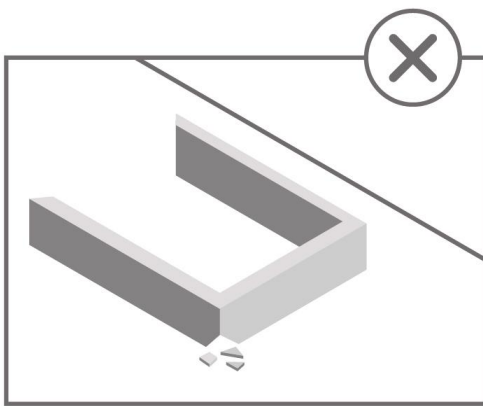

TOOLS REQUIRED

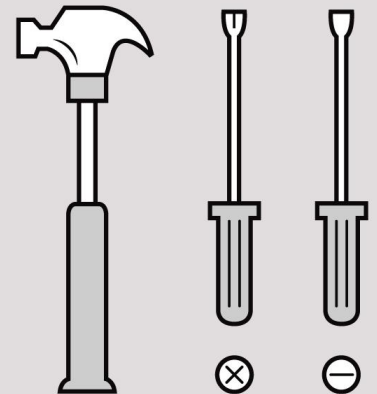 

View our assembly video online:
WWW.MANHATTANCOMFORT.COM

 


Stuck? Question? We are here to help.
tel: 908-888-0818
e-mail: help@manhattancomfort.com

Support Site




Metal Accent Cabinet

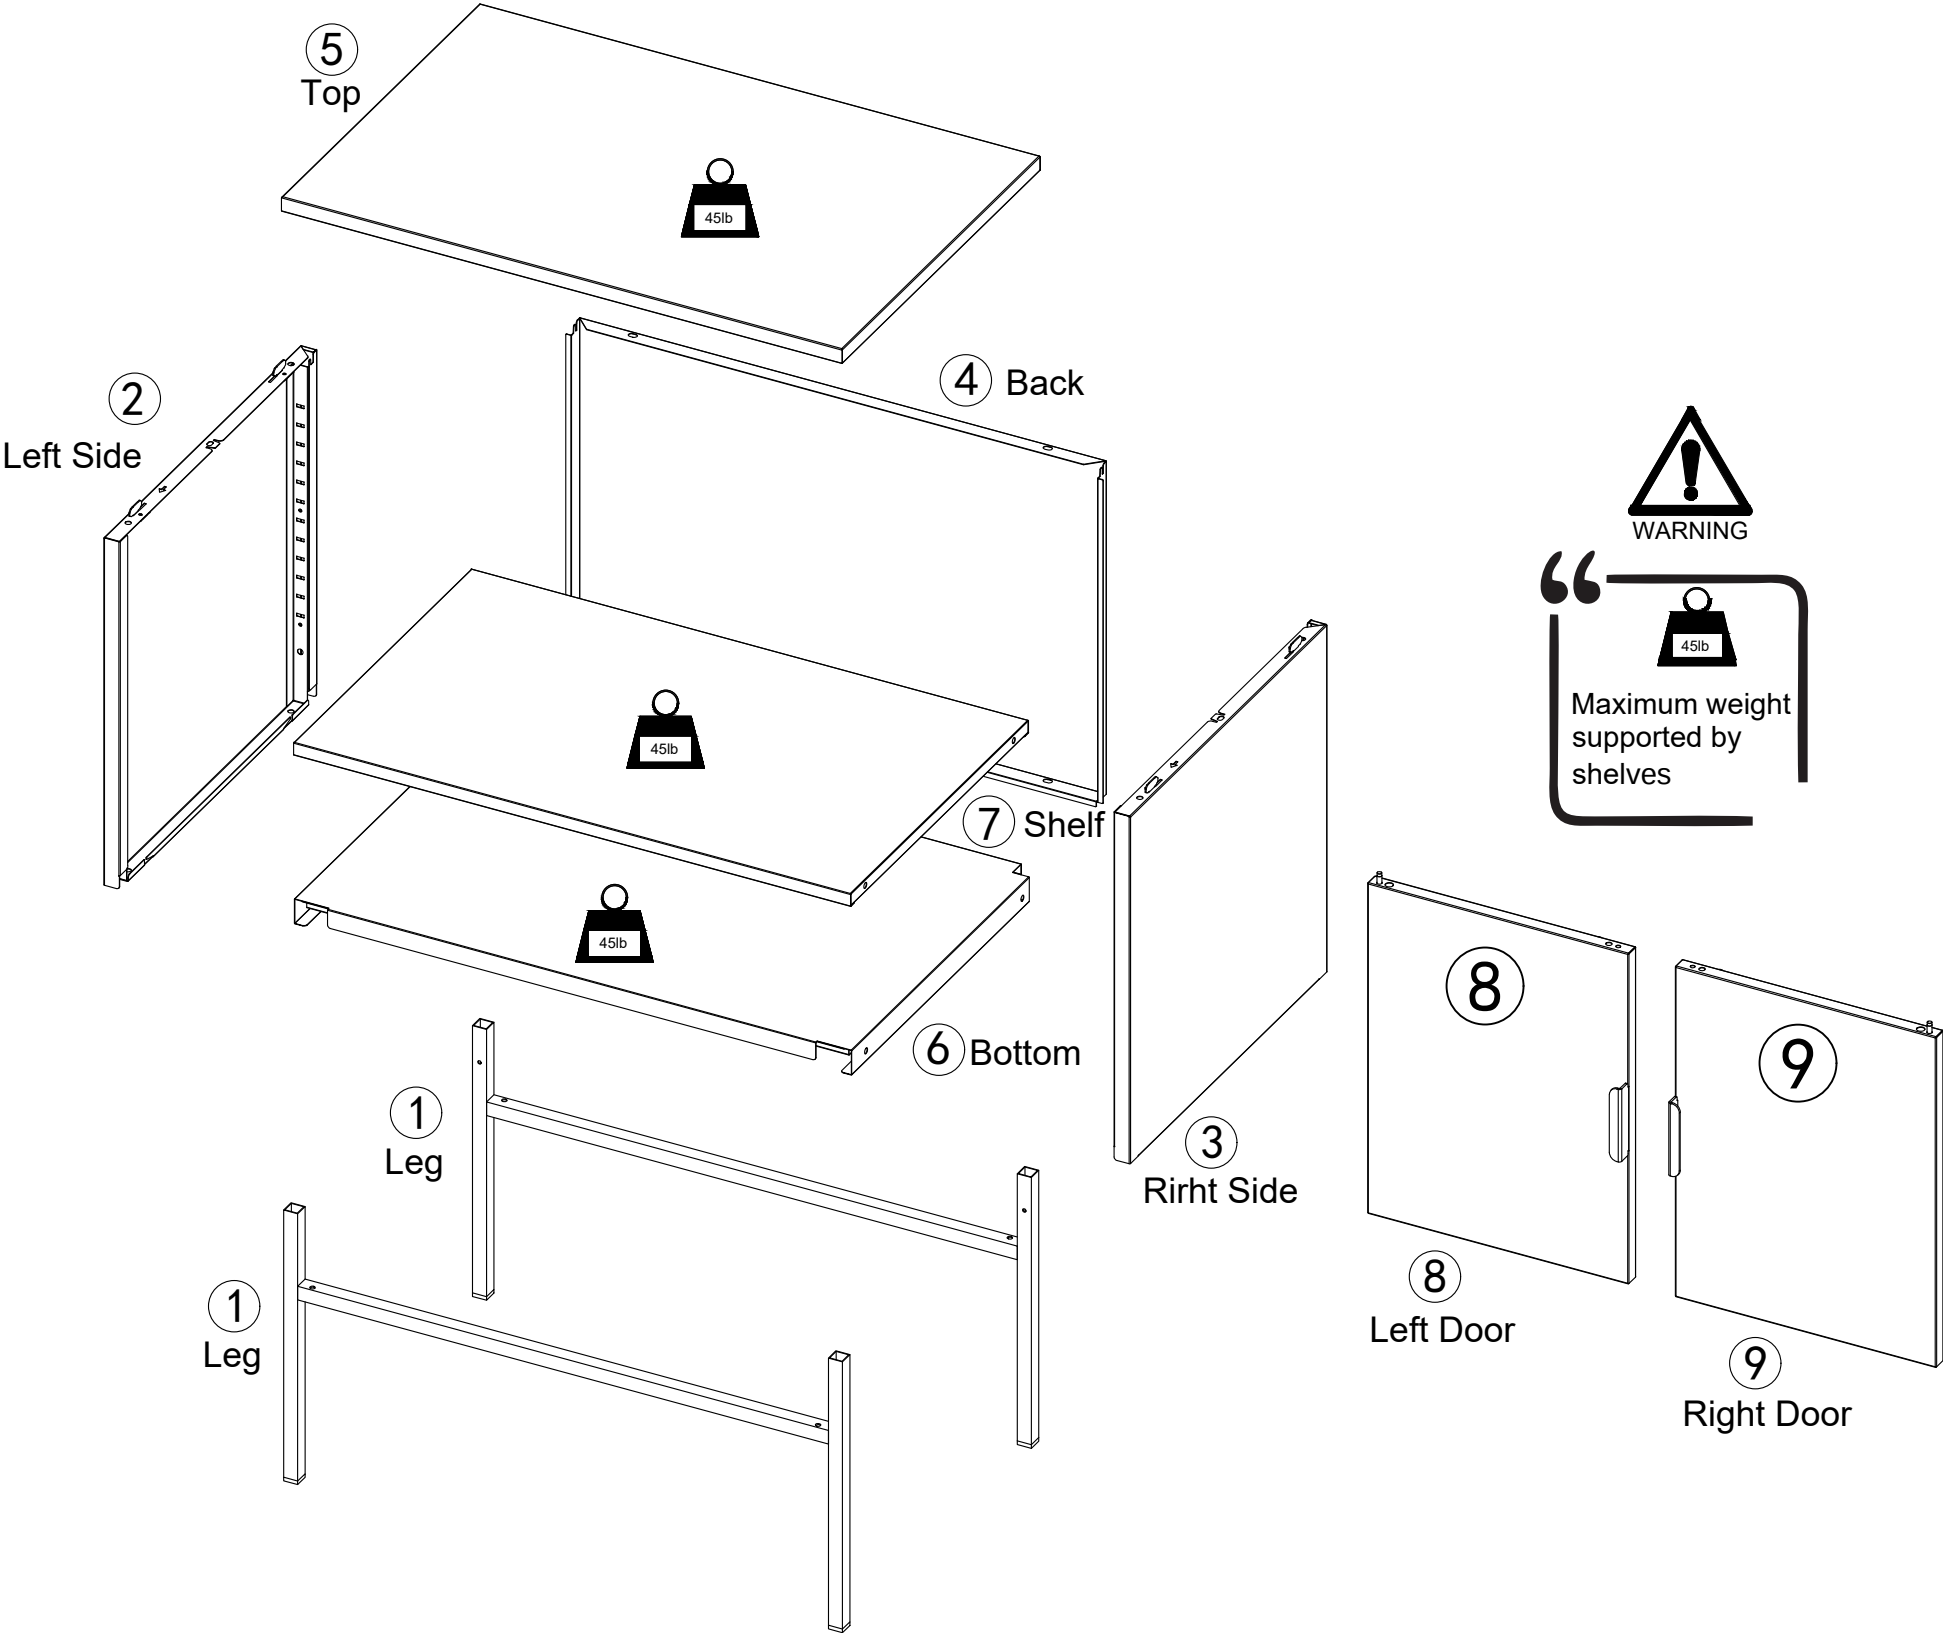


Hardware list

 A

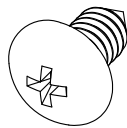

M5×12mm
6 ×

 B




M3×6mm
4 ×

C




4 ×

 D




M4×10mm
2 ×

 E

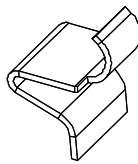

4 ×

 F




2 ×

G




2 ×

 H

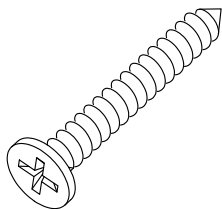


M4×30mm
2 ×

 J

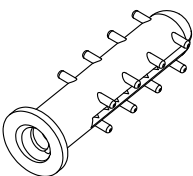

Ø6×30mm
2 ×

 K

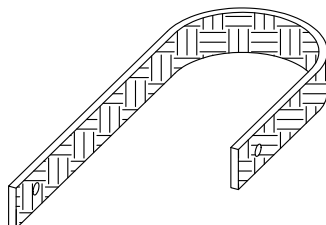


2 ×

L




4 ×

 ① Leg

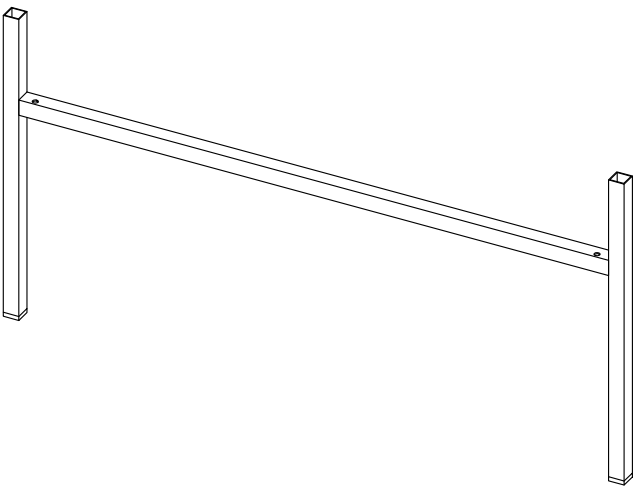


2×

 ② Left Side

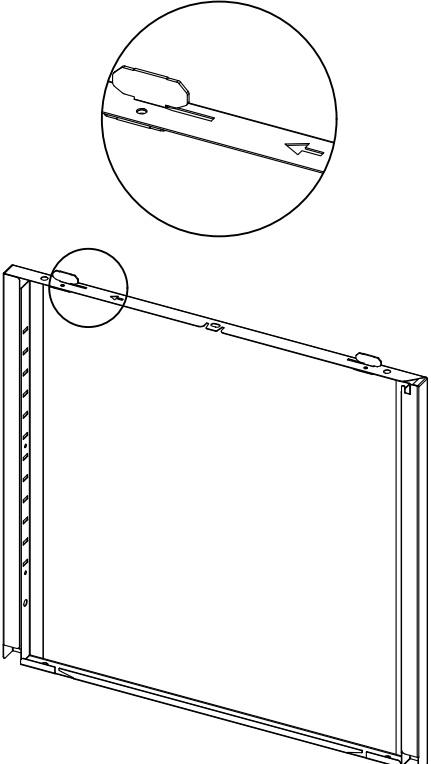


1×

 ③ Right Side

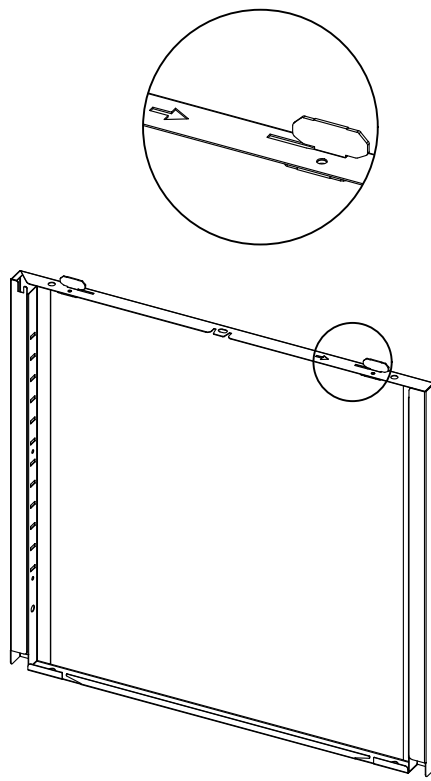


1×

 ④ Back

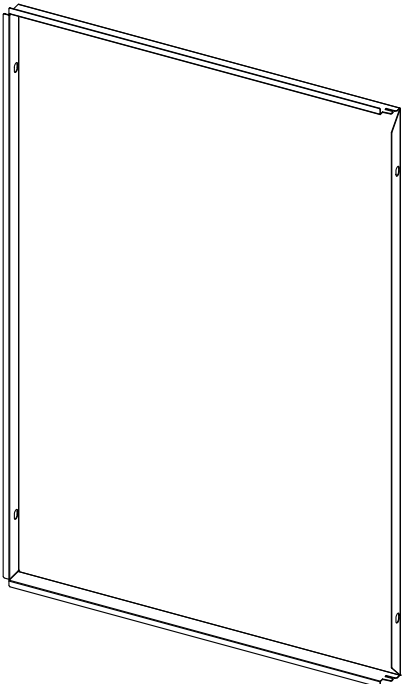


1×

 ⑤ Top

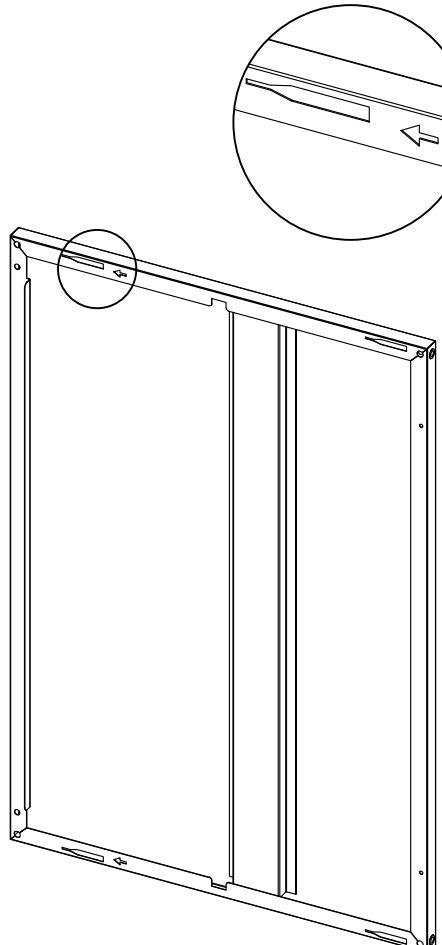


1×

 ⑥ Bottom

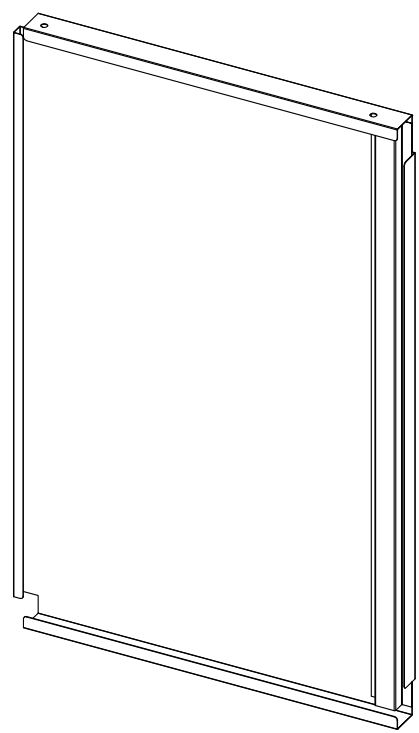


1×

 ⑦ Shelf

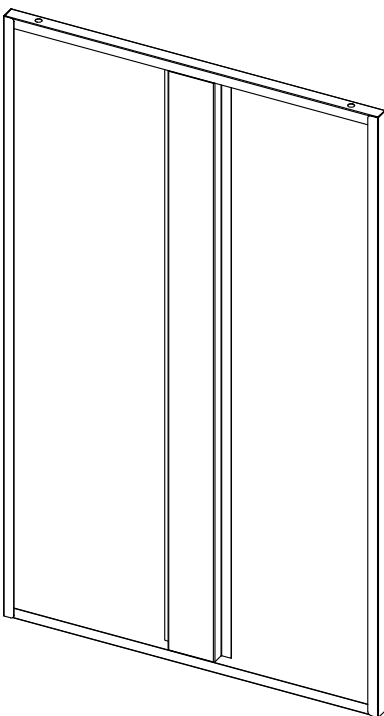


1×

 ⑧ Left Door

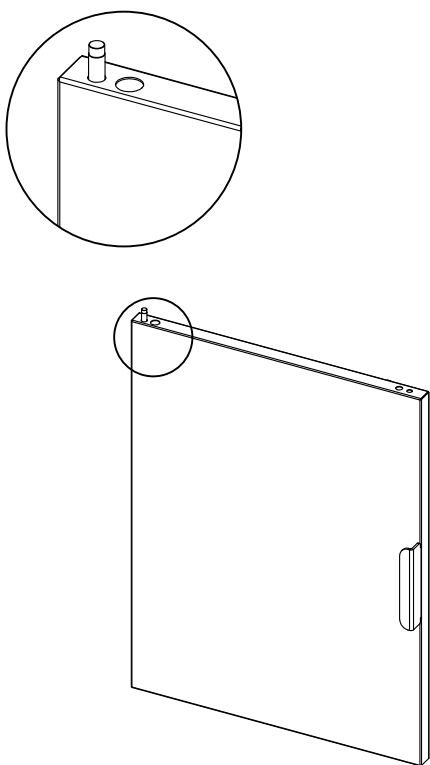

1×




 
⑨ Right Door

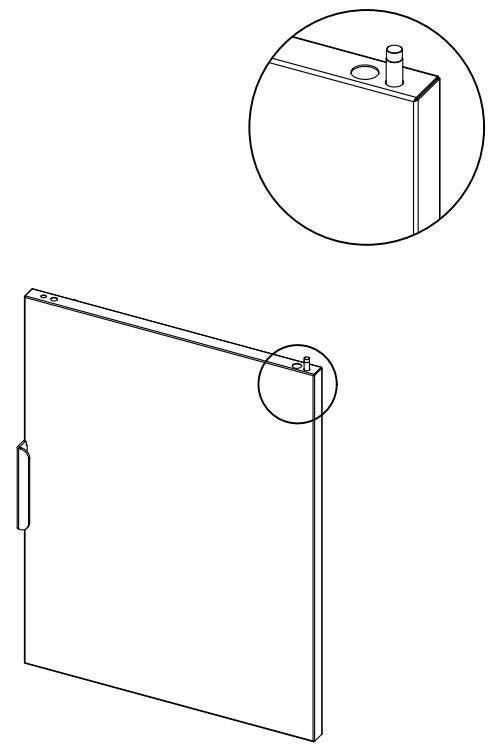

1×



STEP 1

    - 1- Fit the height-adjustable feet L on the bottom of Leg ①
- 2- Fit the Left side ② and Right side ③ into Leg ①
- 3- Fix the Screw A into holes to fix Left side ② and Right side ③ with Leg ①

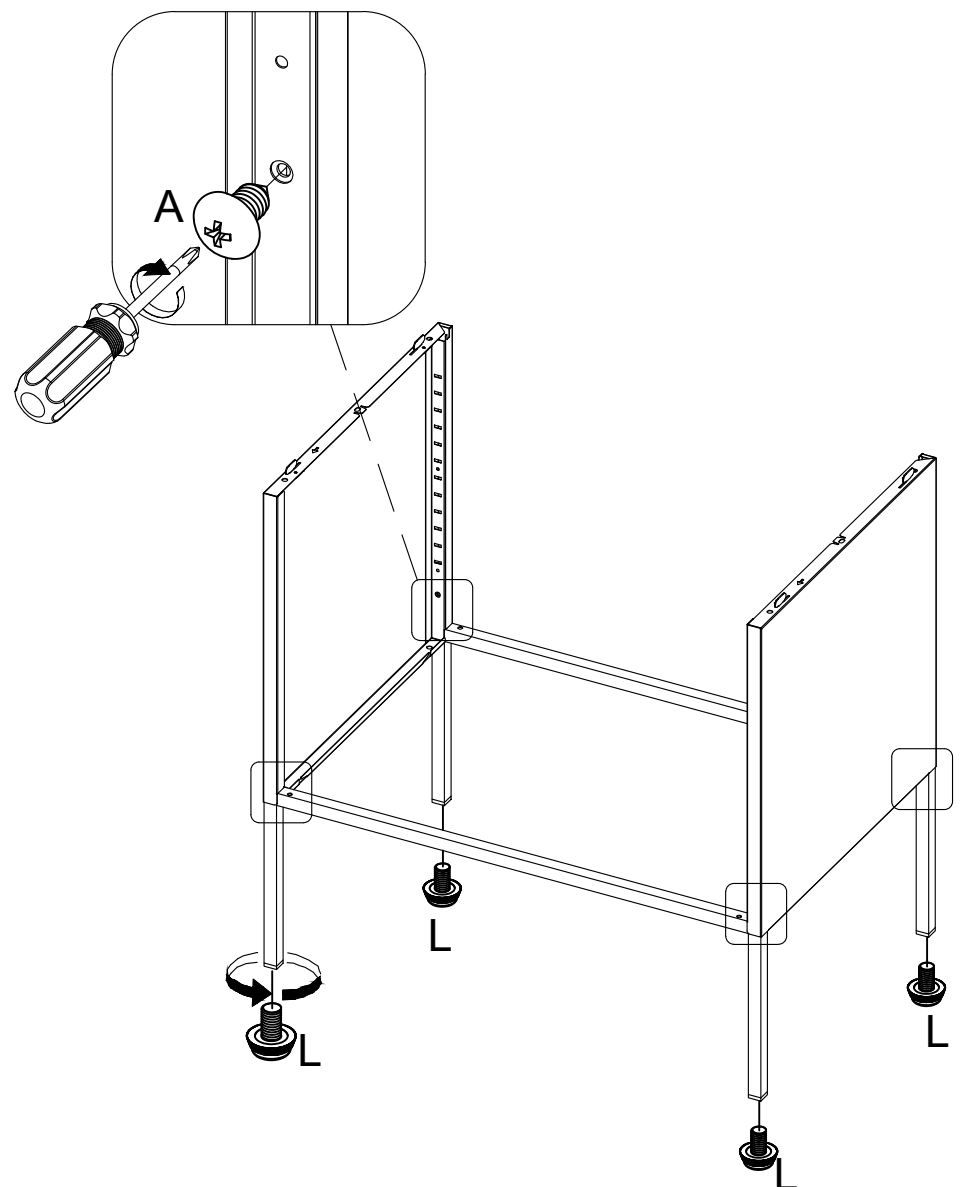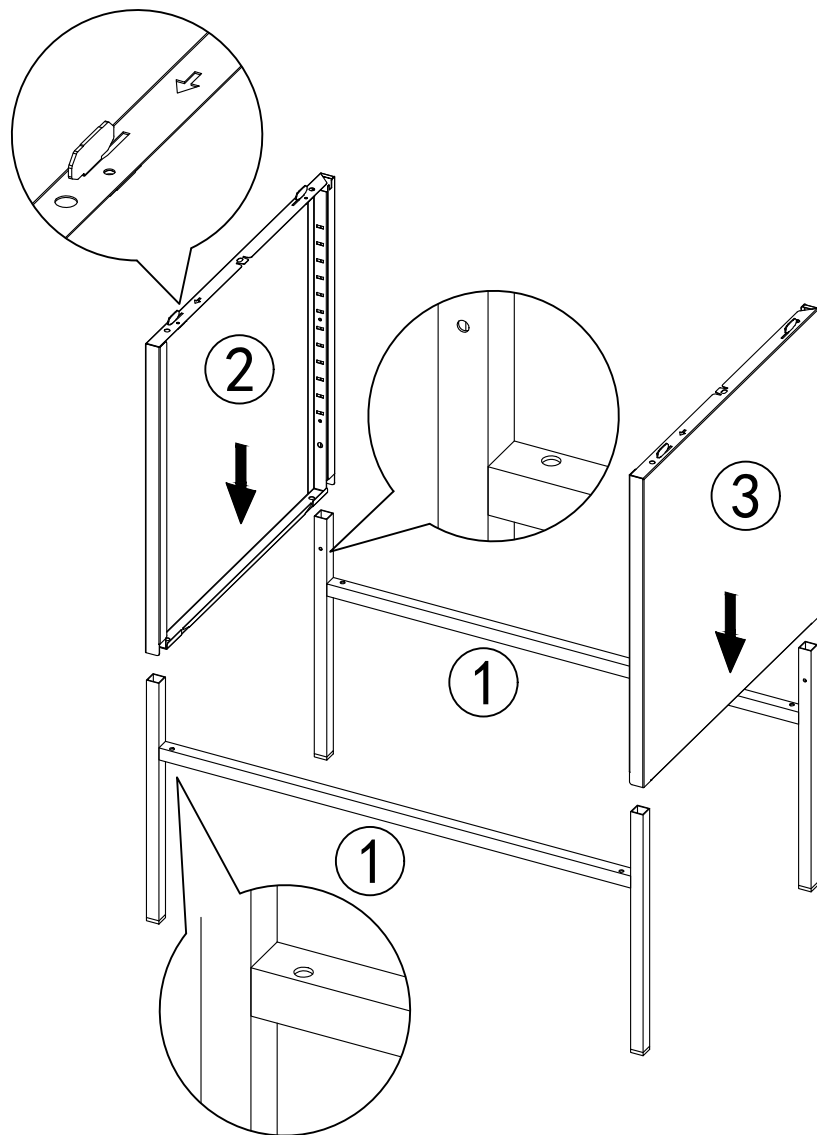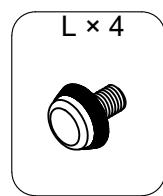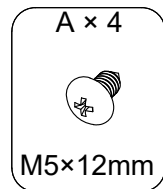


STEP 2

  - 1- Fit Back ④ at the back
- 2- Bend the small metal part on Back ④ to fix it with Left side ② and Right side ③

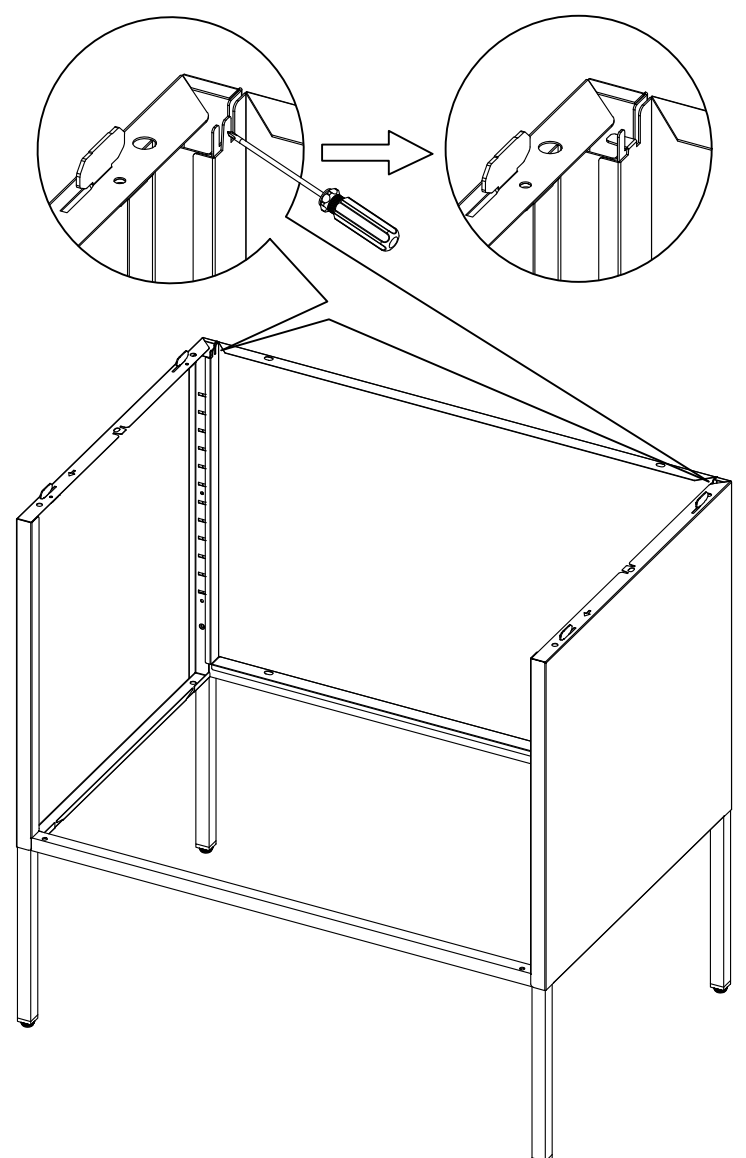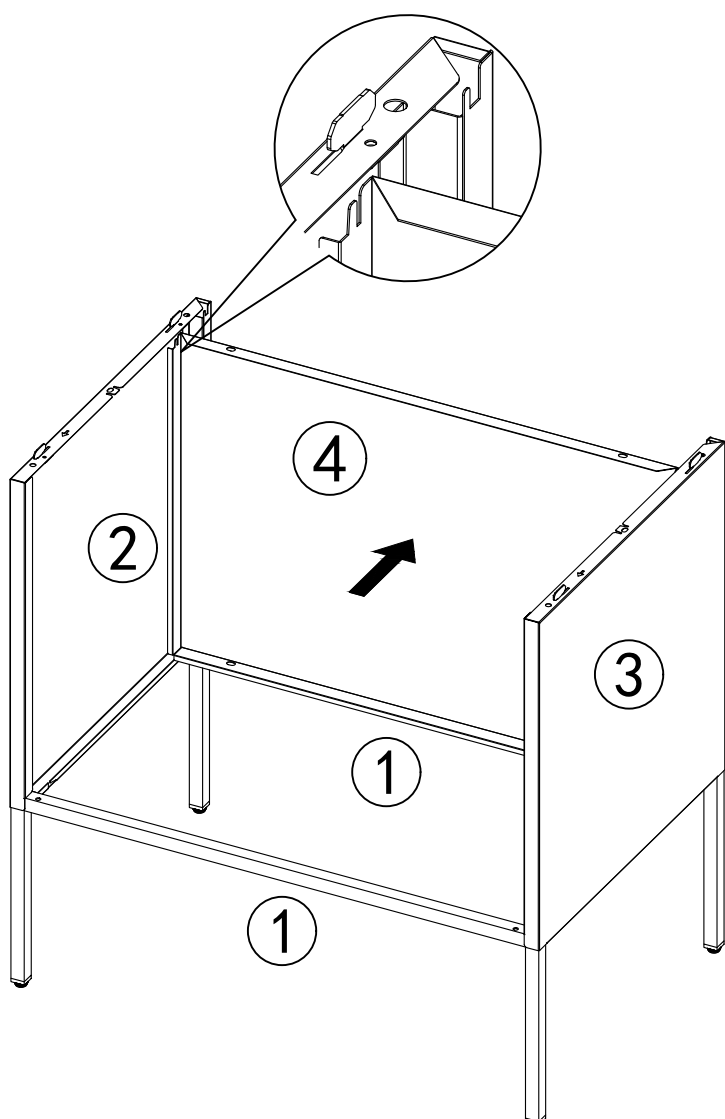


STEP 3

 - 1- Put Top ⑤ on the top
- 2- Fix Top ⑤ with Back ④ by Screw A

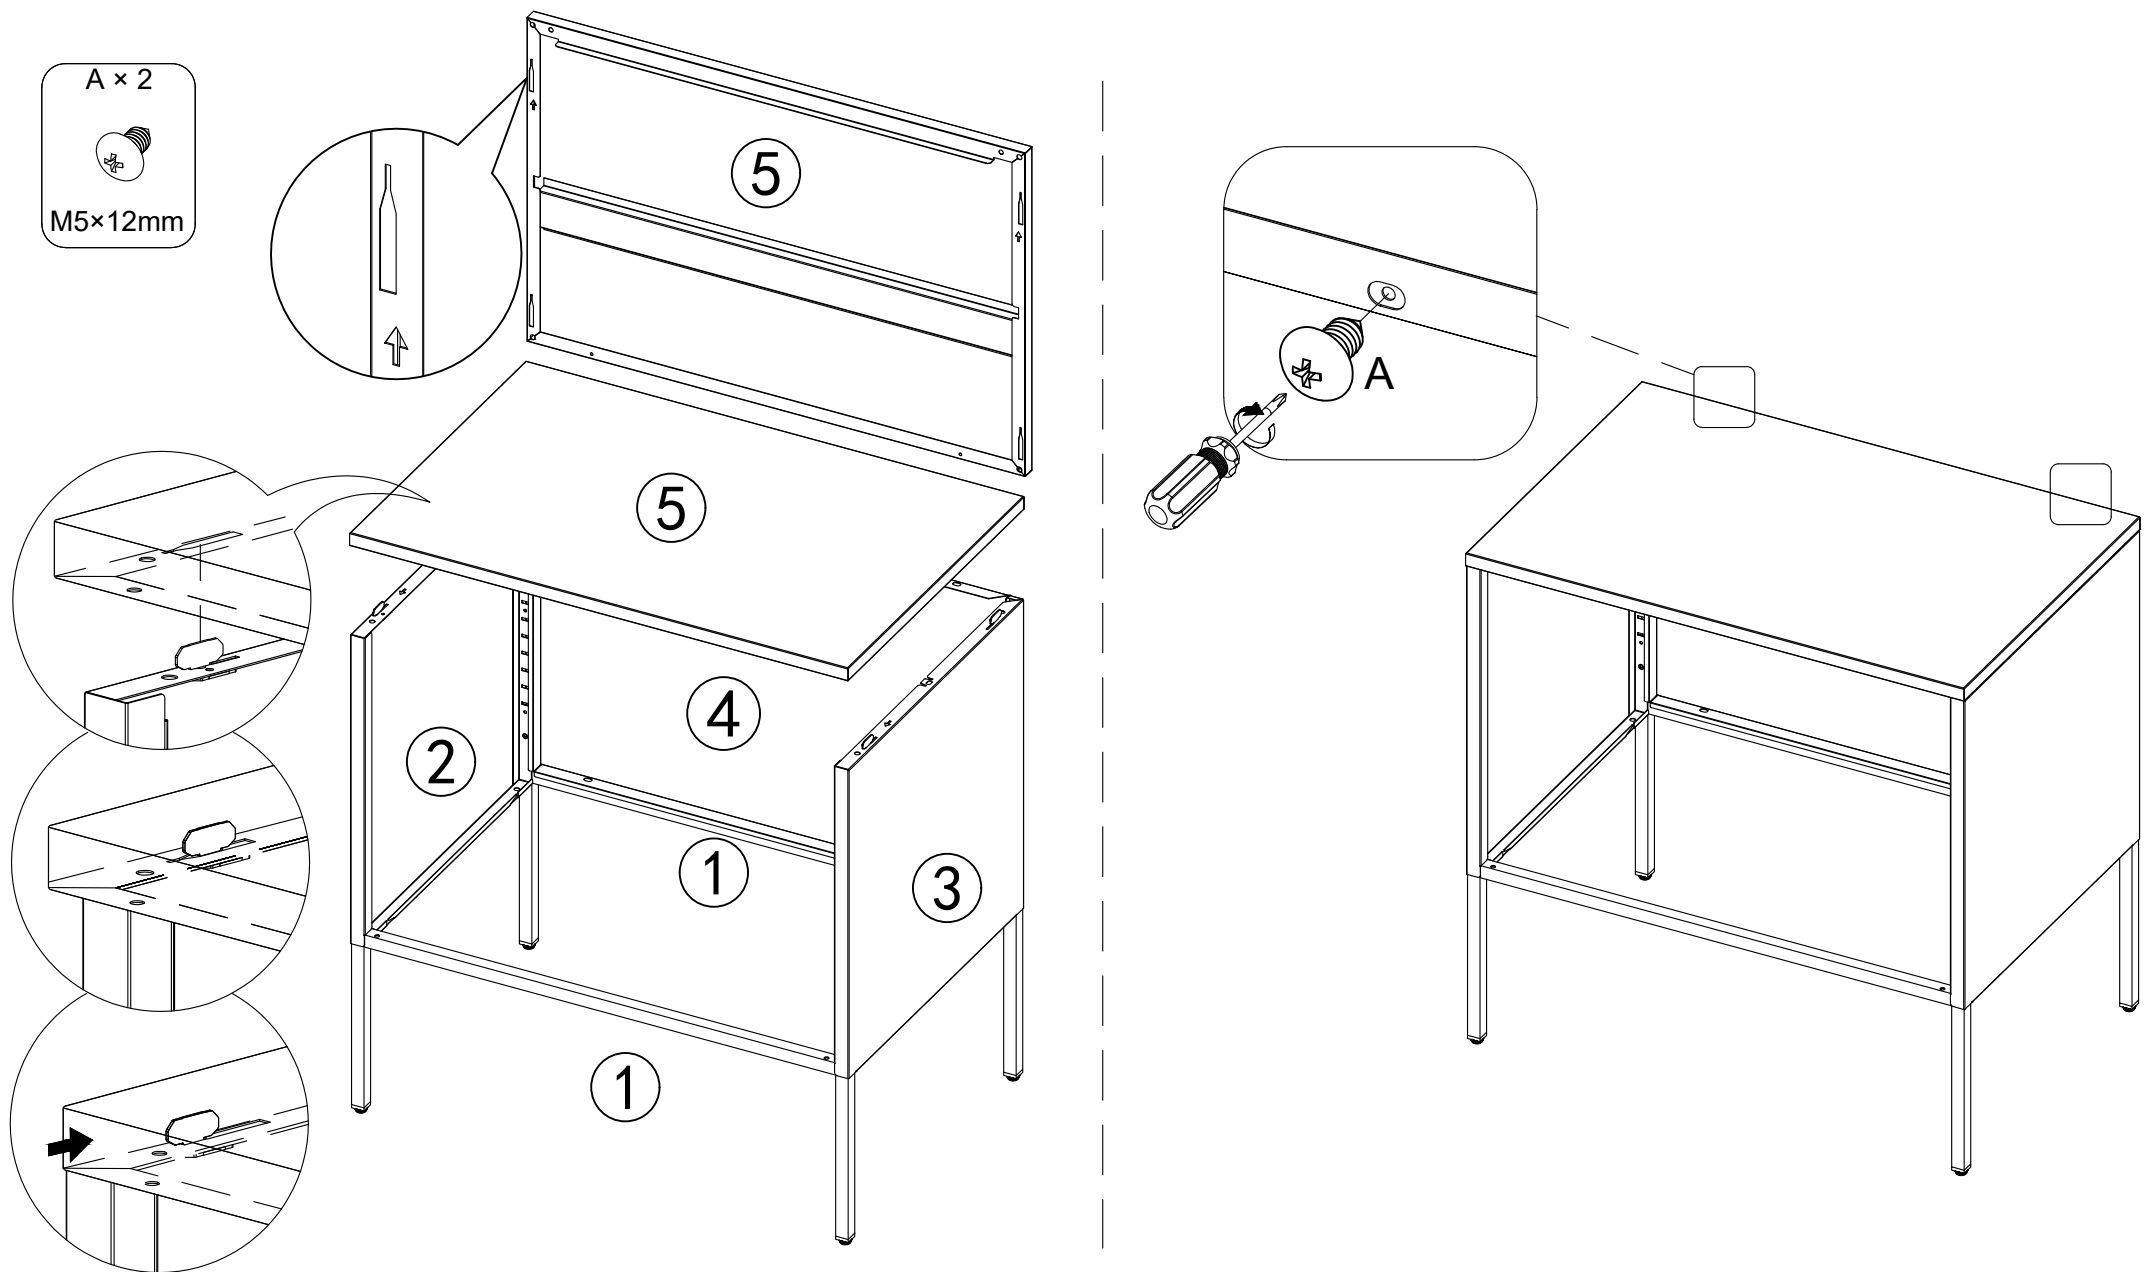





STEP 4

 - 1- Bend the small metal part on Left side ② and Right side ③ to fix with Top ⑤
- 2- Fit Bottom ⑥ in diagonal position to insert it at the bottom of cupboard
- 3- Bend the small metal part on Left side ② and Right side ③ to fix with Bottom ⑥

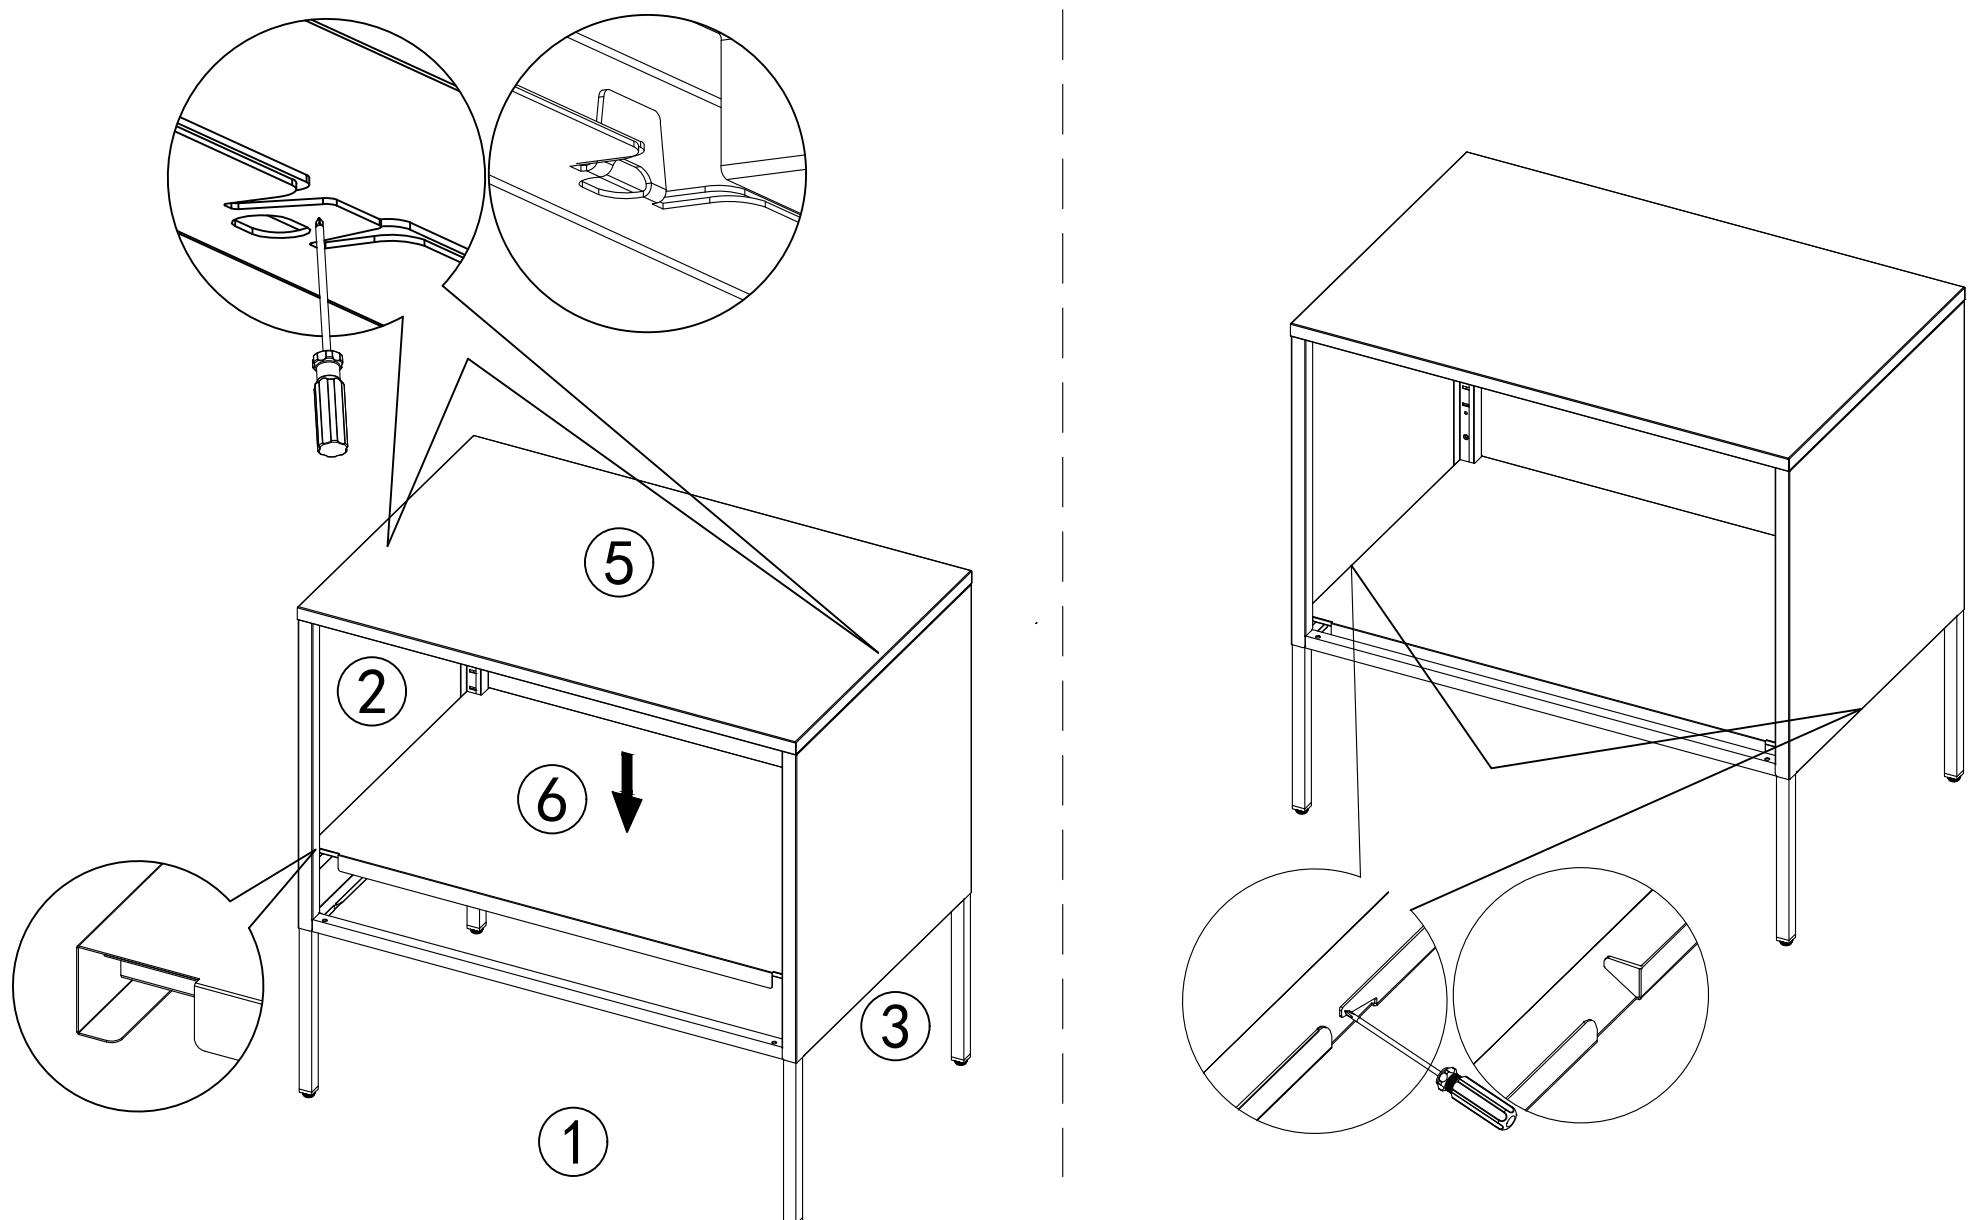







STEP 5

    - 1- Fix Shelf clip E on the Left side ② and Right side ③ and make sure in the same height
- 2- Fit Shelf ⑦ in diagonal position to insert it inside the cupboard
- 3- Place Shelf ⑦ on Shelf clip E

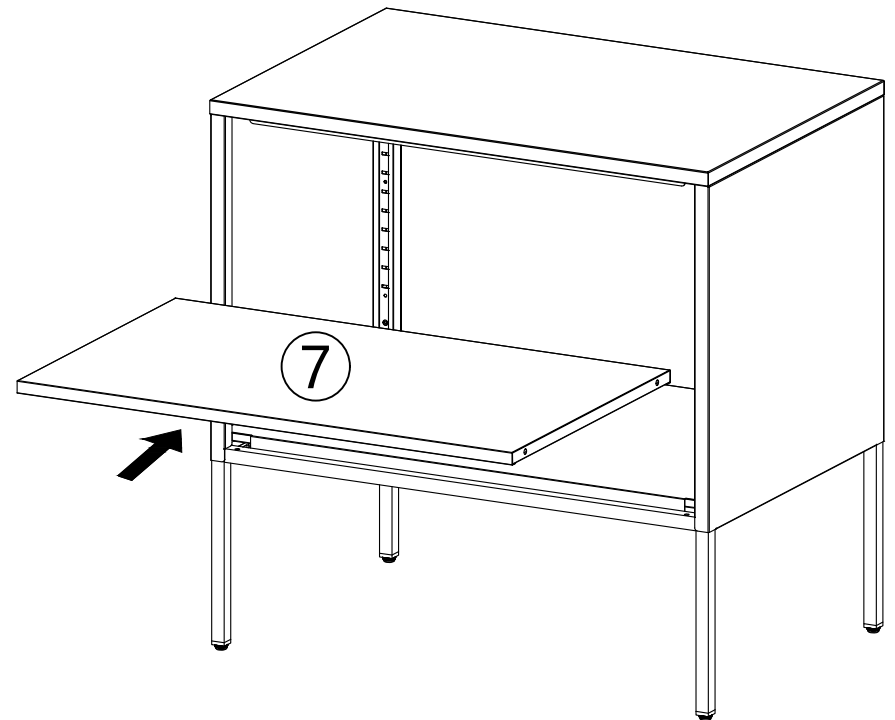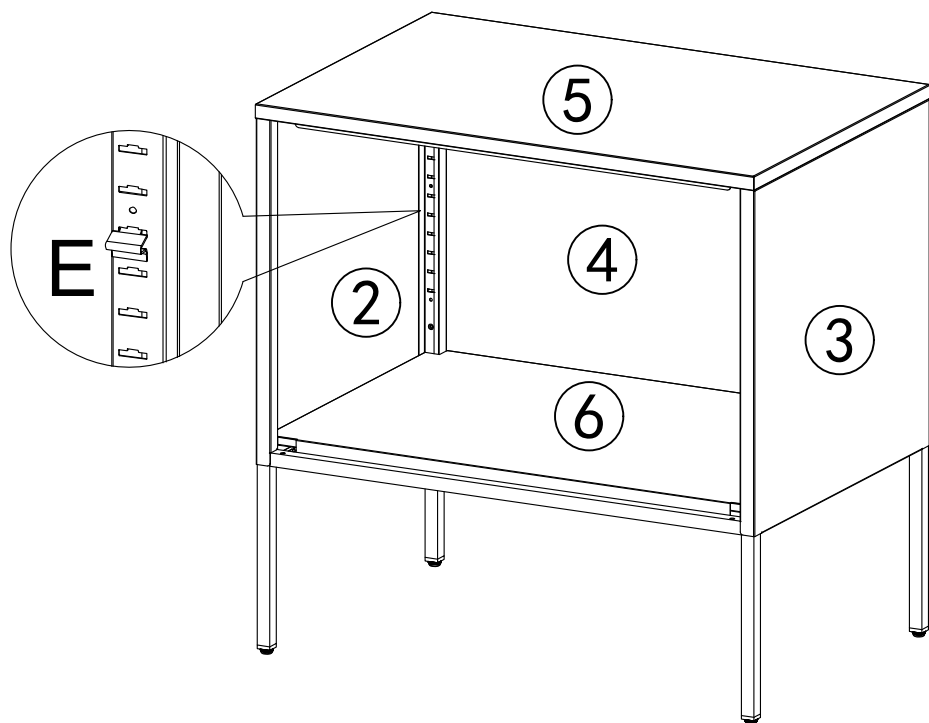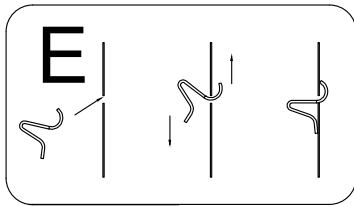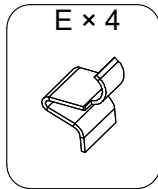








STEP 6

      - 1- Fix Magnet C on the Left door ⑧ by Screw B
- 2- Repeat the step for Right Door ⑨

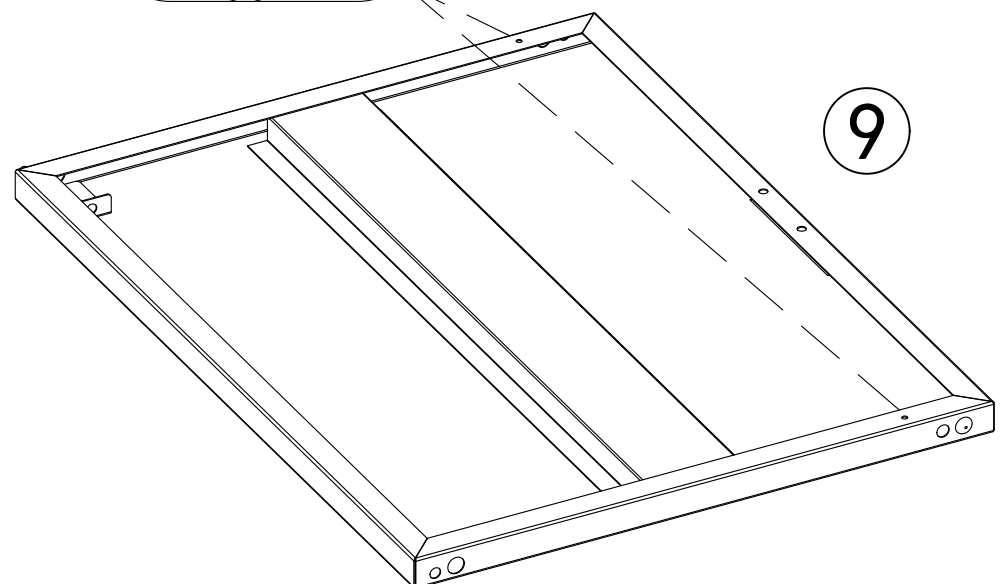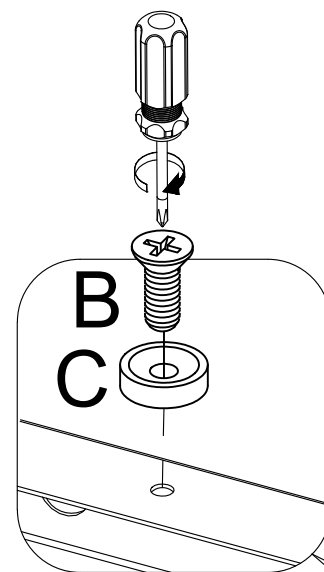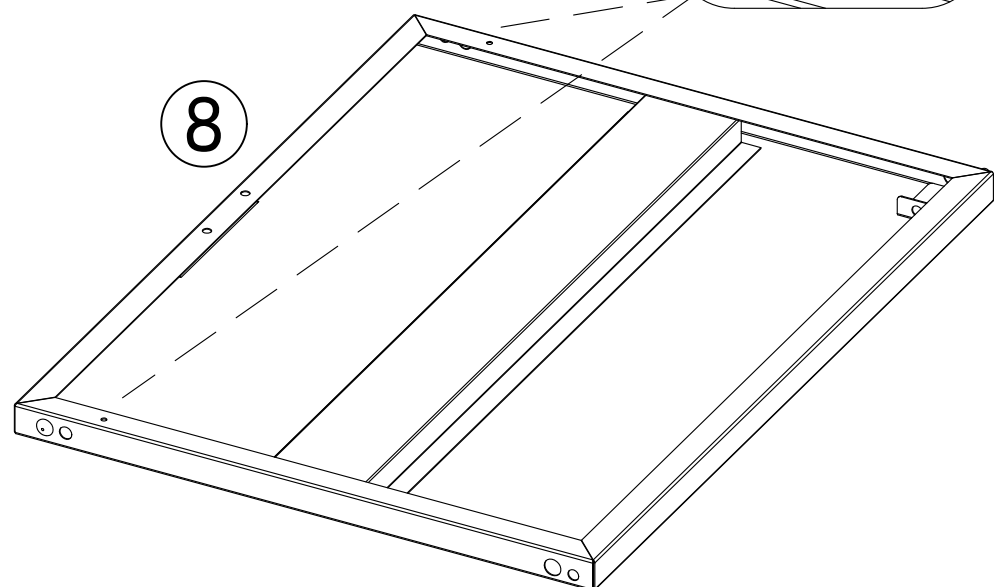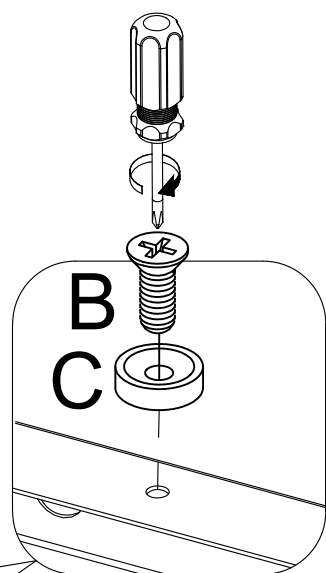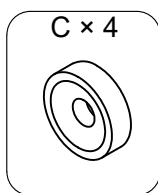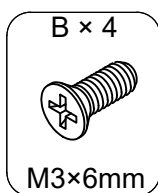





STEP 7

       - 1- To assembly the doors, fit lower hinge bolt F of Left Door ⑧ into the hole on Leg ① and make Gasket G between lower hinge bolt F and the left door ⑧
- 2 - Pull the upper hinge bolt of Left door ⑧ down, align the door and release the upper hinge bolt to fit the hole of Top ⑤
- 3- Repeat the step for Right Door ⑨

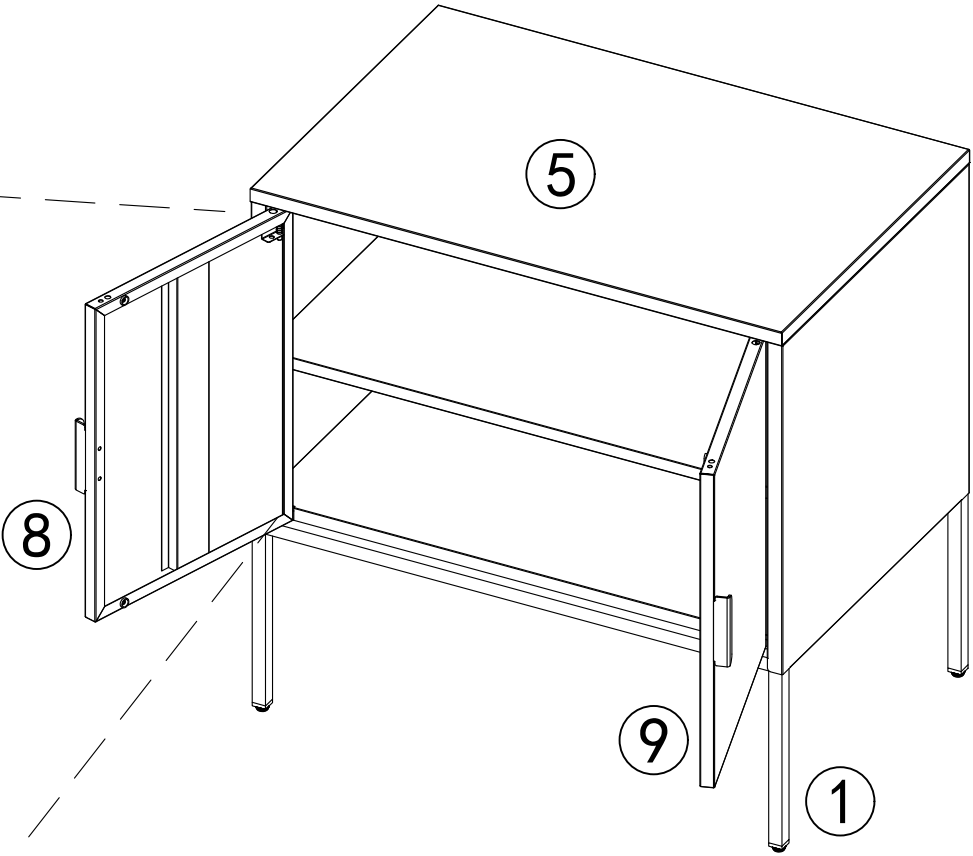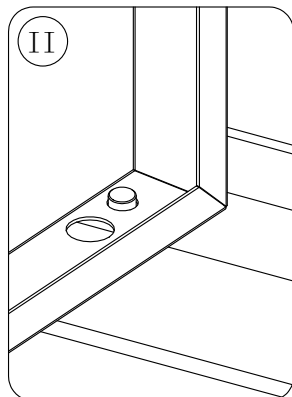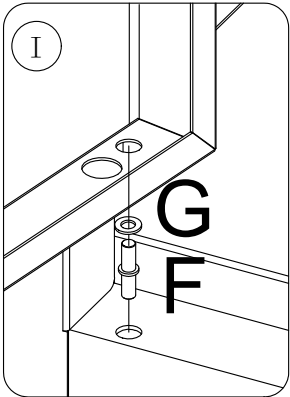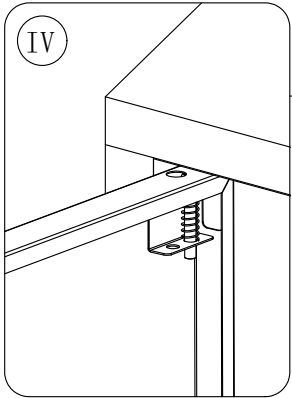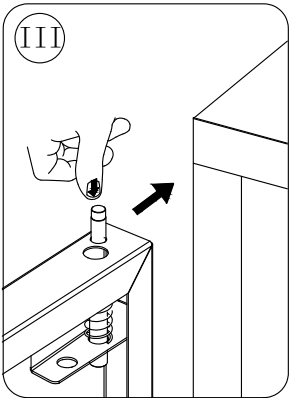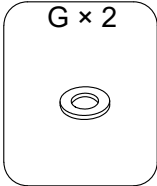
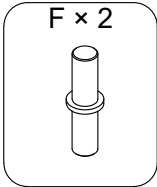


STEP 8




 
 
 
 
Fix the end of Belt K on back of Top ⑤ by Screw D

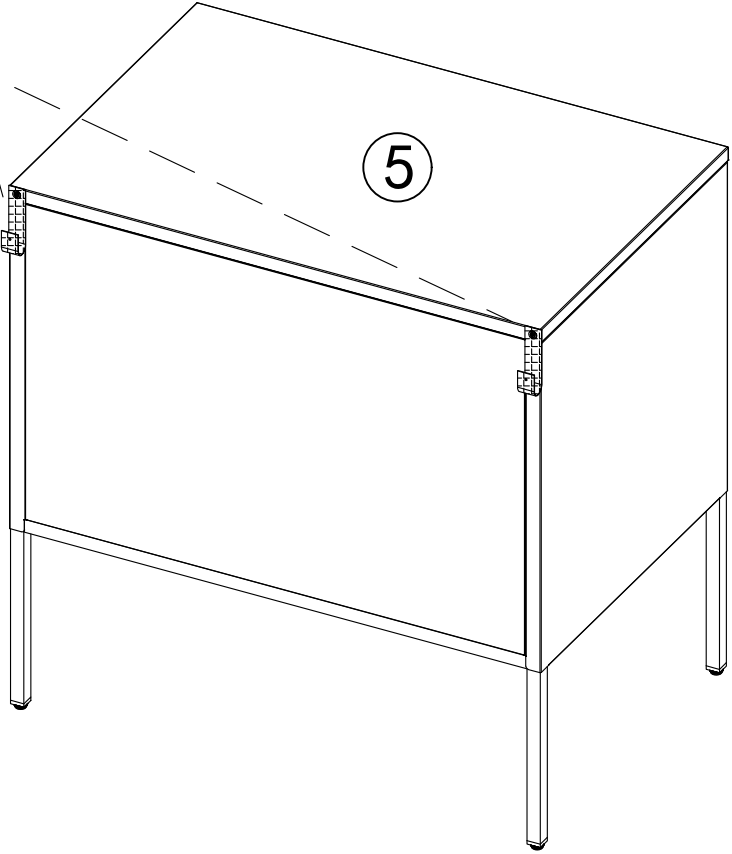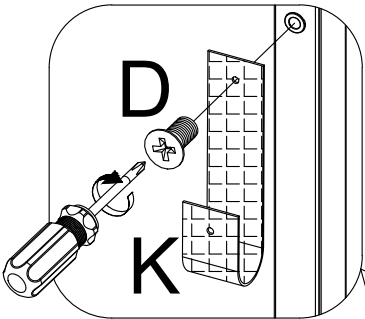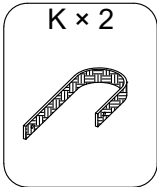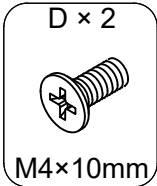

  STEP 9

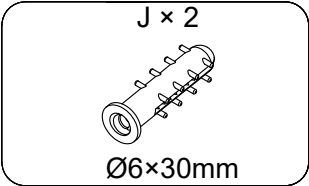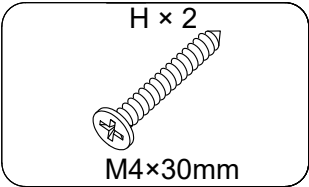

       - 1- Mark the wall holes by a pencil
- 2- Drill the wall where marked on the wall
- 3- Insert Part J (plastic expansion bolt) into the holes
- 4- Use the hammer to insert part J until it overcomes the wall
- 5- Put Screw H to get through the hole of another end of Belt K
- 6- Fix Screw H with Belt K and wall

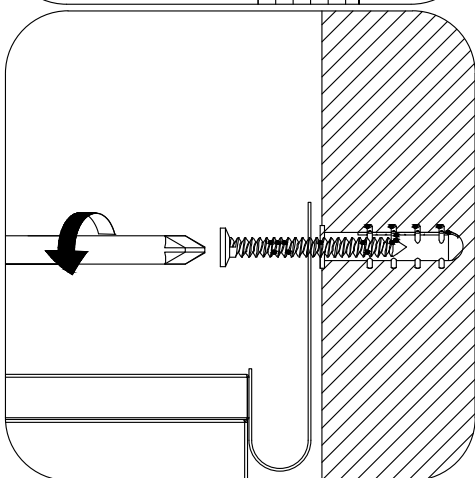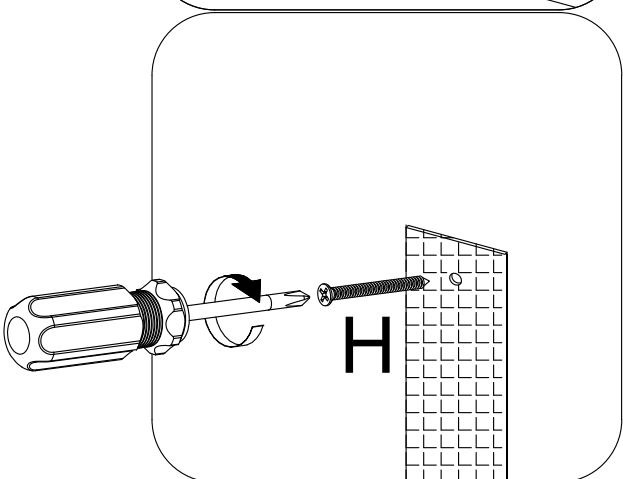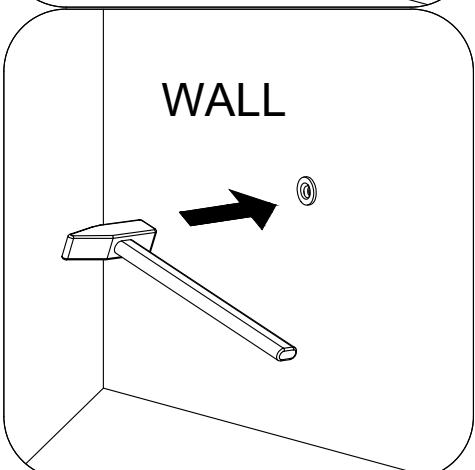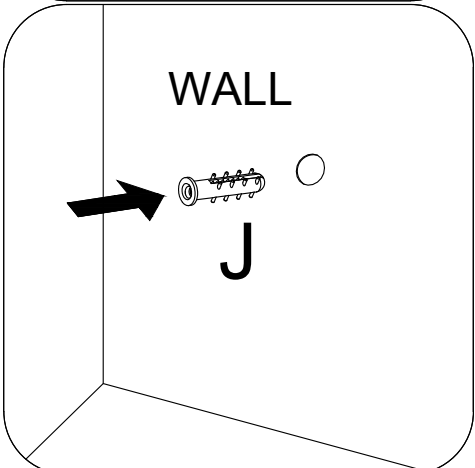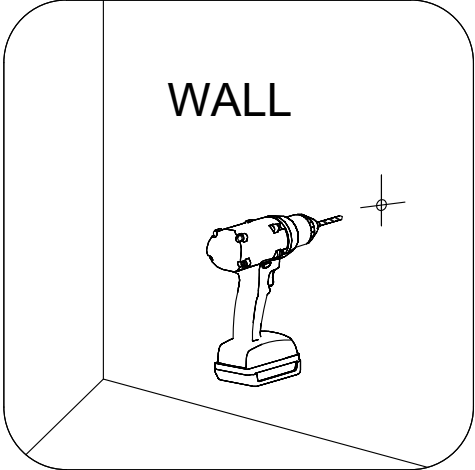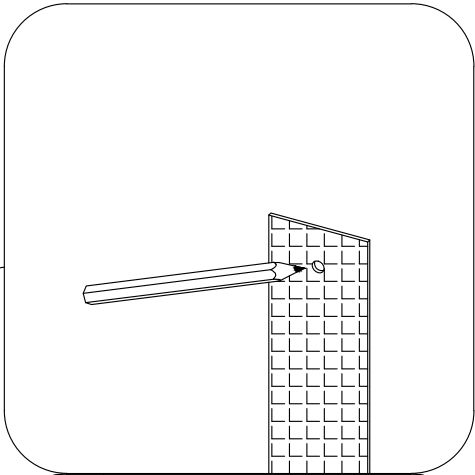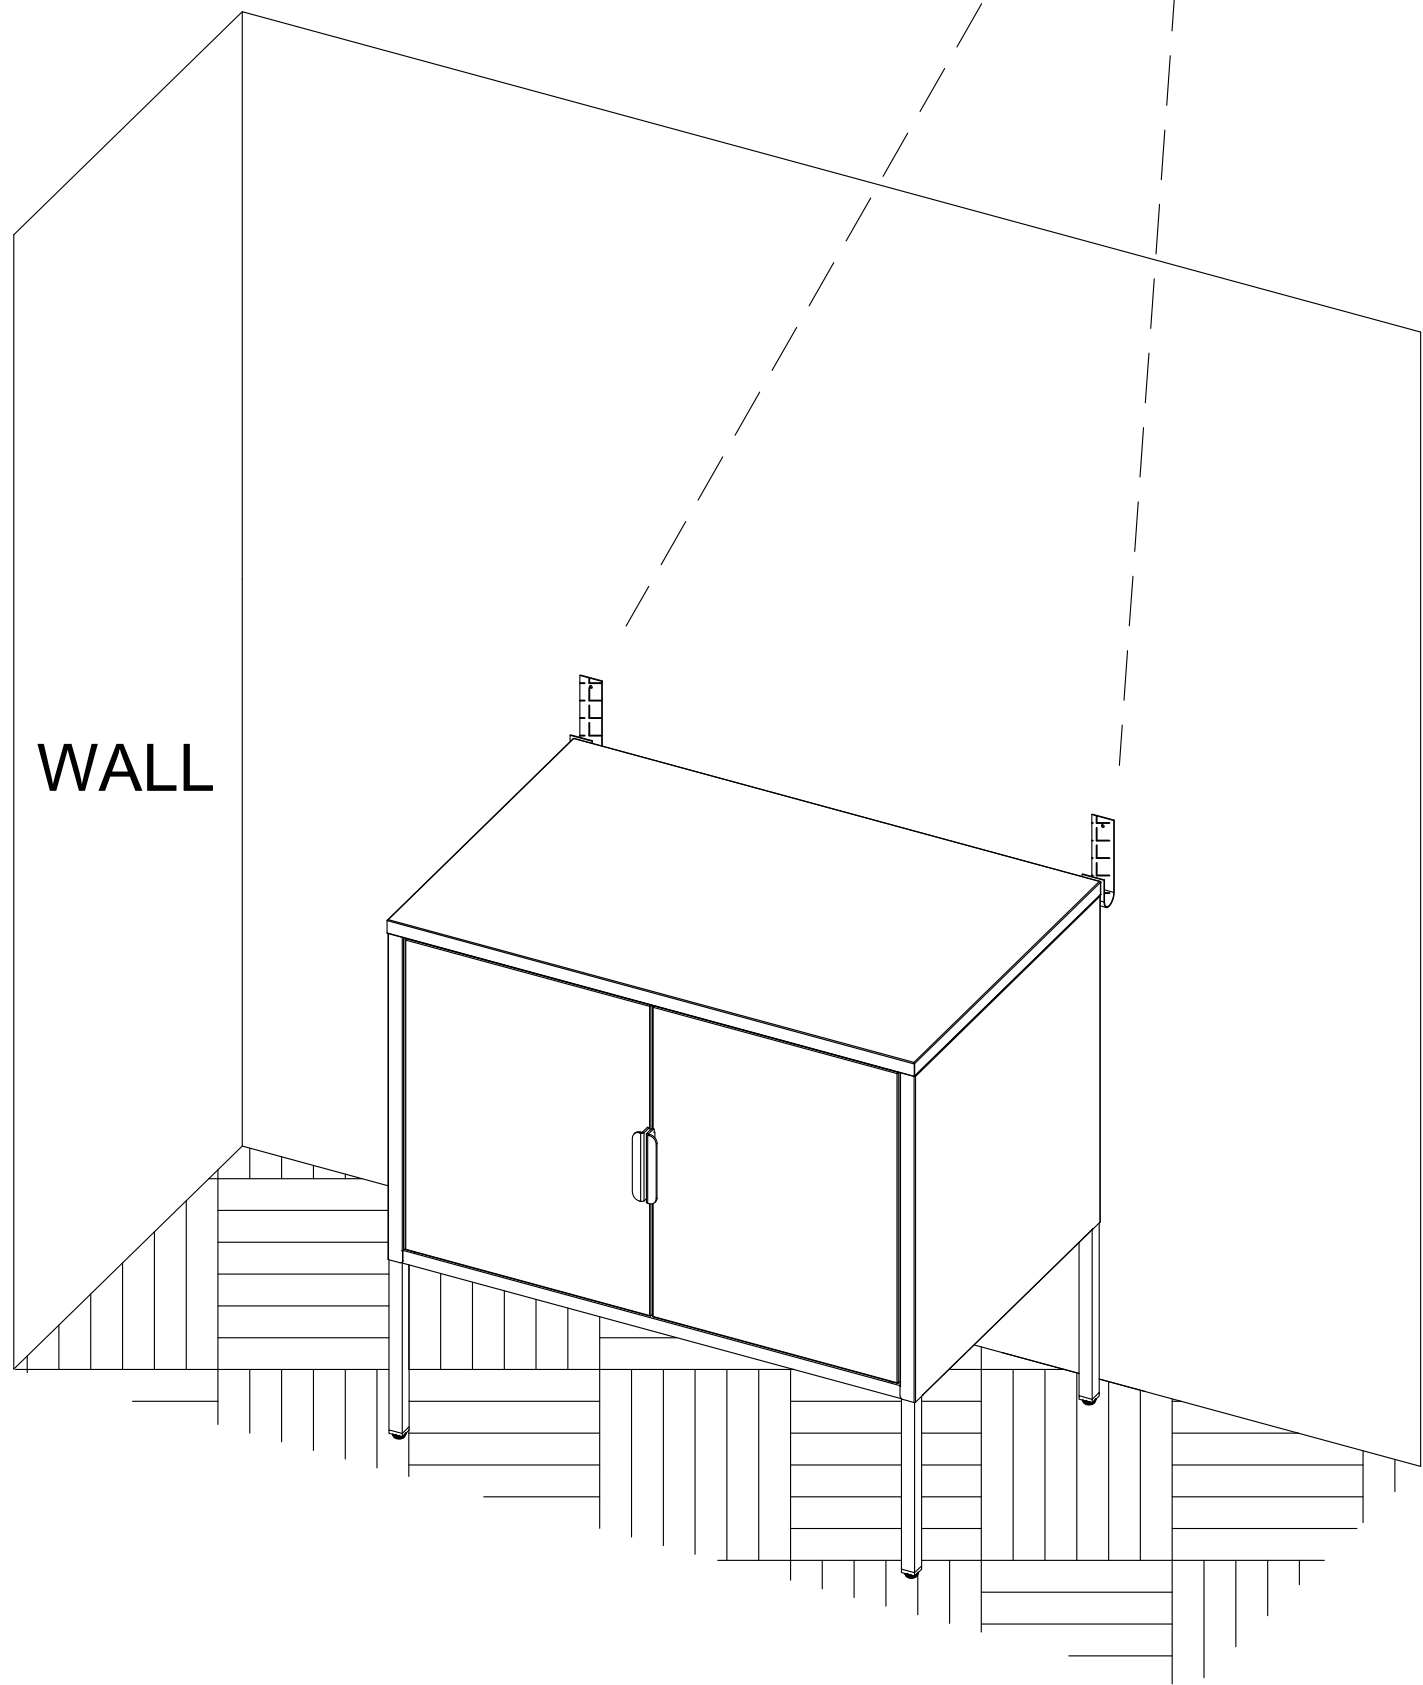



WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810
908-888-0818