INSTRUCTION MANUAL

Creative Fan Light



BOHO CEILING FAN WITH LIGHT Installation & Troubleshooting Manual

Scan the code to view the installation video



CAUTION READ INSTRUCTIONS CAREFULLY FOR SAFE INSTALLATION AND FAN OPERATION

Note: The installation process for other designs follows the same steps; please read the instructions carefully before installing.

Integrate the functions of lighting and fan

CONTENT

1. SAFETY RULES	01
2. TOOLS REQUIRED	02
3. ACCESSORY	03
4. INSTALLATION	04
5. REMOTE CONTROL OPERATIONS	05

6. MOBILE APP CONTROL OPERATION	06
7. MAINTENANCE AND CLEANING	07
8. TROUBLESHOOTING GUIDE	08
9. WARRANTY INFORMATION	09

SAFETY RULES

1. To reduce the risk of electric shock, turn off the electricity to the fan at the main fuse box or circuit panel before beginning.

2. All wiring must be in accordance with the local electrical codes or National Electrical Code. Electrical installation should be performed by a qualified licensed electrician.

3. To avoid personal injury, the use of gloves may be necessary while handling fan parts with sharp edges.

4. Make sure the installation site you choose allows clear space for the blades to rotate and at least 7 feet (2.13 meters) of clearance between the floor and the fan blade tips.

5. WARNING: To reduce the risk of fire, electric shock, or personal injury, mount fan only to an outlet box marked acceptable for fan support and use mounting screws provided with the outlet box. Most outlet boxes commonly used for the support of lighting fixtures are not acceptable for fan support and may need to be replaced. Consult a qualified electrician if in doubt.

6. The outlet box and ceiling support structure must be securely mounted and capable of supporting at least 20 KGS.

7. To avoid personal injury or damage to the fan and other items, be cautious when working around or cleaning the fan.

8. Do not use water or detergents when cleaning the fan or fan blades. A dry dust cloth or lightly dampened cloth will be suitable for most cleaning.

9. After making electrical connections, spliced conductors should be turned upward and pushed carefully up into the outlet box. The wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one sideof the outlet box.

10. Electrical diagrams are for reference only.

11. The fan is more suitable for indoor use.

TOOLS REQUIRED













Electric drill

Wrench

Ladder

Pincer

Screwdriver

Таре

Accessory

Unpack your fan and check the contents. You should have the followings:







INSTALL THE FAN

Tools Required: Phillips Screwdriver, Pair of Pliers, traight slot screwdriver, Adjustable Wrench, Step ladder and Wire Cutter5

INSTALL THE MOUNTING BRACKET

To prevent personal injury and damage, ensure that the hanging location allows the blade a clearance of 7 feet (2.13meters) fromthe floor.if there isn't an existing CUL listed mounting box, then read the following instructions!

1.

For the Wood Ceiling: Mark the location for the ceiling fan first, secure the mounting bracket to the building structure with Wall-inpellets and self-tapping screws provided.



WIRING PART

2.

REMEMBER to turn off the power. Follow the steps below to hang your fan properly: Connect the fan/light and power cord from the ceiling with terminal capsEnsure that live wire, neutral wire and earth wire are connected tothe power correspondingly.

Note: Earth wire connection is not necessary in the installation.



FIXED FAN TO CEILING

3.

Fasten the fan with the base screws to the brackets previouslymounted on the ceiling



FINISH INSTALLATION

4.

When powered on, use the remote control (1X AAA batteryneed to be additionally purchased) to check whether the fanor light could work normally.



5. Install 4 bulbs with E26 base





NOTE: Hanger after the installation must be able to withstand the weight of 20 KGS or more

Description of code matching method

1: Turn on the controller, then you will hear a sound "Di".Press "FAN"within 2 minutes till you hear the sound "Di Di". Check code is done.Ifnot, turn off the controller, and repeat it after l minute.

2: IF THE RENOTE CONTROL CANNOT BE EFFECTIVELY CONTROLLED, PLEASE CHECK THEBATTERY, AND REMOVE THE BATTERY IF NOT IN USE FOR A LONG TIME

Remote Control Operations



Mobile App Control Operation





1. Turn off the lights

2.

Scan the QR code and download the app,works with IOS/Android system



3.

Choose your room & click "+" to add d evice(turn on mobile blue-tooth)





4. Turn on the light 5.
Turn on wall switch and click " ?" to pair within 5 seconds

WIRING PART

1.Cleaning Frequency:

Regular cleaning is essential to keep your ceiling fan light looking its best and functioning optimally.We recommend cleaning the fan blades and light fixtures at least once every few months, or more frequently if you notice dust buildup or reduced performance.

2.Safety First:

Before cleaning, ensure that the ceiling fan light is turned off and the blades have come to a complete stop. If your fan has a remote control, remove the batteries from the remote to prevent accidental activation during cleaning. 3.Dusting:

Start by dusting the fan blades and light fixtures using a soft, lint-free cloth or a duster.You can also use a microfiber cloth or a vacuum cleaner with a brush attachment to remove dust and cobwebs.

4.Cleaning the Blades:

For stubborn dust or grime, dampen the cloth or sponge slightly with a mixture of mild dish soap and water.Gently wipe the blades from the base towards the tips, being careful not to bend or damage them.Rinse the cloth or sponge frequently and ensure it is not overly wet to prevent water from dripping onto the motor.

5.Cleaning the Light Fixtures:

If your ceiling fan light has glass or plastic light covers, remove them carefully (following the manufacturer's instructions) for cleaning.Wash the covers with a mild soap and water solution, then rinse and dry thoroughly before reinstalling.

6.Cleaning the Motor Housing:

Occasionally, you may want to clean the motor housing to maintain proper airflow and prevent overheating.Use a vacuum cleaner with a brush attachment or compressed air to remove dust and debris from the motor and housing.

7.Cleaning the Remote Control:

If your fan has a remote control, wipe it down with a clean, dry cloth. Avoid using harsh chemicals that may damage the remote's surface.

8.Avoid Harsh Chemicals:

Never use abrasive or corrosive cleaning agents on any part of the ceiling fan light, as they can damage the finish and components.By following these maintenance and cleaning recommendations, you can ensure that your ceiling fan light stays in good condition, operates efficiently, and continues to provide a comfortable environment in your living space.

TROUBLESHOOTING GUIDE

Before:

1. This is a replaceable light bulb ceiling fan, DO NOT install any dimmer switch for this.

2. Install the Remote OR Wall Switch, DO NOT install both of them.

3. Check circuit fuses or breakers and make sure the battery is installed correctly.

4. Check line wire connections to the fan and switch wire connections in the switch housing.

CAUTION: Make sure the main power is off.

Problem: Light does not work

1. Check to see that the wire connections in the switch housing are connected.

2. Make wiring connections from the house to the LED light directly (don't connect the remote and the fan) to determineit's the issue of the LED light or not.

Problem: Fan will not start

 Check line wire connections to the fan and switch wire connections in the switch housing. CAUTION: Make sure the mainpower is off
 Make the Fan wiring connections Without the Remote & transmitter and the light, to determine it's the issue of the fan body or not.

a) Please don't wire the light at the bottom

b)Connect the Ceiling Fan Neutral Wire (White) to the Neutral Wire (White) coming through the ceiling. Connect theCeiling Fan Live Wire (Black) to the live wire (Black or Colored) coming t hrough the ceiling. Then turn on the main powercheck the fan works separately or not.

WARRANTY INFORMATION

1. Warranty Period:

This product comes with a standard one-year warranty, which begins from the date of your purchase.

2. Warranty Policy:

The warranty policy for this product covers manufacturing defects and material deficiencies. If you encounter issues with the product during the warranty period, we offer the following service options:

a. Repair: We will take responsibility for fixing or replacing any faulty components to ensure that the product functions correctly once more.

b. Replacement: If the issue cannot be repaired, we will provide you with a brand-new replacement product.

3. Warranty Claims:

If you need to file a warranty claim, please get in touch with our customer

support team and provide the following information:

a. Order number of your purchase.

- b. Detailed description of the problem.
- c. Photographic evidence of the product damage.

Our customer support team will guide you through the next steps to obtain repair or replacement services.