

For longer use

Re-tighten bolts every 6 months by using the enclosed allen-key. *Using an electric drill can damage the chair. Please re-tighten bolts manually.



Do not use the chair

with more than one person

Safety Information



chair, with your back to the backrest



Do not sit at the front edge of the chair





Do not stand on the

chair

Do not push the chair around when a person is sitting in it

Do not push down on the backrest when a person is reclined

INSTRUCTION MANUAL

Model: C-2194C





C-2194C

Assembly Instruction





CAUTION:

- * Before using the chair, check to ensure that all bolts are fully tightened.
- * Lubricate all parts and tighten all bolts every 6 months or whenever needed.

Using the wrench (I), connect the backrest support bar (C) with the backrest (A) to the seat (B) with the bolt (E)*4.