 
 


**BTB2937**  
BATON ROUGE BOOKCASE

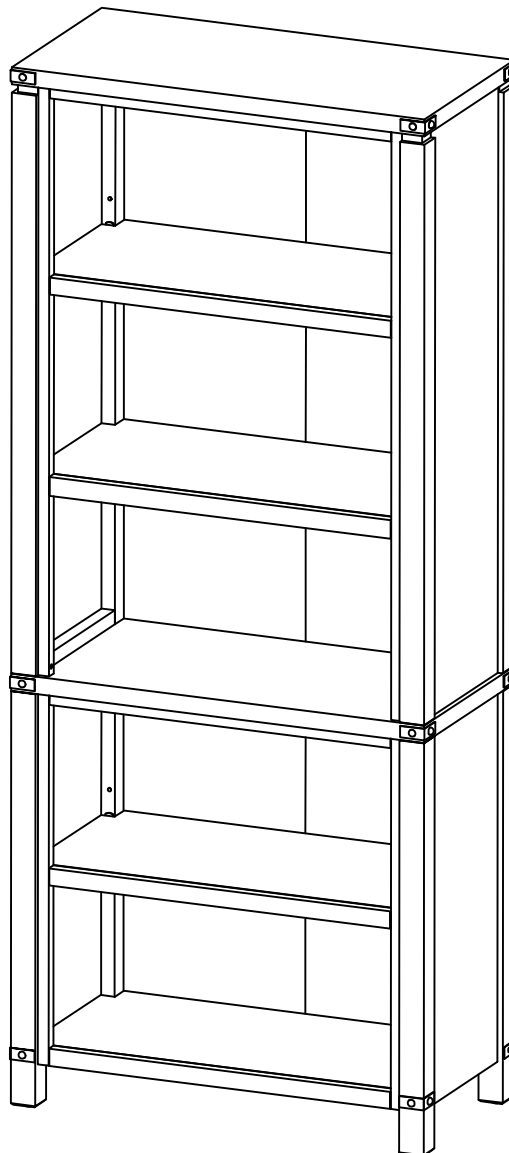

**Assembly Instructions - Important:**

Carefully unpack and identify each component before attempting to assemble. Refer to the parts list. Please take care when assembling the unit and always set the parts on a clean, soft surface. If you require any assistance with assembly, parts or information on other products, please visit our website: [www.officestart.net](http://www.officestart.net) or call or write to us.

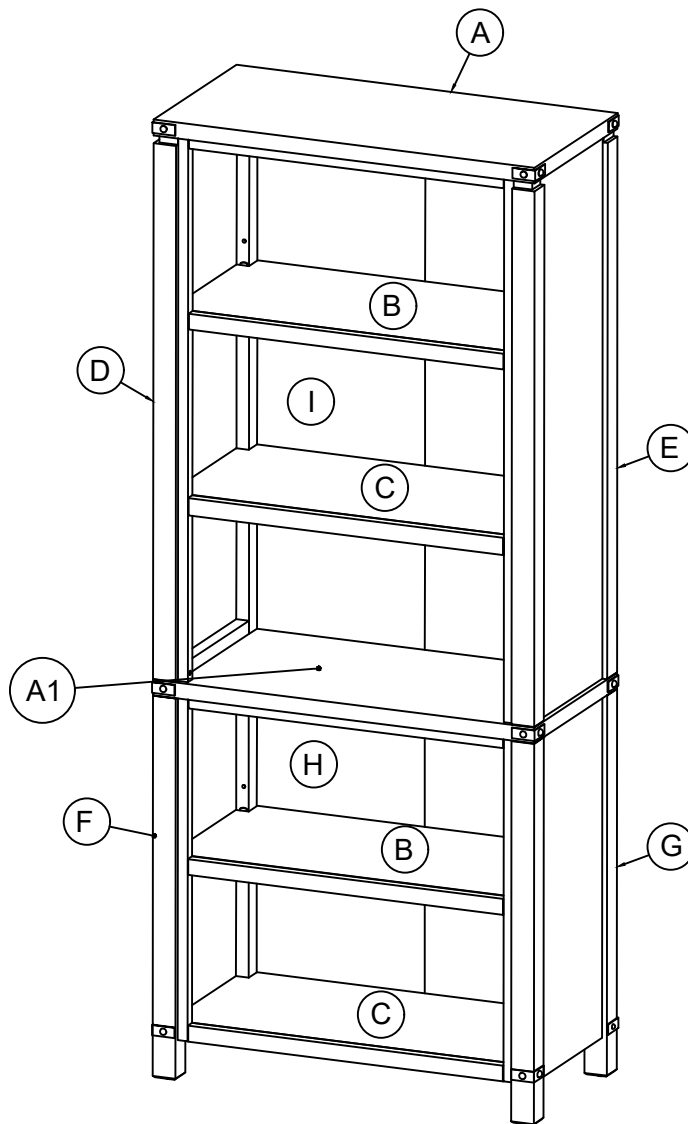



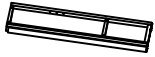

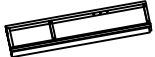







1. Do not use this product unless all screws and bolts are securely tightened.
2. Check that all screws and bolts are tight every three months or as needed.
3. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
4. Do not use this product as a stepladder.
5. Use this product for its intended purpose only.
6. FOR INDOOR RESIDENTIAL USE ONLY.

#### LIMITED WARRANTY

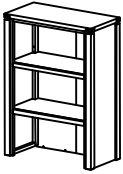
OSP Home Furnishings® warrants to the original purchaser that this product will be free from defects in material and workmanship as described below. OSP Home Furnishings® will repair or replace, at its option, without charge to the original purchaser only, defective products or parts for one (1) year from the date of purchase. Replacement parts can only be supplied if parts are available. Items out of production may be unavailable. This warranty shall be effective for the applicable time period beginning from the date of purchase as shown on your original sales receipt. This warranty is your sole remedy for product defects and excludes defects due to or arising in connection with product abuse or misuse, use modification of, or attachments to the product, and products or parts not used, maintained, or installed in accordance with the company's installation, maintenance and/or applicable guidelines. There are no other warranties, express or implied, other than those specifically described, including without limitation any implied warranty of merchantability or of fitness for a particular purpose. OSP Home Furnishings® will not be responsible for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Our quality standards are among the highest in the industry. Sometimes, no matter how hard we try, there are times when parts are damaged or missing. Our Parts Department will do everything possible to promptly remedy the problem. Contact us via e-mail [parts@officestart.net](mailto:parts@officestart.net), by Fax 1-909-930-5629, or toll free parts number 1-800-950-7262, Monday through Friday 8:00 a.m. - 5:00 p.m. Pacific Time. To make a warranty claim, contact Parts Department. Provide model number, proof of purchase, description of the problem and obtain return authorization. At its option OSP Home Furnishings® will:

(a) Supply compatible components of current manufacture. (b) Repair the customer's component. The customer must prepay freight on any components returned to the factory. Return freight on components still in warranty will be paid by OSP Home Furnishings®.

## PARTS

 
(AA) Upper Bookcase (1PC)		(C) Shelves (2 PCS)	
		(D) Upper Side Frame Left (1 PC)	
(BB) Lower Bookcase (1PC)		(E) Upper Side Frame Right (1 PC)	
		(F) Lower Side Frame Left (1 PC)	
(A) Upper Top (1PC)		(G) Lower Side Frame Right(1 PC)	
(A1) Lower Top (1PC)		(H) Lower Back Panel (1 PC)	
(B) Adjustable Shelves (2 PCS)		(I) Upper Back Panel (1PC)	

## HARDWARE LIST


NO	DRAWING	DESCRIPTION	SIZE	QUANTITY
1		Allen Wrench	L57 x4mm	1 PC
2		Bolt	1/4"x70	4 PCS
3		Bolt	1/4"x35	16 PCS
4		Flat Washer	1/4"x19x1.8	20 PCS
5		Spring Washer	1/4"x13x1.2	20 PCS
6		Shelf Holder		8 PCS
7		Wood Screw	3/16"x15	36 PCS
8		Anti-Tip Kit		1 PC

Phillips Screwdriver also needed for assembly (not provided).


## STEP 1

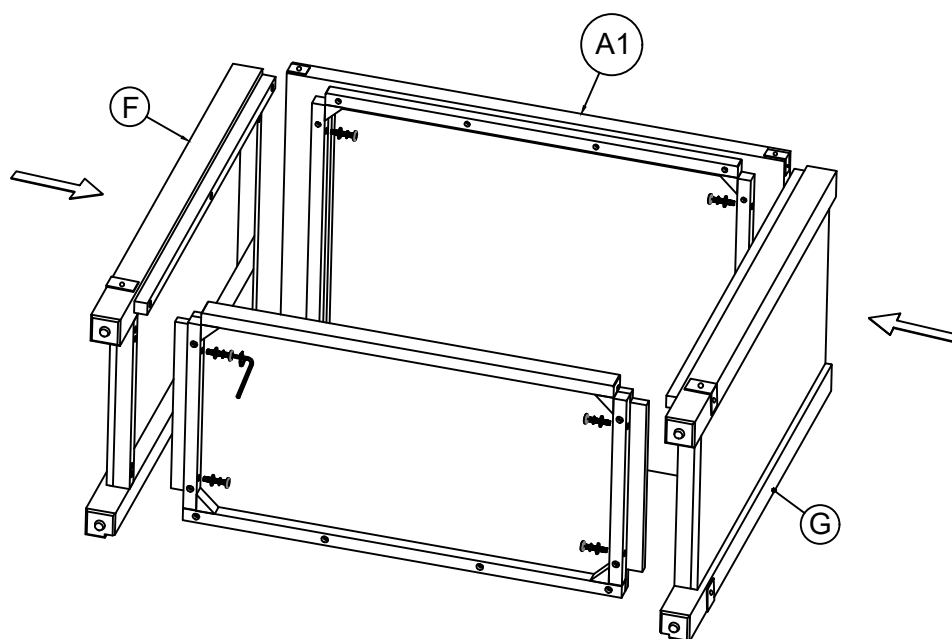

## STEP 2

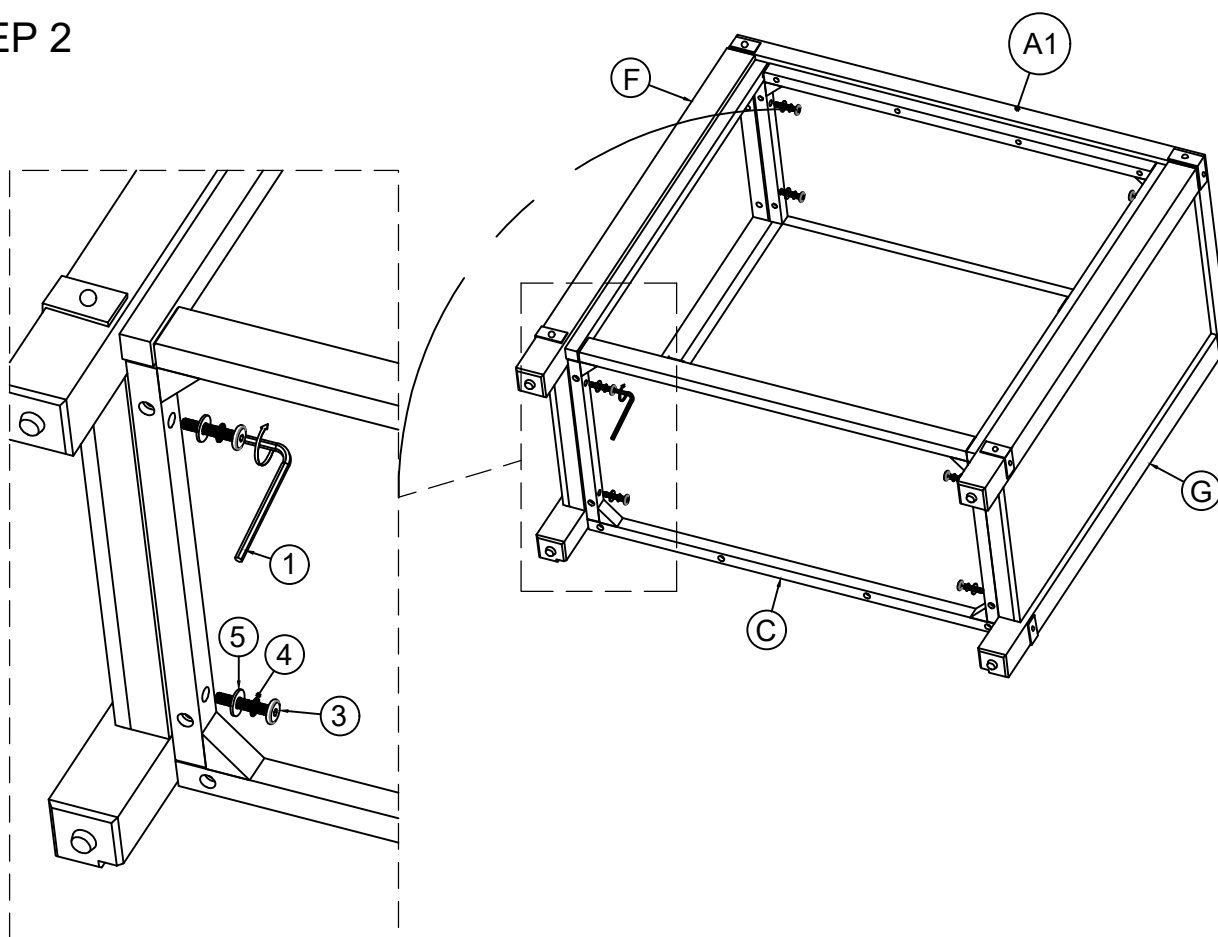 


## STEP 3


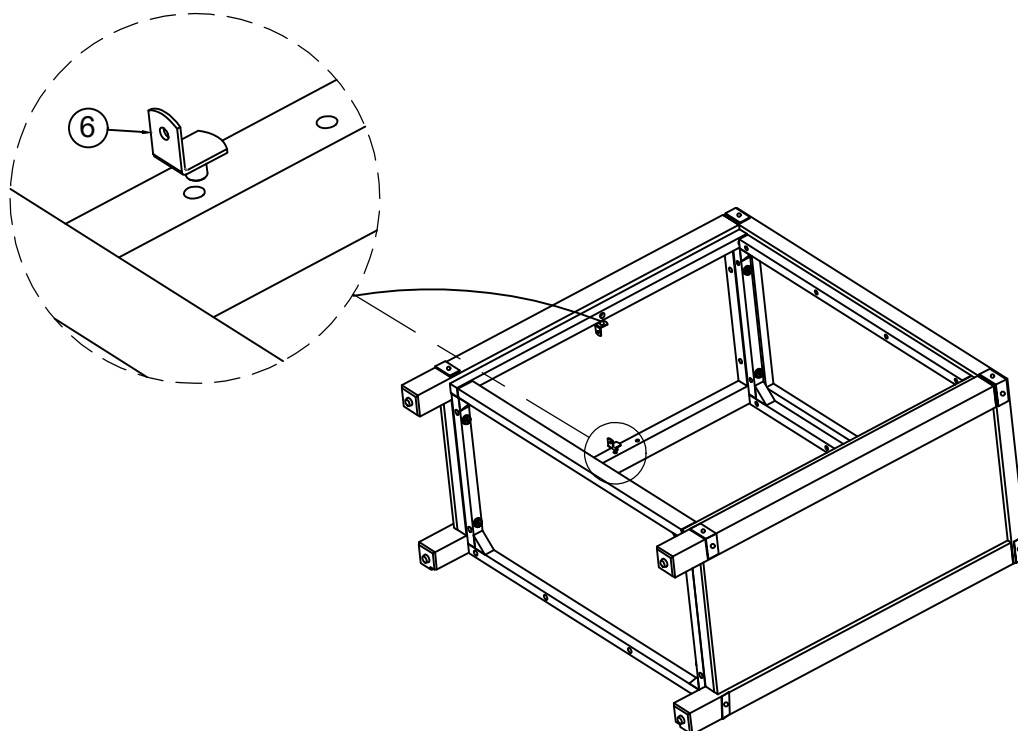 


---


## STEP 4

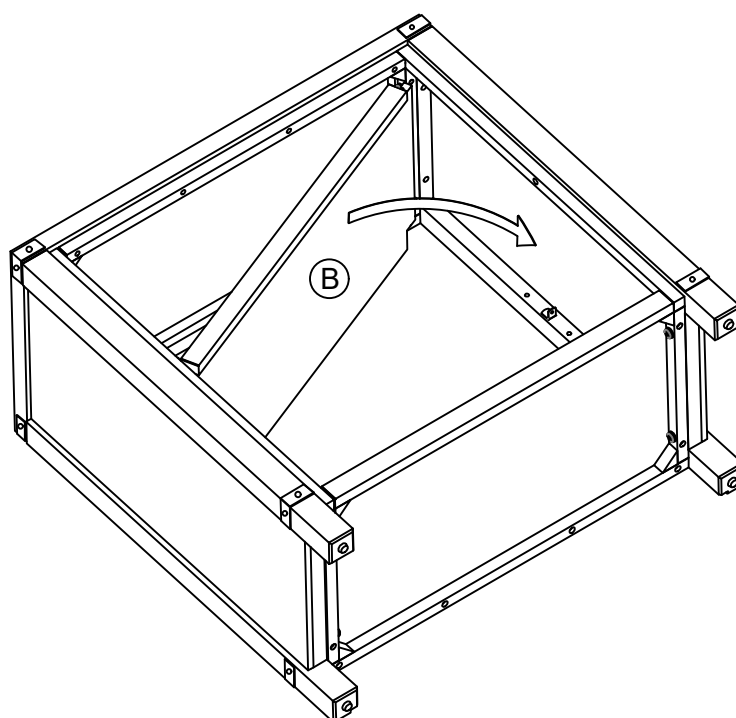 


## STEP 5

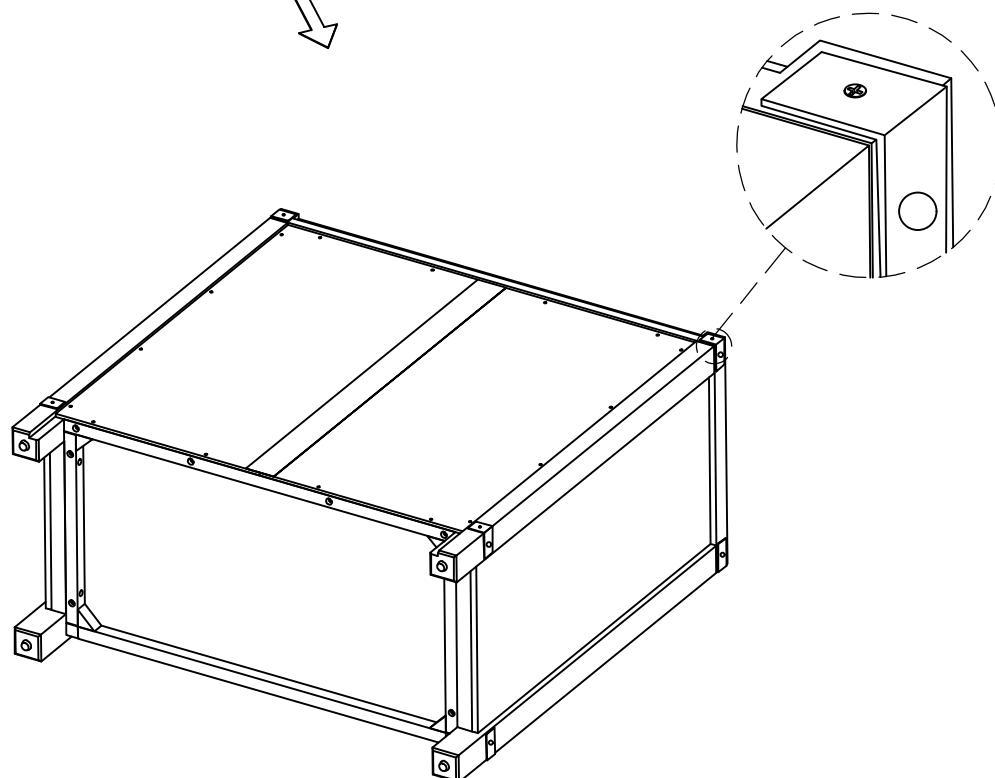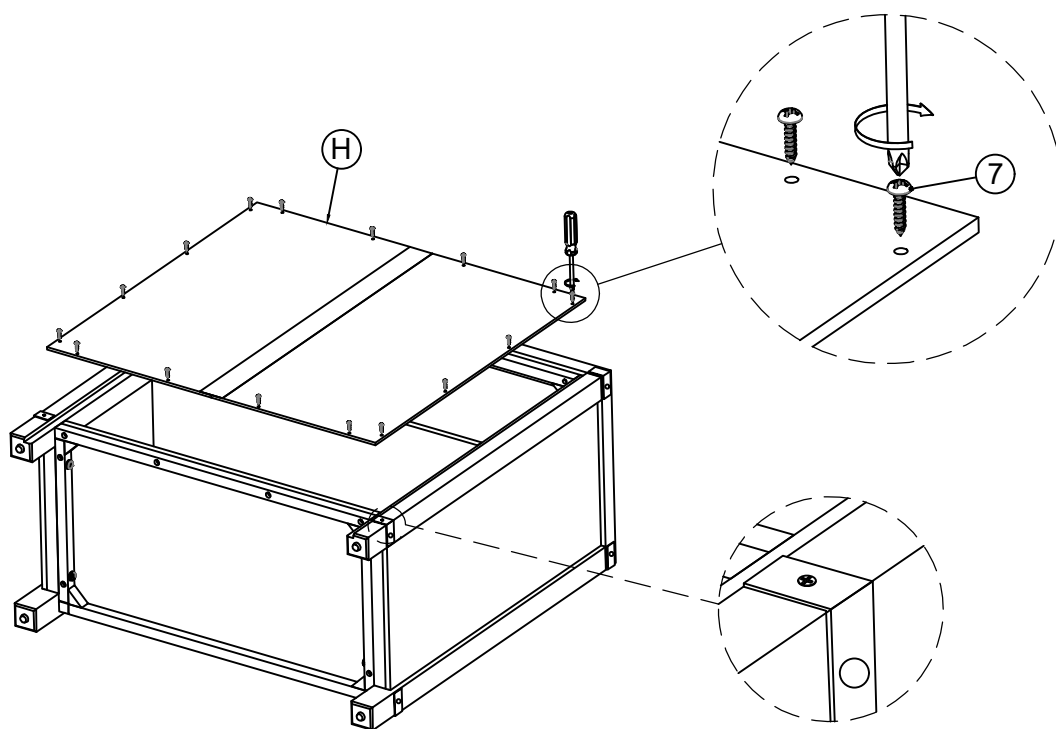  


## STEP 6

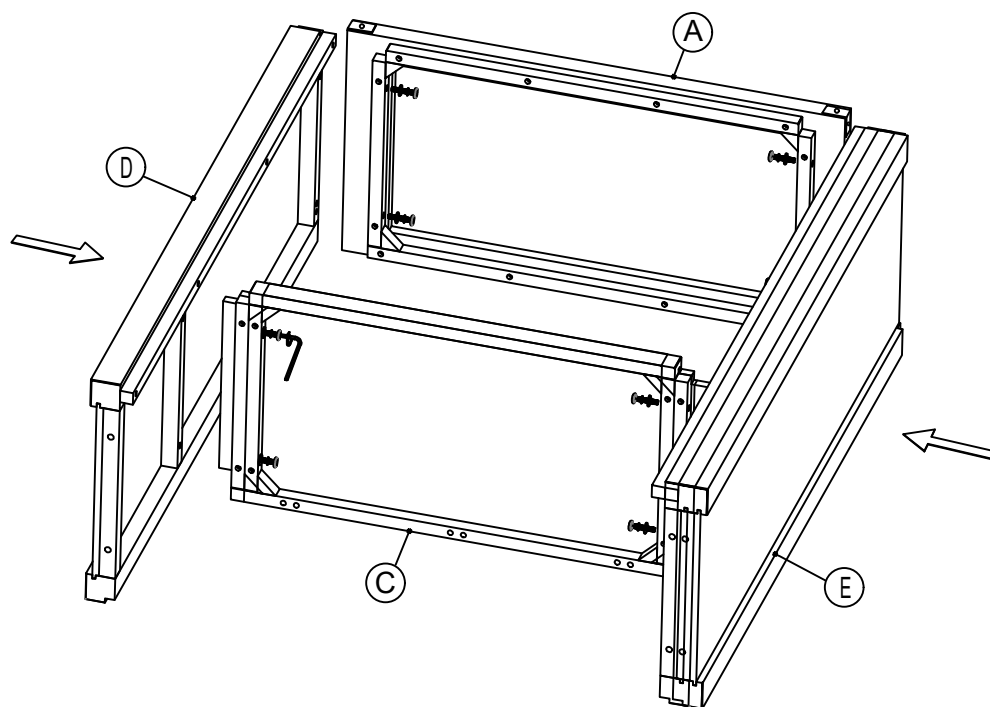 

## STEP 7

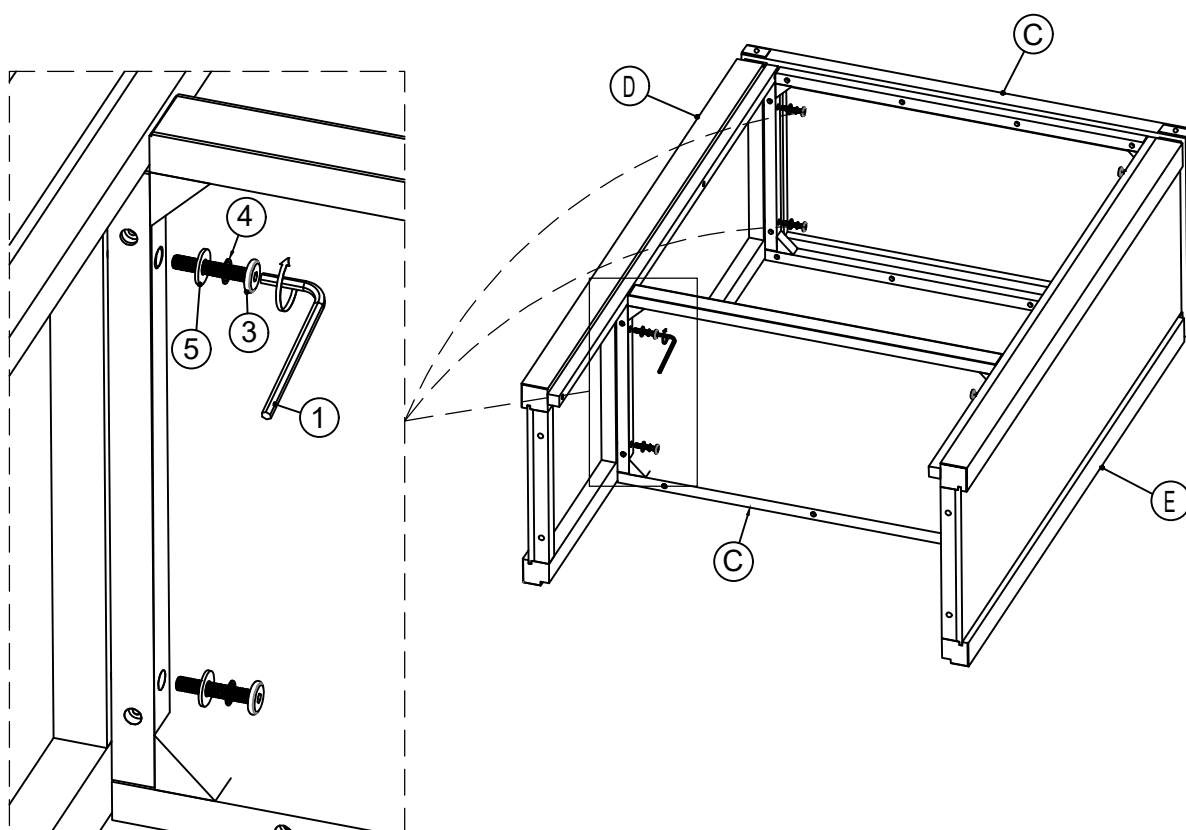 


## STEP 8

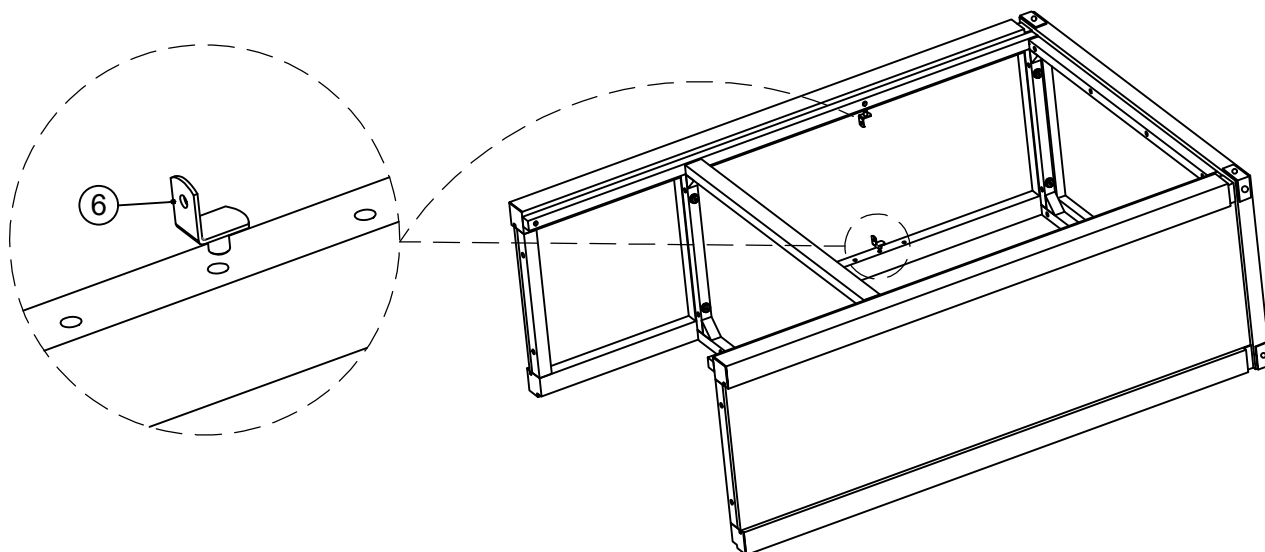 


---

## STEP 9

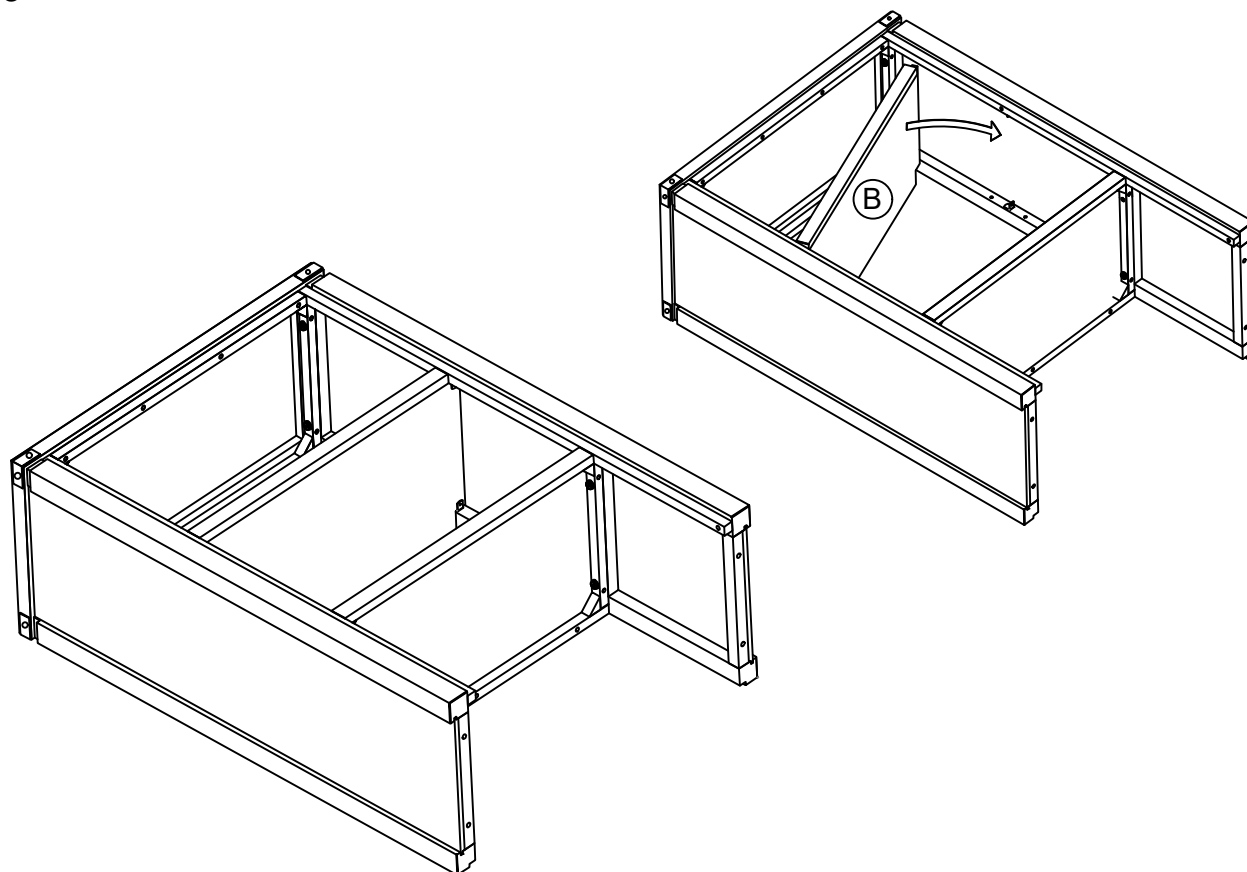 




## STEP 10

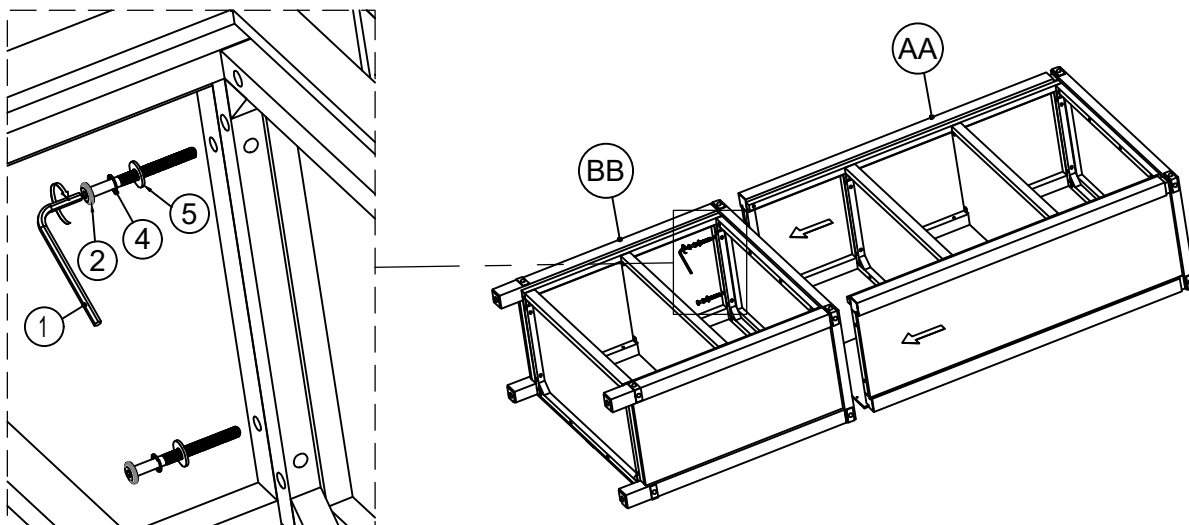 

## STEP 11

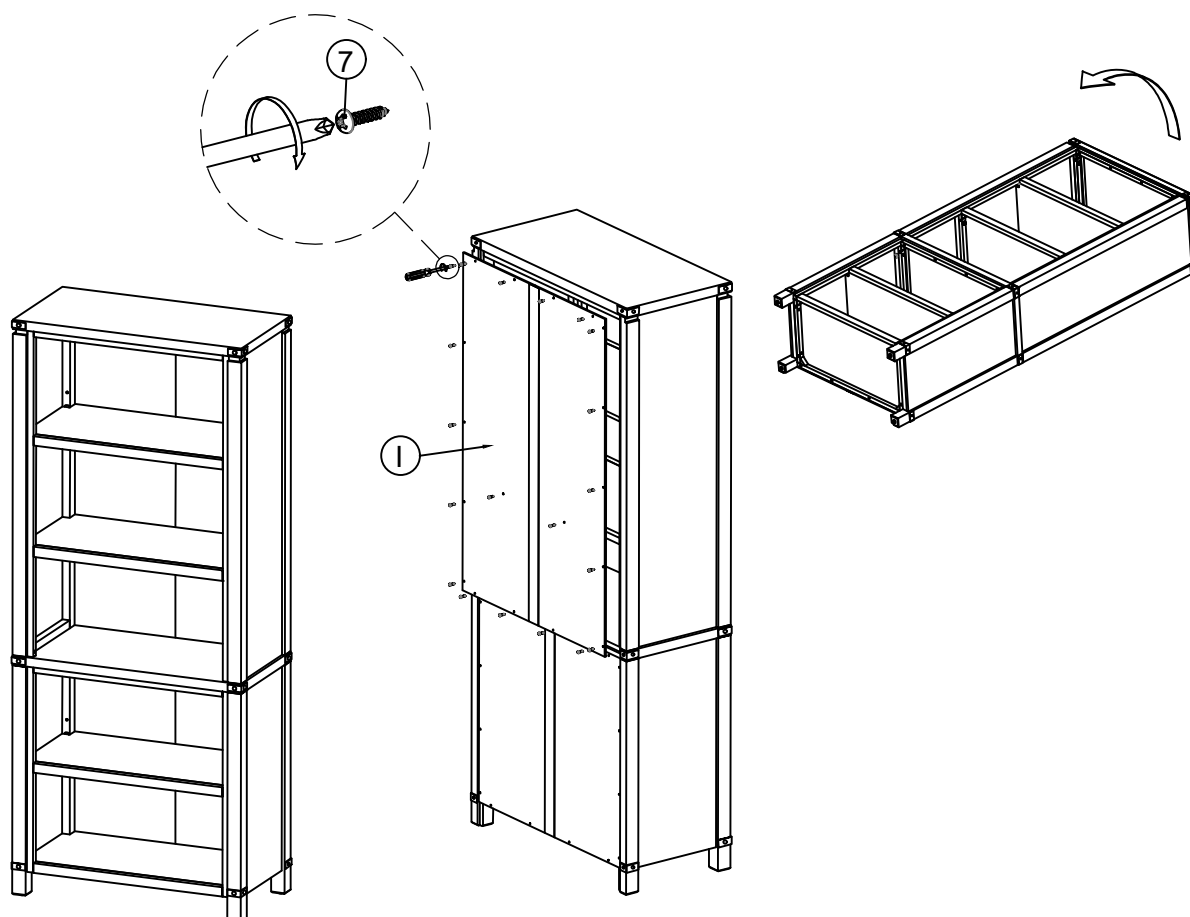 

## ANTI-TIP KIT

Place in desired location. Carefully drill a ¼" pilot hole into wall. Secure one Bracket to wall using two Long Screws, **FULLY TIGHTEN LONG SCREWS USING PHILLIPS SCREWDRIVER** (not provided). Secure remaining Bracket to rear of cabinet using two Short Screws, **FULLY TIGHTEN SHORT SCREWS USING PHILLIPS SCREWDRIVER** (not provided). Loop Safety Strap through Brackets and fasten Safety Strap.

