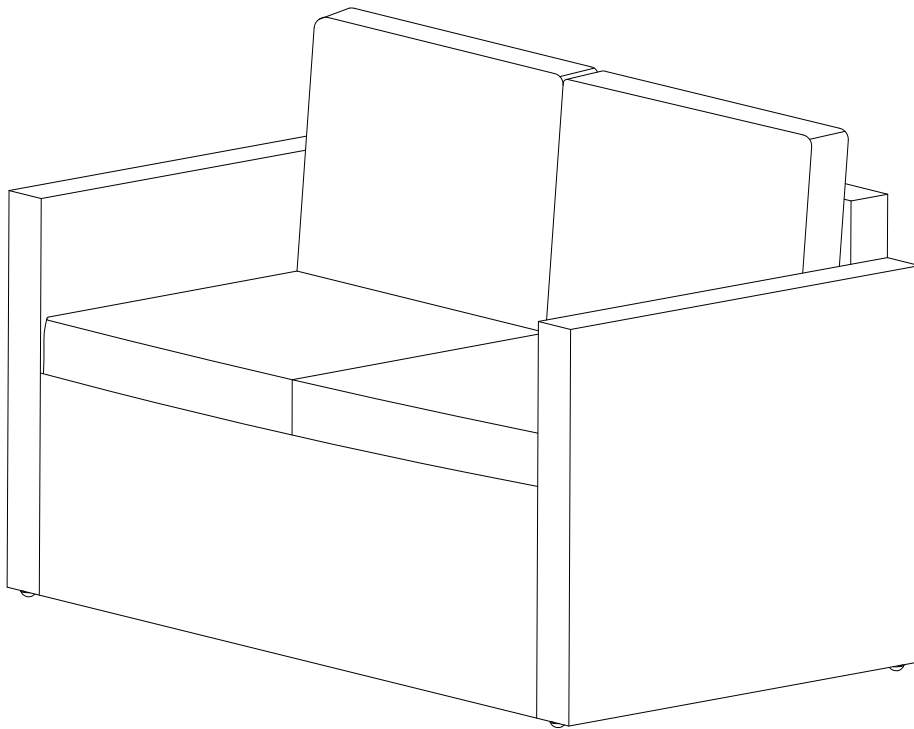




Palm Harbor Outdoor
Wicker Love Seat

CO7106-BR



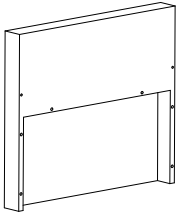
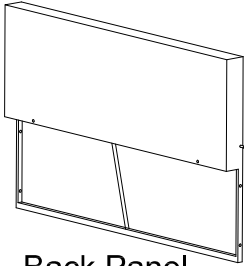
 
 


Congratulations! You have purchased a stylish piece of Crosley Furniture. We strived to provide fine furniture products, built with quality materials and hand finished details. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.

 
 
 
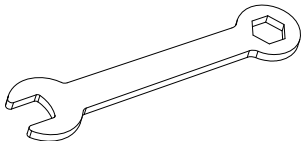
 
Should you experience any missing or damaged parts, **do not return to the store**. Please visit our website **www.Crosleyfurniture.com**, or contact us directly at 800-815-4796.

Care: Use a soft, clean cloth that will not scratch the surface when cleaning. The use of solvents is not necessary. Should you choose to use solvents, test in an inconspicuous area first to avoid damaging the finish. To clean, simply use a soft, clean cloth lightly dampened with water.

PART LIST

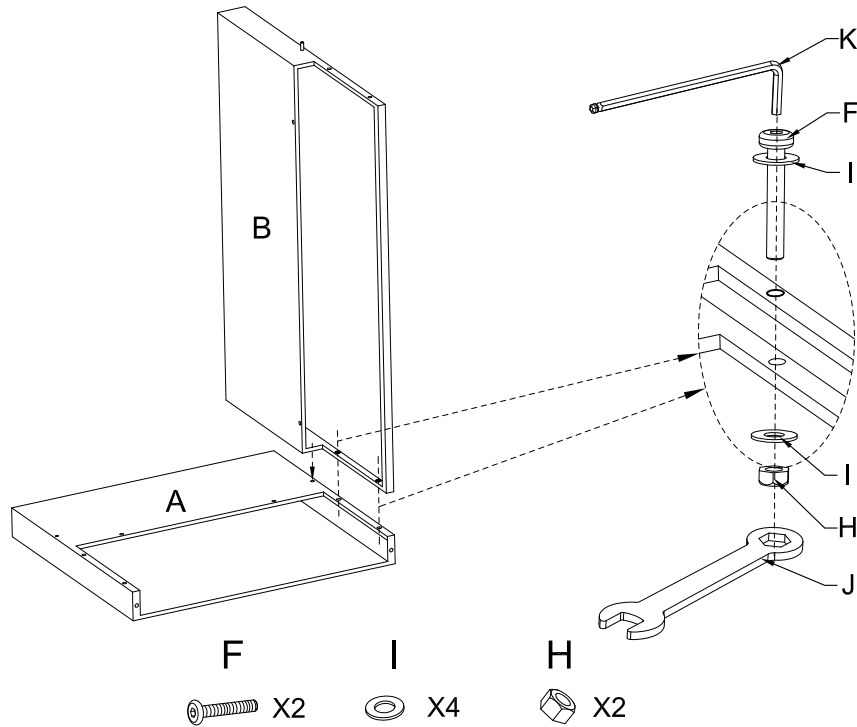
 Arm Panel		 Back Panel		 Seat Panel	
A	2pcs	B	1pc	C	1pc
 Lower Front Panel		 Seat Cushion		 Back Cushion	
D	1pc	M	2pcs	N	2pcs

HARDWARE LIST

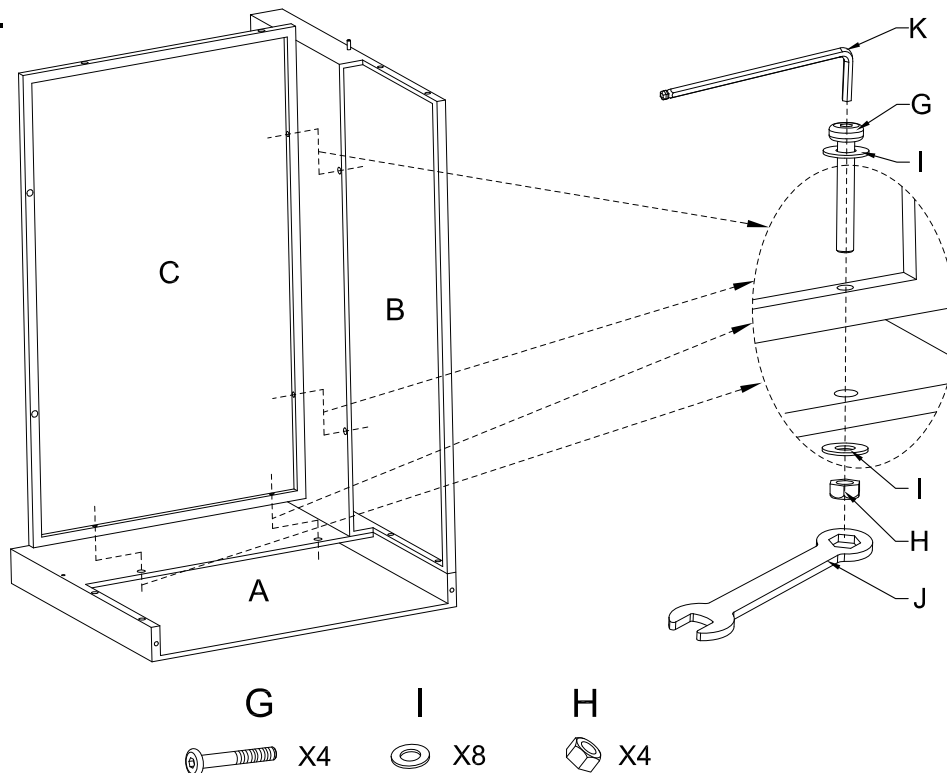
 Short Bolt(M6*30mm)		 Medium Bolt(M6*40mm)		 Long Bolt(M6*50mm)	
E	2pcs	F	4pcs	G	10pcs
 Nut(M6mm)		 Washer(M6mm)		 Wrench(M6mm)	
H	14pcs	I	30pcs	J	1pc
 Allen Key(M6mm)		 Adjustable Leveler			
K	1pc	L	4pcs		

Step 1. Lay Arm Panel (A) down on a flat surface. Attach Back Panel(B) to Arm Panel(A) using the Medium Bolt(F), Washer(I), Nut(H), Wrench (J) & Allen Key (K).

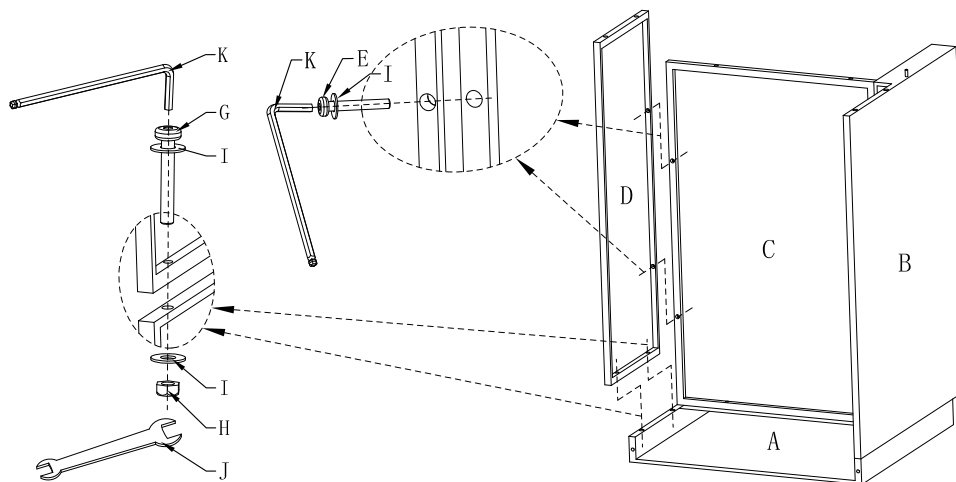
NOTE: Do not fully tighten bolt until all bolts are in place.



Step 2. Attach Seat Panel(C) to Arm Panel(A) and Back Panel (B) using the Long Bolt(G) Washer(I), Nut(H), Wrench (J) & Allen Key (K).

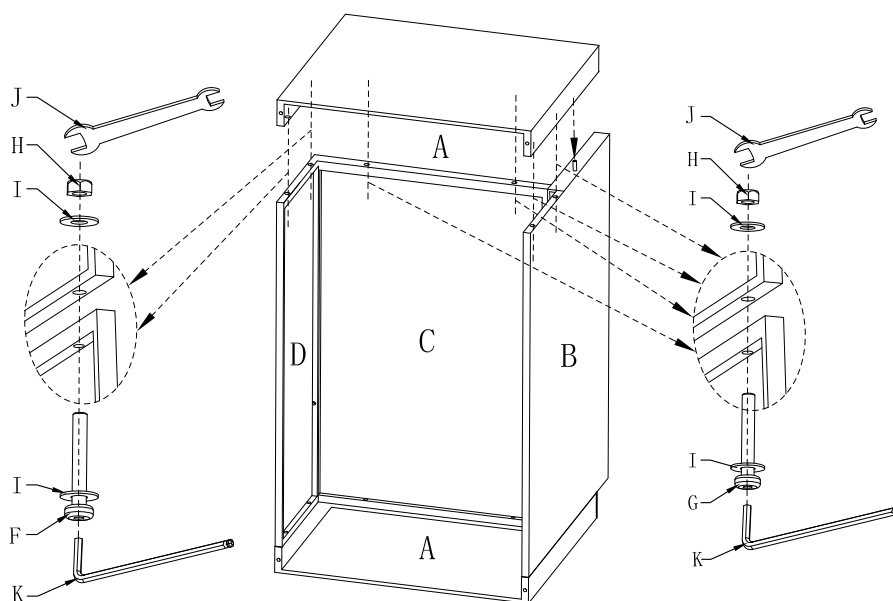


 
 
Step 3. Attach Lower Front Panel (D) to Arm Panel (A) using the Long Bolt(G), Washer (I), Nut(H), Allen Key (K) & Wrench (J), to Seat Panel (C) using Short Bolt (E), Washer (I) & Allen Key (K).



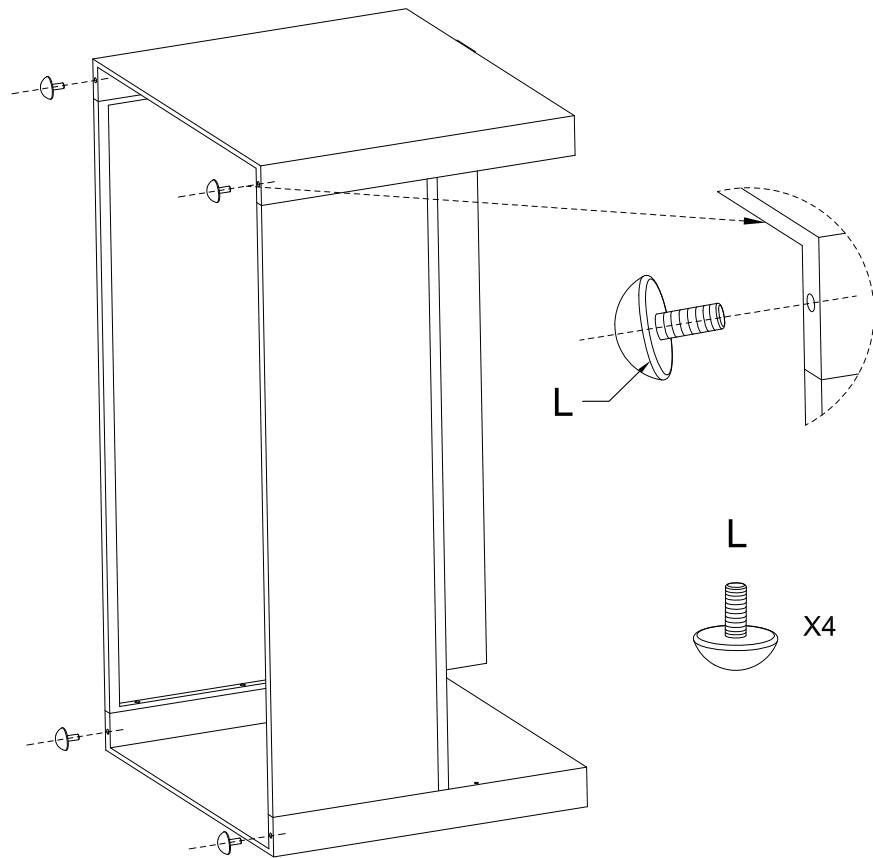
E	G	I	H
 X1	 X2	 X5	 X2

Step 4. Attach Arm Panel (A) to the Assembled Part (A,B,C&D) using Bolt (F), Bolt (G), Washers (I), Nut (H), Wrench (J) and Allen Key (K) as shown.

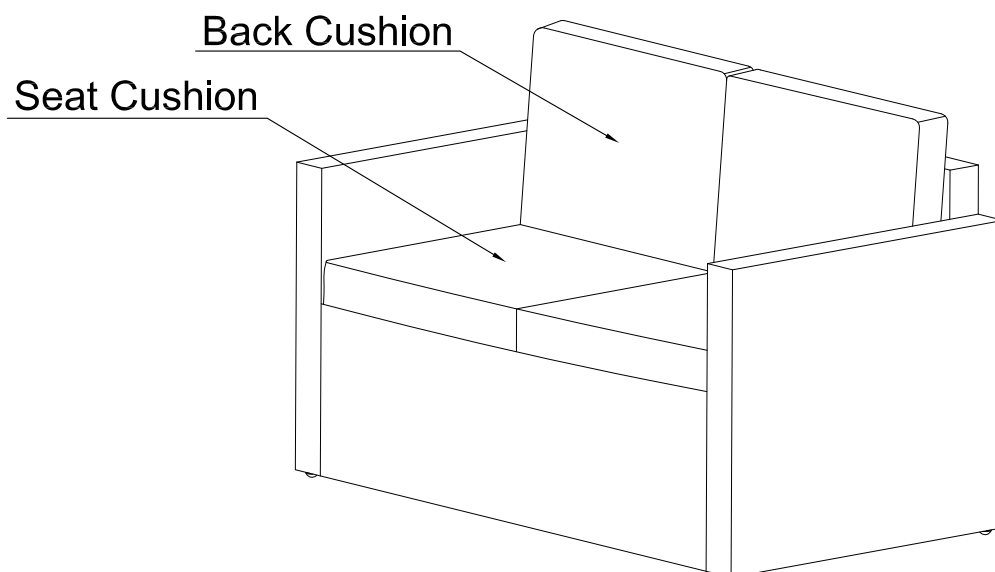


F	G	I	H
 X2	 X4	 X12	 X6

Step 5. Screw the Adjustable Levelers (L) into the pre-drilled holes, to the desired position, on the bottom of the chair.



Step 6. Turn the assembled chair upright on a flat surface, add the Seat and Back Cushions.





Limited Manufacturers Warranty

Crosley Furniture Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale. Should any parts be missing or defective, we will replace or repair the parts for a period of 90 days from the date of purchase.

Should you experience any missing or damaged parts, do not return to the store. Please contact us directly at 800-815-4796 from 9 AM to 5 PM (EST) Monday to Friday.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state. In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Furniture's high standards of Quality and Workmanship.