


ZX52
V20251017

User Manuals

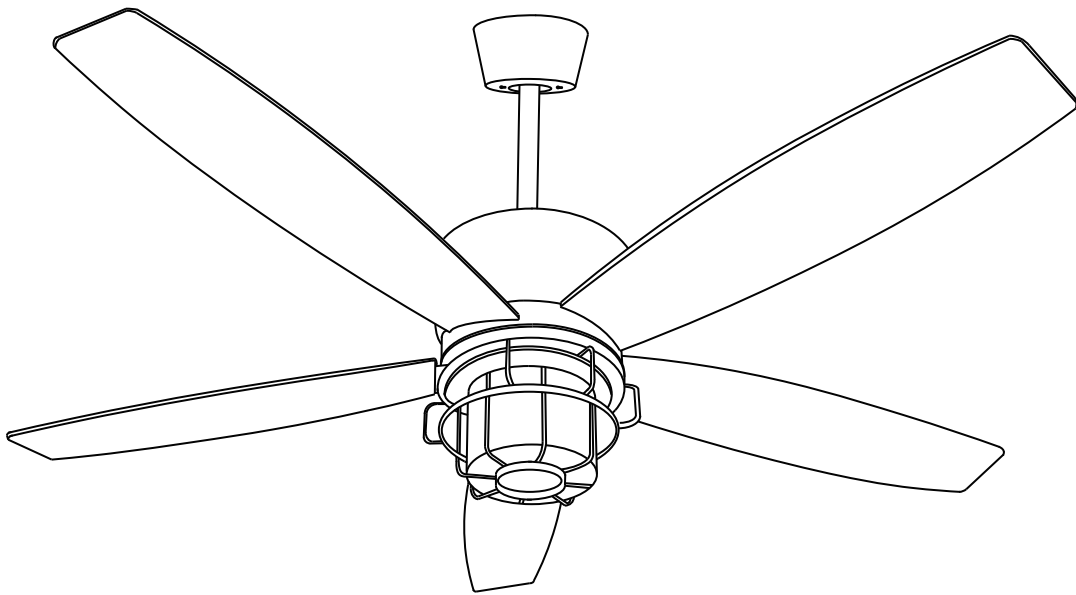

Scan to get support

After-sales Email: support@fanlamppro.com

To assist you faster, please share your order confirmation screenshot so we can quickly resolve this.□

CEILING FAN LIGHT

WARM TIPS

1. Insert the downrod ball head into the groove of the mounting bracket. (Figure 1)

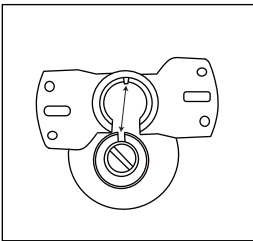


Figure 1

2. Wall switch light memory: (Figure 2)

- * Turn off wall switch
- * Wait 10 seconds to turn on wall switch, it will remember the last light setting.

If quickly toggle the wall switch within 5 seconds, the CCT will switch.

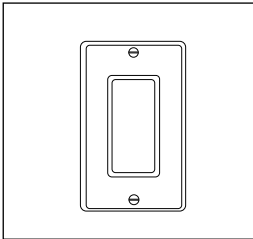
 
 








Figure 2

TOOLS MAY REQUIRED

Ladder	+ - Screwdriver	 Wire Strippers	 Tape	 Goggles
--------	--------------------	---	--	--

ACCESSORIES

     
● Check to see that you have received the following parts:

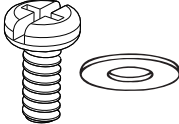3 (a)  Wire nut	2 (b)  J-box screw	4 (c)  Washer	2 (d)  Expansion screw
4 (e)  Self-tapping screw	3 (f)  Balance set	16+16 (g)  Blade screw, red washer	4 (h)  Nut


CEILING FAN LIGHT

PACKAGE CONTENTS

 ■ In addition to the parts included in the accessory package, there are a total of 10 fan light accessories. Please carefully check whether any parts are missing from the package and make sure to confirm all the parts inside the box .




● ————— Mounting bracket (1)

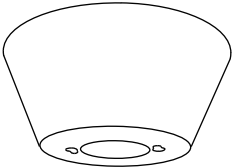

● ————— Canopy cover (1)



 ● ————— Water retaining cover (1)




● ————— Downrod (2)



● ————— Magnetic deco cover (1)




● ————— Coupling cover (1)

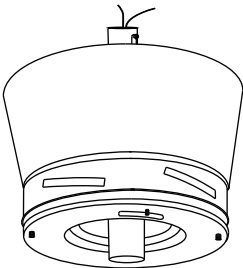


● ————— Fan motor host (1)




● ————— Fan blade (5)

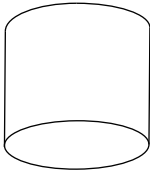

● ————— Glass lampshade (1)

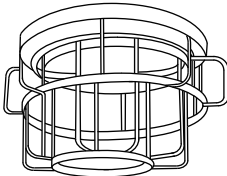

● ————— Lampshade frame (1)

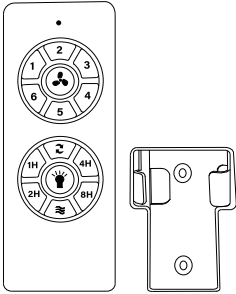

Remote control kit

CEILING FAN LIGHT

IMPORTANT WARNING

- To reduce the risk of electric shock, turn off all power sources.
- All wiring must comply with the National Electrical Code and local electrical codes. Electrical installation should be performed by a qualified, licensed electrician.
- **WARNING:** To reduce the risk of personal injury, use only the two steel screws (and lock washers) provided with the outlet box for installation. Most outlet boxes are typically used to support lighting devices instead of fans and may need to be replaced. If in doubt, please consult a qualified electrician.


WARNING

TO REDUCE THE RISK OF FIRE
ELECTRIC SHOCK OR PERSONAL INJURY
MOUNT FAN TO OUTLET BOX MARKED
ACCEPTABLE FOR FAN SUPPORT

- Do not turn the fan blades until the fan installation is completed.
- To avoid personal injury or damage to the fan and other items, maintain and clean the fan with care.
- Do not use water or detergents to clean the fan or fan blades. A dry rag or a slightly damp cloth is suitable for cleaning.
- Electrical diagrams are for reference only. Please refer to the instructions included with the packaging for properly assembled lighting kits.

CEILING FAN LIGHT


SAFETY RULES

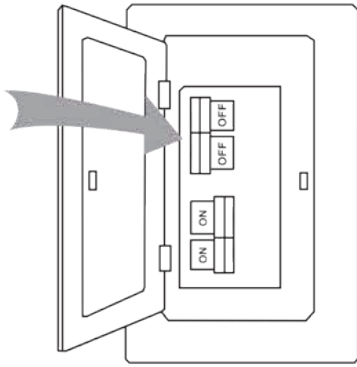


Turn off the main circuit power switch and wall fan switch.

⚠ WARNING

Failure to disconnect the power supply prior to installation may result in serious injury or death.

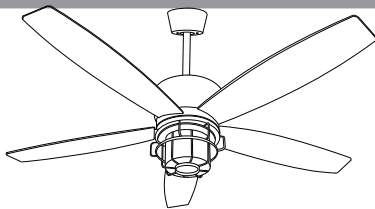

Horizontal ceiling installation

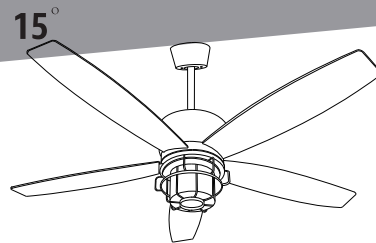

Slope ceiling installation

Proper installation: The ceiling fan must be mounted vertically on a sturdy ceiling, and the fan must be installed in a manner capable of supporting a weight greater than 66 lbs. If the fan is mounted on a slanted ceiling, the hanger's opening should be tilted upward, and the slot should be inserted into the ear.


⚠ WARNING

Safety Tips: Slope ceiling installation is only applicable to slope ceiling installation below 15° horizontally.

INSTALLATION RECOMMENDED



■ Recommended Room Size:

UP TO 15 FT X 15 FT

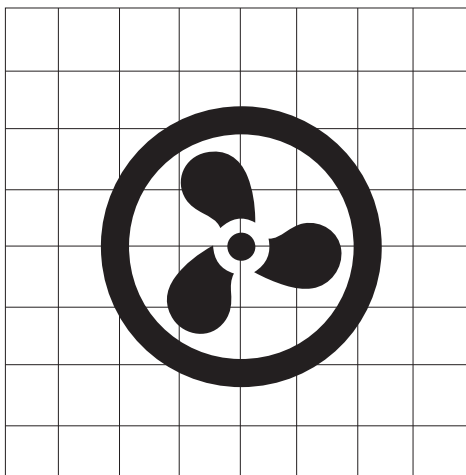

CEILING FAN LIGHT



INITIAL INSTALLATION

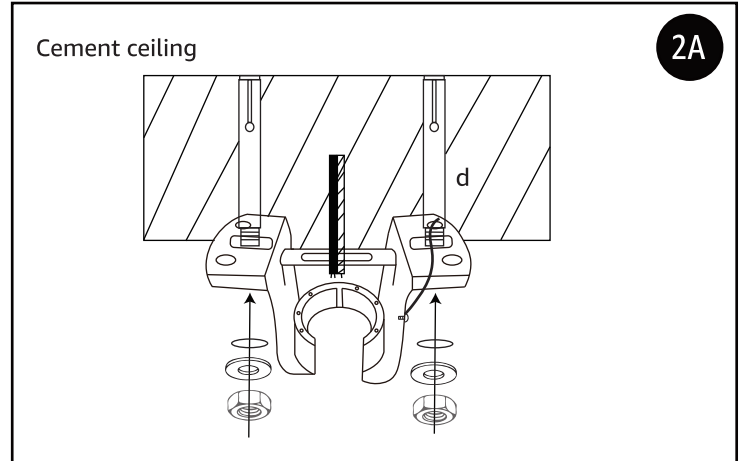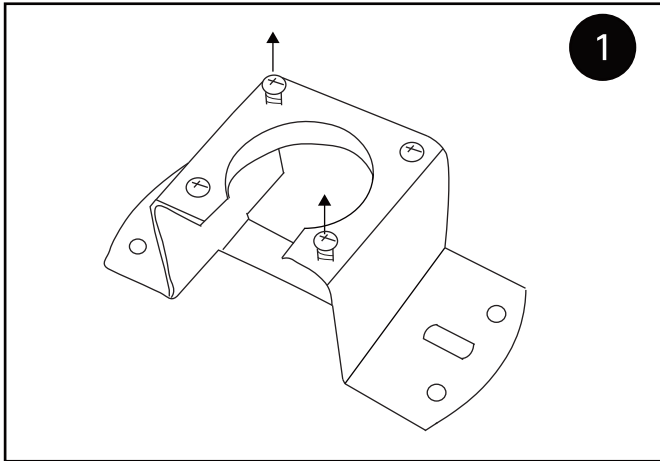

1 Loosen the two screws on the bracket counterclockwise by 2-3 turns, ensuring that they remain securely fixed to the bracket.



2A Mount the bracket to the ceiling and use appropriate accessory screws to secure it based on the type of ceiling material.

Cement ceiling: Drill holes into the cement ceiling, then use expansion screws for fixation.

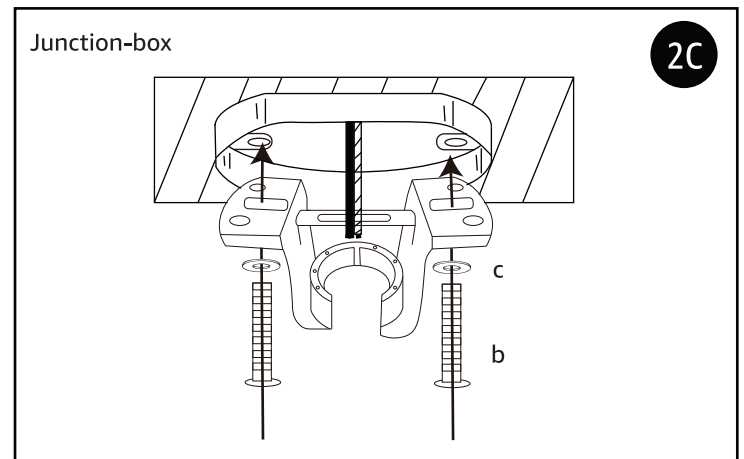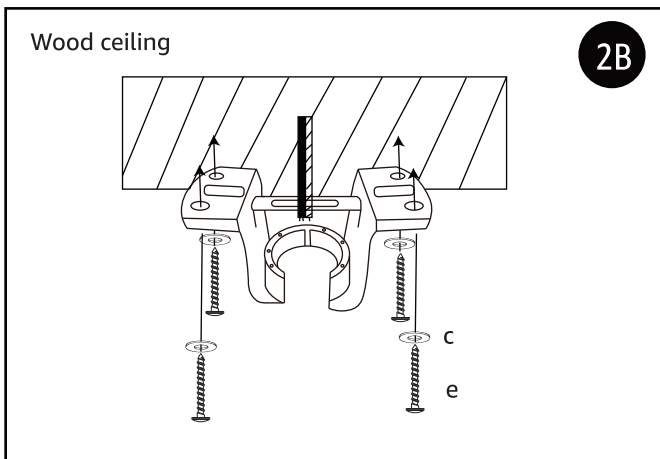

2B **Wooden ceiling:** Drive self-tapping screws directly into the wooden ceiling.


2C **Junction box:** Secure the bracket to the ceiling using j-box screws and washers.

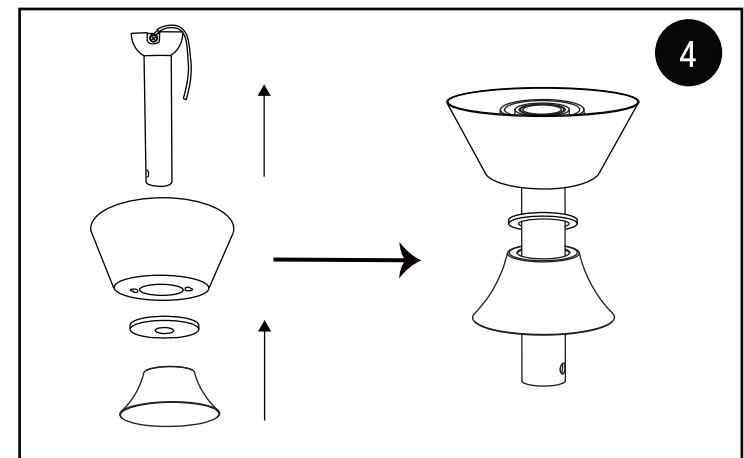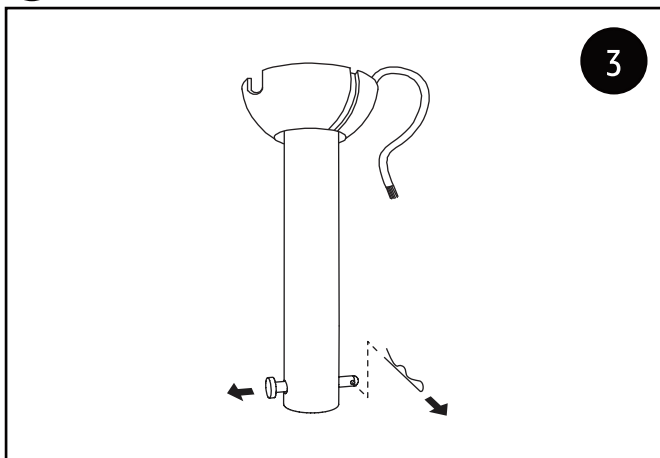

3 Take out the downrod pin of the downrod assembly.


4 Assemble the canopy cover, coupling cover, and magnetic deco cover onto the downrod.

CEILING FAN LIGHT

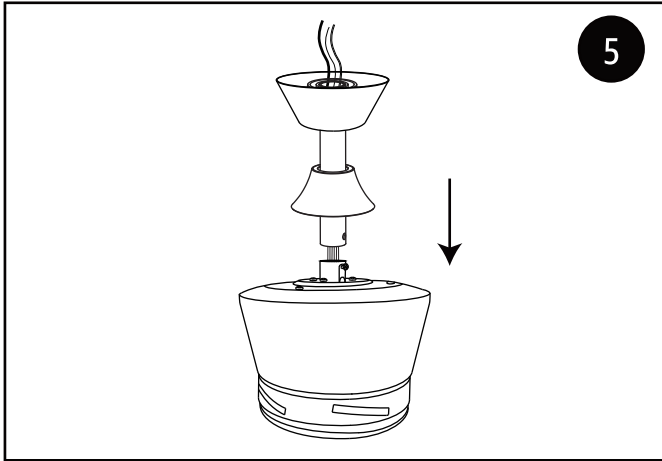


5 Assemble the fan motor host and downrod as shown in the diagram, then thread the wires through the downrod.
(If the wires are blocked, please remove the pin on the ball head).

6 Insert the downrod pin, lock it with the downrod clip, and then tighten the two screws on the yoke.

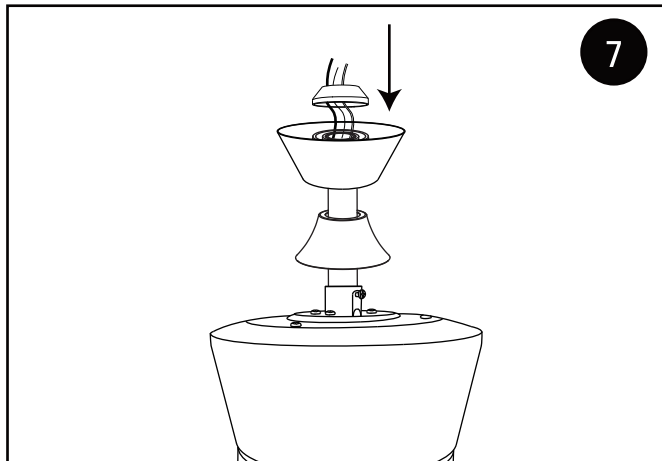


7 Cut three holes on the water retaining cover and pass the wires through them.

8 Hang the downrod onto the bracket, ensuring that the two slots align.


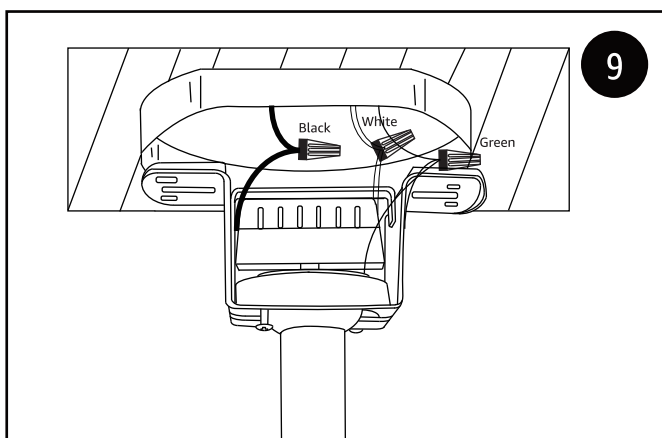


9 Connect the wires from the receiver to the main power supply from ceiling: black - live wire, white - neutral wire, green/bare - ground wire.



10 Push the canopy cover upward, align it with the two screws from step one, then rotate and tighten the screws to secure the canopy cover, and push the Magnetic Deco Cover upward to cover the screws.

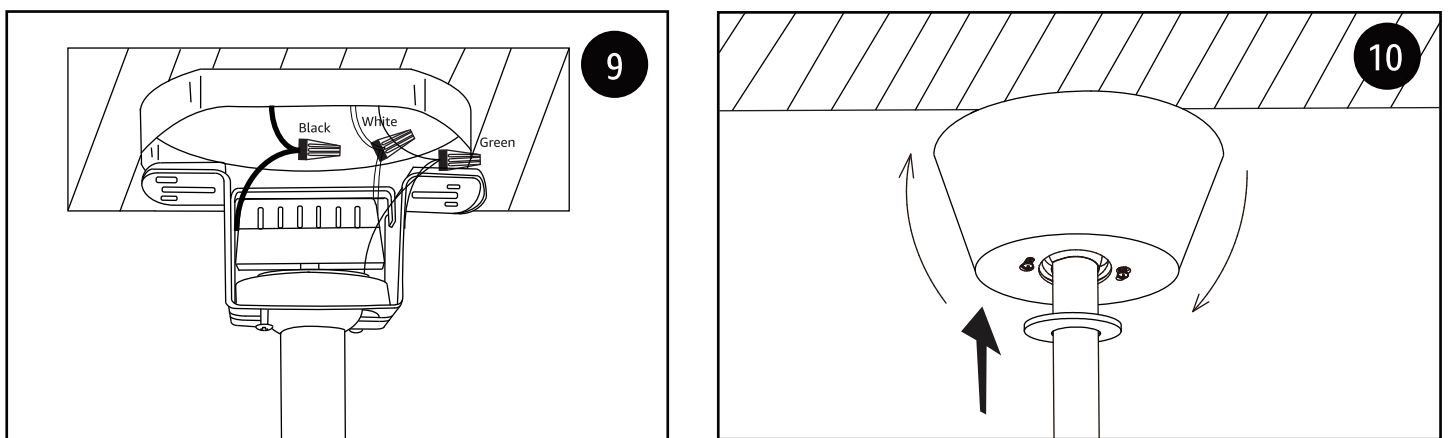


CEILING FAN LIGHT

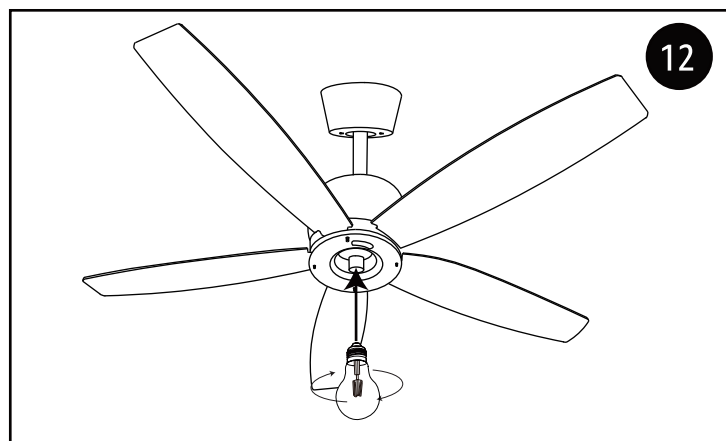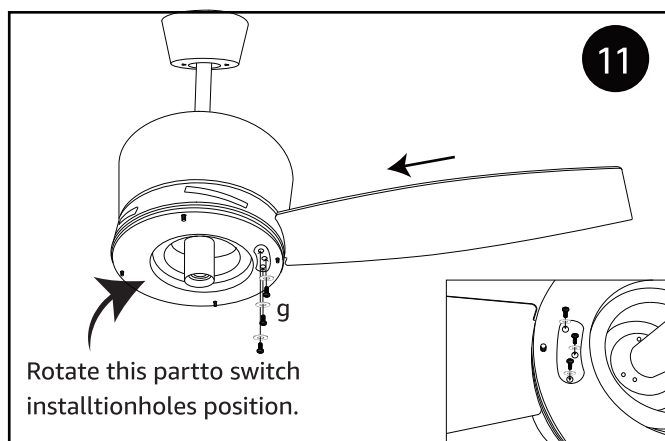

- 11** Insert the fan blades into the holes on the fan motor host, then secure the fan blades to the fan motor host using three screws and washers.
(Repeat the above steps for the remaining blades to complete the installation.)
- 12** Screw in the 1xE26 light bulb (Light bulb not included).
Recommended: E26, 120V/60Hz, Max 10W.

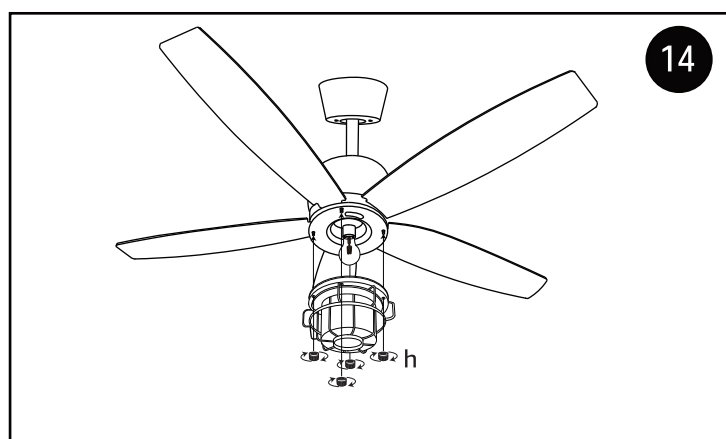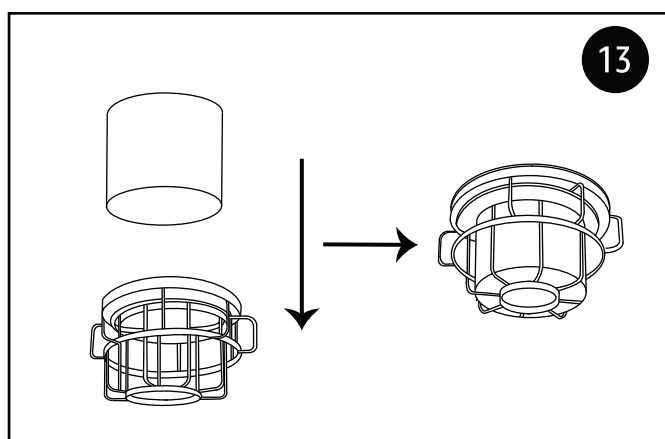

- 13** Install the glass lampshade into the lampshade frame.
- 14** Rotate the nut counterclockwise to attach the previously assembled lampshade frame to the lamp body.

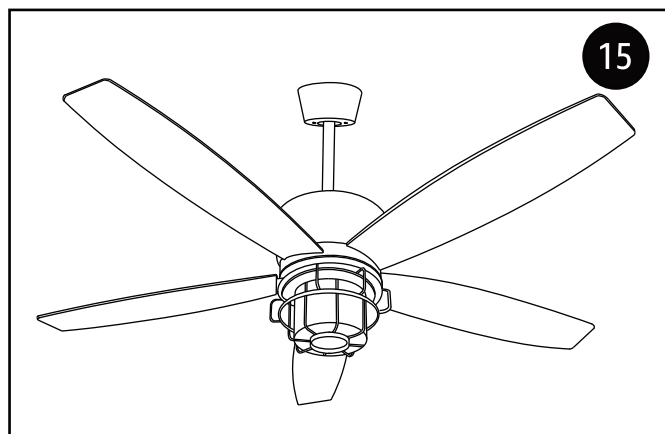

- 15** Installation complete.


CEILING FAN LIGHT

HOW TO OPERATE YOUR CEILING FAN

- **IMPORTANT:** Using a full range dimmer switch(not included) to control fan speed will damage the fan. To reduce the risk of fire or electrical shock, do not use a full range dimmer switch to control the fan speed(Figure 1).
- Restore electrical power to the outlet box by turning on the electricity at the main fuse box (Figure 2).



(Figure 1)

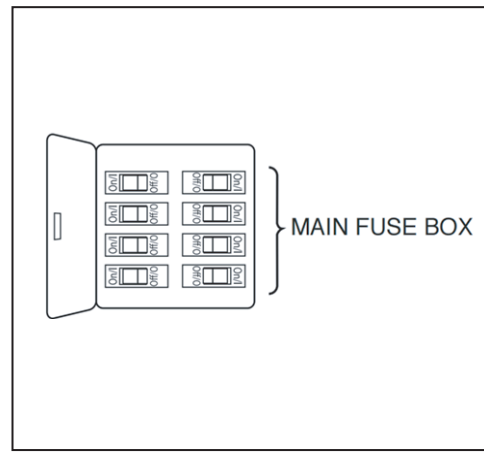

(Figure 2)

WARNING


Check to see that all connections are tight, including ground, and that no bare wire is visible at the wire connectors, except for the ground wire.

Do not operate this fan with a variable(Rheostat) wall controller or dimmer switch. Doing so could result in damage to the ceiling fan's remote control unit.

WALL PLATE INSTALLATION

- **Installing Wall Plate:**


Attach wall plate using the two provided screws.

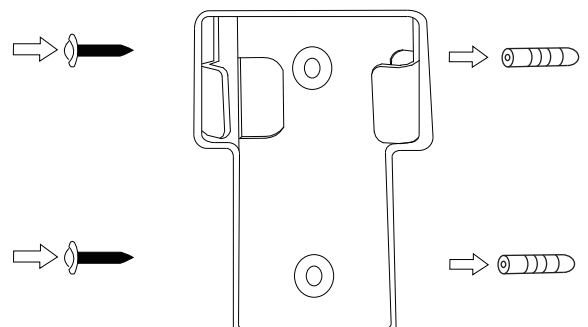

CEILING FAN LIGHT

REMOTE CONTROL

- To operate the fan, please install 2 AAA batteries (included) in the handheld remote transmitter. If not used for extended periods of time, remove the batteries to prevent damage to the transmitter. Store the remote away from excessive temperatures and humidity.

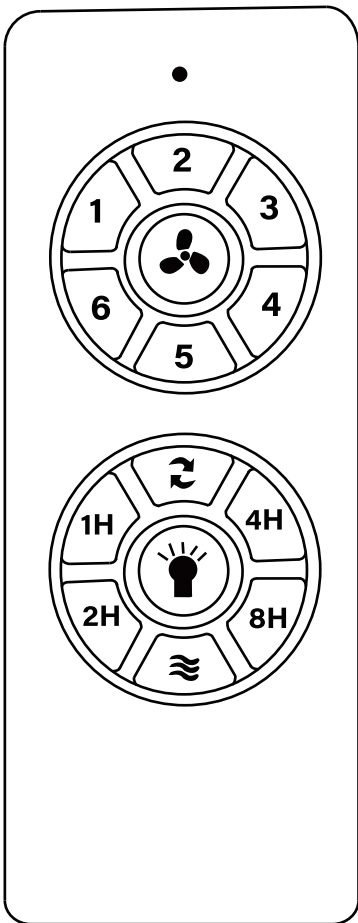
	Fan on	
1-6	Fan speed	
	Light on/off	
	Natural wind	
	F/R rotation	
1H	Fan stop after 1 hour	
2H	Fan stop after 2 hours	
4H	Fan stop after 4 hours	
8H	Fan stop after 8 hours	

Remote Controller Pairing:
The remote controller can be used to control multiple ceiling fans.

1. For the ceiling fans you want to pair, turn the main power switch off for at least 1 minute.
2. Turn on the main power switch, and long-press the **Light on/off** button.
3. Wait for the fan receiver to emit a beep or the light to flash, then release the button. If the pairing process fails, please repeat the above steps.

CEILING FAN LIGHT

TROUBLESHOOTING

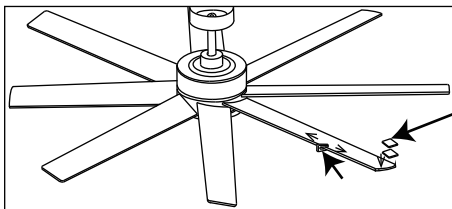PROBLEM	SUGGESTED REMEDY
If fan does not start	1. Check main and branch circuit fuses or circuit breakers. 2. Make sure that the wall control is turned "ON" 3. Check line wire connections to fan and switch wire connections in switch housing. CAUTION: Make sure main power is turned off. 4. Make sure battery has power, change battery(2*AAA) to try again. 5. The remote controller is not paired, check Page.9 to pair. 6. The motor or receiver or remote controller is fault, contact our customer service.
If fan sounds noisy	1. Make sure all screws in motor housing are snug. (not over tightened) 2. Too close to the wall, make sure the blades at least 3ft to the wall. 3. Make sure wire connectors in switch housing are not rattling against each other or against the interior wall of the switch housing. CAUTION: Make sure main power is turned off before entering switch housing. 4. Some fan motors are sensitive to signals from Solid State variable speed controls. DO NOT USE a Solid State variable speed control. 5. Allow "break-in" period of 24 hours. Most noises associated with a new fan will disappear after this period.
If fan wobbles	All blades are weighed and grouped by weight. The following procedures should eliminate most of the wobble. Check for wobble after each step: 1. Check that all blades are screwed firmly into motor housing. 2. Make sure that canopy and mounting bracket are tightened securely to ceiling junction box and junction box is mounted firmly to ceiling joist. 3. Make sure the ball head into the slot. 4. Make sure the the downrod is well fixed by screws 5. Interchanging two adjacent blades could redistribute the weight and possibly result in smoother operation. 6. The balancing kit should only be used if there is an unacceptable amount of fan wobble after completing all the steps: <u>How to use balancing kit:</u> (1) Turn the fan on and set the speed control setting to a speed at which the wobble is the greatest. (2) Turn off the fan and allow it to come to a complete stop. Select one blade and place the balance clip on it, halfway between the blade holder and the blade tip on the trailing edge of the blade. (3) Turn the fan on. Note whether the wobble has increased or decreased. Turn the fan off, move the clip to another blade, and retest. Repeat this procedure on all blades, noting the blade on which the greatest improvement is achieved. (4) Move the clip back to the blade that showed the greatest improvement. Move the clip inward and outward on this blade and operate the fan to find the position where the clip gives the greatest improvement. (5) Remove the clip and install a balancing weight to the top of the blade along the centerline, near the point where the clip was positioned. (6) If the fan wobble problem has not been corrected, you can try to improve the balancing further by using the balancing clip and additional weights.  WEIGHT BALANCING

CEILING FAN LIGHT

CUSTOMER SERVICE

30-Days Full Refund Guarantee

If you are not completely satisfied or the item isn't what you expected, just tell us within 30 days. We will give you a full refund unconditionally.

Friendly Reminder

It's better to contact us than leaving a negative shopping experience. Nothing is more important than your satisfaction, and we will do our best to serve you.

Quick Response within 12 Hours

You can contact us without any hesitation at any time of the day, and we will reply to you within 12 hours. (It would be appreciated if you could provide us with a video or pictures, if available)

2-year Warranty

Your fan light comes with a two-year warranty. If a malfunction occurs due to product quality issues, we will assist in diagnosing the problem and provide replacement parts free of charge to ensure your fan light resumes normal operation.


CONTACT INFORMATION



: You can contact us by sending an email to support@fanlamppro.com

CEILING FAN LIGHT

REPLACE THE DOWNROD

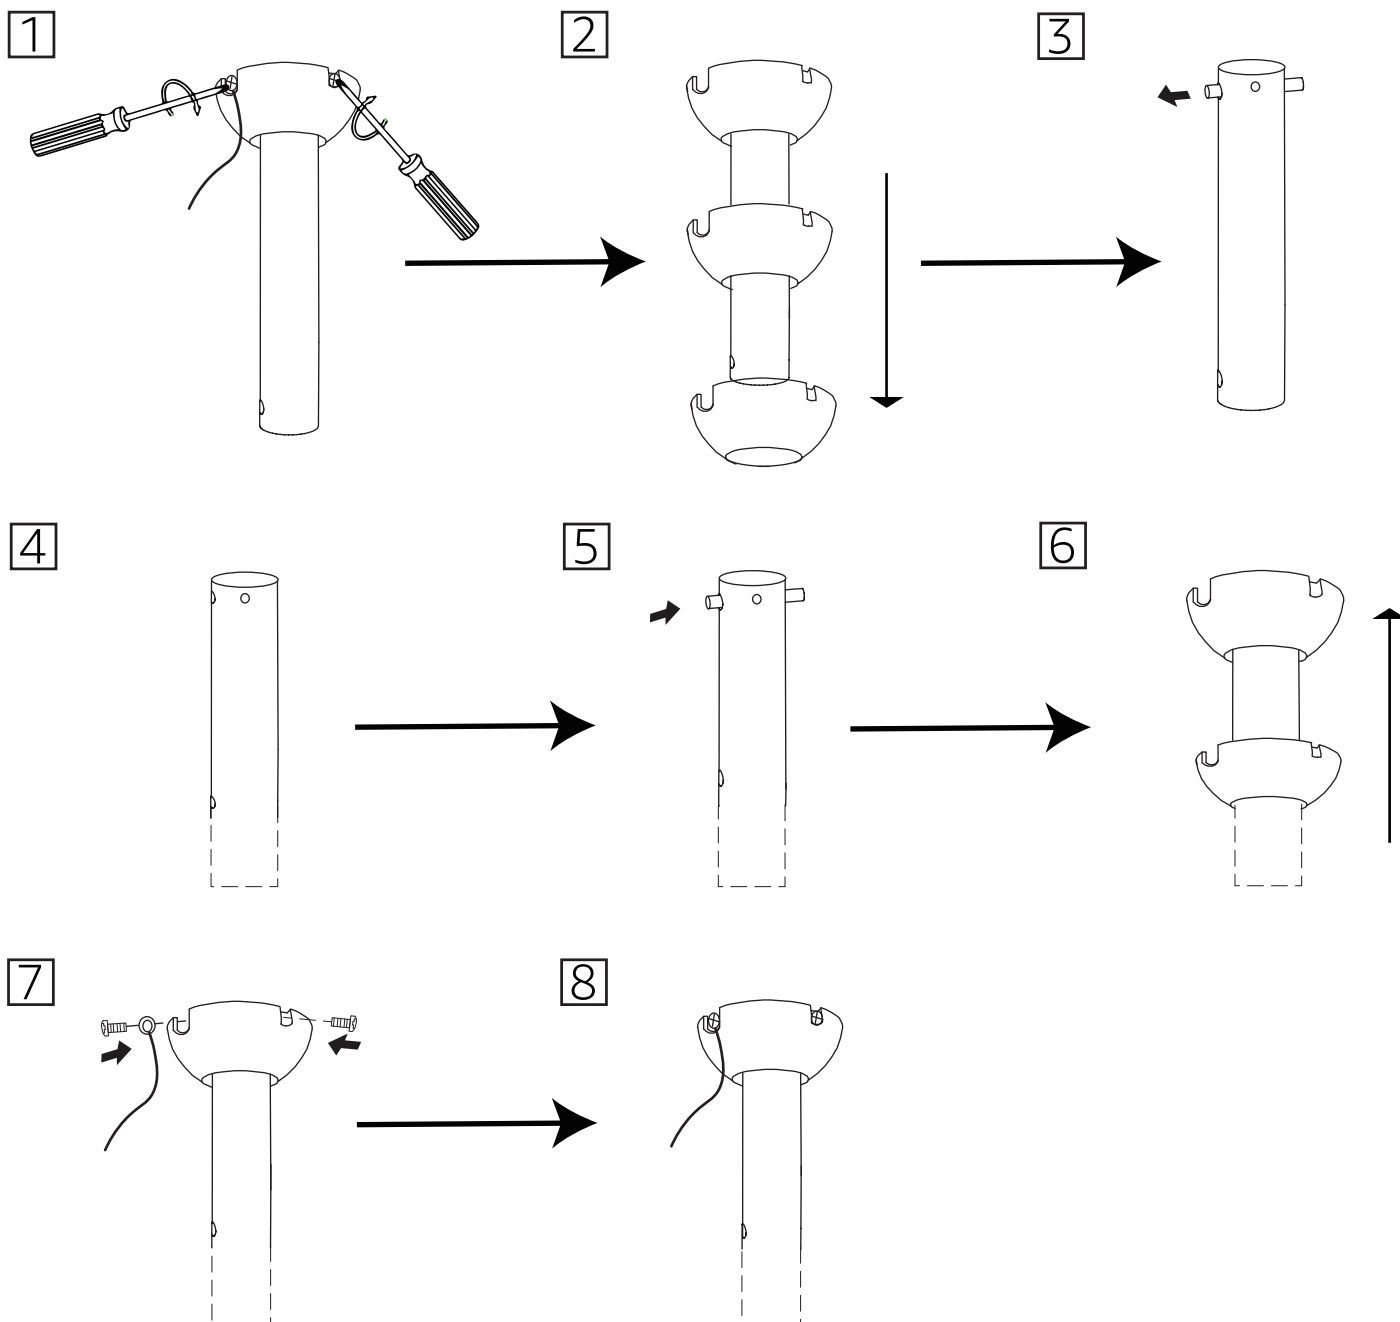

WARNING

Fan fall hazard

To prevent serious injury or death:

- Always follow the downrod assembly instructions exactly.
- Verify the downrod is assembled correctly by firmly pulling on the hanger ball.
- Pin must be reinserted to secure downrod assembly

