 


ASSEMBLY INSTRUCTION

GAZEBO

N715P261155

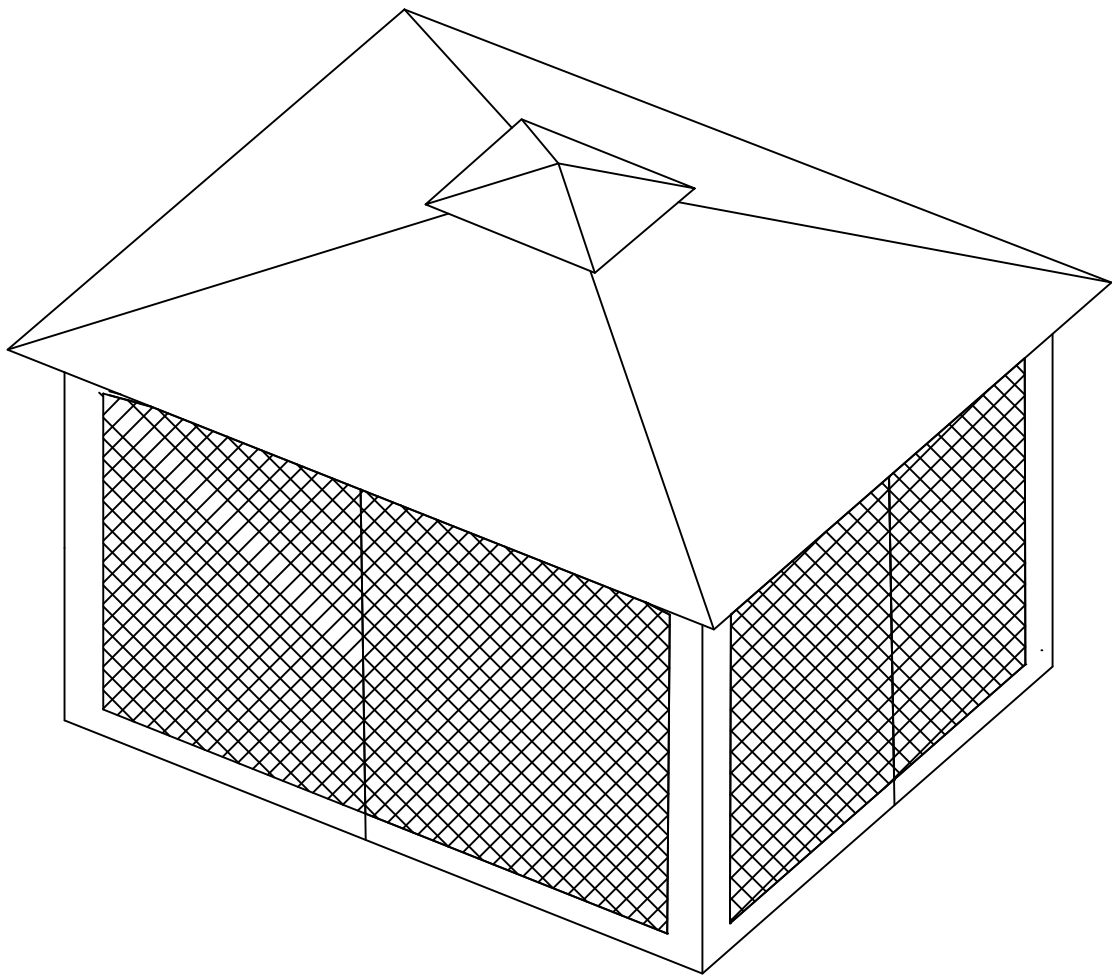

Read Manual

Your gazebo Frame requires assembly prior to use. It is important that you read the entire manual to become familiar with the unit BEFORE you set up the gazebo Frame.

Safety Warning and Precautions

WARNING: When using product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment.

Read all instructions before assembly and usage this product

 
- 1. Select ideal location.** Set out all parts on a clear and level surface prior to assembly. Ideally, the gazebo Frame should be set up in the desired location to avoid moving it after assembly.
- 2. Use caution.** During all the processes of assembling, especially when lifting heavy or large parts, pay attention to safety.
- 3. Tools and Assistance.** Ladder and Phillips screwdriver are self-provided. Whenever possible, assistance is preferred.
- 4. Check for parts available.** Before assembling your gazebo Frame, make sure that you have all parts described in the Parts List.
- 5. Check for damaged parts.** Before assembling your gazebo Frame check for damaged parts. Any part that appears damaged should be carefully checked to determine if it can be operated properly and perform its intended function. Any part that is damaged should be properly repaired or replaced by a qualified technician.
- 6. Refer to assembly diagram.** During assembly, it will be helpful to refer to the assembly diagram.
- 7. Keep children away.** Children shouldn't be allowed in the work area. Do not let them handle parts and tools. No people should be permitted to enter into work area except who is working.

Note! This gazebo is meant to be used for Decorative and sunshade purposes only and is not meant to withstand all elements of the weather. Please remove all FABRIC during inclement weather.


N715P261155

PART LIST


A x4pcs
Leg 1



A2 x4pcs
Leg 2

 


B x4pcs
Ring Beam 1

 


B2 x4pcs
Ring Beam 2



 
C x4pcs
Four-corner Upward Sloping Tube



 
D x4pcs
Four-corner Downward Sloping Tube




E x4pcs
Sino-slanting Tube 1

 


E2 x2pcs
Sino-slanting Tube 2

 


E3 x2pcs
Sino-slanting Tube 3

 


H x1pcs
Eight-claw Top

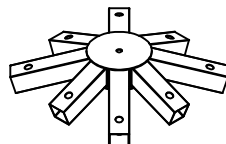 


K x4pcs
Feet

 


P x4pcs
Ring Beam
Connectors

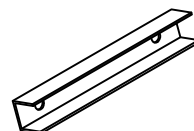 






Z1 x1
Cloth Roof

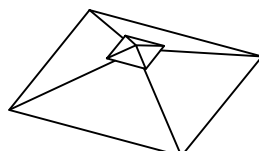 


Z2 x4
Tulle

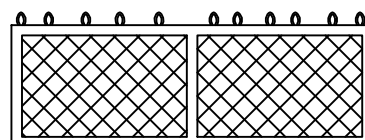 

N715P261155 HARDWARE LIST

     
1# M6*15 x16+1 Bolt 1	
2# M6*28 x16+1 Bolt 2	
3# M6*30 x16+1 Bolt 3	
4# M6*45 x8+1 Bolt 4	
5# M6 x24+2 Nut	
6# x44+2 Plastic Opening Ring	
Q x8 Ground Spike	
S1 x1 Hex Wrench	
S2 x1 Wrench	

 REFERENCE IMAGE

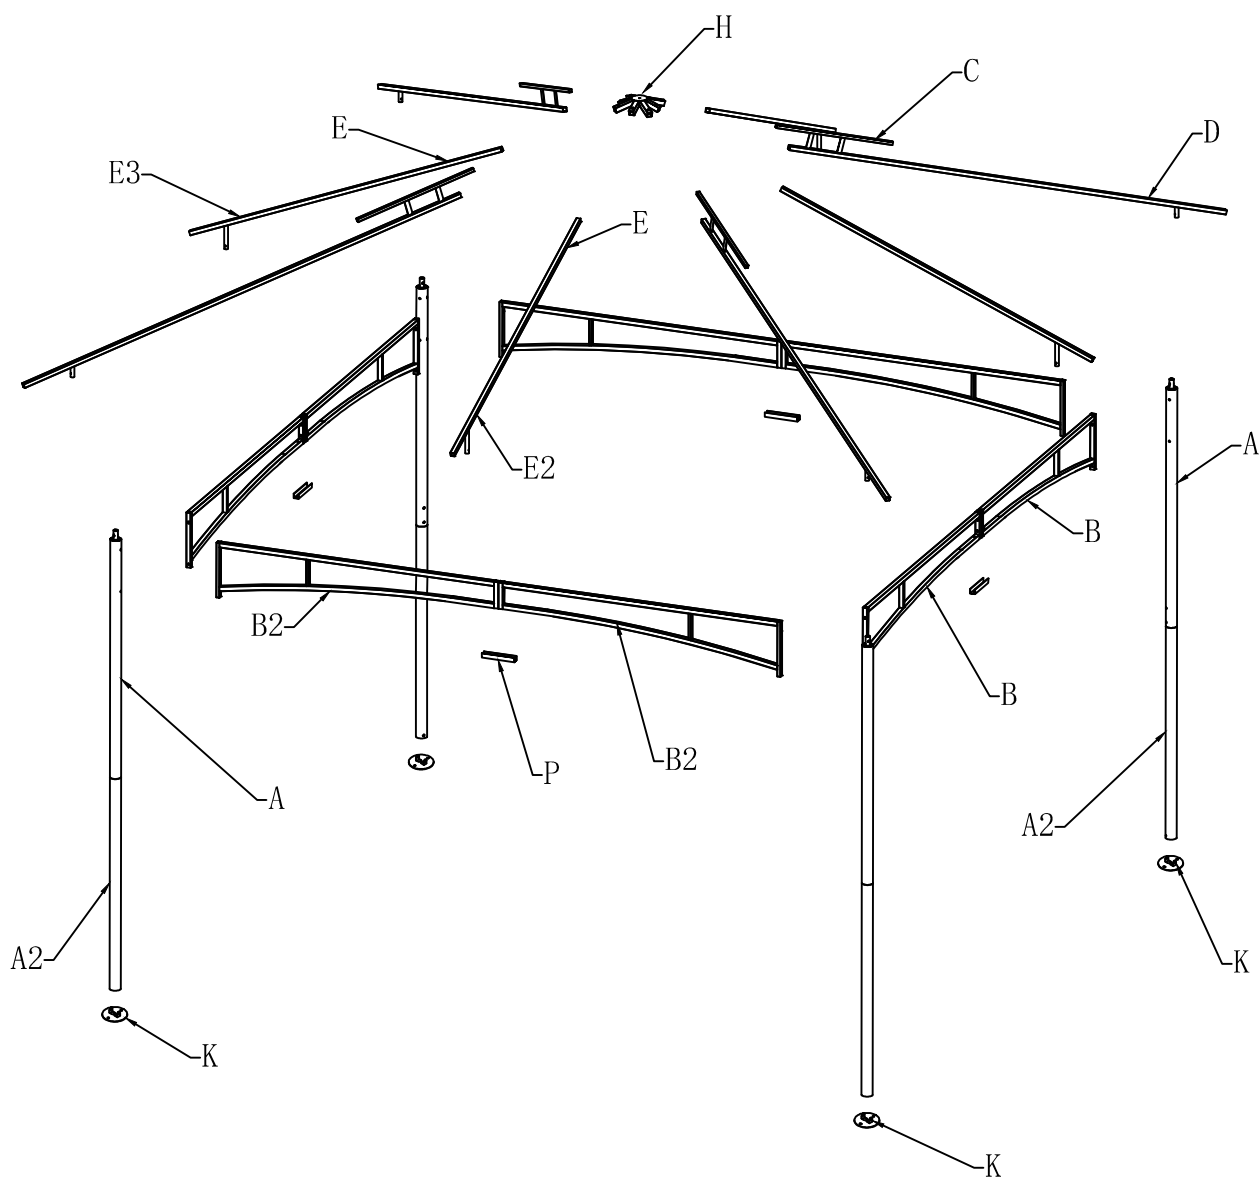


STEP 01

 x2

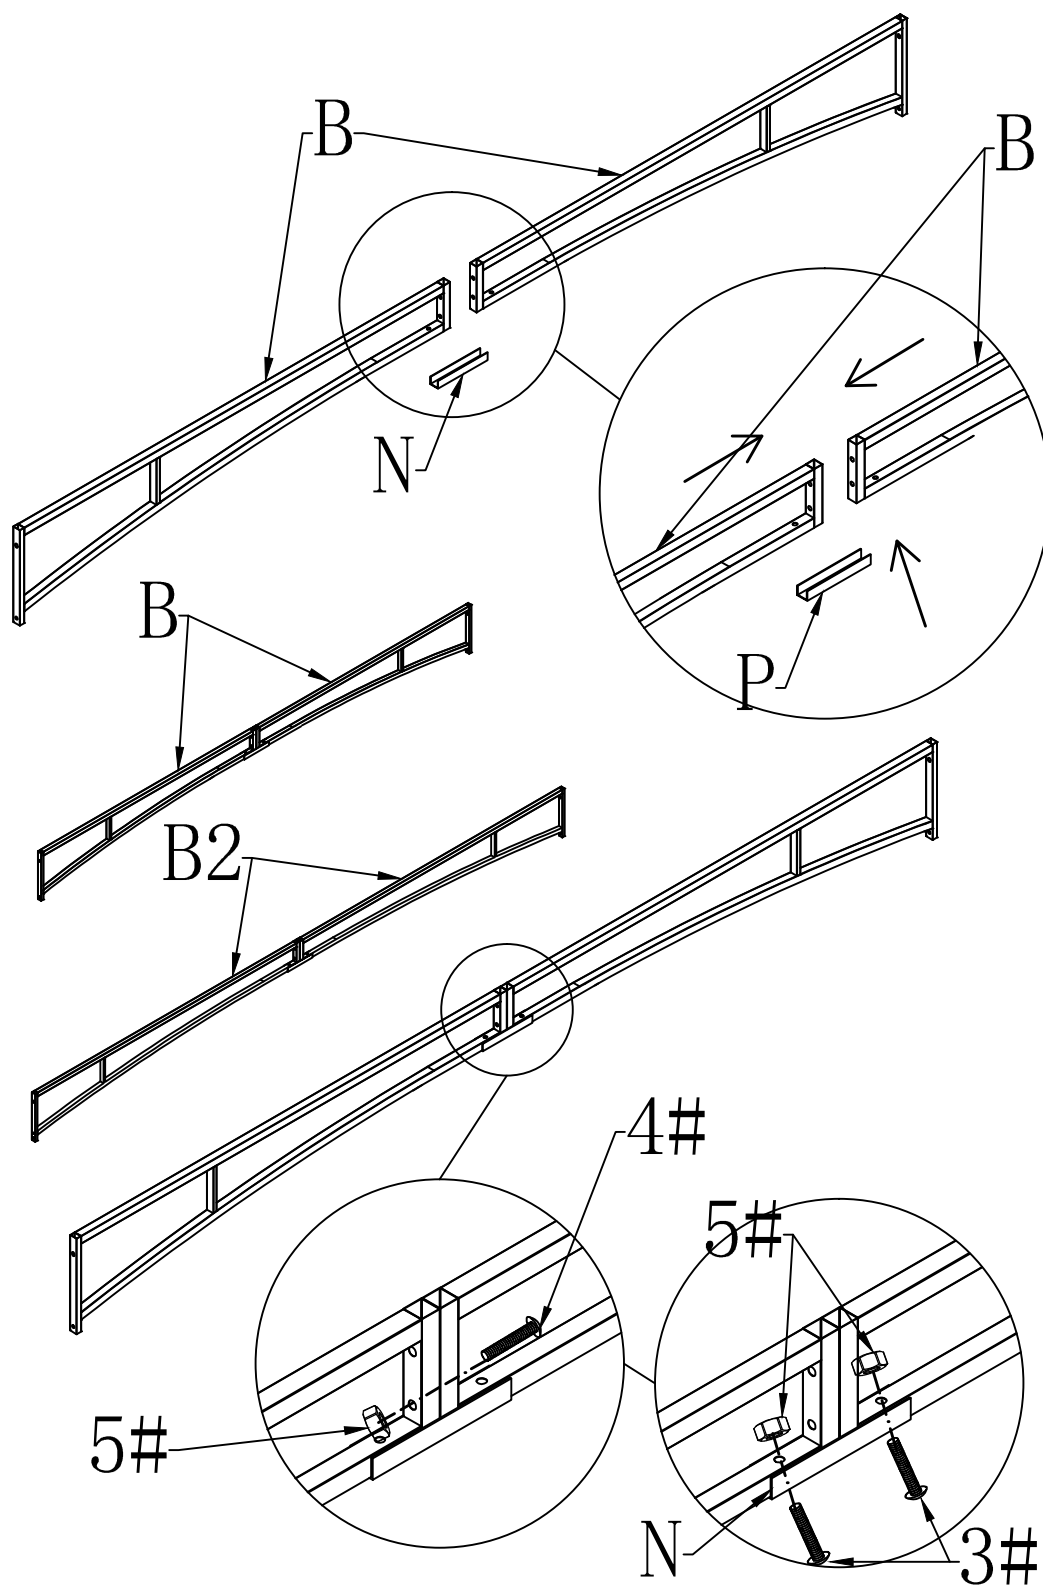

Bx4				
B2x4	Px4	3#x8	4#x4	5#x12

 
STEP 02

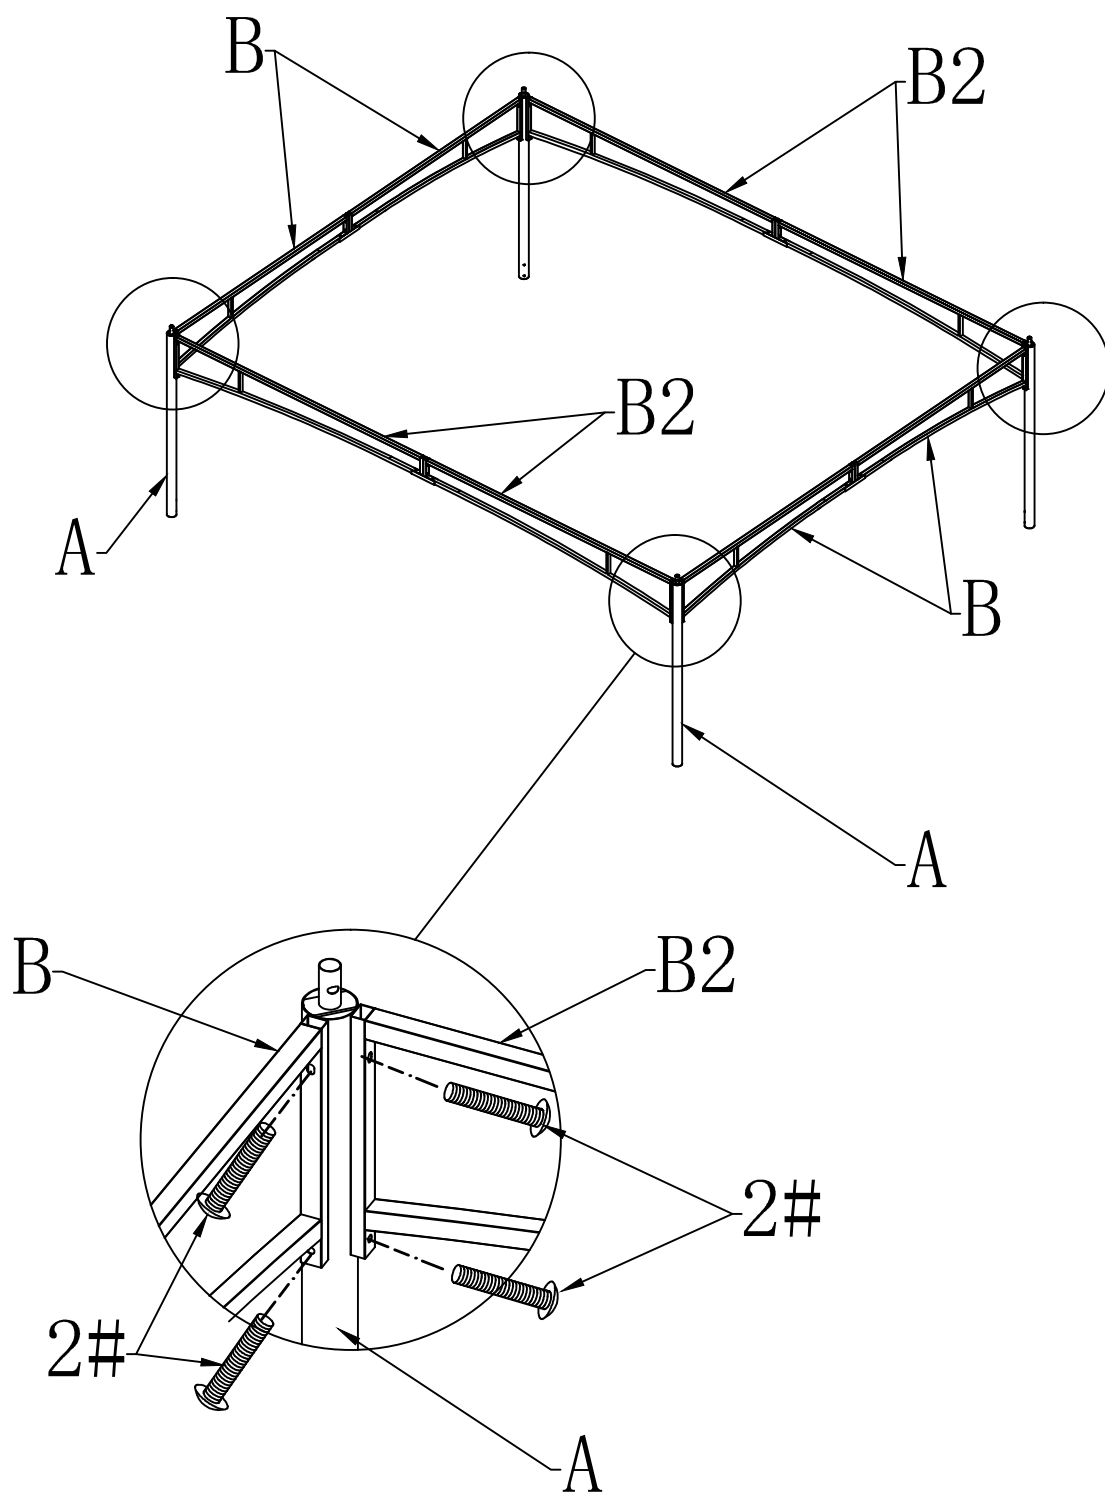

Ax4


2#x16

 STEP 03

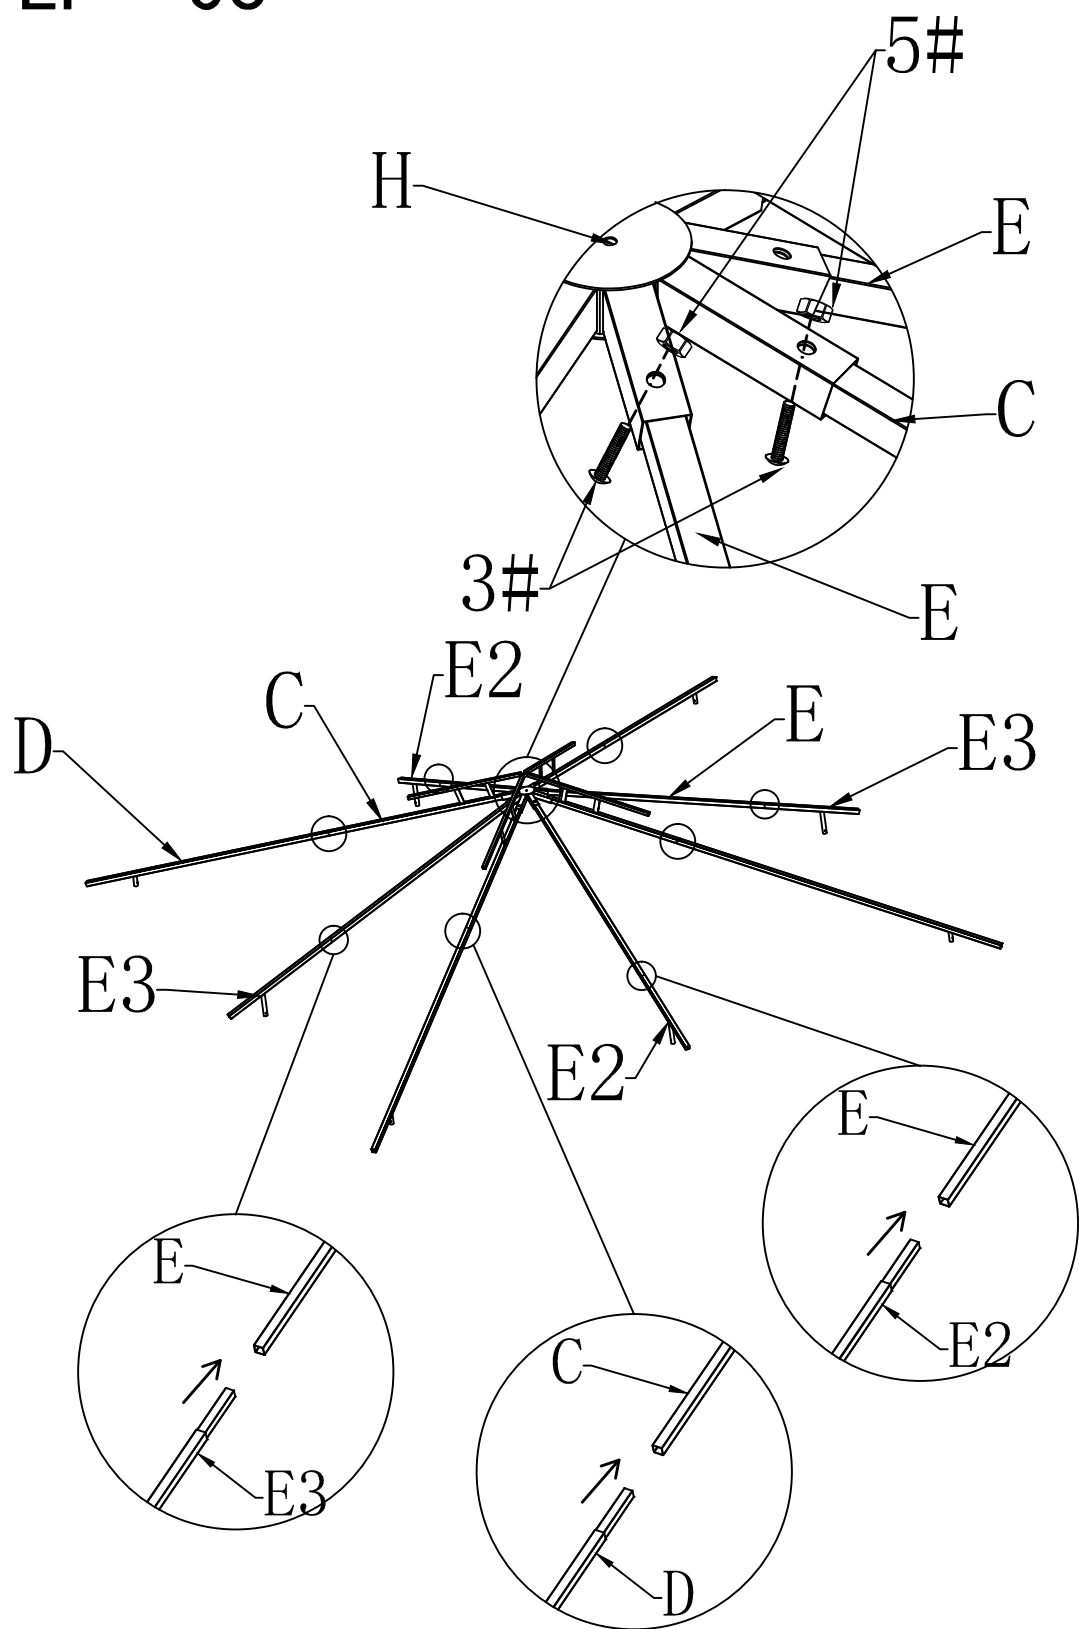

E _x 4	E ₂ _x 2	E ₃ _x 2		
H _x 1	C _x 4	D _x 4	3# _x 8	5# _x 8

 
STEP 04

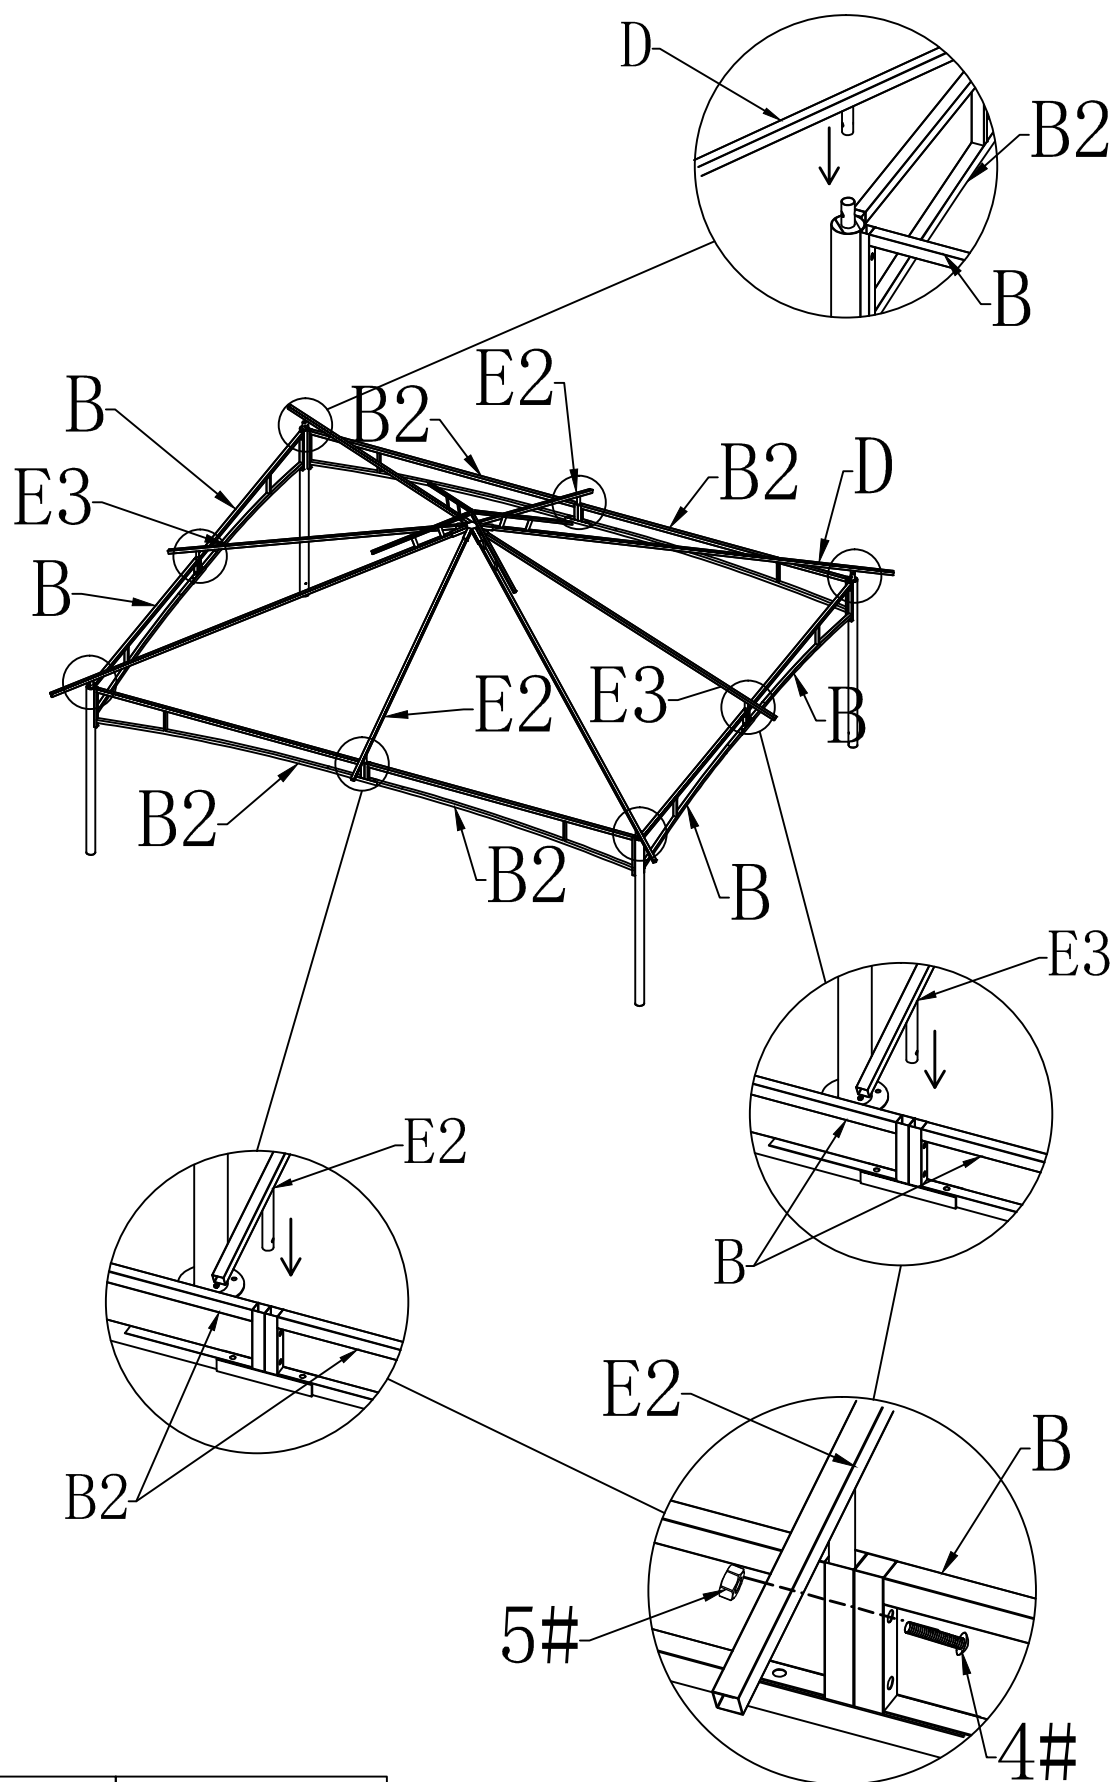

4#x4



5#x4

 STEP 05

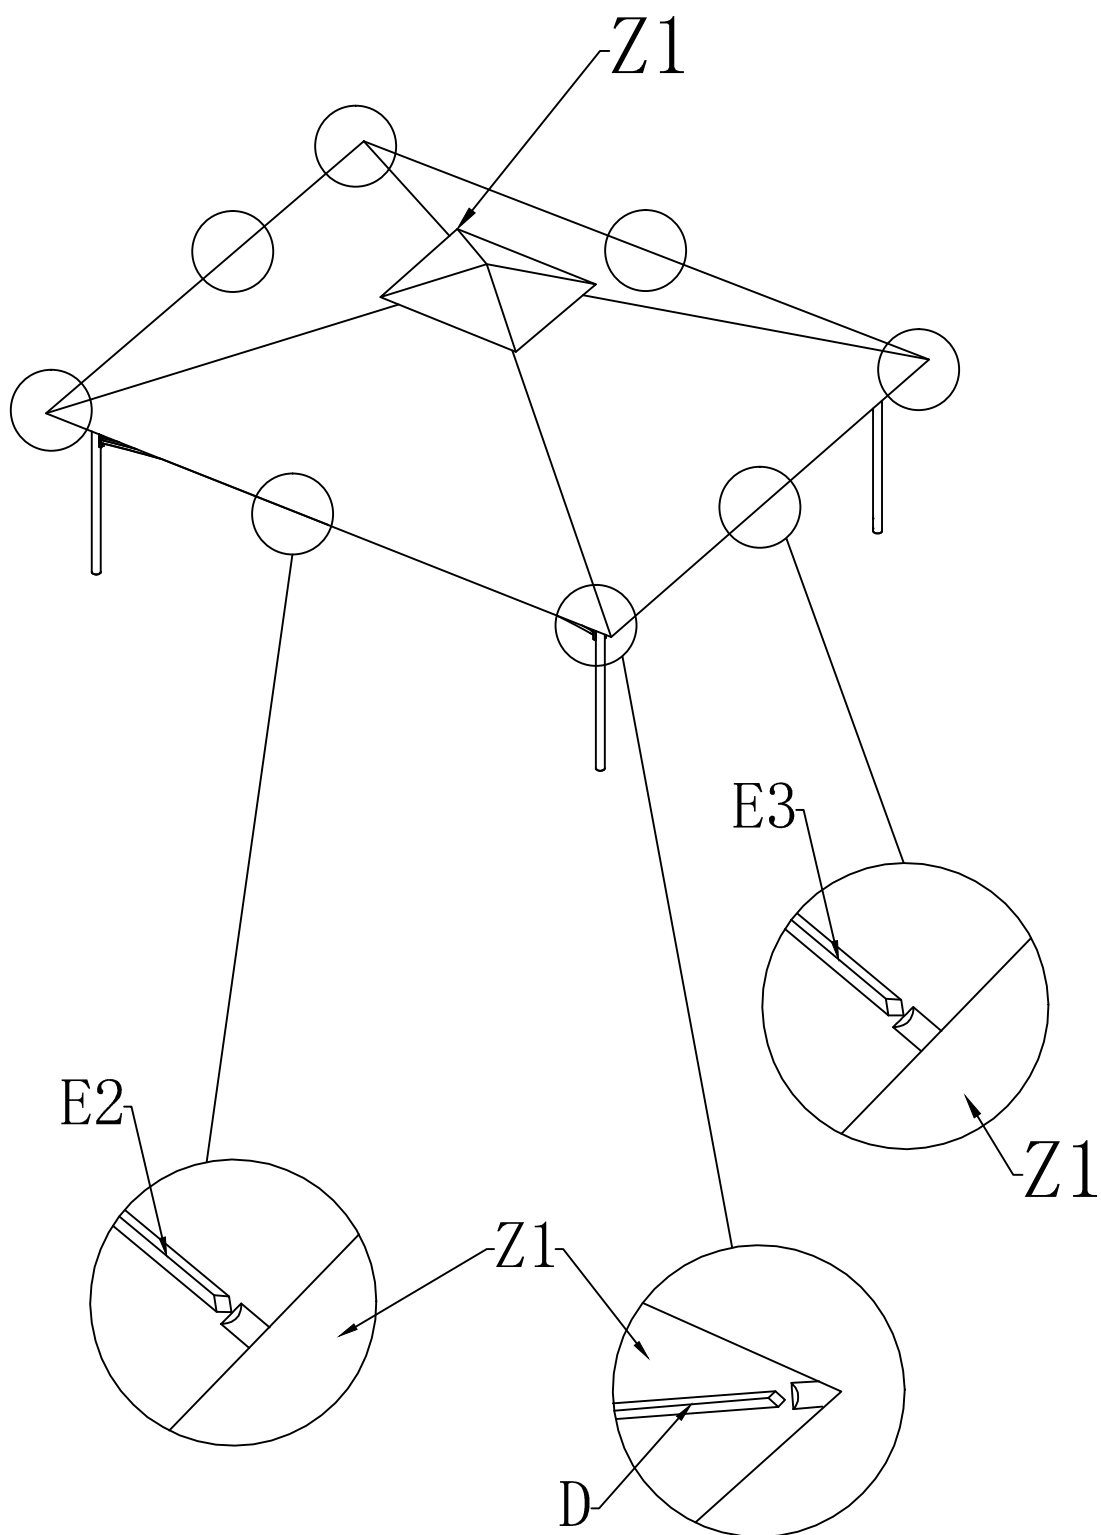

Z1x1

  STEP 06

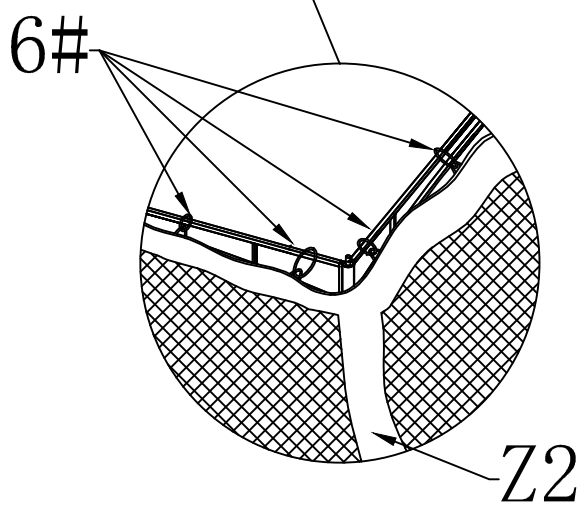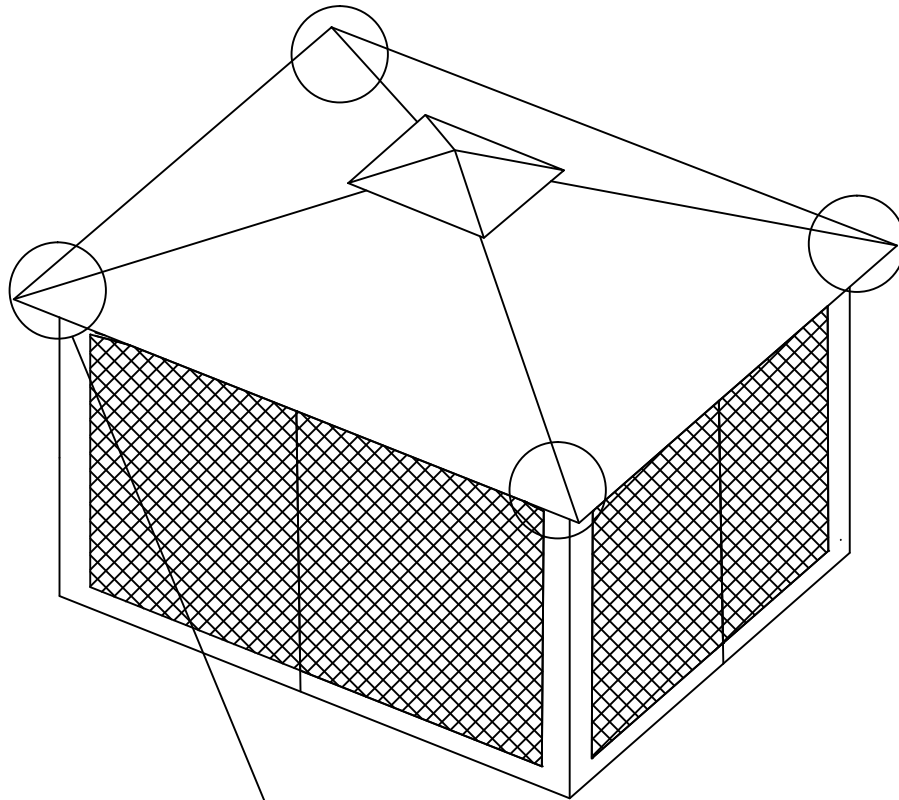


Z2x4

6#x44

STEP 07

 x4

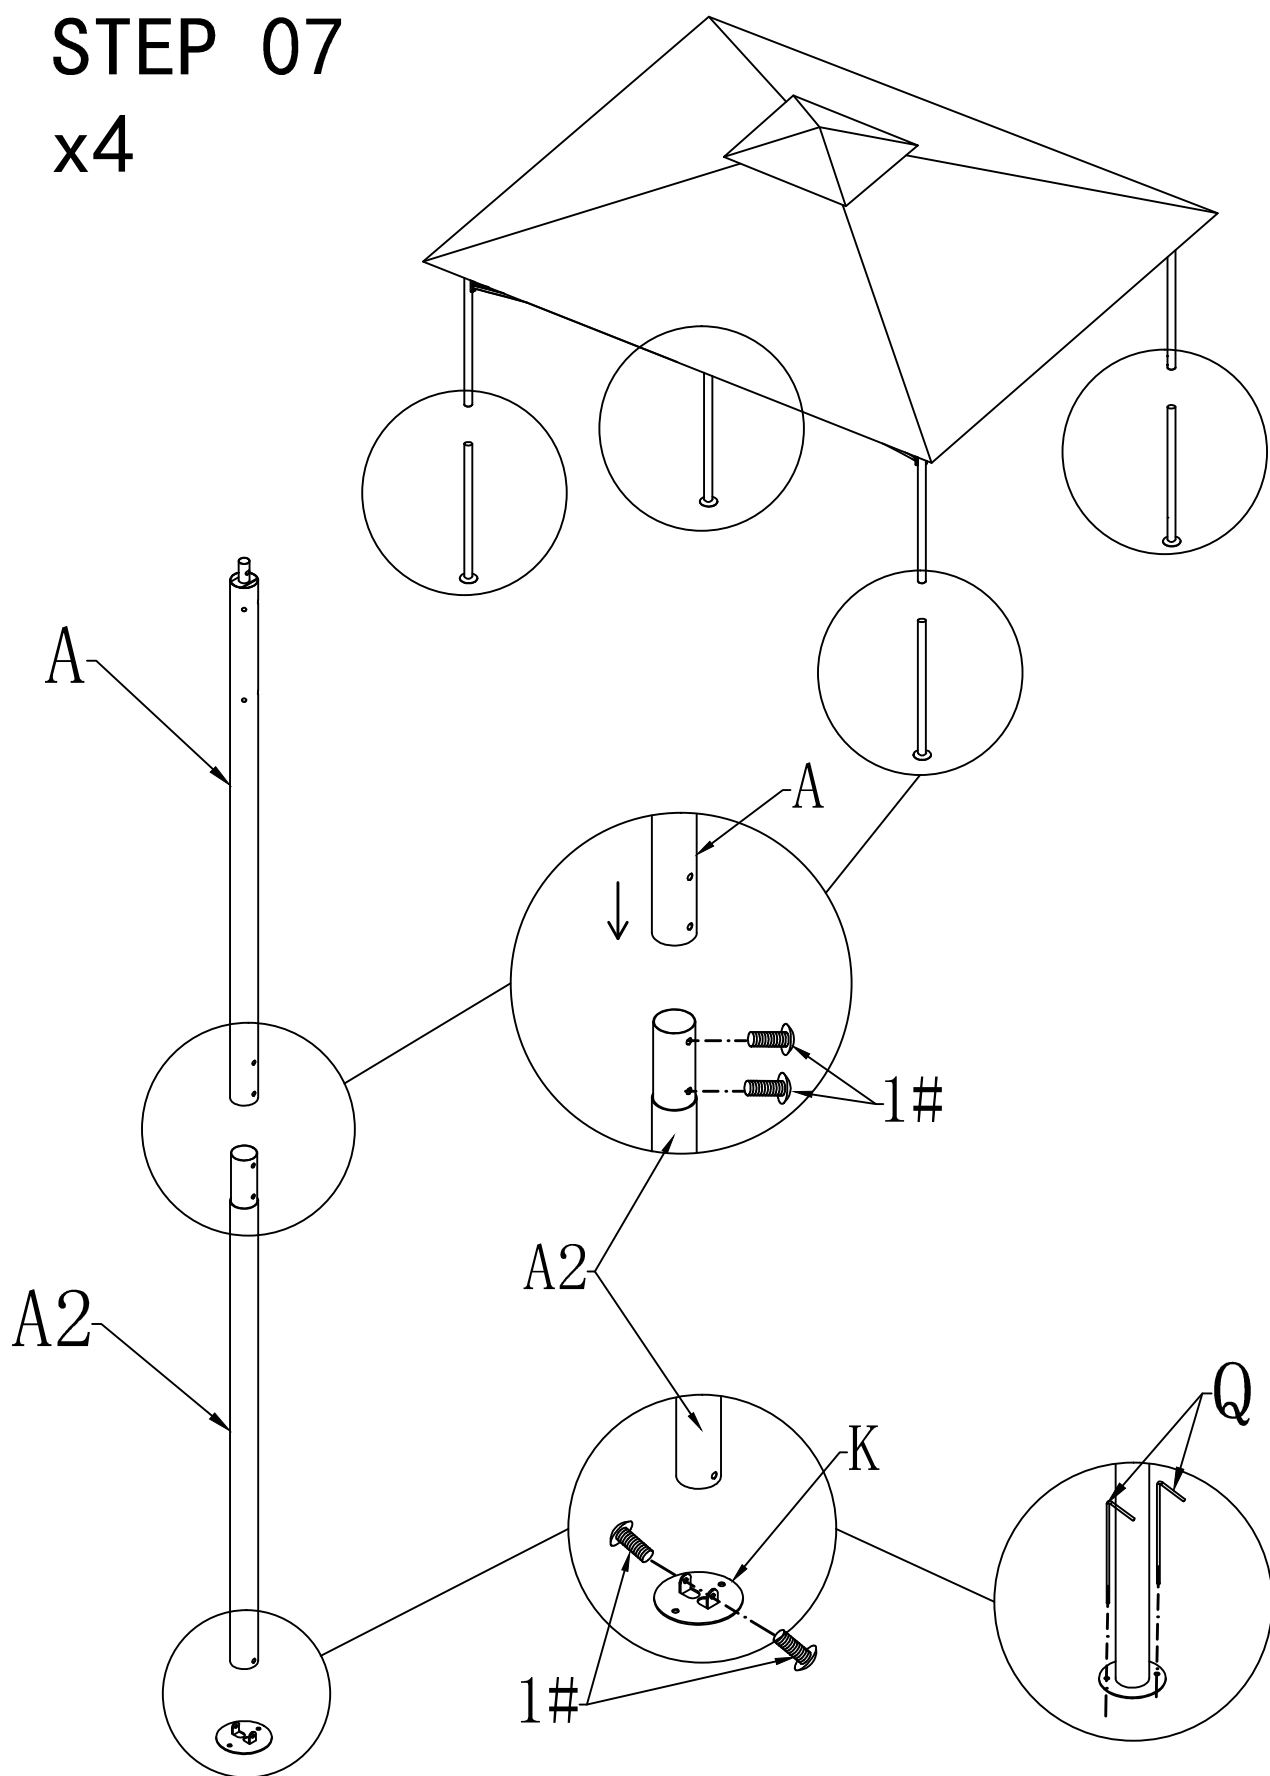

A2x4

Kx4

1#x16

Qx8