

styleselections™


ITEM #0407152

# 6-HEAD DECORATIVE TRACK LIGHT

MODEL #FS141208-2

Français p. 8

Español p. 15

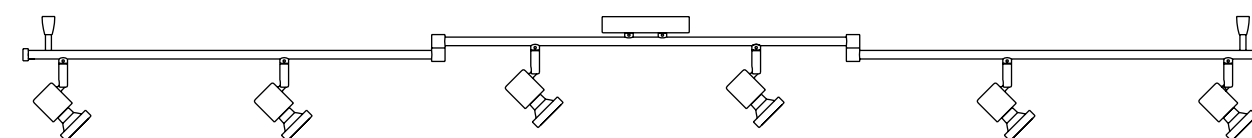

## ATTACH YOUR RECEIPT HERE

Serial Number \_\_\_\_\_ Purchase Date \_\_\_\_\_




Intertek



**Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at 1-877-888-8225, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.


PACKAGE CONTENTS

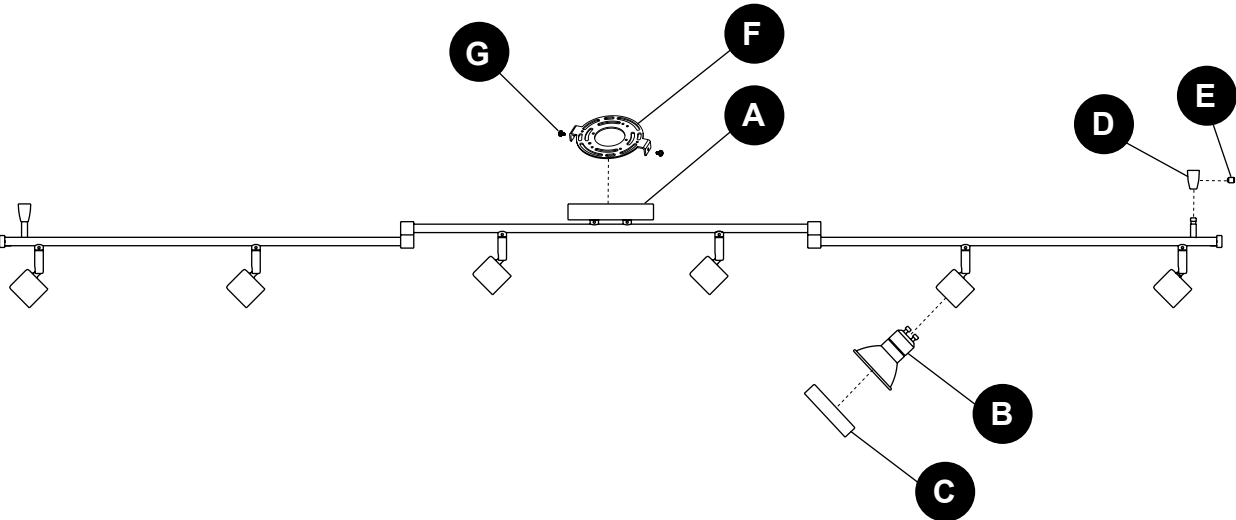

PART	DESCRIPTION	QUANTITY
A	Fixture	1
B	Bulb	6
C	Trim ring	6
D	Anchor (preassembled to fixture (A))	2
E	Allen screw (preassembled to anchor (D))	2
F	Mounting bracket (preassembled to fixture (A))	1
G	Bracket screw (preassembled to fixture (A))	2

HARDWARE CONTENTS (shown actual size)

 
AA



Wire nut

Qty. 3

 
BB



Outlet box screw

Qty. 2


CC



Machine screw

Qty. 2


DD



Allen key (Not actual size)

Qty. 1

 EE



Mounting plug (Not actual size)

Qty. 2

! SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

! WARNING

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- MINIMUM 90°C SUPPLY CONDUCTORS.

CAUTION

- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
- If in doubt about electrical installation, consult a licensed electrician.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 20 minutes

Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Pliers, Electrical tape, Wire cutters, Safety glasses, Drill, 5/16 in. drill bit.

Helpful Tools (not included): Wire strippers, Step ladder.

ASSEMBLY INSTRUCTIONS


1. Loosen the bracket screws (G) on mounting bracket (F) and separate the mounting bracket (F) from the canopy of fixture (A).

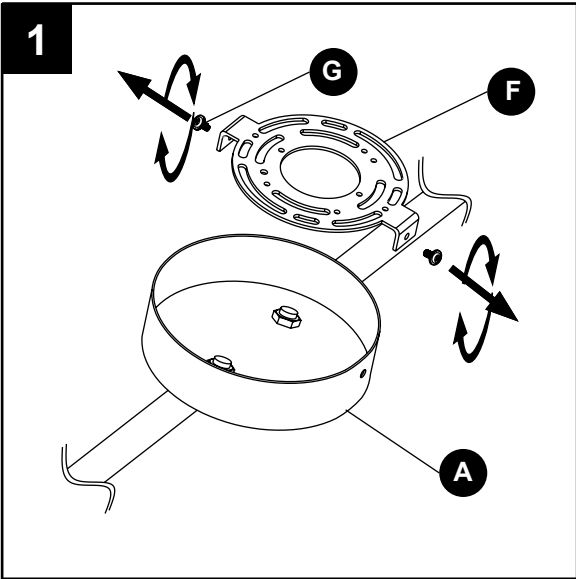

2. Fasten the mounting bracket (F) to the outlet box with outlet box screws (BB).

Hardware Used


BB Outlet box screw  x 2

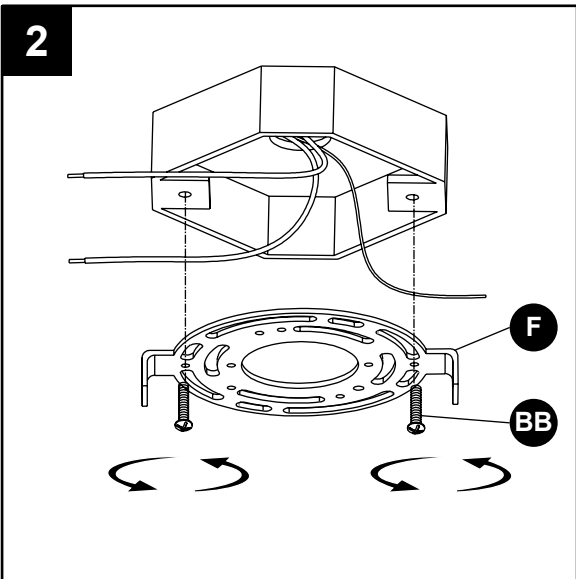

3. Strip 3/4 in. of insulation from wire ends. Connect white wire from fixture (A) to white wire from outlet box using wire nut (AA). Connect black wire from fixture (A) to black wire from outlet box using wire nut (AA). Connect bare/green ground wire from outlet box to bare ground wire from fixture (A) with wire nut (AA).

Hardware Used

AA Wire nut  x 3

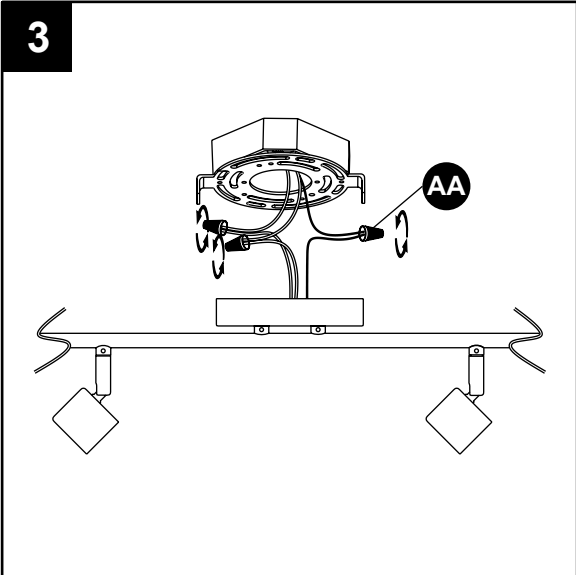


ASSEMBLY INSTRUCTIONS


4. Tape the wire nuts (AA) and the wires together with electrical tape (not included).

Hardware Used

AA Wire nut  x 3

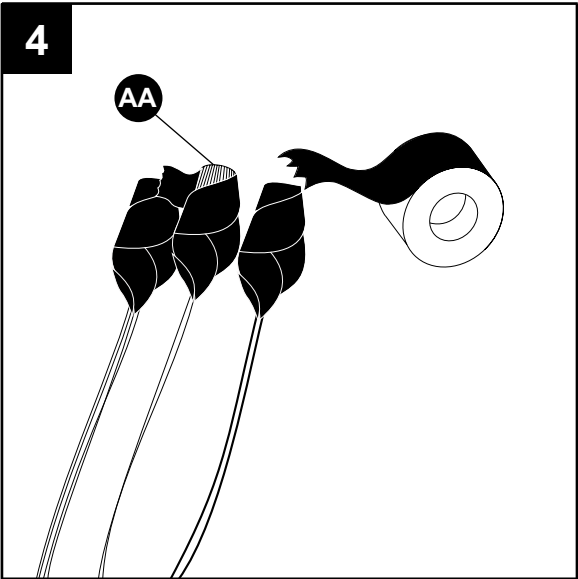

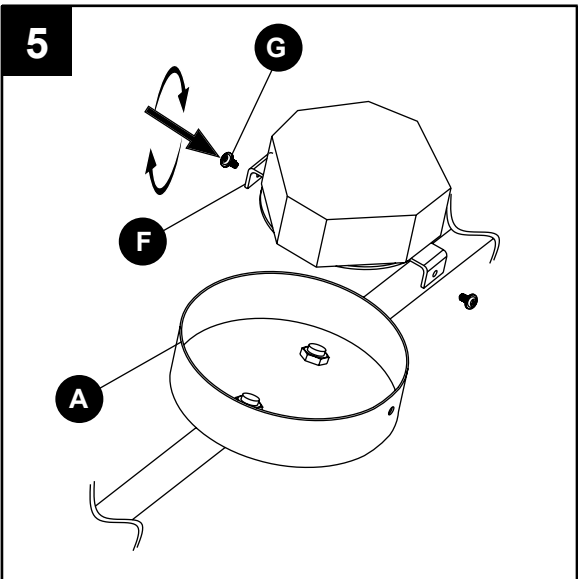


5. Place the canopy of fixture (A) against the mounting surface, aligning holes in the canopy with holes in the mounting bracket (F). Re-insert bracket screws (G) and tighten.




6. Loosen preassembled Allen screw (E) from anchor (D) on fixture (A) using Allen key (DD). Choose desired location on ceiling for anchor (D), and mark with a pencil. Drill a pilot hole at the marked location using a 5/16 in. drill bit (not included) and insert mounting plug (EE) into hole. Place anchor (D) over mounting plug (EE) and secure with machine screw (CC). Replace rod of fixture (A) into anchor (D), securing with Allen screw (E).

Repeat for the other side.


Hardware Used

CC Machine screw  x 2  
DD Allen key  x 1  
EE Mounting plug  x 2

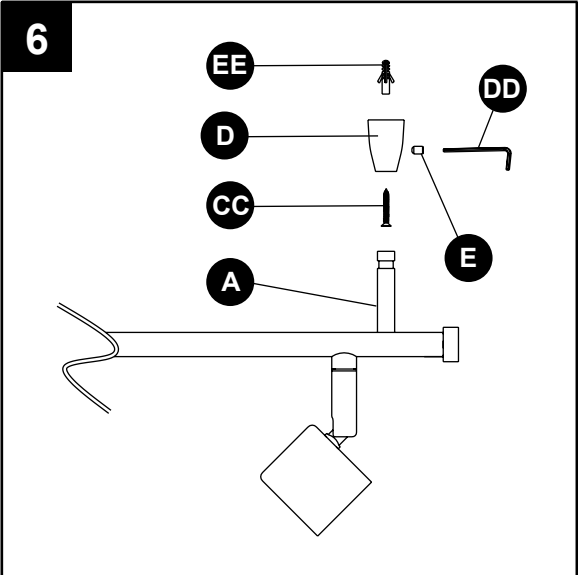

ASSEMBLY INSTRUCTIONS

7. Insert bulbs (B) into the lamp holders on fixture (A). Turn the bulbs (B) clockwise to secure. Attach trim rings (C) to the bulbs (B) once attached.

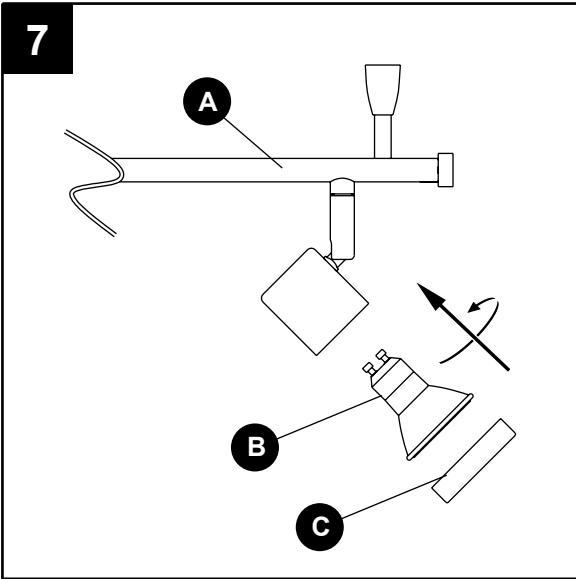

CARE AND MAINTENANCE

- Shut off main power supply before wiping product with damp cloth or window cleaner. Do not use abrasives.
- Bulb Replacement: Use only 50-watt max. GU10 bulbs.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulb won't light.	1. Bulb is burned out. 2. Power is off. 3. Faulty wire connection. 4. Faulty switch.	1. Replace light bulb. 2. Make sure power supply is on. 3. Check wiring. 4. Test or replace switch.
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connections.

WARRANTY

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for one (1) year from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the original sales receipt as proof of purchase in the original carton, to the place of purchase. The manufacturer will, at its option, repair, replace or refund the original purchase price to the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-877-888-8225, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	PART #
AA	Wire nut	375-022000
BB	Outlet box screw	109-042600
CC	Machine screw	109-352600
DD	Allen key	150-040000
EE	Mounting plug	407-039000

