
 

 
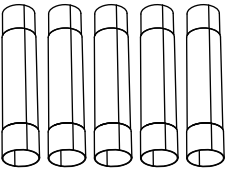
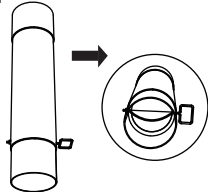
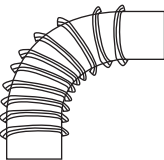


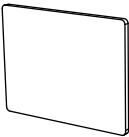





INSTALLATION INSTRUCTION

PACKAGE COMPONENTS






A  Heat Resistant Glass*1	B  Stainless Frame*1	C  Ash Scraper*1	D  Anti-spark Pipe*1
E  Chimney Pipe*5	F  Chimney Pipe with Valve Vertically*1	G  Elbow Pipe 90 Degree Chimney*1	H  Round Covers*1 I  Rectangular Covers*1

If you are missing any components, please contact us. We will provide you with a satisfactory solution promptly.
Amazon Contact: Log in to your Amazon account > select "Your Orders" > find the order ID > click "Contact Seller".




INSTALL THE STOVE

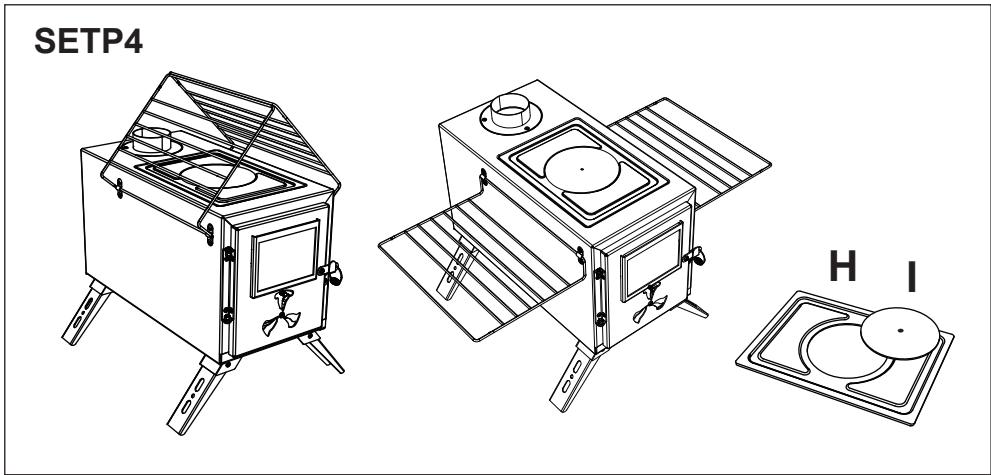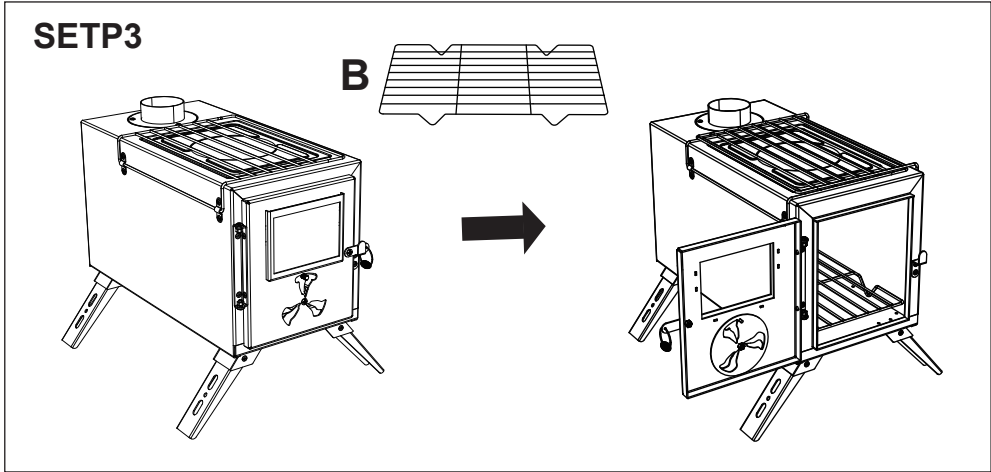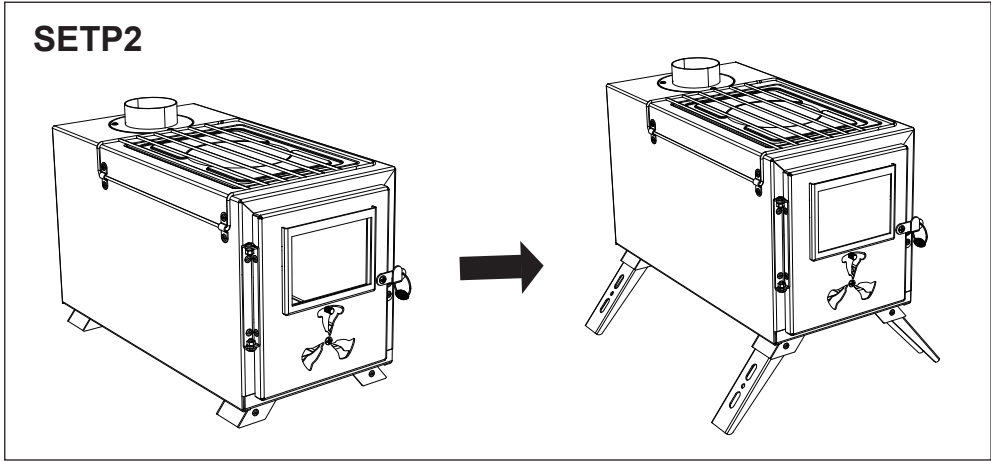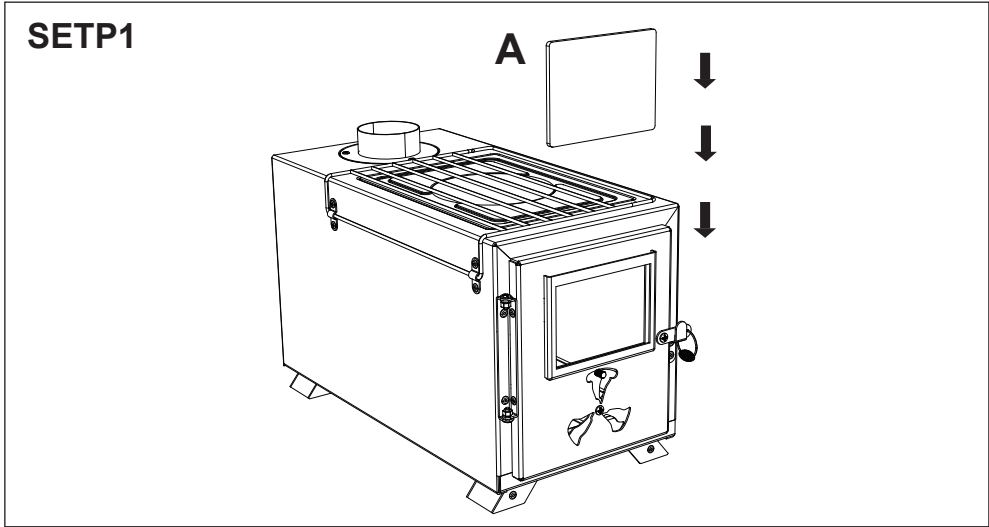

SETP5

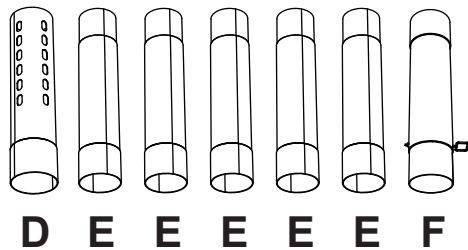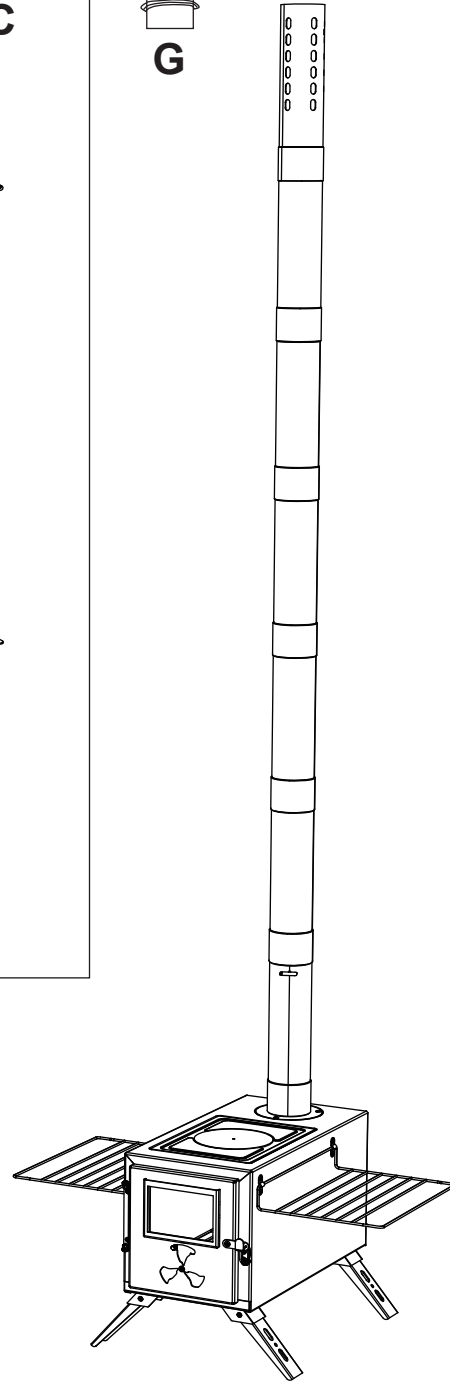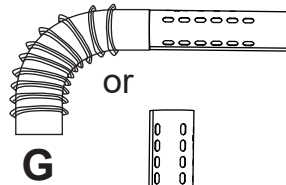
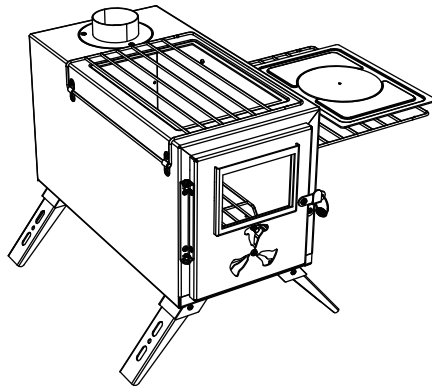
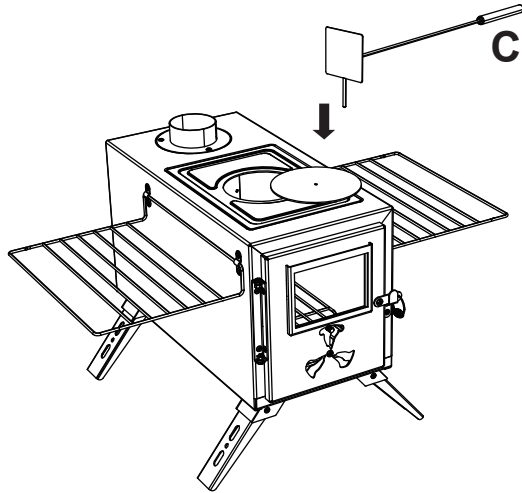


Dampers open, increase air intake, increase fire

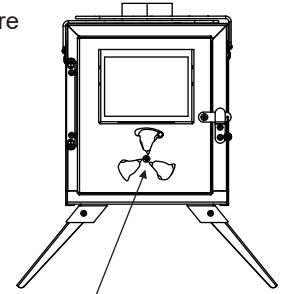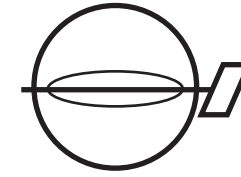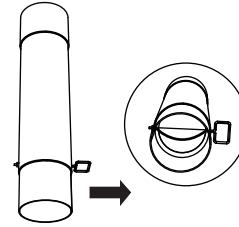

The adjustable ventilation window, helps you control the combustion inside the tent stove by adjusting airflow.

Dampers off, reduce air intake, reduce the fire

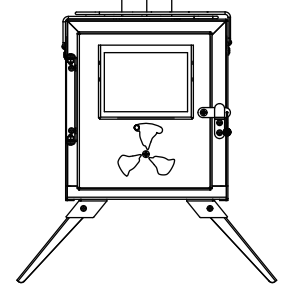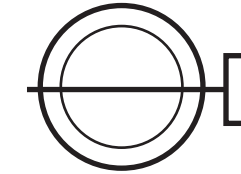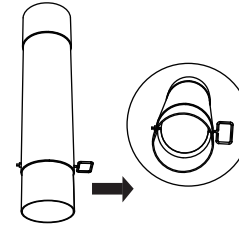

ATTENTION:

1. Please keep the stove away from flammable materials and use it with caution to avoid igniting objects or tents. (When using inside a tent, please place a fireproof mat beneath the stove.)
2. If you are using a stove inside a tent, ensure good ventilation to prevent carbon monoxide poisoning. (It is recommended to use a carbon monoxide detector.)
3. Do not pour water on the burning glass or wipe it with wet towels, as this may cause the glass to break.
4. Use gloves for protection when using the stove. Do not operate with tools that may cause burns.
5. It's normal for a small amount of smoke to escape from the edges of the door when the stove is first starting up.