 


INSTALLATION

 
 
Product Manual

Version: 570003US-01-25A-AA

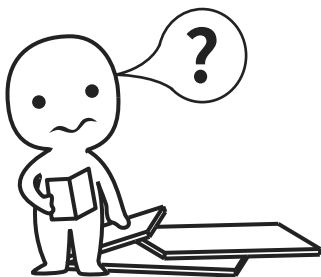


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

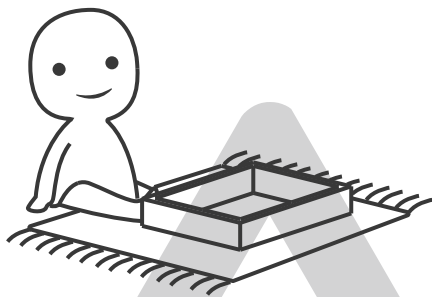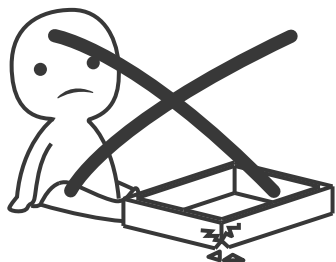



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

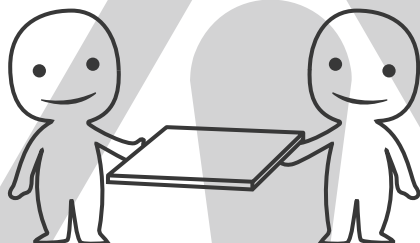

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

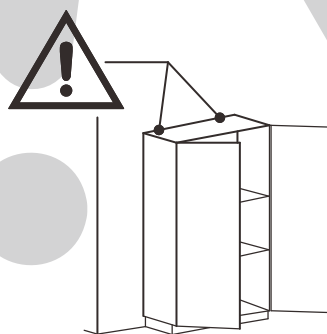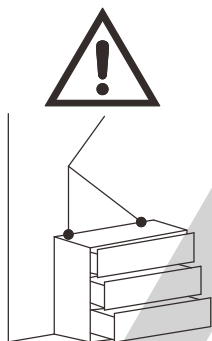

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !







It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

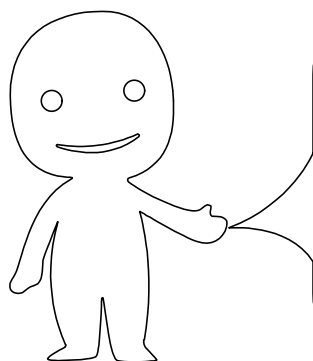

Please prepare the following tools

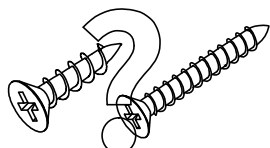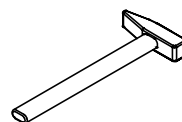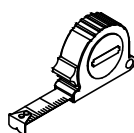      


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 31



Ø 15 x 10mm

 B x 31



Ø 6 x 35mm

C x 60



Ø 6 x 30mm

D x 94



 
Ø 3.5 x 12mm

E x 22




Ø 3.5 x 14mm

F x 16

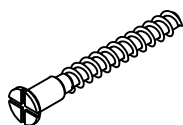

Ø 5 x 40mm

 G x 2

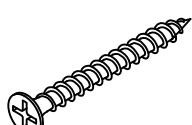

Ø 3.5 x 35mm

H x 2



J x 2

 


K x 12



Ø 4 x 16mm

L x 5




M x 4



N x 6



 P x 2



Q x 8



R x 4

 


 
S x 42



Ø 3 x 14mm

T x 42



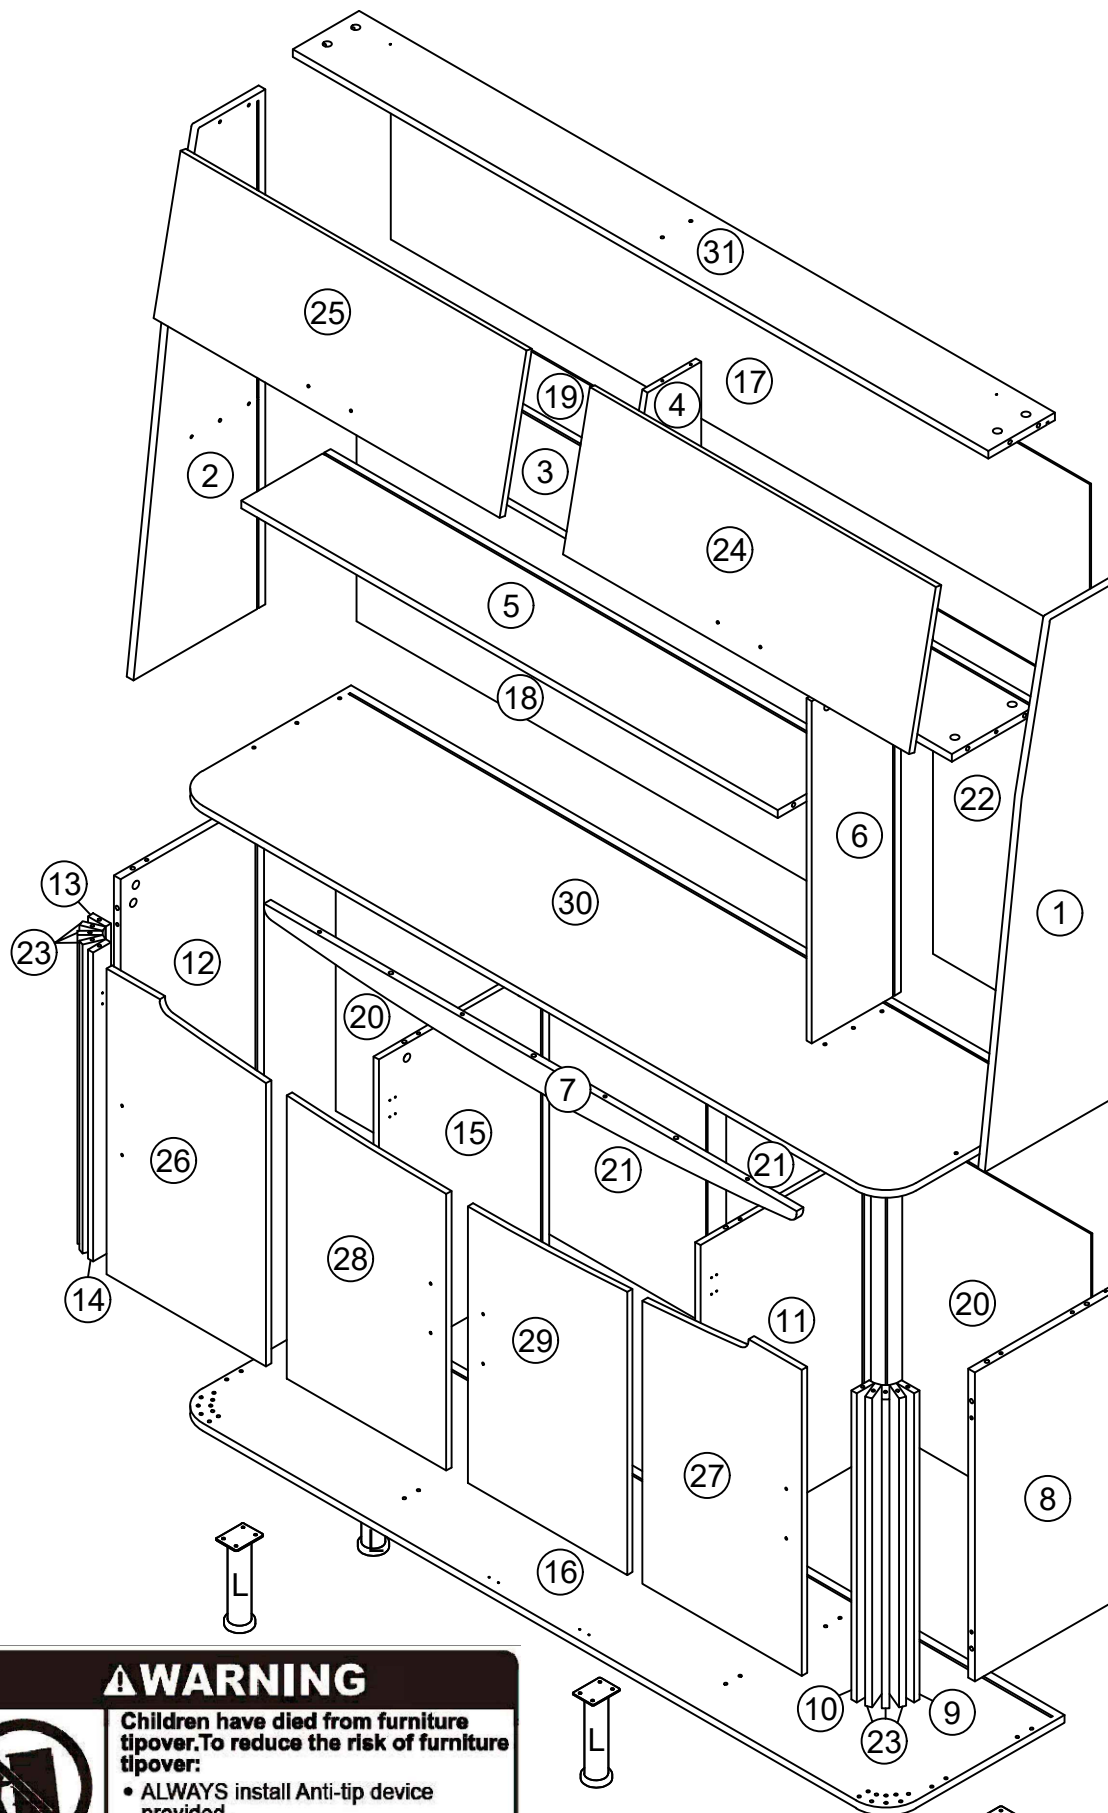


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


 
*This is a permanent label.
Do not remove!*

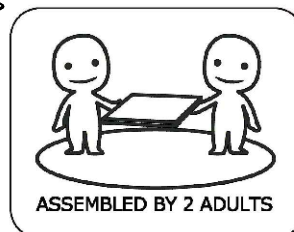




1

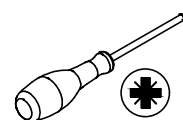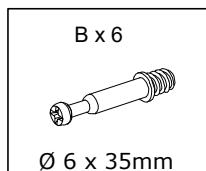  


 
 
Screw the eccentric rod (B) into panel 3 and panel 6 as shown.

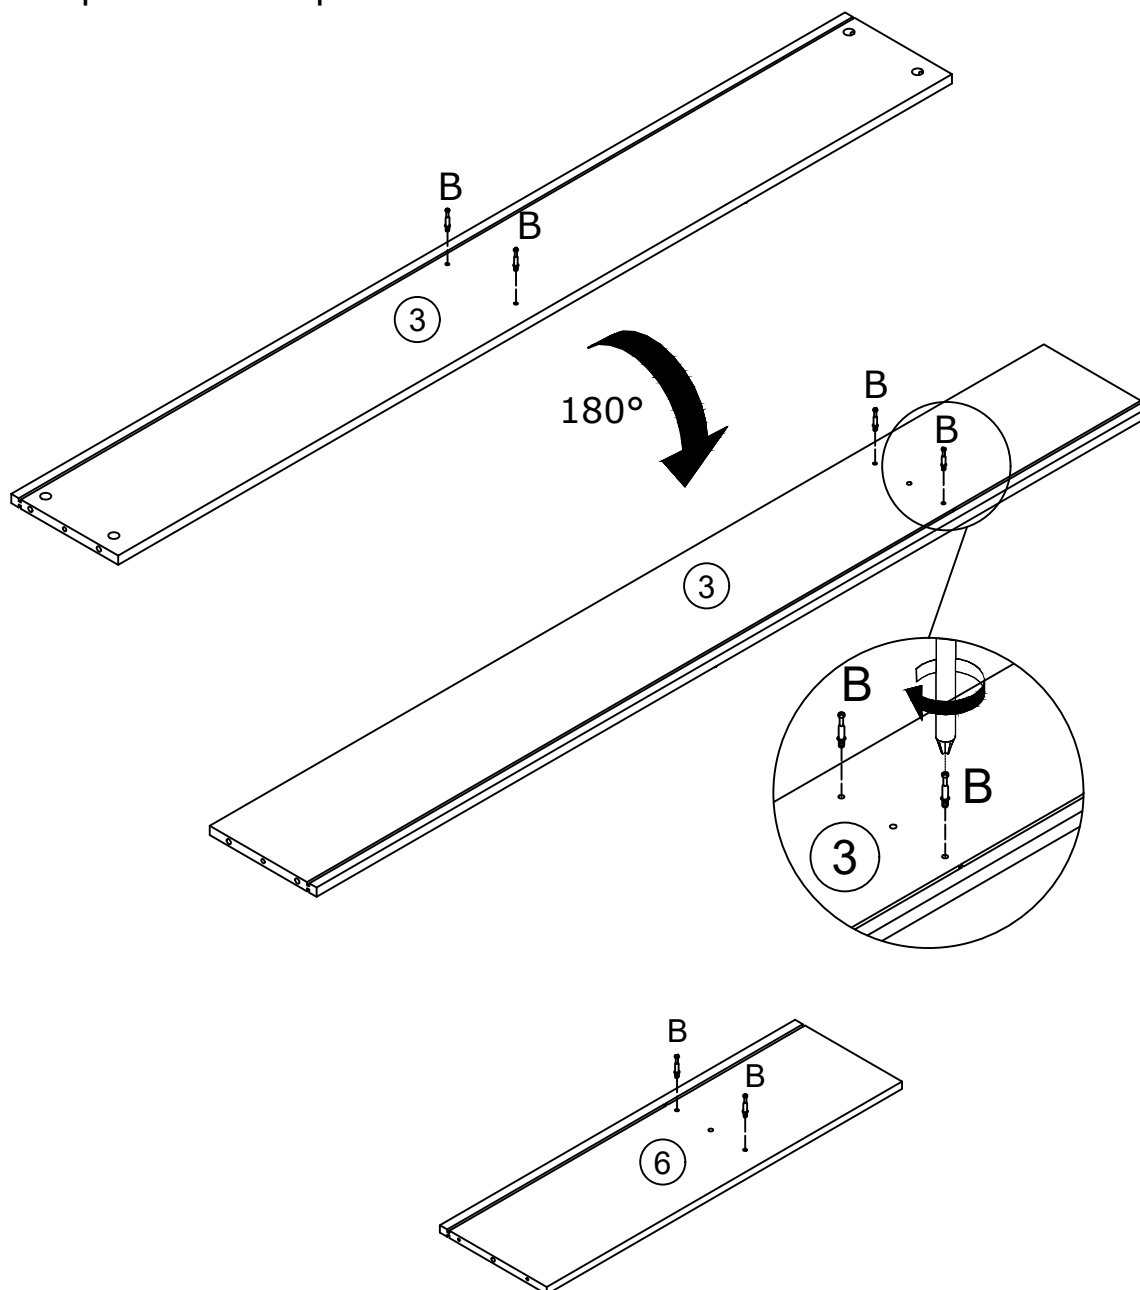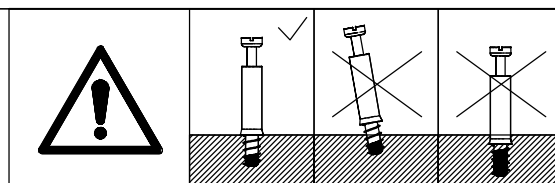

2

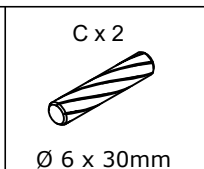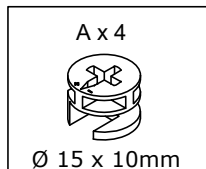   


   Attach panel 5 and panel 3 to panel 6 using wooden dowels as shown and add cam locks (A) to tighten clockwise.

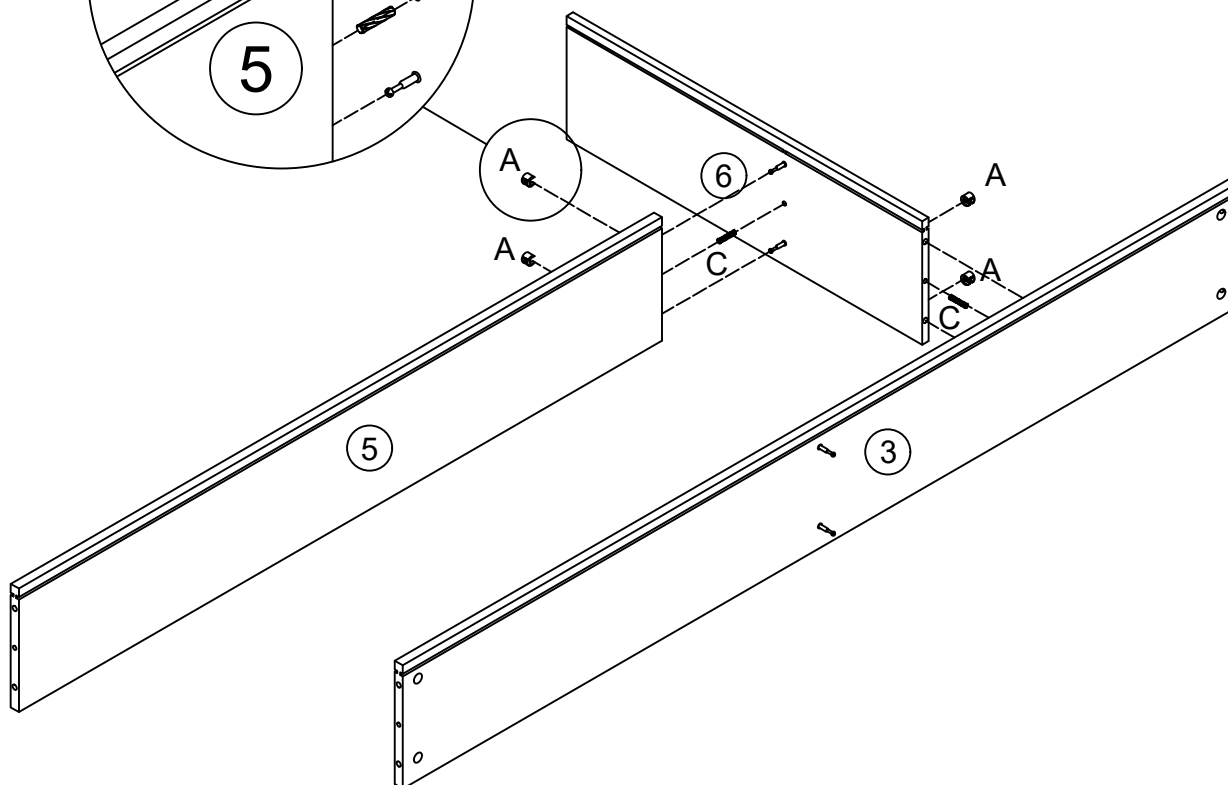
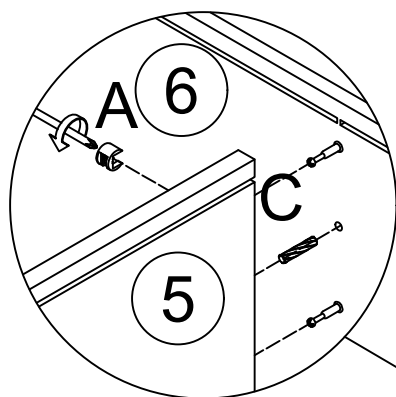
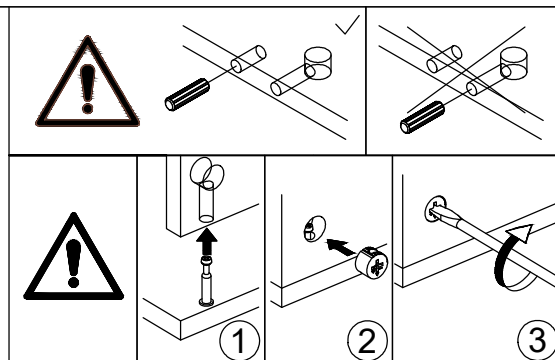


3

 
Insert the panel 19. along the available grooves as shown.

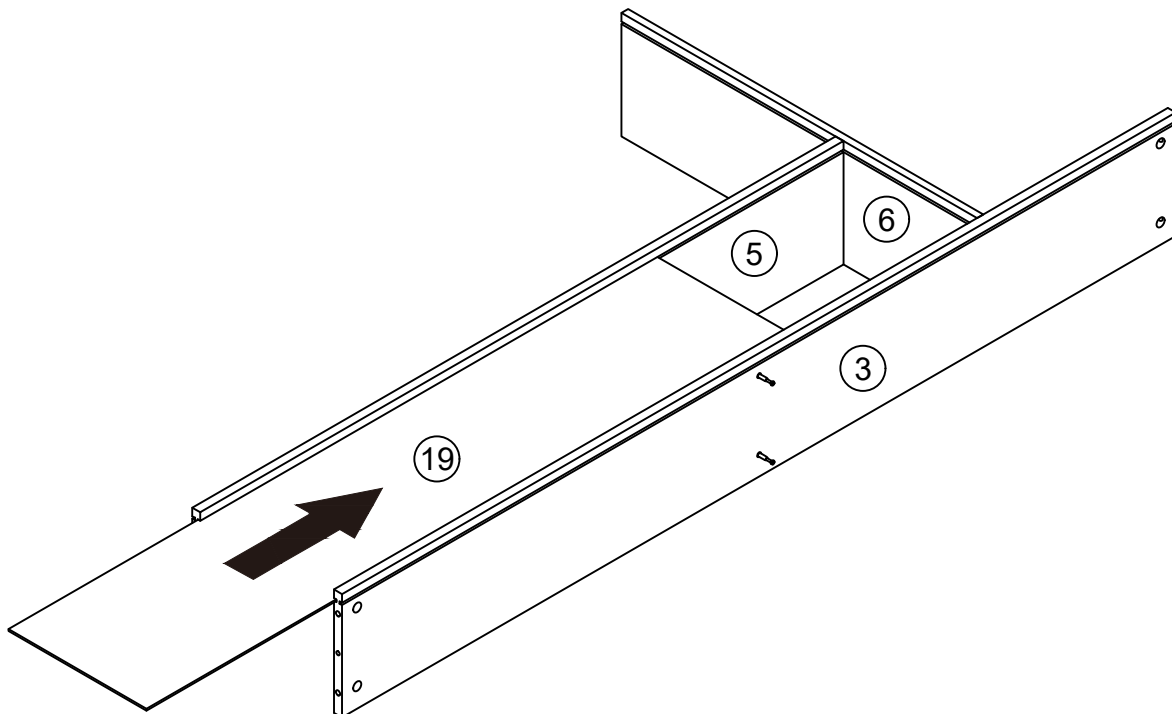


4

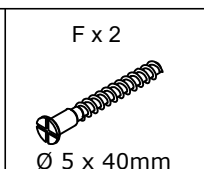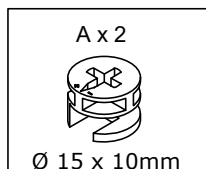   


 
Attach panel 4 to panel 3 as shown and add cam lock (A) to panel 4 and tighten by turning clockwise.

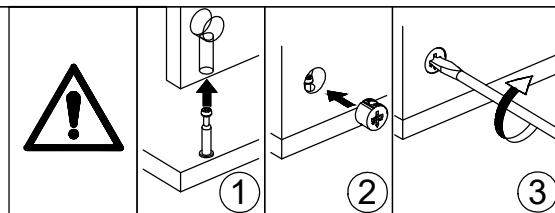

 
Attach panel 31 to panel 4 using screws (F).

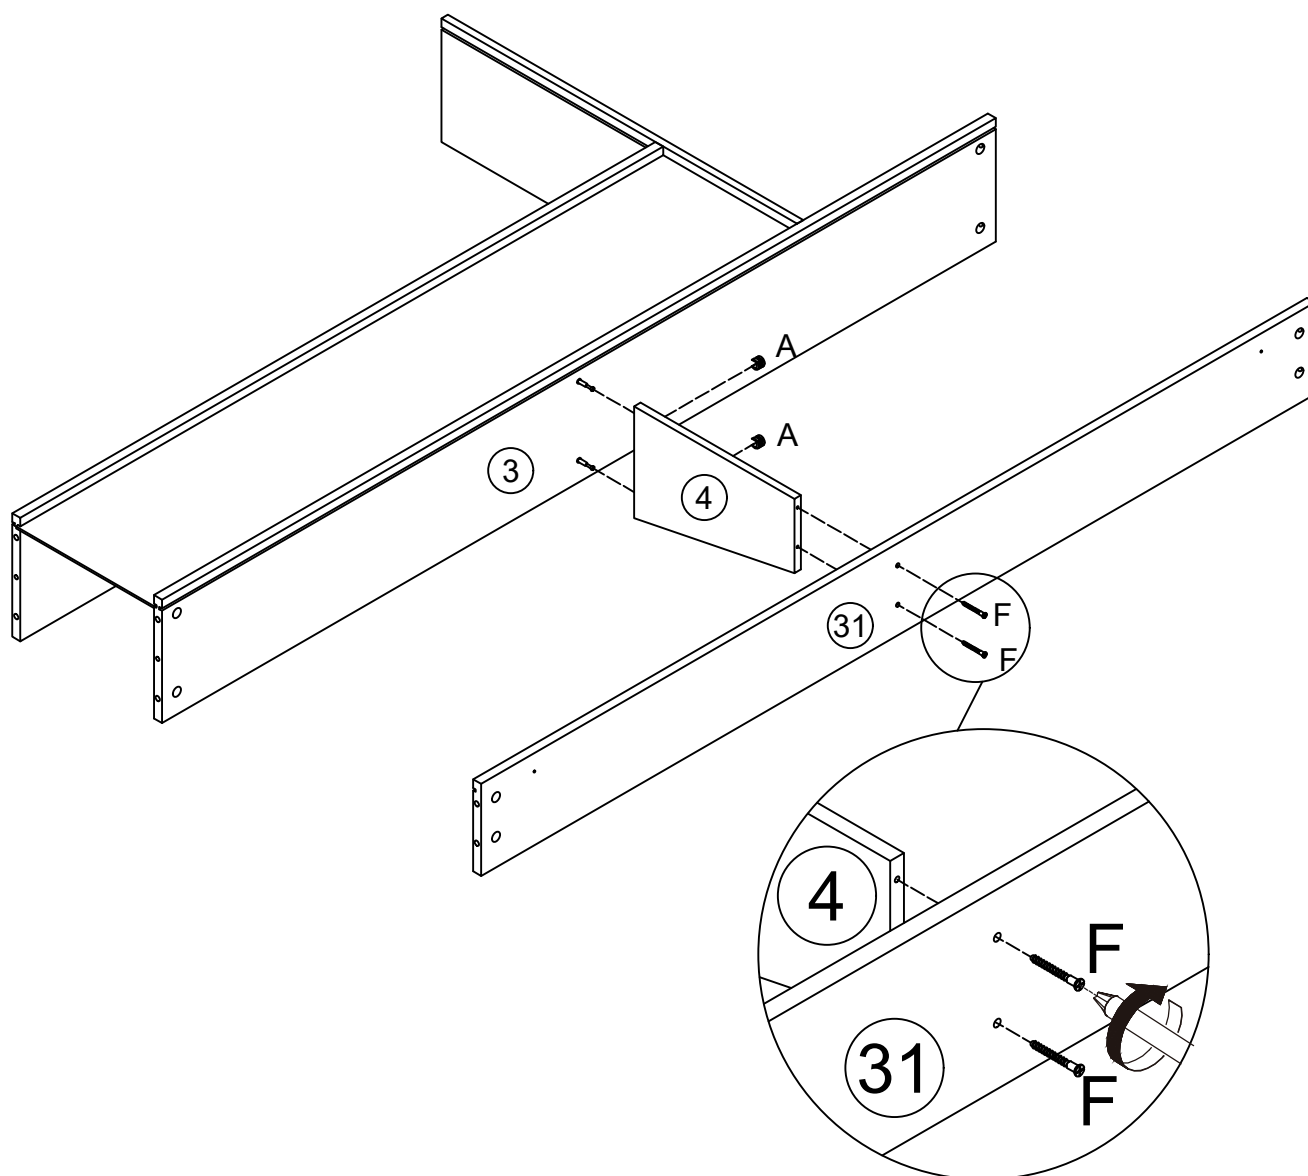



5

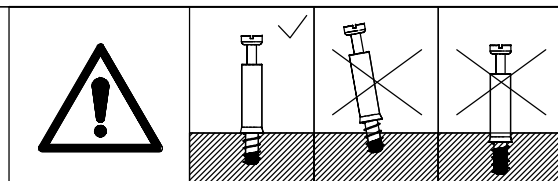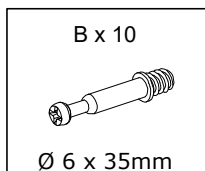  


 
Screw the eccentric rod (B) into panel 1 and panel 2 as shown.

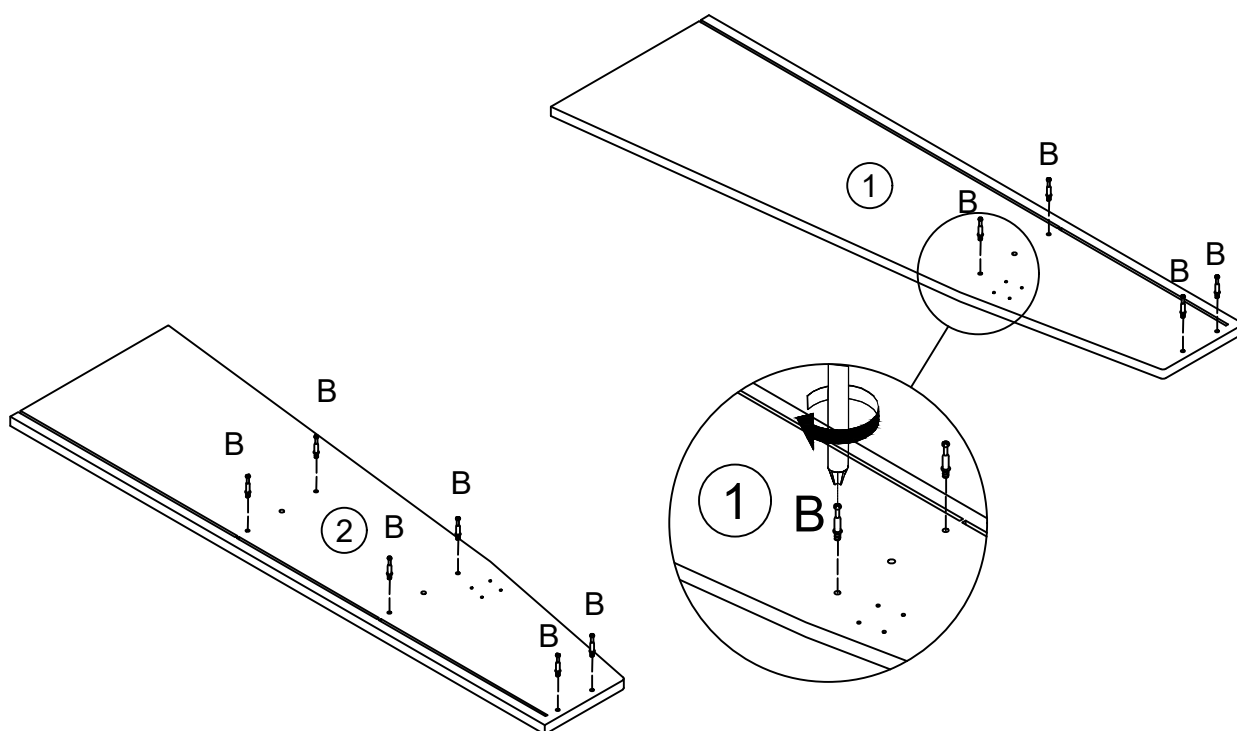


6

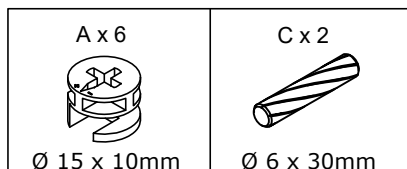  

  
Attach panel 2 to the assembly using wooden dowels (C) as shown and add cam locks (A) to panel 3, panel 5, and panel 31 to tighten in a clockwise rotation.

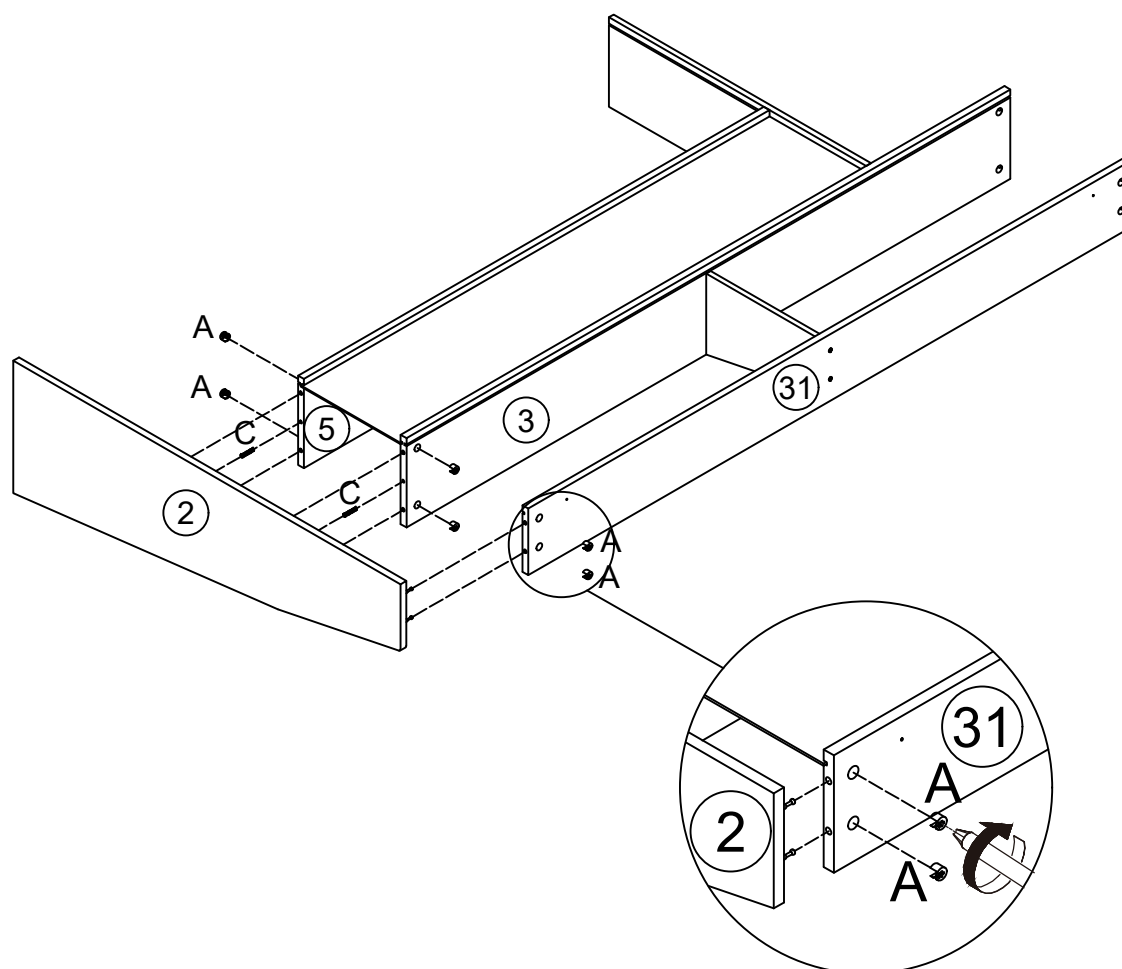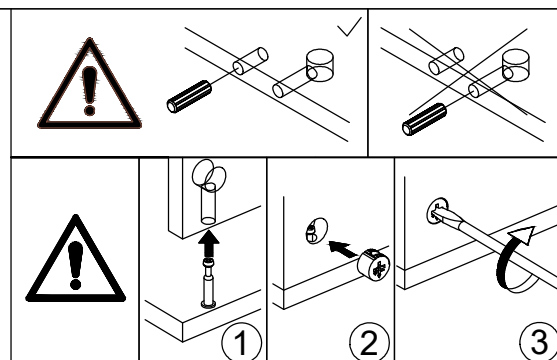

7

 

 Insert panel 17 along the available grooves as shown.

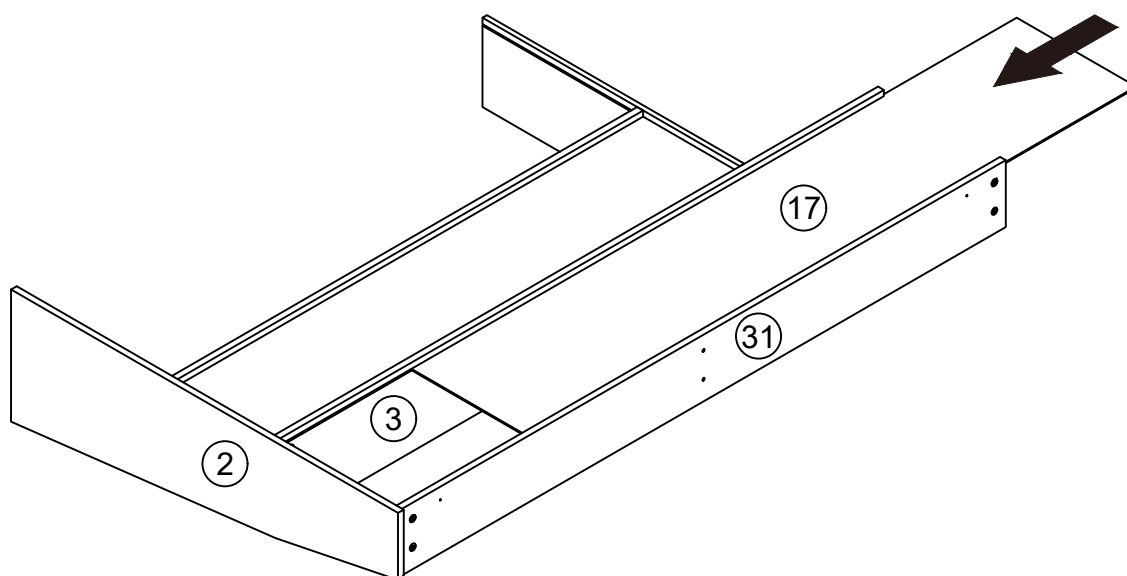

8

A x 4



 
 
Ø 15 x 10mm

C x 1




Ø 6 x 30mm

Attach panel 1 to the assembly using wooden dowels (C) as shown and add cam locks (A) in panel 3 and panel 31 turning clockwise to tighten.

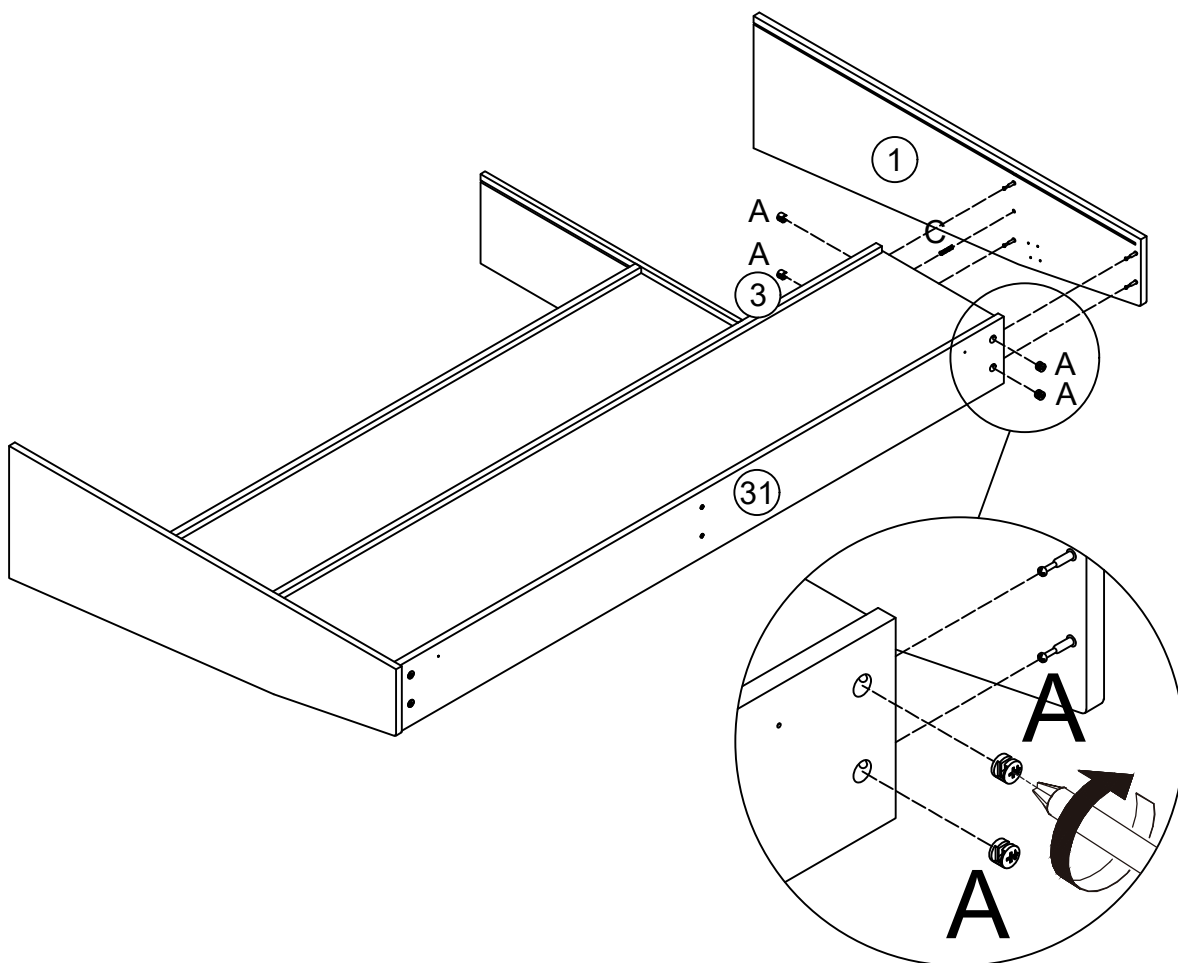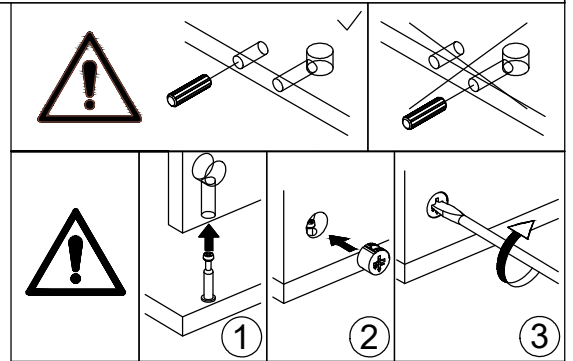

9

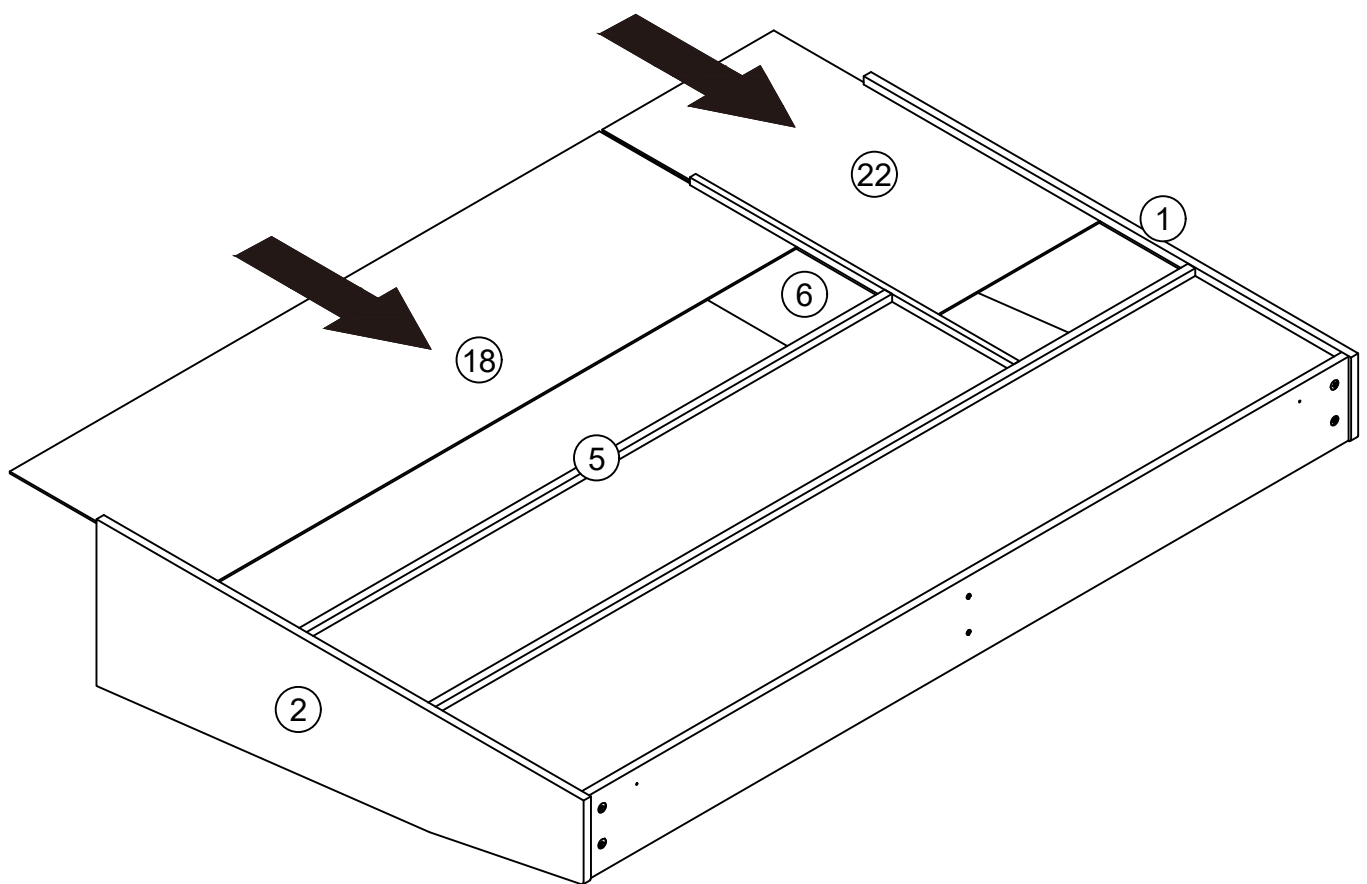 





Insert panel 18 and panel 22 along the available grooves as shown.

10

C x 3



   
 
F x 6

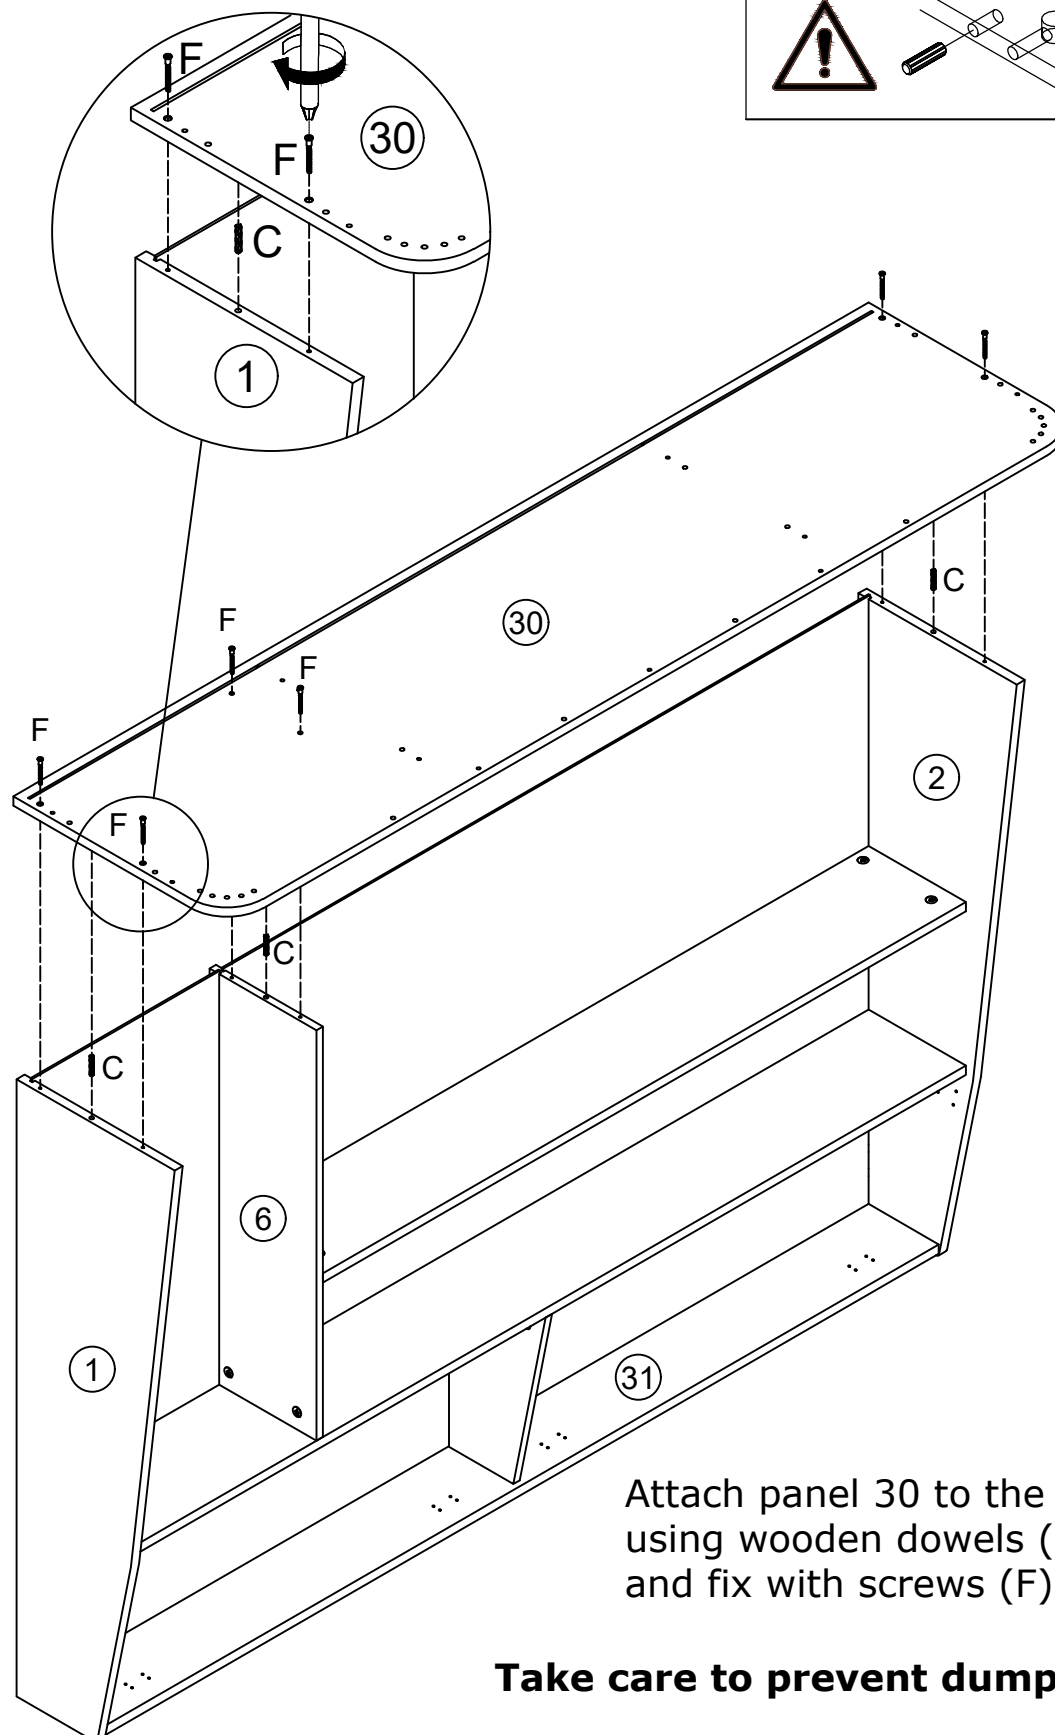



Attach panel 30 to the assembly using wooden dowels (C) as shown and fix with screws (F).

Take care to prevent dumping!

  11


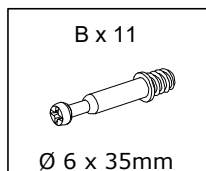


  Screw the eccentric rod (B) into panel 30 as shown.


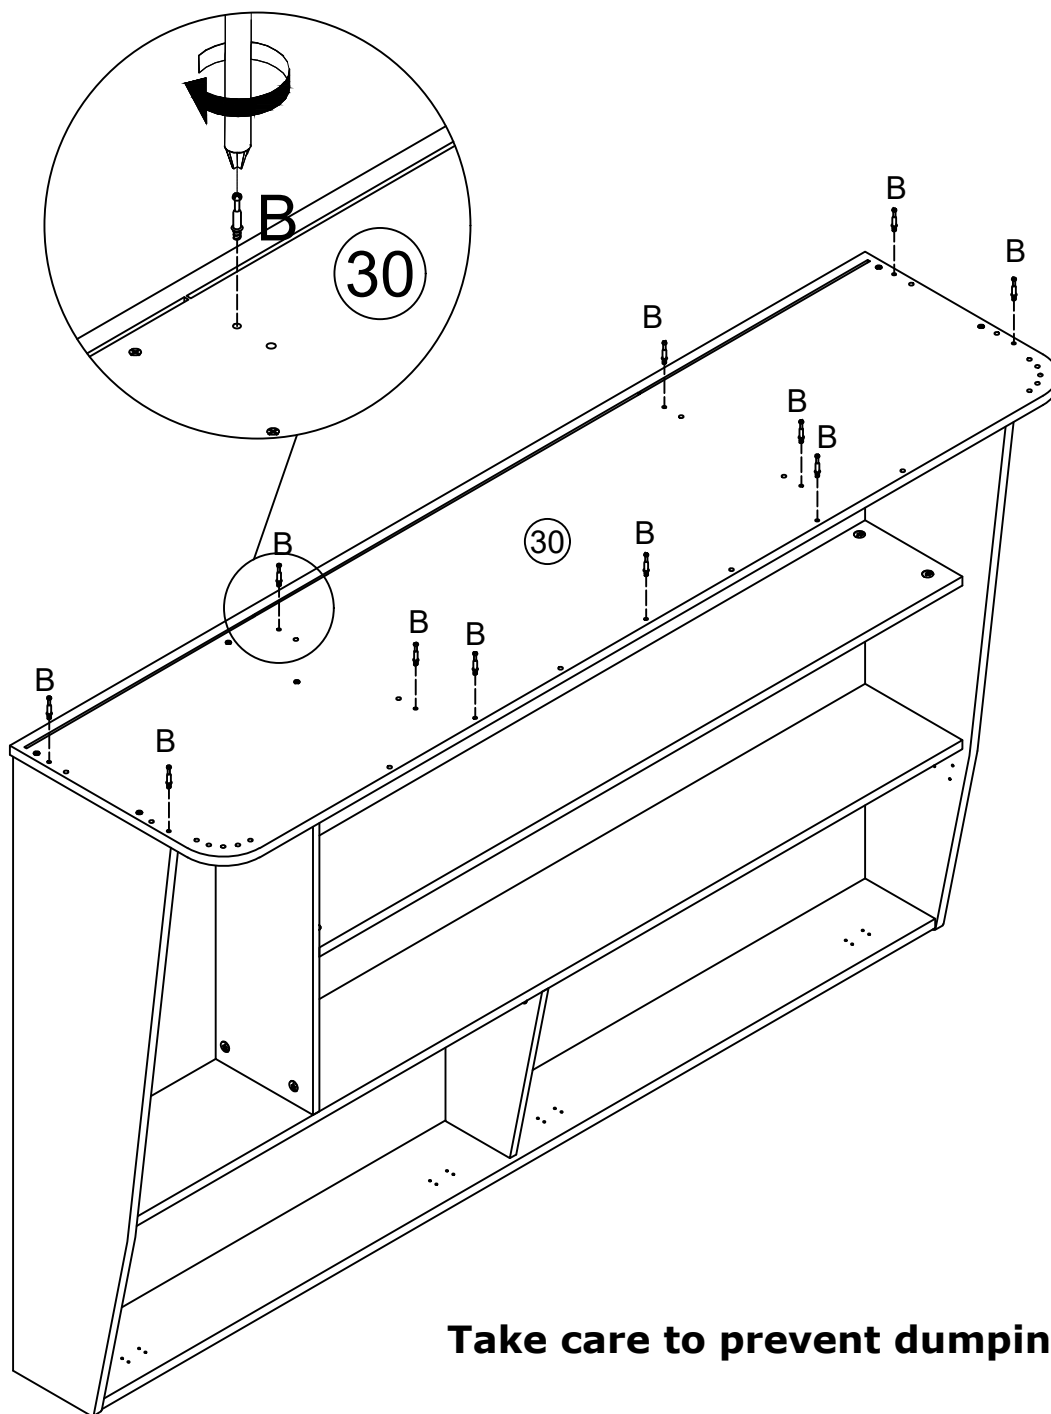
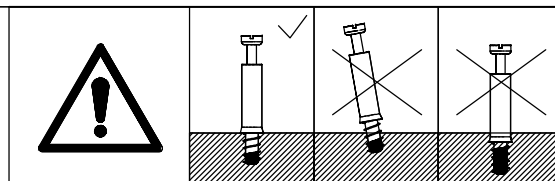


Take care to prevent dumping!

  12

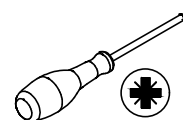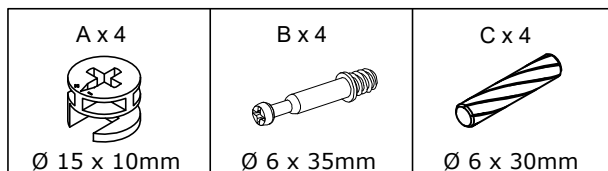


   Screw the eccentric rod (B) into panel 9 and panel 13 as shown.

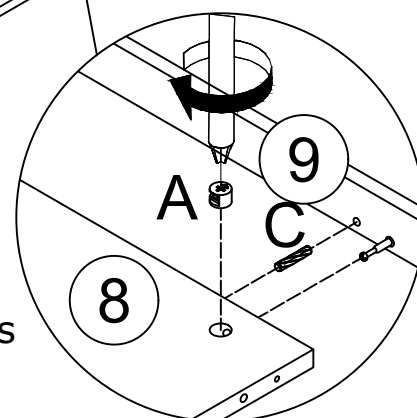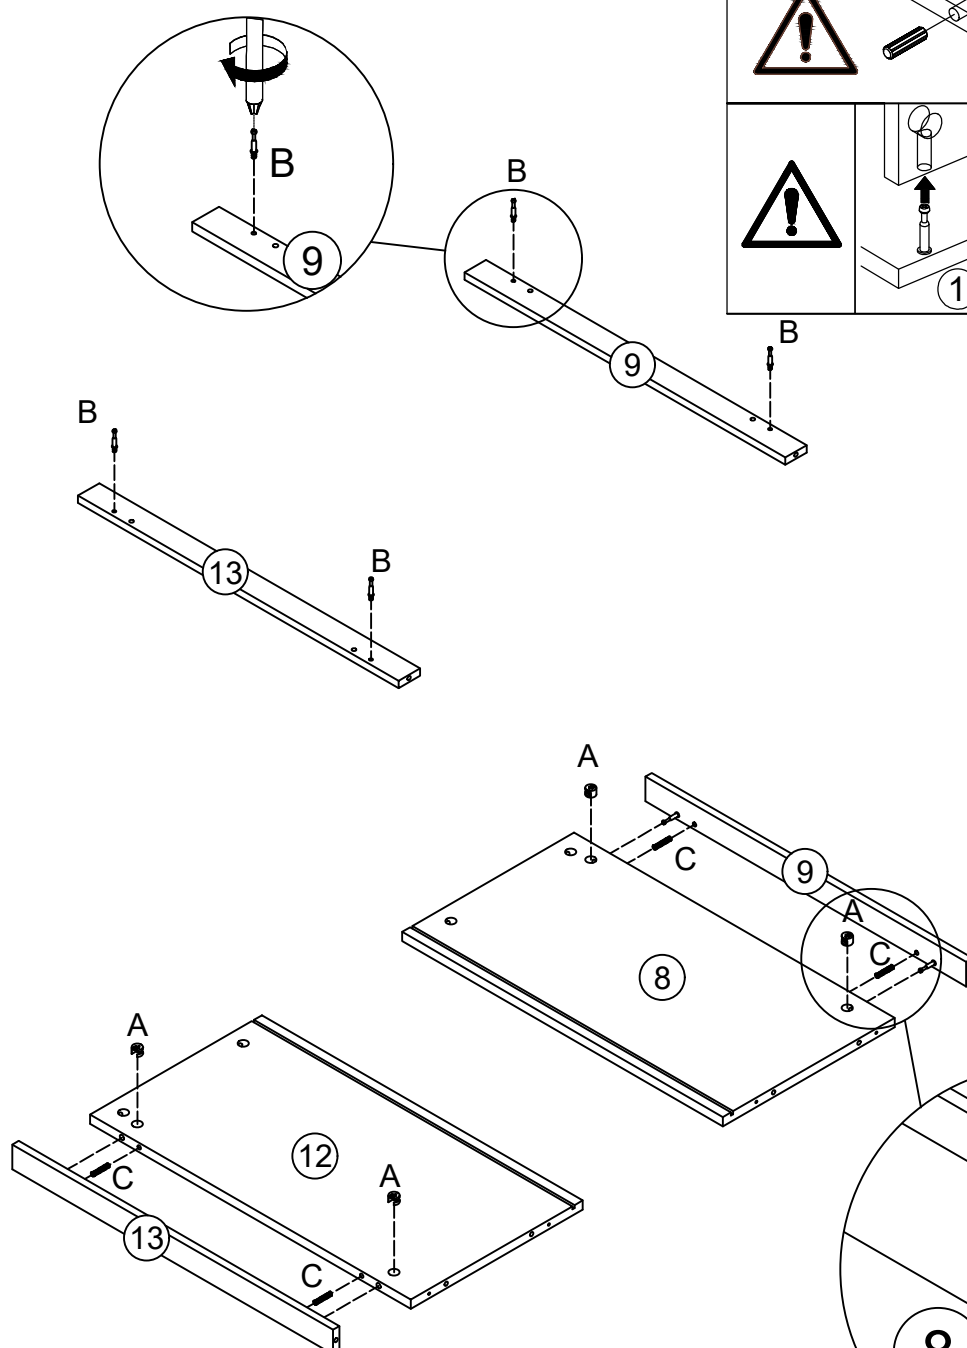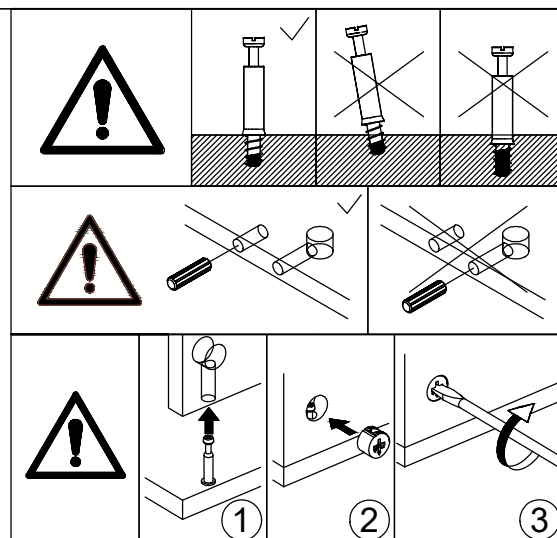


Attach panel 12 to panel 13 using wooden dowels (C) as shown and add cam locks (A) to panel 12 to tighten in a clockwise rotation. Attach panel 8 to panel 9 using wooden dowels (C) and add cam locks (A) to panel 8 tightening by turning clockwise.



 
13

D x 4  Ø 3.5 x 12mm	M x 2 	
--	--	---


 
Secure part (M) to panel using screws (D) as shown 16.

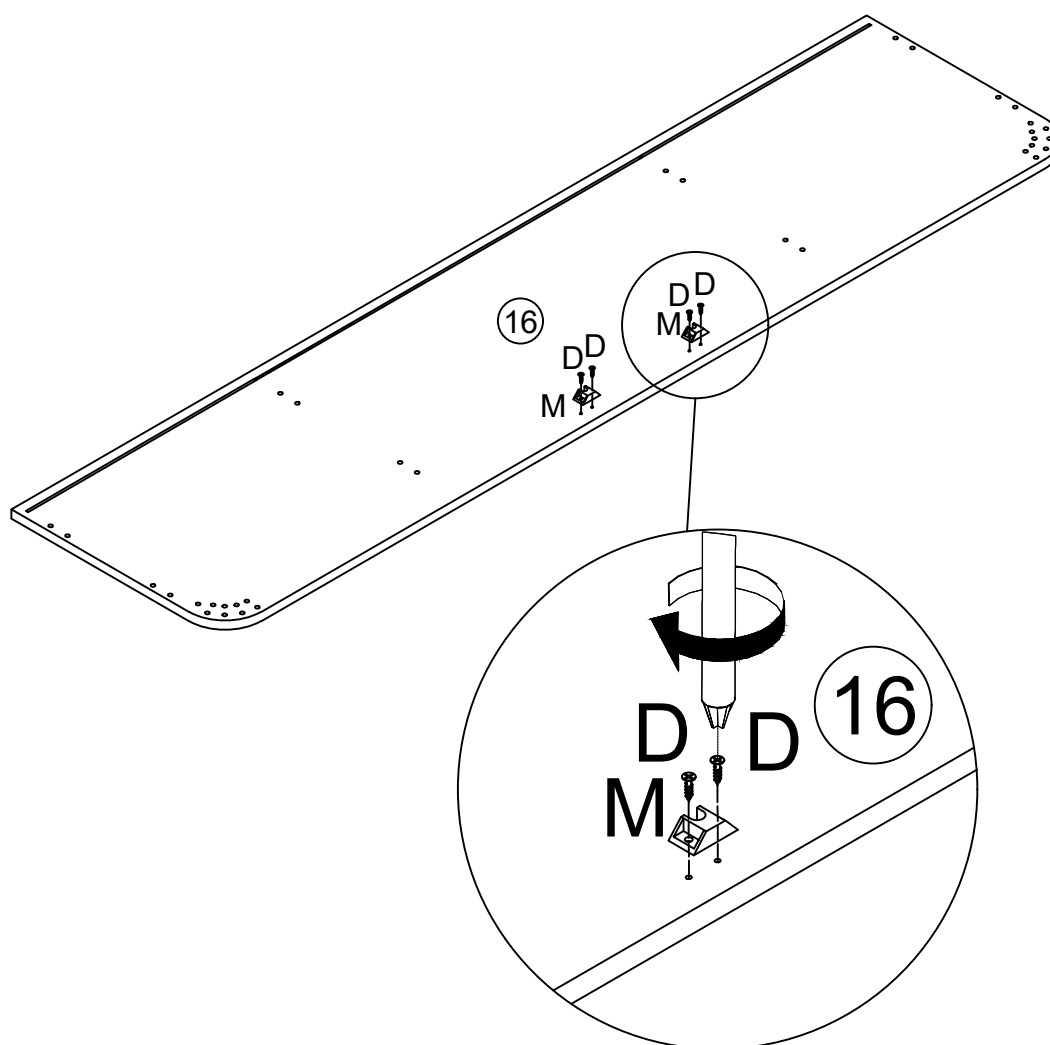


14

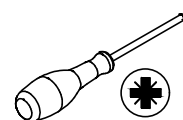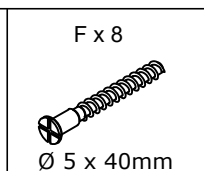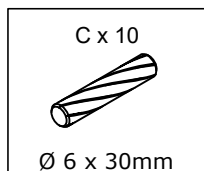   

  
Attach panel 16 to panel 8, panel 9, panel 11, panel 12, panel 13, panel 15 using wooden dowels (C) as shown and fix with screws (F).

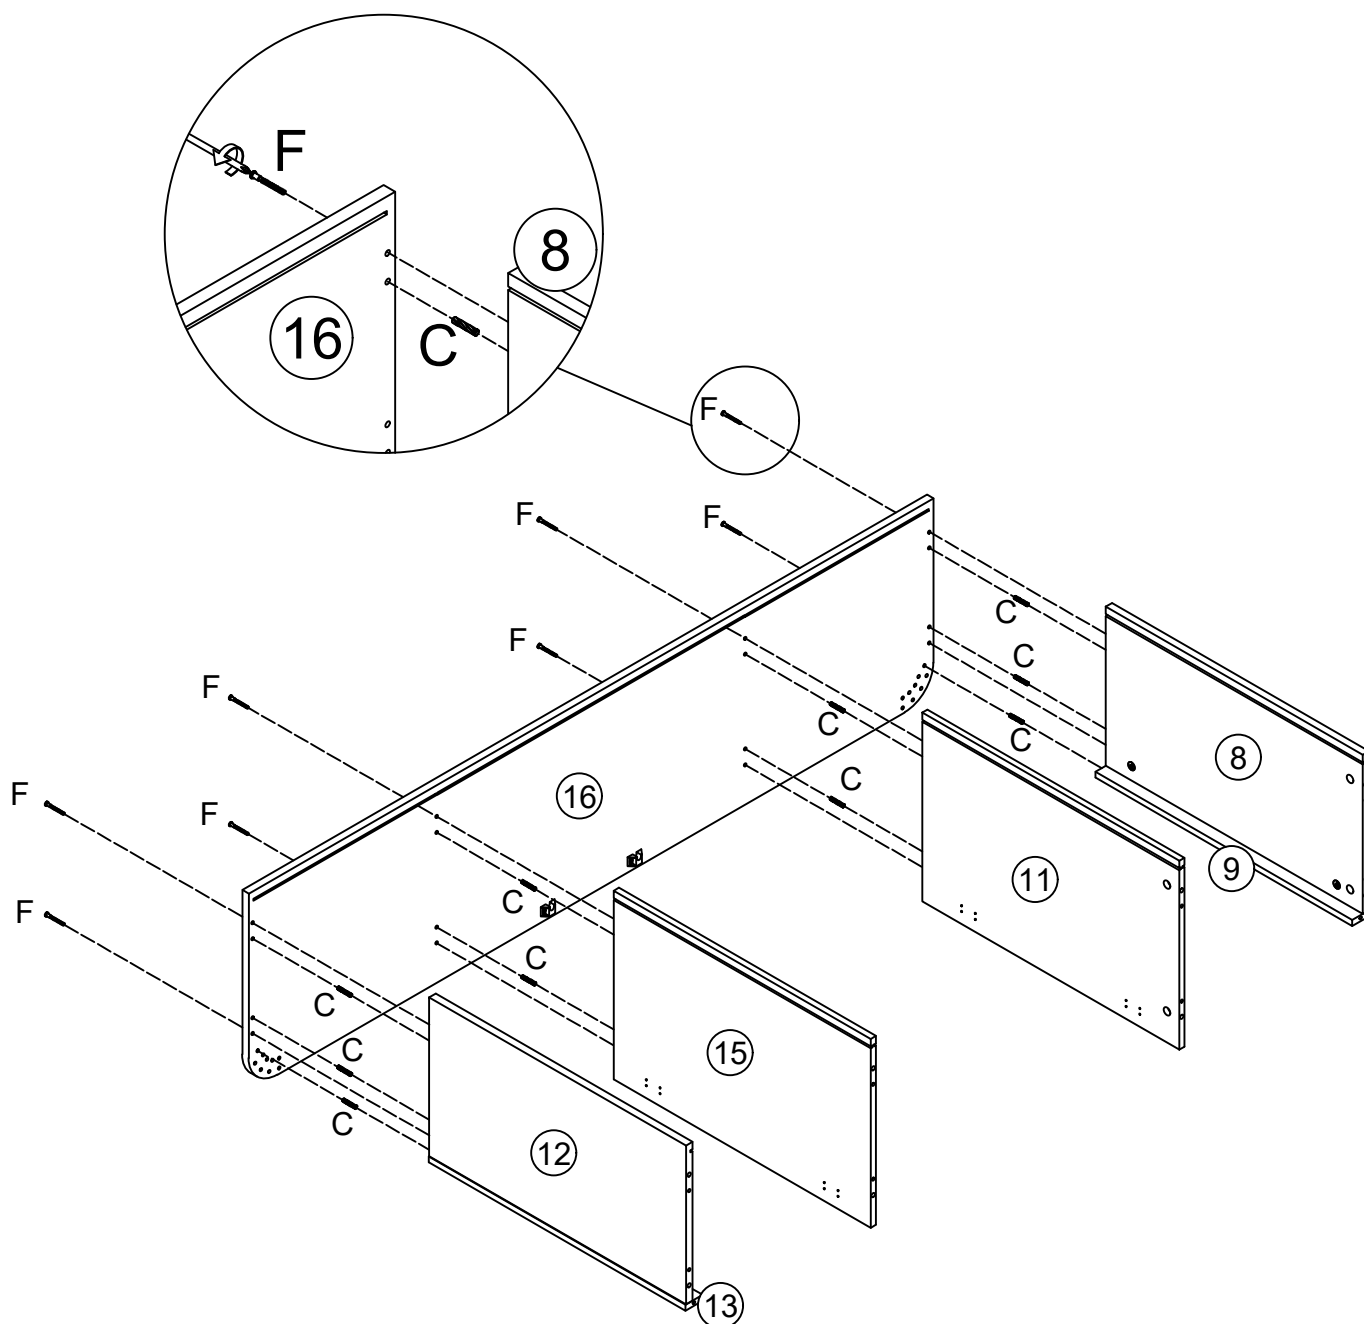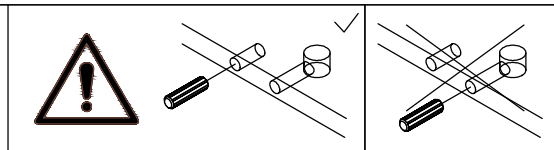

15

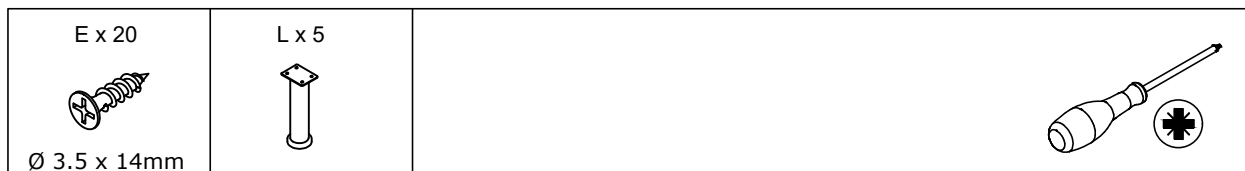 

 Secure the legs to the panel using screws (E) as shown 16.



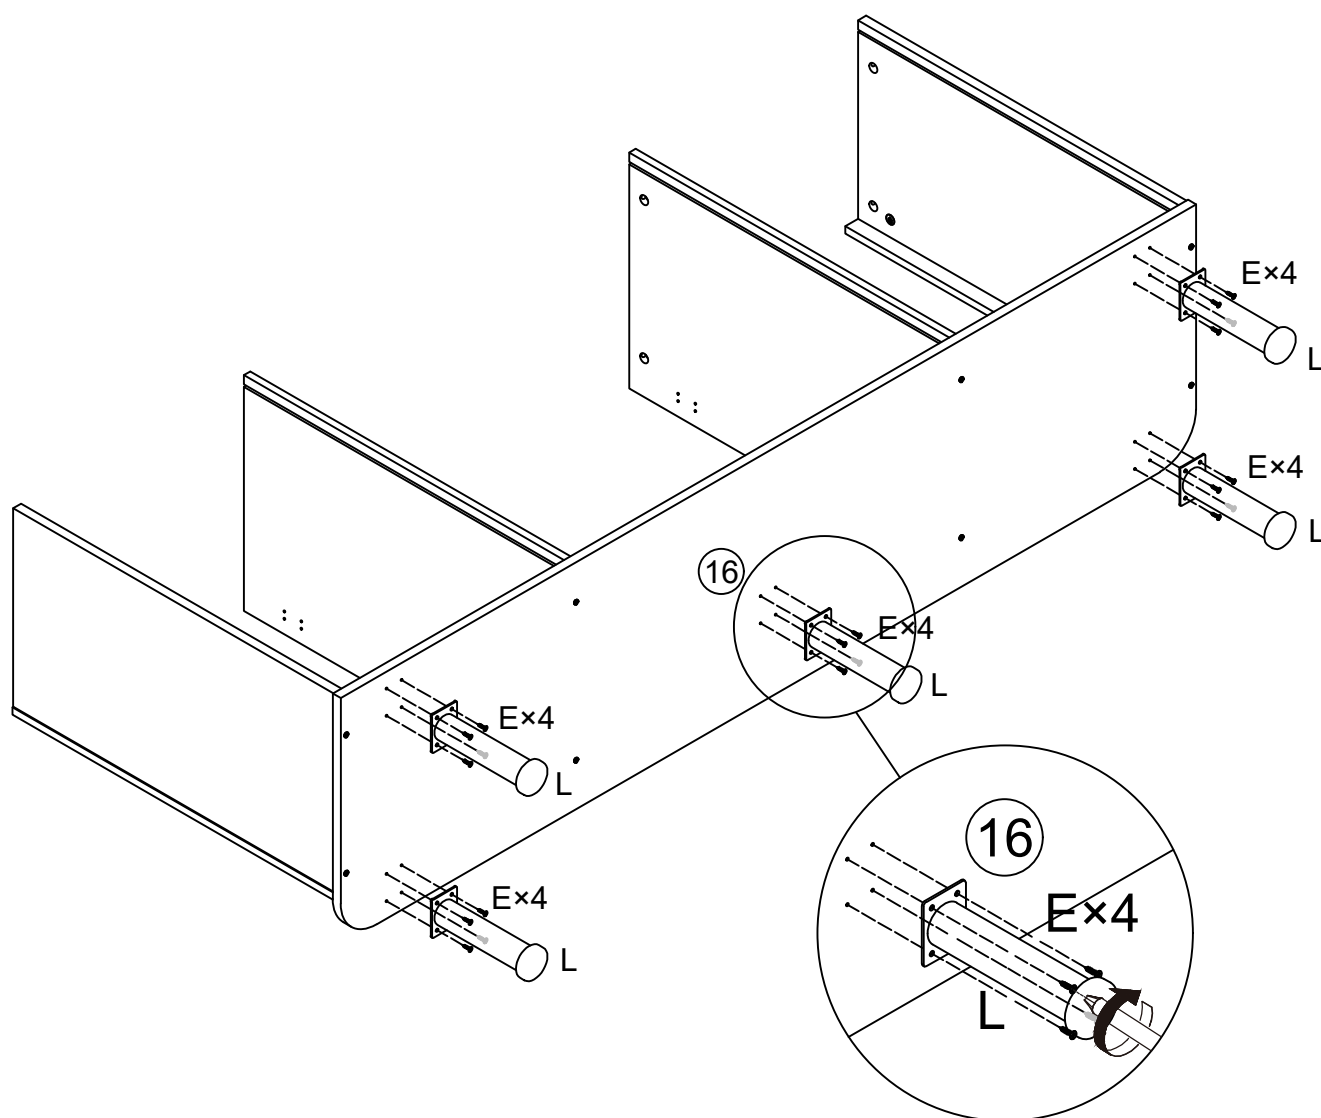


16


C x 16



   Ø 6 x 30mm





 Attach panel 12, panel 14 and panel 10 to panel 16 using wooden dowels (C) as shown.

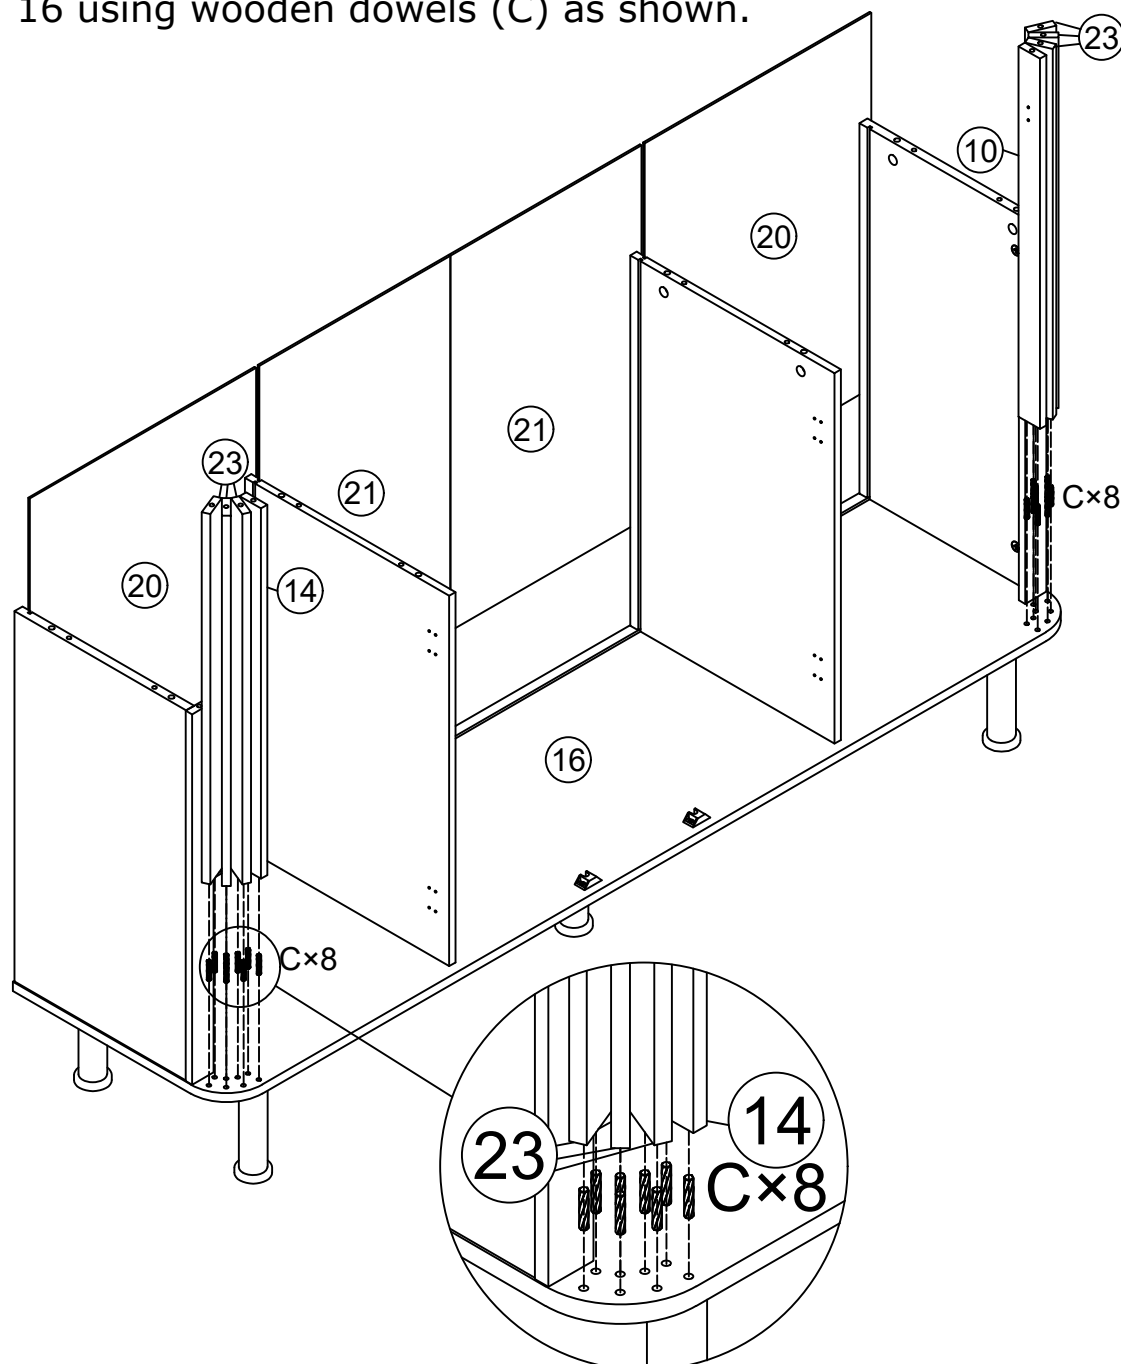


Insert panel 20 and panel 21 along the available grooves as shown.


 
 
17

A x 8  Ø 15 x 10mm	C x 18  Ø 6 x 30mm	D x 4  Ø 3.5 x 12mm	M x 2 	
---	---	--	--	---

 Use screws (D) as shown to secure part (M) to panel 10 and panel 14.

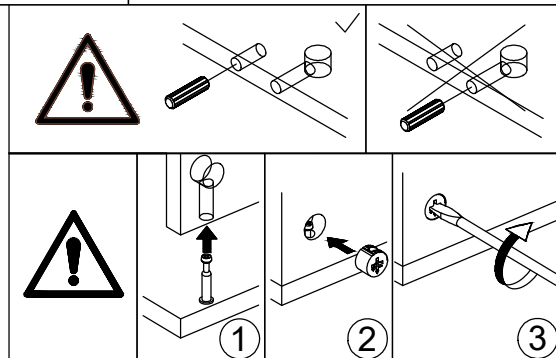

   Use wooden dowels (C) to attach the assemblies as shown and add cam locks (A) in panel 8, panel 11, panel 12, and panel 15 tightened in a clockwise rotation.

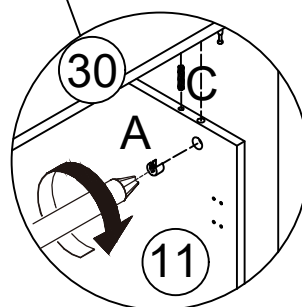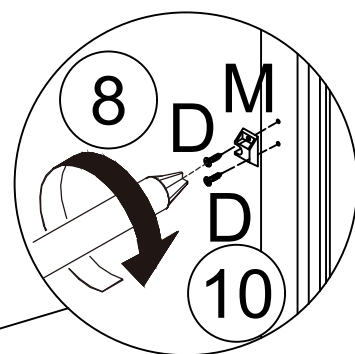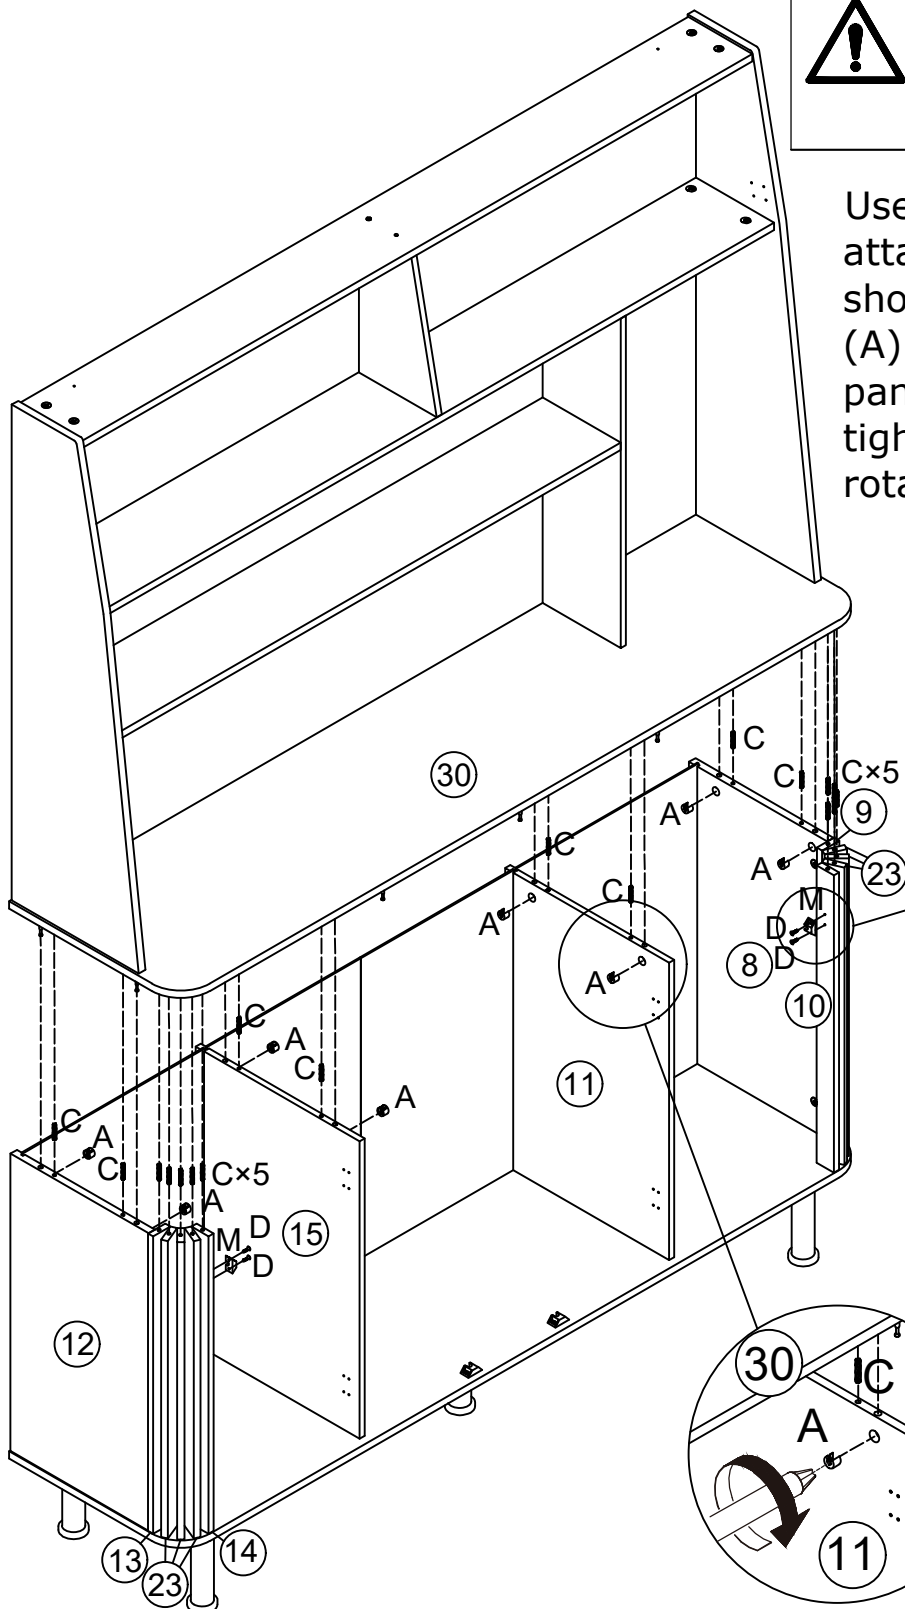

18

A x 3

 


Ø 15 x 10mm








C x 4



Ø 6 x 30mm



       Attach panel 7 to panel 30 using wooden dowels (C) as shown and add cam locks (A) in panel 7 tightened by turning clockwise.

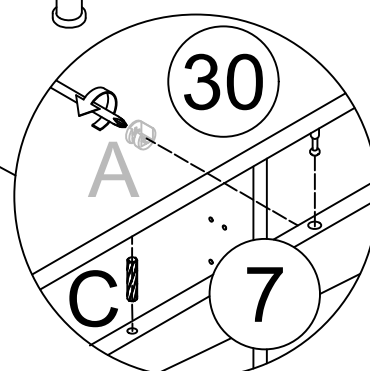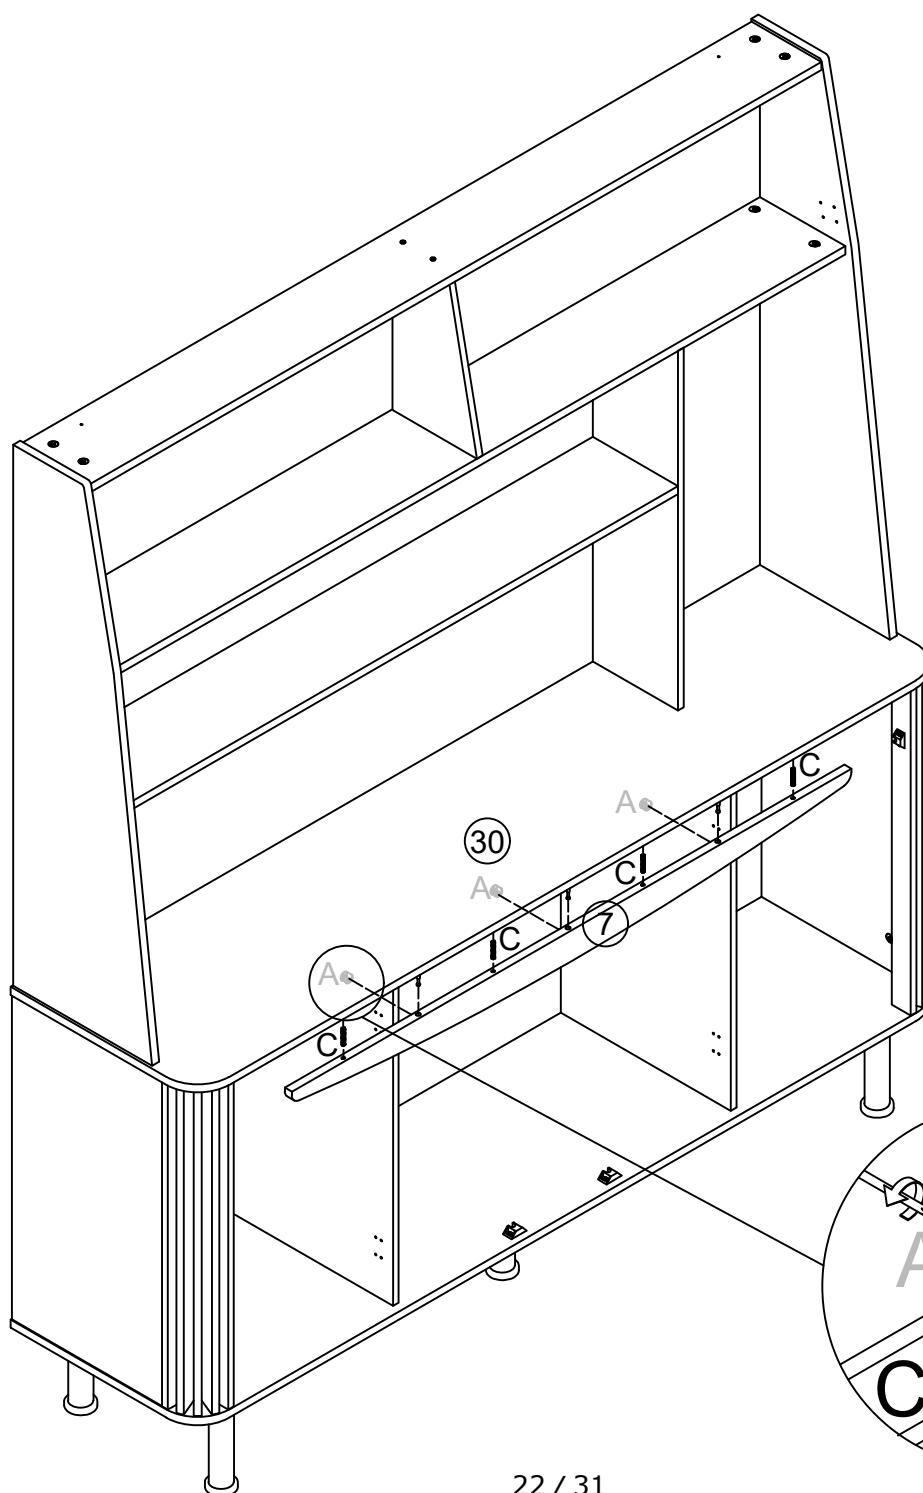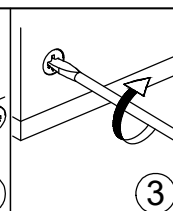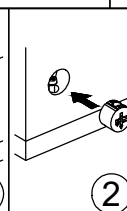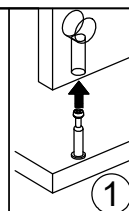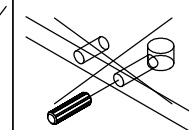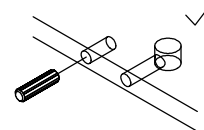


19

D x 16



Ø 3.5 x 12mm

 
Q x 8




Q



 
R

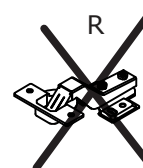

 
Secure the hinges (Q) to panels 26, 27, 28 and 29 using screws (D) as shown.

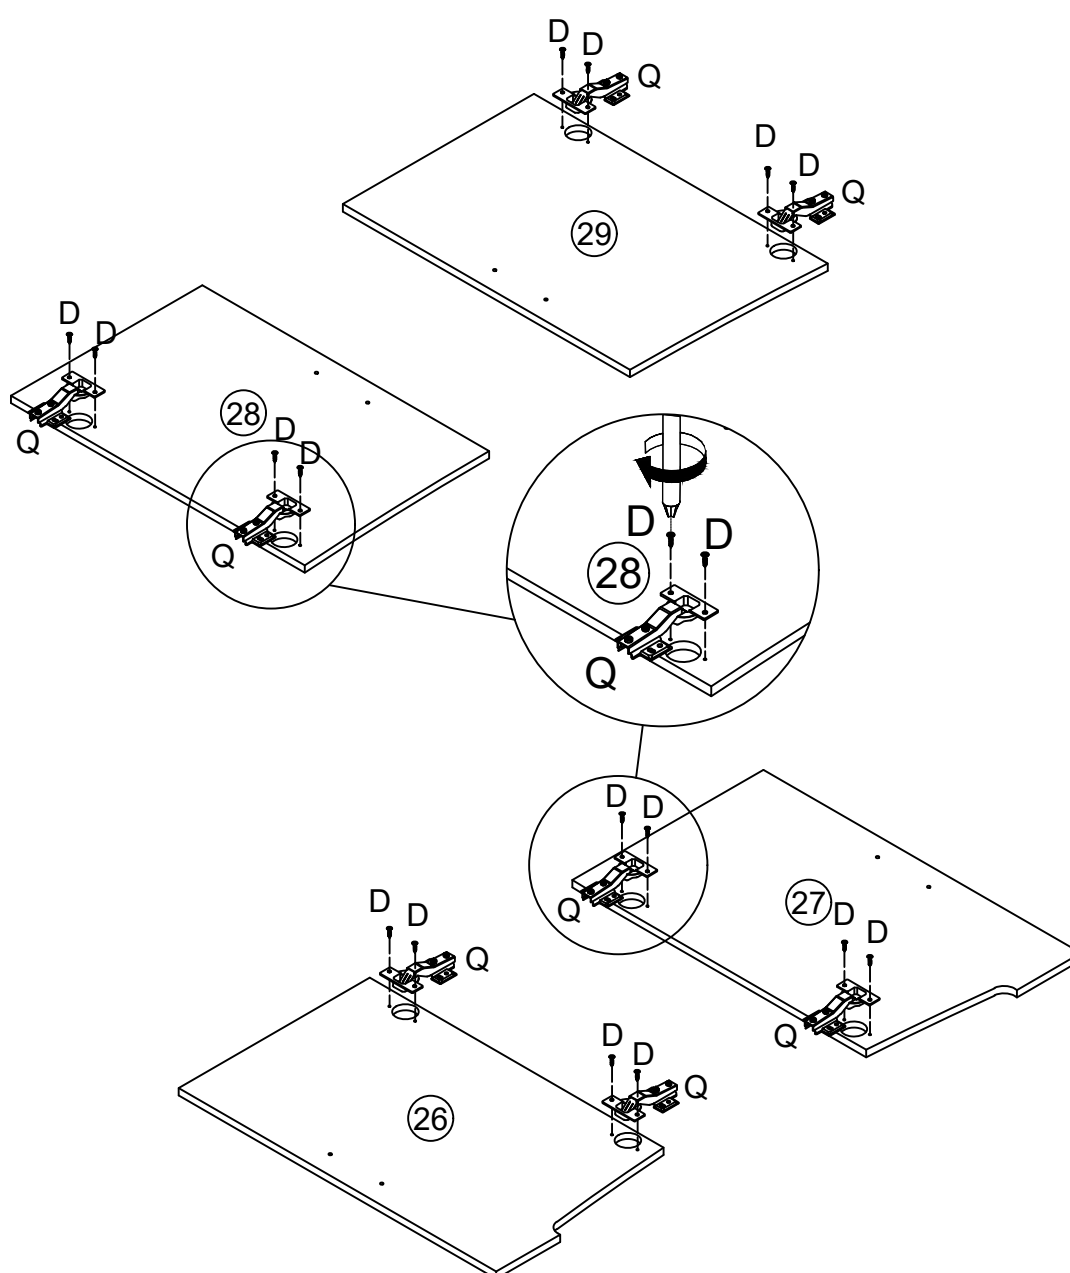


20

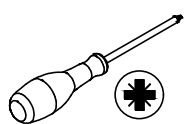 D x 16  Ø 3.5 x 12mm	K x 4  Ø 4 x 16mm	N x 2 	
---	--	--	---

 
Attach panel 28 to panel 15 and panel 29 to panel 11 using screws (D) as shown. Secure handle (N) to panel 28 and panel 29 using screws (K).

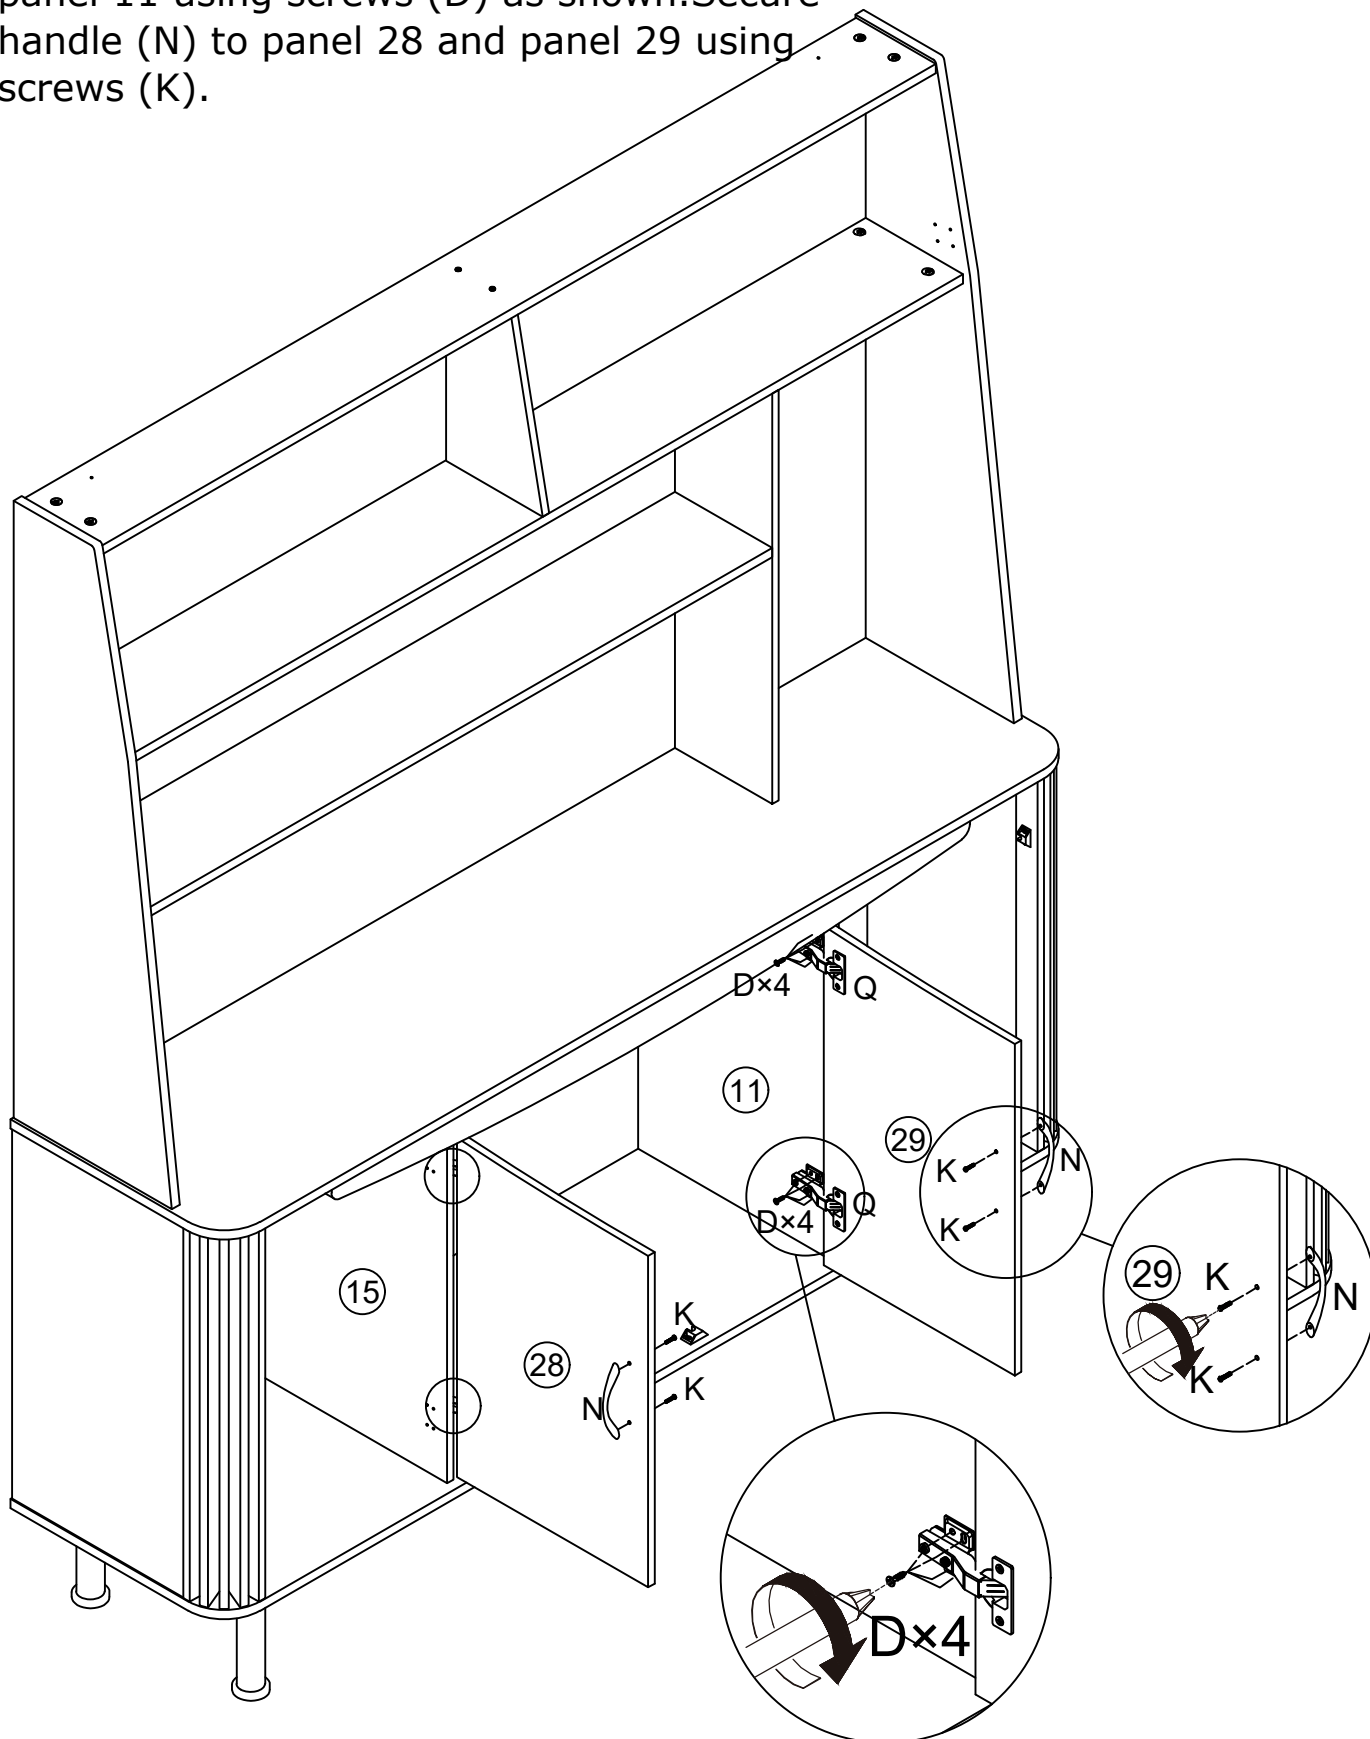


21

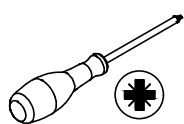 D x 8  Ø 3.5 x 12mm	R x 4 	
 Q  R 		

 
Secure the hinge (R) to panel 24 and panel 25 using screws (D) as shown.

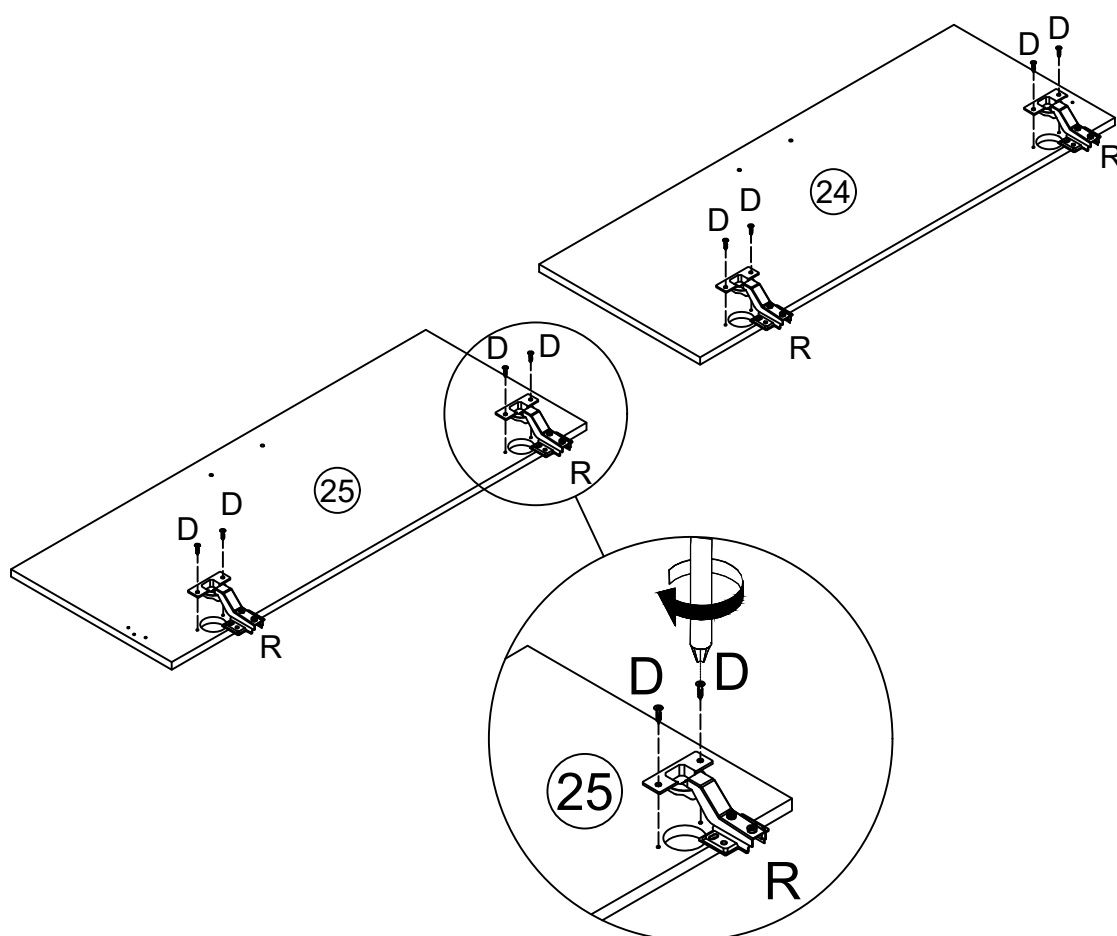




22

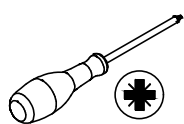 D x 46  Ø 3.5 x 12mm	K x 8  Ø 4 x 16mm	N x 4 	P x 2 	
---	--	--	---	---



 
Attach panel 24 and panel 25 to panel 21 using screws (D) as shown. Attach panel 26 to panel 15 and panel 27 to panel 11.

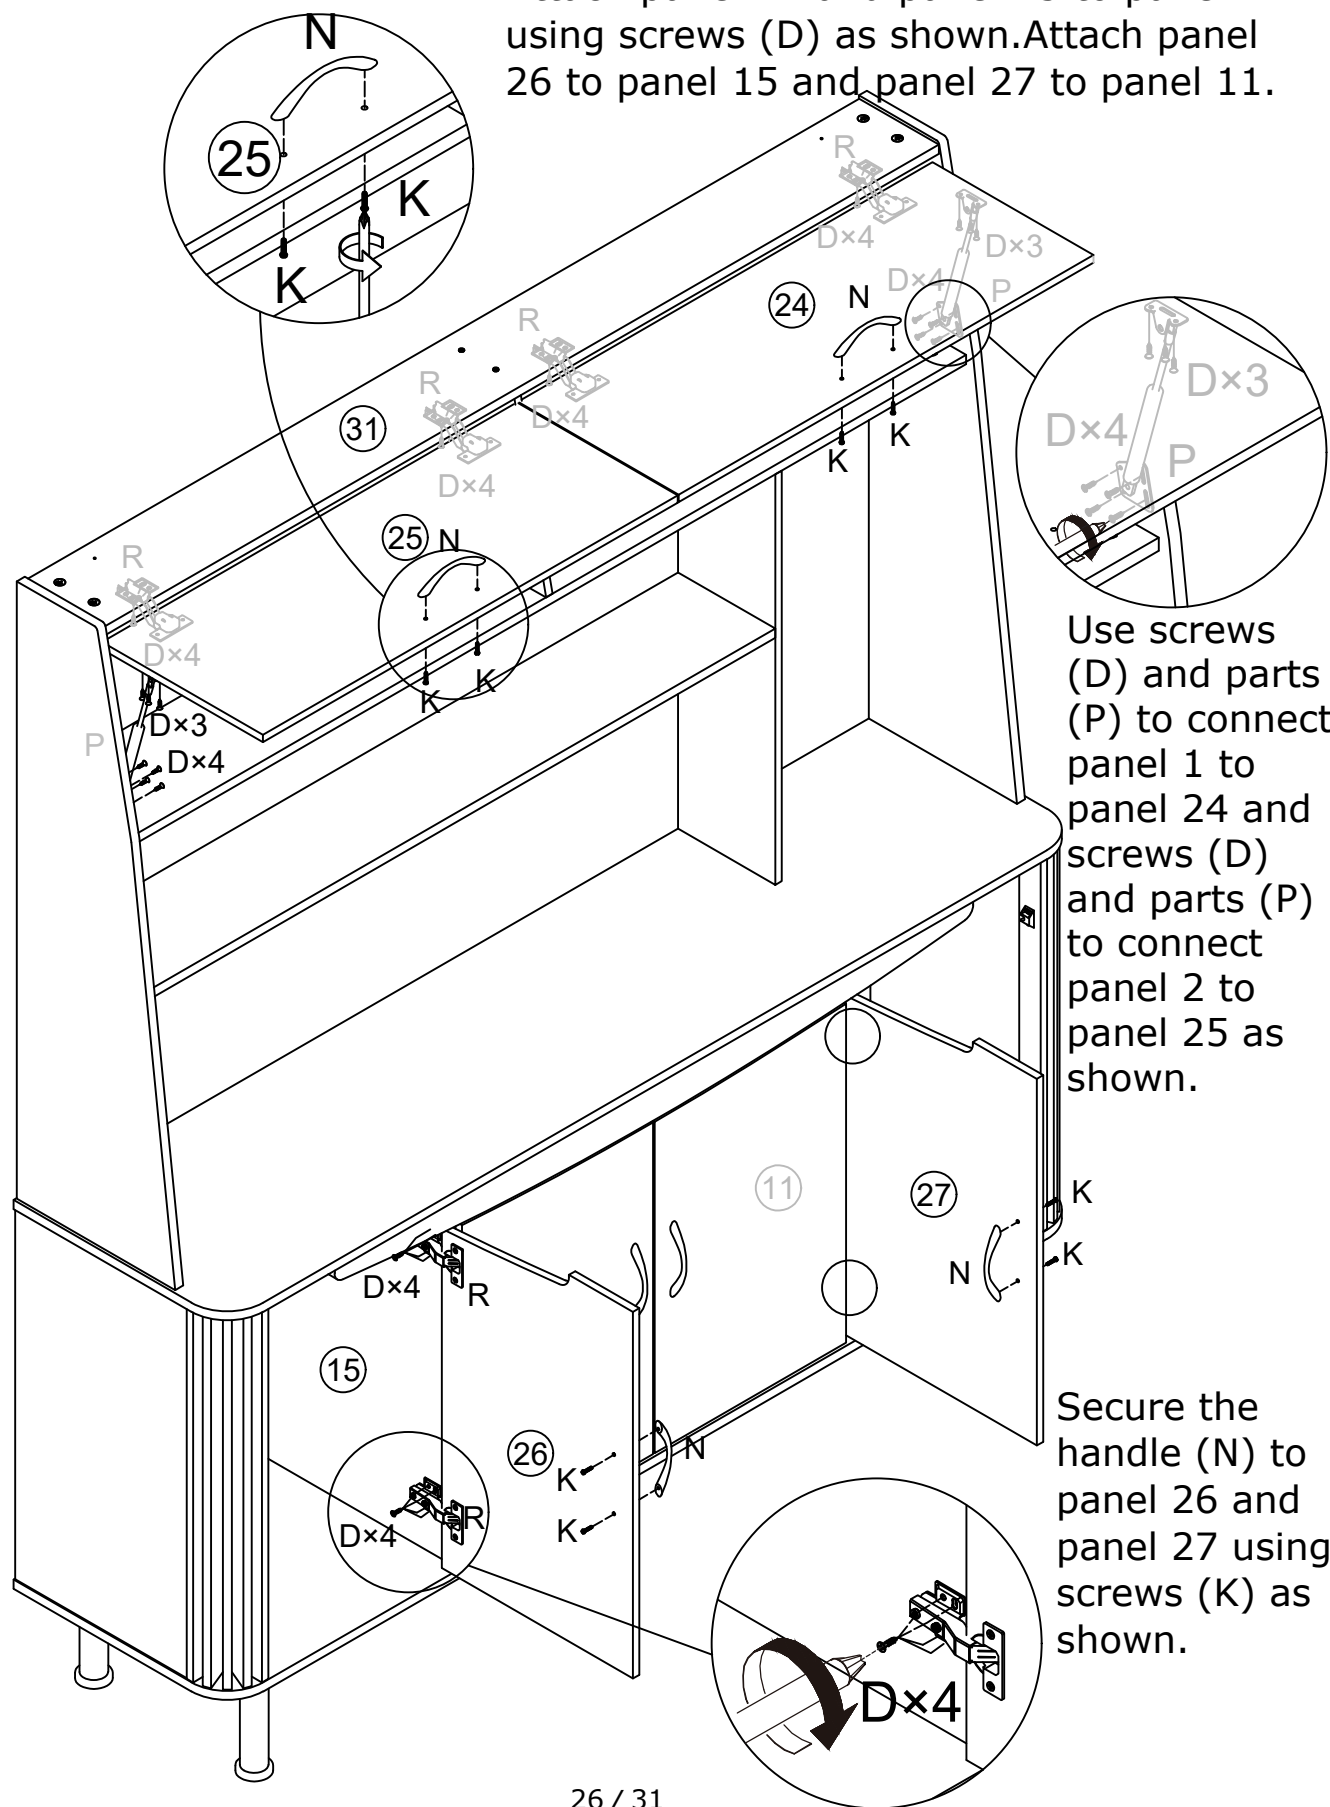


23

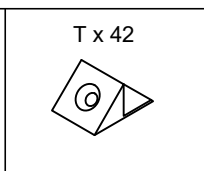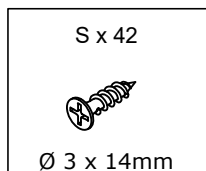   

  
 
Insert the buckle (T) into the back slot and fix with screws (S) as shown.

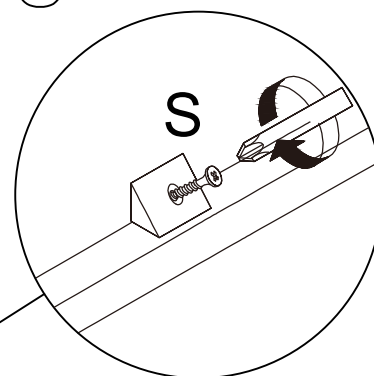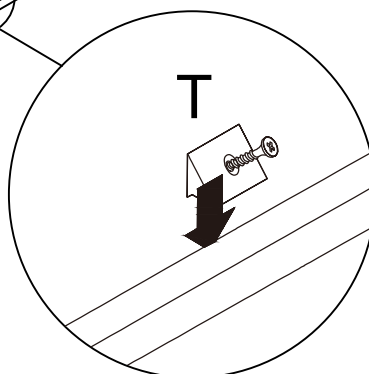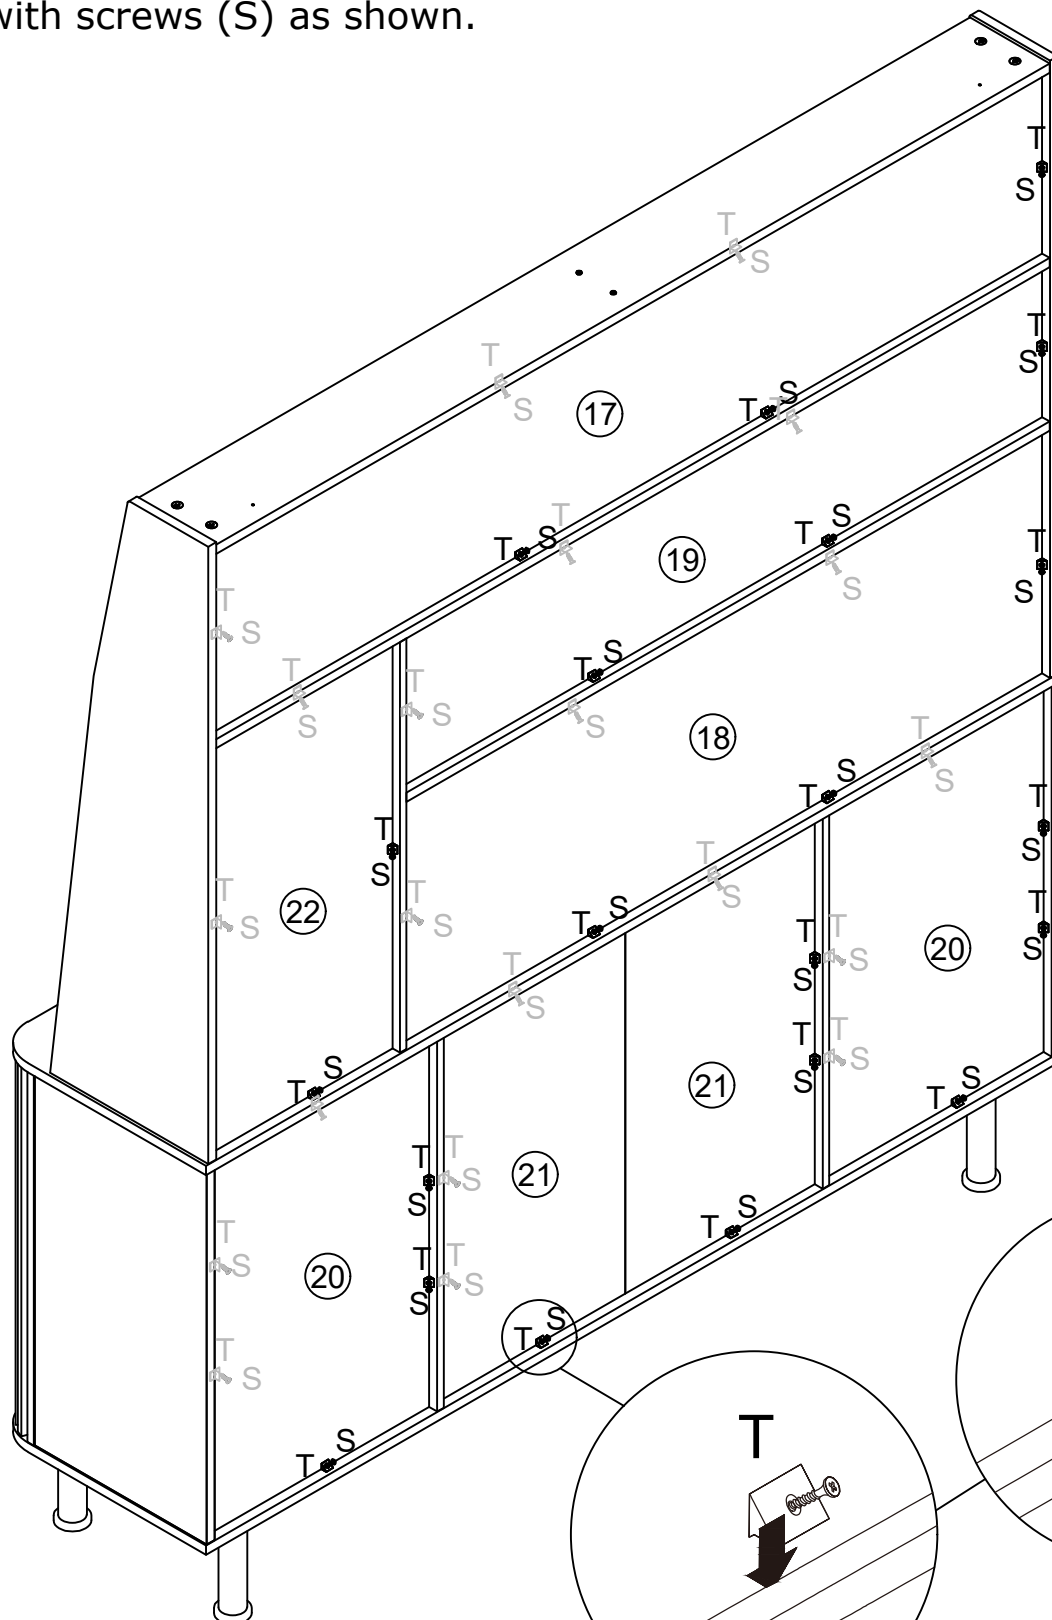


24

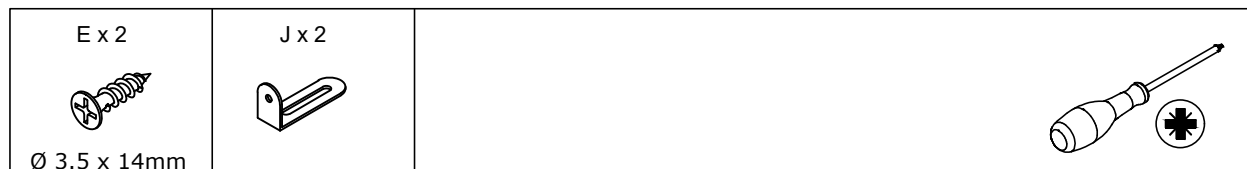 



Install anti-tipping device as shown.

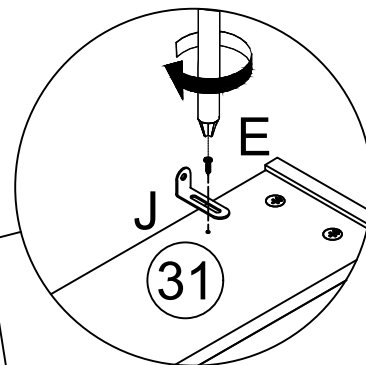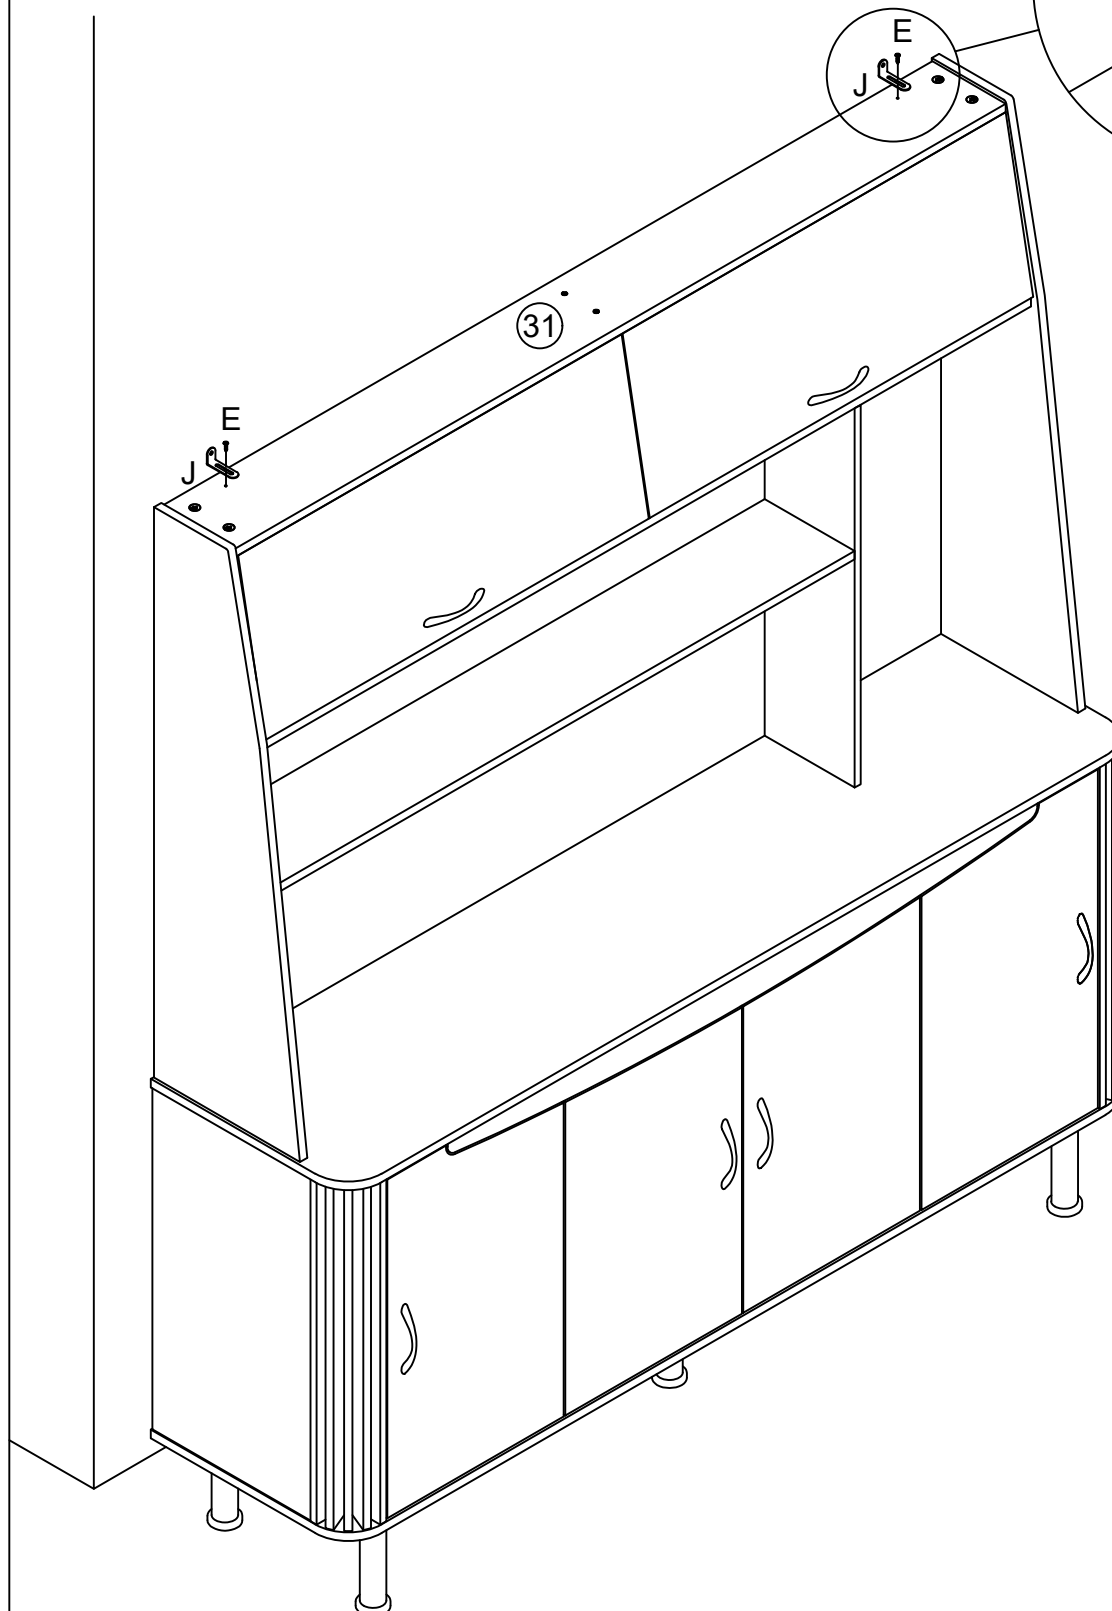  

25

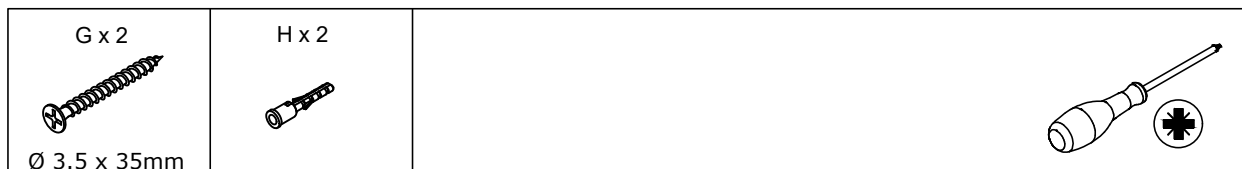 

Install anti-tipping device as shown.

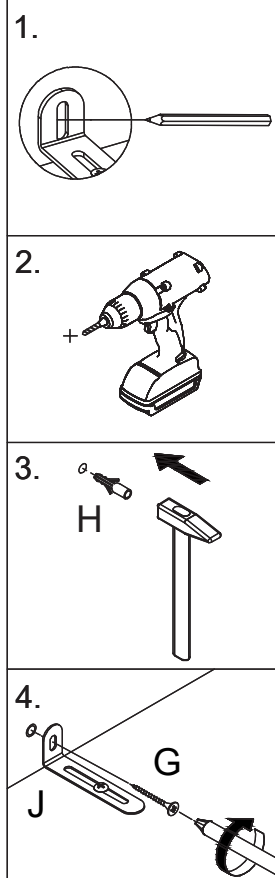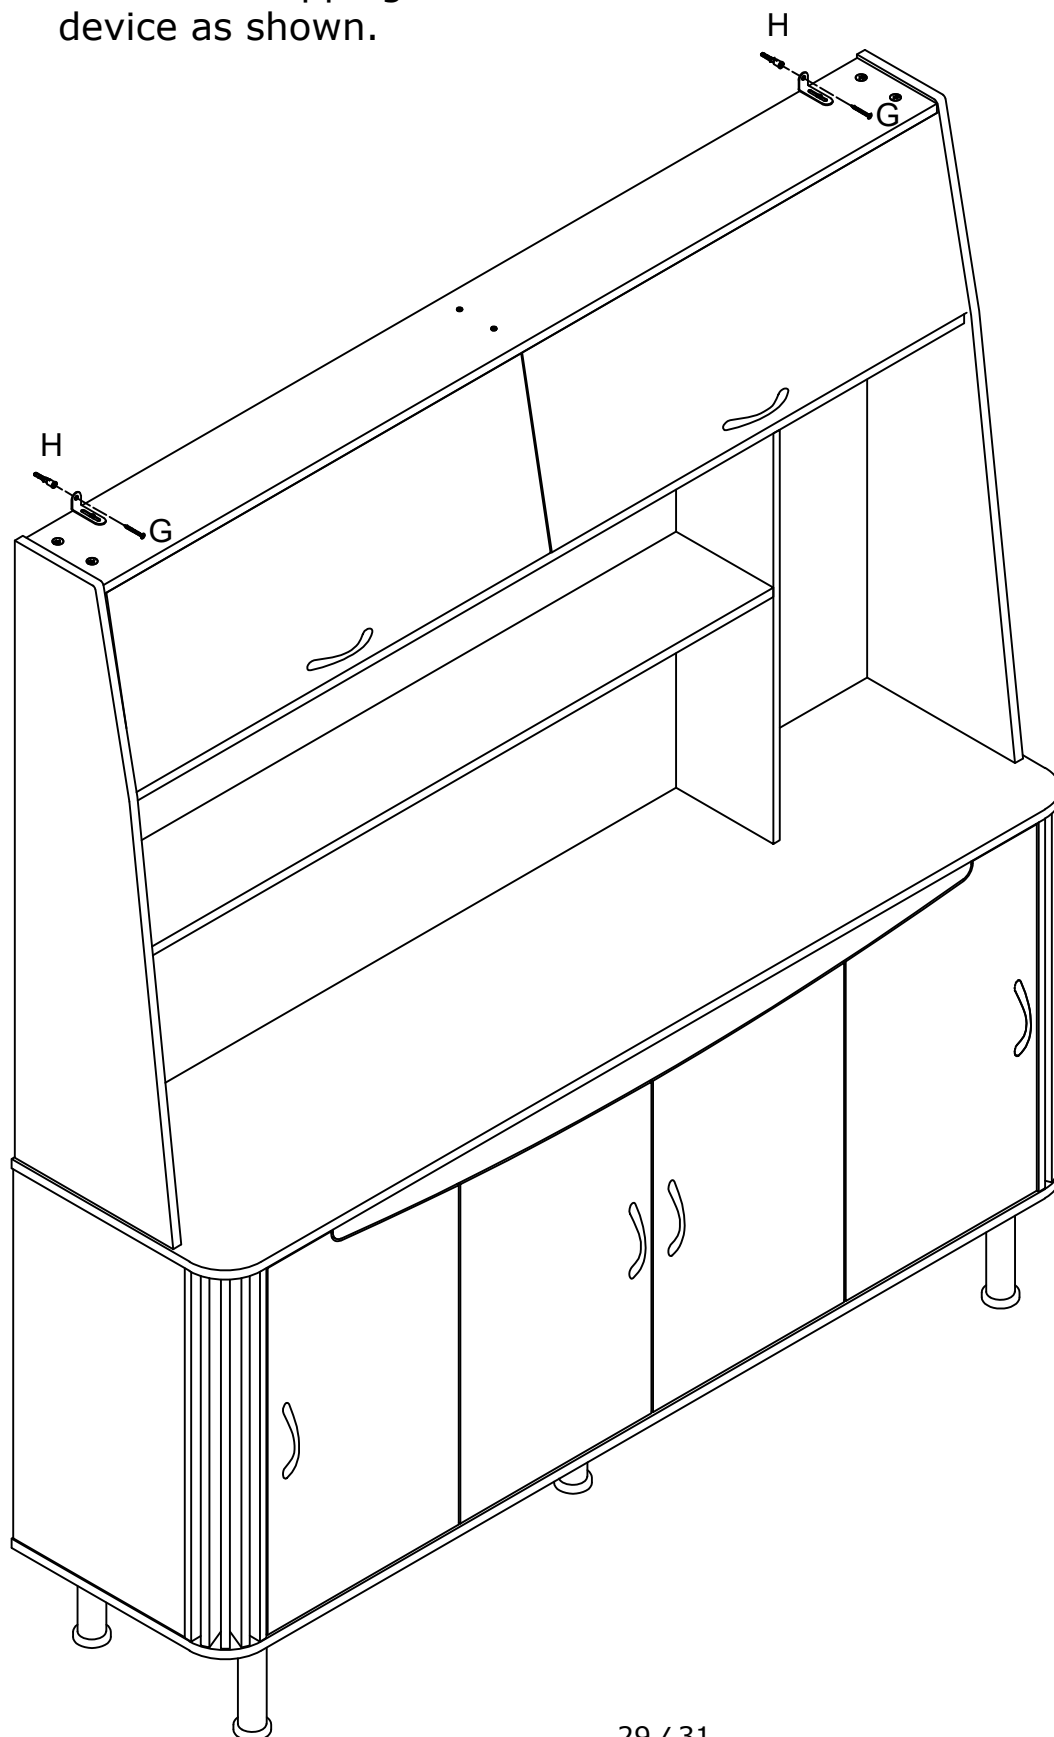  

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068