

SNOWPLOW WINCH STRAP REPLACEMENT

*OLD STYLE WINCH

USER GUIDE




DK2 USA WEST

3311 MEADE AVENUE STE E DOCK 13, LAS VEGAS, NEVADA 89102 USA **DK2 CORPORATE HEAD OFFICE**

5330 MAINWAY BURLINGTON, ONTARIO L7L6A4 CANADA **DK2 USA EAST**

3750 SOUTH AVENUE NORTH UNIT, TOLEDO, OHIO 43615 USA

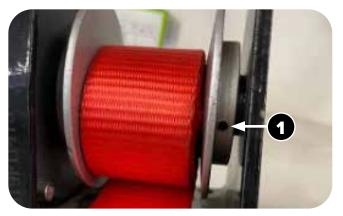


Locate the hex screw on the winch spool 1



Remove the screw using an allen key 2 and set aside. Do not lose the screw, as you will need it to reinstall your new winch strap.



Use the tool that was provided in your plow kit 3 to begin removing the winch pin (you may be able to use needle nose pliers as well)

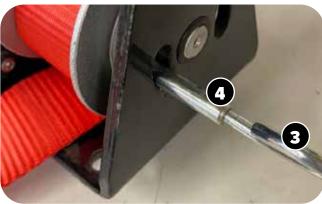

Screw in the provided tool 3 and pull the pin free from the winch. Once removed, you will be able to pull the strap away freely.



You've now successfully removed your old winch strap. Now it's time to take your new winch strap and reverse the steps above to complete your winch strap replacement.

NOTE: When re-installing the new winch strap, make sure the pin is inserted the correct way.

The hole in the pin 4 should always align with the hex screw 4 so that you can lock the winch pin in place.

If you have any questions, please contact us at support@detailk2.com or call us at 1 (888) 277-6960. Our hours are Monday-Friday 8am-4pm EST.